


Engineering Data

Split Type Air Conditioners

- Heat Pump -

FDMA-A, FVXV-A Series

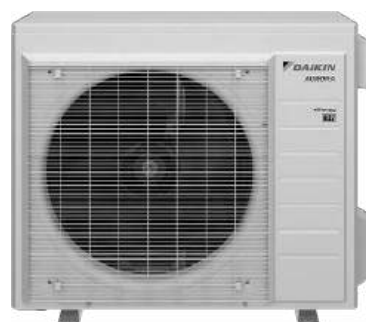

INVERTER

Split Type Air Conditioners

FDMA-A, FVXV-A Series

1. Lineup	3
2. Functions	4
3. Specifications	5
4. Dimensions	12
4.1 Indoor Unit	12
4.2 Outdoor Unit	15
5. Wiring Diagrams	17
5.1 Indoor Unit	17
5.2 Outdoor Unit	18
6. Piping Diagrams	19
6.1 Indoor Unit	19
6.2 Outdoor Unit	20
7. Capacity Tables	22
7.1 Capacity Correction Factor by the Length of Refrigerant Piping (Reference)	40
8. Operation Limit	42
9. Fan Characteristics	43
9.1 External Static Pressure	43
9.2 Airflow Auto Adjustment	48
10. Sound Level	51
10.1 Measuring Location	51
10.2 Indoor Unit	52
10.3 Outdoor Unit	56
11. Electric Characteristics	57
12. Installation Manual	58
12.1 FDMA09/12/15/18/24AVJU9	58
12.2 FVXV09/12/15/18AVJUW(T)9	83
12.3 RXP09/12AVJU9	105
12.4 RXP15/18/24AVJU9	118
13. Operation Manual	132
13.1 FDMA09/12/15/18/24AVJU9	132
13.2 General Safety Considerations	142
13.3 FVXV09/12/15/18AVJUW(T)9	150
14. Options	200
14.1 Option List	200

14.2	<BRC1NRV71> Wired Remote Controller (Installation)	201
14.3	<BRC1NRV71> Wired Remote Controller (Operation).....	233
14.4	<BRC073A6> Wired Remote Controller (Installation)	287
14.5	<BRC073A6> Wired Remote Controller (Operation).....	316
14.6	<BRCW901A03/08> Wired Remote Controller Cord.....	359
14.7	<KRP413BB1S> Wiring Adaptor	360
14.8	<DCS302C71> Central Remote Controller (Installation).....	364
14.9	<DCS302C71> Central Remote Controller (Operation)	369
14.10	<DST301BA61> Schedule Timer Controller (Installation)	395
14.11	<DST301BA61> Schedule Timer Controller (Operation).....	400
14.12	<KRP1C76> Wire Renovated Adopter (Installation).....	413
14.13	<KRP928BB2S> Interface Adaptor for DIII-NET	414
14.14	<KPW937F4> Air Direction Adjustment Grille	417
14.15	<KPW063B4> Air Direction Adjustment Grille	419
14.16	<KKG067A41> Back Protection Wire Net	421
14.17	<KKG063A44> Back Protection Wire Net	422
14.18	<KEH068A41> Drain Pan Heater	423
14.19	<KEH064A41> Drain Pan Heater	427
14.20	<KPS067A41> Snow Hood (Side).....	431
14.21	<KPS063A41> Snow Hood (Side).....	433
14.22	<KPS067A42> Snow Hood (Rear)	435
14.23	<KPS063A44> Snow Hood (Rear)	437
14.24	<KPS067A44> Snow Hood (Discharge).....	439
14.25	<KPS063A47> Snow Hood (Discharge).....	441

1. Lineup

Indoor Unit		Outdoor Unit	Power Supply
Duct concealed type	FDMA09AVJU9	RXP09AVJU9	1 phase, 208 - 230 V, 60 Hz
	FDMA12AVJU9	RXP12AVJU9	
	FDMA15AVJU9	RXP15AVJU9	
	FDMA18AVJU9	RXP18AVJU9	
	FDMA24AVJU9	RXP24AVJU9	
Floor standing type	FVXV09AVJUW9	RXP09AVJU9	
	FVXV09AVJUT9	RXP09AVJU9	
	FVXV12AVJUW9	RXP12AVJU9	
	FVXV12AVJUT9	RXP12AVJU9	
	FVXV15AVJUW9	RXP15AVJU9	
	FVXV15AVJUT9	RXP15AVJU9	
	FVXV18AVJUW9	RXP18AVJU9	
	FVXV18AVJUT9	RXP18AVJU9	

Note: Power Supply Intake ; Outdoor Unit

Cautions



1. Air conditioners should not be installed in areas where corrosive gasses, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided and choose an outdoor unit with anti-corrosion treatment.

2. Functions

Category	Functions	FDMA Series	FVXV Series
Basic Function	Inverter (with inverter power control)	●	●
	Operation limit	Refer to P. 42	
	PAM control	●	●
	Standby electricity saving	—	—
Compressor	Swing compressor	●	●
	Reluctance DC motor	●	●
Comfort Control	Auto fan speed	●	●
	Switchable fan speed	3 steps	5 steps
	Indoor unit quiet operation	—	●
	2 selectable temperature sensors	●	—
	Hot-start function	●	●
	QUIET OUTDOOR UNIT operation	—	●
	INTELLIGENT EYE operation (auto energy saving)	—	—
	Quick warming function	●	—
	Automatic defrosting	●	●
	Heat Plus	—	●
	Floor warming	—	●
	0.5°C step room temperature setting	—	●
Comfortable Airflow	Auto-Swing (Up and Down)	—	●
	Wide-Angle Louvers	—	●
	2-Way Air flow (top and bottom)	—	●
Operation	Automatic cooling/heating change-over	●	●
	Program dry operation	●	●
	Fan only	●	●
Lifestyle Convenience	POWERFUL operation (inverter)	—	—
	ECONO operation	—	●
	Indoor unit ON/OFF switch	—	●
	Signal receiving sign	—	●
	Remote controller with back light	●	●
	Home leave operation	—	●
	Multi-colored operation lamp	—	●
Health and Cleanliness	Titanium apatite deodorizing filter	—	Option
	Mold proof air filter	—	●
	Filter cleaning indicator	●	—
	Silver ion anti-bacterial drain pan	●	—
	Clean operation	—	●
Timer	WEEKLY TIMER operation	—	●
	Schedule timer	●	Option
	Setpoint auto reset	—	—
	Setpoint range set	●	—
	24-hour ON/OFF TIMER	—	●
	72-hour ON/OFF TIMER	—	—
	Off timer (turns unit off after set time)	—	●
	NIGHT SET mode	—	●
Worry Free (Reliability & Durability)	Auto-restart (after power failure)	●	●
	Self-diagnosis (R/C, LED)	●	●
	Anti-corrosion treatment of outdoor heat exchanger	●	●
Flexibility	Multi-split/split type compatible indoor unit	●	●
	Chargeless	49.2 ft. (15 m)	49.2 ft. (15 m)
	Either side drain (left or right)	—	—
	Drain pump	●	—
	Low temperature cooling operation (14°F) (−10°C)	●	●
	Low temperature cooling operation (−4°F) (−20°C)	●	●
	Requires wind baffle and field settings	●	●
Remote Control	°F/°C changeover R/C temperature display (factory setting: °F)	●	●
	Remote control adaptor (normal open pulse contact)	—	Option
	Remote control adaptor (normal open contact)	—	Option
	DIII-NET compatible (adaptor)	—	Option
Remote Controller	Wireless LAN connection	—	●
	Wireless	—	●
	Wired	Option	Option

● : Available
 — : Not available

3. Specifications

Model			Indoor Unit		FDMA09AVJU9		FDMA12AVJU9				
			Outdoor Unit		RXP09AVJU9		RXP12AVJU9				
			Cooling		Heating		Cooling		Heating		
Power Supply			1 ϕ, 208 - 230 V, 60 Hz				1 ϕ, 208 - 230 V, 60 Hz				
Capacity Rated (Min. - Max.)		Btu/h	9,000 (4,400 ~ 9,400)		10,900 (4,400 ~ 12,800)		10,800 (4,400 ~ 12,400)		12,500 (4,400 ~ 17,000)		
Running Current (Rated)		A	4.00 - 3.62		5.22 - 4.72		5.30 - 4.79		5.95 - 5.38		
Power Consumption (Rated)		W	811 - 811		1,065 - 1,065		1,080 - 1,080		1,221 - 1,221		
Power Factor (Rated)		%	97.5 - 97.3		98.1 - 98.2		98.0 - 98.1		98.7 - 98.6		
SEER2			16.0		—		16.0		—		
HSPF2			—		9.0		—		9.0		
EER2 (Rated)		Btu/W·h	11.1		—		10.0		—		
COP2 (Rated)			—		3.0		—		3.0		
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)				ϕ1/4 (6.4)				
	Gas	in. (mm)	ϕ3/8 (9.5)				ϕ3/8 (9.5)				
	Drain	in. (mm)	I.D. ϕ1 (25) / O.D. ϕ1-1/4 (32)				I.D. ϕ1 (25) / O.D. ϕ1-1/4 (32)				
Heat Insulation			Both Liquid and Gas Pipes				Both Liquid and Gas Pipes				
Max. Interunit Piping Length		ft (m)	65-5/8 (20)				65-5/8 (20)				
Max. Interunit Height Difference		ft (m)	49-1/4 (15)				49-1/4 (15)				
Chargeless		ft (m)	49-1/4 (15)				49-1/4 (15)				
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)				0.22 (20)				
Indoor Unit			FDMA09AVJU9				FDMA12AVJU9				
Heat Exchanger		Rows × Stages, Fin per Inch		3 × 26, 18				3 × 26, 18			
		Fin Spec / Tube		Multi Slit Fin / ϕ5 Hi-XA Tube				Multi Slit Fin / ϕ5 Hi-XA Tube			
Airflow Rate	H / M / L	cfm	401 / 338 / 279		401 / 338 / 279		440 / 367 / 299		440 / 367 / 299		
		m³/min	11.4 / 9.6 / 7.9		11.35 / 9.6 / 7.9		12.5 / 10.4 / 8.5		12.45 / 10.4 / 8.5		
Fan Motor		H / M / L	rpm		1,128 / 956 / 784		1,179 / 992 / 805		1,179 / 992 / 805		
		Drive input	A		0.52		0.61				
Fan		Type		Sirocco Fan				Sirocco Fan			
External Static Pressure		inH ₂ O		Standard 0.20 (0.60 - 0.12)				Standard 0.20 (0.60 - 0.12)			
		Pa		Standard 50 (150 - 30)				Standard 50 (150 - 30)			
Running Current (Rated)		A	0.53 - 0.48		0.53 - 0.48		0.56 - 0.51		0.56 - 0.51		
Power Consumption (Rated)		W	96 - 96		96 - 96		108 - 108		108 - 108		
Power Factor (Rated)		%	86.9 - 87.0		86.9 - 87.0		92.6 - 91.2		92.6 - 91.2		
Temperature Control			Microcomputer Control				Microcomputer Control				
Dimensions (H × W × D)		in. (mm)	9-5/8 × 27-9/16 × 31-1/2 (245 × 700 × 800)				9-5/8 × 27-9/16 × 31-1/2 (245 × 700 × 800)				
Packaged Dimensions (H × W × D)		in. (mm)	11-9/16 × 35-3/8 × 34-7/8 (293 × 899 × 886)				11-9/16 × 35-3/8 × 34-7/8 (293 × 899 × 886)				
Weight (Mass)		lbs (kg)	64 (29)				64 (29)				
Gross Weight (Gross Mass)		lbs (kg)	71 (32)				71 (32)				
Sound Pressure Level		dB(A)	32		32		33		33		
Remote Controller (Option)		Wired		BRC1NRV71				BRC1NRV71			
		Wireless		—				—			
Outdoor Unit			RXP09AVJU9				RXP12AVJU9				
Casing Color			Ivory White				Ivory White				
Heat Exchanger		Fin Spec / Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube				Waffle Fin (PE) / ϕ7 Hi-XSL Tube			
Fan Motor		Drive input	A	9.00				11.40			
Compressor		Type		Hermetically Sealed Swing Type				Hermetically Sealed Swing Type			
		Model		2Y147BKBX1A				2Y147BKBX1A			
Refrigerant Oil		Type		FW68DA				FW68DA			
		Charge	oz (L)	21.98 (0.65)				21.98 (0.65)			
Refrigerant		Type		R-32				R-32			
		Charge	lbs (kg)	1.74 (0.79)				1.74 (0.79)			
Airflow Rate		cfm (m³/min)	1,126 (31.9)		1,126 (31.9)		1,126 (31.9)		1,126 (31.9)		
Fan		Type		Propeller				Propeller			
Running Current (Rated)		A	3.47 - 3.14		4.69 - 4.24		4.74 - 4.28		5.39 - 4.87		
Power Consumption (Rated)		W	715 - 715		969 - 969		972 - 972		1,113 - 1,113		
Power Factor (Rated)		%	99.1 - 99.0		99.3 - 99.4		98.6 - 98.7		99.3 - 99.4		
Dimensions (H × W × D)		in. (mm)	21-15/16 × 26-9/16 × 11-3/16 (557 × 675 × 284)				21-15/16 × 26-9/16 × 11-3/16 (557 × 675 × 284)				
Packaged Dimensions (H × W × D)		in. (mm)	24-7/16 × 31-1/4 × 14-1/8 (620 × 794 × 359)				24-7/16 × 31-1/4 × 14-1/8 (620 × 794 × 359)				
Weight (Mass)		lbs (kg)	72 (33)				72 (33)				
Gross Weight (Gross Mass)		lbs (kg)	77 (35)				77 (35)				
Sound Pressure Level		dB(A)	50		52		50		52		
Conditions Based on	Indoor		80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)				80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)				
	Outdoor		95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)				95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)				
	Piping Length		25 ft				25 ft				
Drawing No.			3D159367				3D159367				
Note(s)			SL: The quiet fan level of the airflow rate setting. External static pressure is changeable in 13 stages by remote controller. Air filter is not standard accessory, but please mount it in the duct system of the suction side. Select its dust collection efficiency (gravity method) 50% or more.								

Conversion Formulae

kcal/h = kW $\times$ 860
 Btu/h = kW $\times$ 3412
 cfm = m³/min $\times$ 35.3

Indoor Unit			FDMA15AVJU9		FDMA18AVJU9	
Model	Outdoor Unit		RXP15AVJU9		RXP18AVJU9	
			Cooling	Heating	Cooling	Heating
Power Supply			1 ϕ, 208 - 230 V, 60 Hz		1 ϕ, 208 - 230 V, 60 Hz	
Capacity Rated (Min. - Max.)	Btu/h		14,400 (9,000 ~ 15,700)	18,000 (9,000 ~ 18,500)	17,600 (9,000 ~ 19,600)	21,600 (9,000 ~ 25,000)
Running Current (Rated)	A		6.36 - 5.75	9.03 - 8.17	7.83 - 7.08	10.62 - 9.6
Power Consumption (Rated)	W		1,220 - 1,220	1,758 - 1,758	1,517 - 1,517	2,110 - 2,110
Power Factor (Rated)	%		92.2 - 92.3	93.6 - 93.6	93.1 - 93.2	95.5 - 95.6
SEER2			18.0	—	18.0	—
HSPF2			—	9.2	—	9.2
EER2 (Rated)	Btu/W·h		11.8	—	11.6	—
COP2 (Rated)			—	3.0	—	3.0
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)		ϕ1/4 (6.4)	
	Gas	in. (mm)	ϕ1/2 (12.7)		ϕ1/2 (12.7)	
	Drain	in. (mm)	I.D. ϕ1 (25) / O.D. ϕ1-1/4 (32)		I.D. ϕ1 (25) / O.D. ϕ1-1/4 (32)	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length		ft (m)	98-1/2 (30)		98-1/2 (30)	
Max. Interunit Height Difference		ft (m)	65-5/8 (20)		65-5/8 (20)	
Chargeless		ft (m)	49-1/4 (15)		49-1/4 (15)	
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)		0.22 (20)	
Indoor Unit			FDMA15AVJU9		FDMA18AVJU9	
Heat Exchanger	Rows × Stages, Fin per Inch		3 × 26, 18		3 × 26, 18	
	Fin Spec / Tube		Multi Slit Fin / ϕ5 Hi-XA Tube		Multi Slit Fin / ϕ5 Hi-XA Tube	
Airflow Rate	H / M / L	cfm	471 / 382 / 284	471 / 382 / 284	609 / 498 / 373	609 / 498 / 373
		m³/min	13.4 / 10.8 / 8.0	13.4 / 10.8 / 8.0	17.3 / 14.1 / 10.6	17.25 / 14.1 / 10.6
Fan Motor	H / M / L		1,019 / 862 / 704	1,019 / 862 / 704	1,100 / 936 / 762	1,110 / 936 / 762
	Drive input		A	0.87	1.12	
Fan	Type		Sirocco Fan		Sirocco Fan	
External Static Pressure	inH ₂ O		Standard 0.20 (0.60 - 0.20)		Standard 0.20 (0.60 - 0.20)	
	Pa		Standard 50 (150 - 50)		Standard 50 (150 - 50)	
Running Current (Rated)	A		0.62 - 0.56	0.62 - 0.56	0.75 - 0.68	0.75 - 0.68
Power Consumption (Rated)	W		115 - 115	115 - 115	148 - 148	148 - 148
Power Factor (Rated)	%		89.1 - 89.3	89.1 - 89.3	94.6 - 94.8	94.6 - 94.8
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H × W × D)	in. (mm)		9-5/8 × 39-3/8 × 31-1/2 (245 × 1,000 × 800)		9-5/8 × 39-3/8 × 31-1/2 (245 × 1,000 × 800)	
Packaged Dimensions (H × W × D)	in. (mm)		11-9/16 × 47-3/16 × 34-7/8 (293 × 1,199 × 886)		11-9/16 × 47-3/16 × 34-7/8 (293 × 1,199 × 886)	
Weight (Mass)	lbs (kg)		82 (37)		82 (37)	
Gross Weight (Gross Mass)	lbs (kg)		88 (40)		88 (40)	
Sound Pressure Level	dB(A)		34	34	35	35
Remote Controller (Option)	Wired		BRC1NRV71		BRC1NRV71	
	Wireless		—		—	
Outdoor Unit			RXP15AVJU9		RXP18AVJU9	
Casing Color			Ivory White		Ivory White	
Heat Exchanger	Fin Spec / Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube	
Fan Motor	Drive input	A	12.70		17.40	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		2Y260BPAX1A		2Y260BPAX1A	
Refrigerant Oil	Type		FW68DA		FW68DA	
	Charge	oz (L)	30.43 (0.90)		30.43 (0.90)	
Refrigerant	Type		R-32		R-32	
	Charge	lbs (kg)	3.04 (1.38)		3.04 (1.38)	
Airflow Rate	cfm (m³/min)		2,383 (67.5)	2,327 (65.9)	2,383 (67.5)	2,327 (65.9)
Fan	Type		Propeller		Propeller	
Running Current (Rated)	A		5.74 - 5.19	8.41 - 7.61	7.08 - 6.40	9.87 - 8.92
Power Consumption (Rated)	W		1,105 - 1,105	1,643 - 1,643	1,369 - 1,369	1,962 - 1,962
Power Factor (Rated)	%		92.6 - 92.6	93.9 - 93.9	93.0 - 93.0	95.6 - 95.6
Dimensions (H × W × D)	in. (mm)		29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)		29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)	
Packaged Dimensions (H × W × D)	in. (mm)		32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)		32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)	
Weight (Mass)	lbs (kg)		127 (58)		127 (58)	
Gross Weight (Gross Mass)	lbs (kg)		135 (61)		135 (61)	
Sound Pressure Level	dB(A)		55	57	55	57
Conditions Based on	Indoor		80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)		80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	
	Outdoor		95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)		95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	
	Piping Length		25 ft		25 ft	
Drawing No.			3D159368		3D159368	
Note(s)			SL: The quiet fan level of the airflow rate setting. External static pressure is changeable in 13 stages by remote controller. Air filter is not standard accessory, but please mount it in the duct system of the suction side. Select its dust collection efficiency (gravity method) 50% or more.			

Conversion Formulae

kcal/h = kW $\times$ 860
Btu/h = kW $\times$ 3412
cfm = m ³ /min $\times$ 35.3

Indoor Unit			FDMA24AVJU9	
Model	Outdoor Unit		RXP24AVJU9	
			Cooling	Heating
Power Supply			1 ϕ, 208 - 230 V, 60 Hz	
Capacity Rated (Min. - Max.)		Btu/h	21,800 (9,000 ~ 23,000)	24,000 (9,000 ~ 27,600)
Running Current (Rated)		A	10.32 - 9.33	11.39 - 10.30
Power Consumption (Rated)		W	2,117 - 2,117	2,345 - 2,345
Power Factor (Rated)		%	98.6 - 98.7	99.0 - 99.0
SEER2			18.3	—
HSPF2			—	9.2
EER2 (Rated)		Btu/W·h	10.3	—
COP2 (Rated)		W/W	—	3.0
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)	
	Gas	in. (mm)	ϕ5/8 (15.9)	
	Drain	in. (mm)	I.D. ϕ1 (25) / O.D. ϕ1-1/4 (32)	
Heat Insulation			Both Liquid and Gas Pipes	
Max. Interunit Piping Length		ft (m)	98-1/2 (30)	
Max. Interunit Height Difference		ft (m)	65-5/8 (20)	
Chargeless		ft (m)	49-1/4 (15)	
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)	
Indoor Unit			FDMA24AVJU9	
Heat Exchanger			3 × 26, 18	
			Multi Slit Fin / ϕ5 Hi-XA Tube	
Airflow Rate	H / M / L	cfm	666 / 553 / 426	666 / 553 / 426
		m³/min	18.9 / 15.7 / 12.1	18.85 / 15.7 / 12.1
Fan Motor	H / M / L	rpm	1,153 / 980 / 807	1,153 / 980 / 807
		Drive input	A	
Fan	Type		Sirocco Fan	
External Static Pressure		inH₂O	Standard 0.20 (0.60 - 0.20)	
		Pa	Standard 50 (150 - 50)	
Running Current (Rated)		A	0.81 - 0.73	0.81 - 0.73
Power Consumption (Rated)		W	164 - 164	164 - 164
Power Factor (Rated)		%	97.5 - 97.2	97.5 - 97.2
Temperature Control			Microcomputer Control	
Dimensions (H × W × D)		in. (mm)	9-5/8 × 39-3/8 × 31-1/2 (245 × 1,000 × 800)	
Packaged Dimensions (H × W × D)		in. (mm)	11-9/16 × 47-3/16 × 34-7/8 (293 × 1,199 × 886)	
Weight (Mass)		lbs (kg)	82 (37)	
Gross Weight (Gross Mass)		lbs (kg)	88 (40)	
Sound Pressure Level		dB(A)	40	40
Remote Controller (Option)		Wired	BRC1NRV71	
		Wireless	—	
Outdoor Unit			RXP24AVJU9	
Casing Color			Ivory White	
Heat Exchanger		Fin Spec / Tube	Waffle Fin (PE) / ϕ7 Hi-XSL Tube	
Fan Motor		Drive input	A	
Compressor		Type	Hermetically Sealed Swing Type	
		Model	2Y260BPAX1A	
Refrigerant Oil		Type	FW68DA	
		Charge	oz (L)	30.43 (0.90)
Refrigerant		Type	R-32	
		Charge	lbs (kg)	3.04 (1.38)
Airflow Rate		cfm (m³/min)	2,383 (67.5)	2,327 (65.9)
Fan	Type		Propeller	
Running Current (Rated)		A	9.51 - 8.60	10.58 - 9.57
Power Consumption (Rated)		W	1,953 - 1,953	2,181 - 2,181
Power Factor (Rated)		%	98.7 - 98.7	99.1 - 99.1
Dimensions (H × W × D)		in. (mm)	29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)	
Packaged Dimensions (H × W × D)		in. (mm)	32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)	
Weight (Mass)		lbs (kg)	127 (58)	
Gross Weight (Gross Mass)		lbs (kg)	135 (61)	
Sound Pressure Level		dB(A)	55	57
Conditions Based on	Indoor	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)		70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)
	Outdoor	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)		47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)
	Piping Length	25 ft		
Drawing No.			3D159368	
Note(s)			SL: The quiet fan level of the airflow rate setting. External static pressure is changeable in 13 stages by remote controller. Air filter is not standard accessory, but please mount it in the duct system of the suction side. Select its dust collection efficiency (gravity method) 50% or more.	

Conversion Formulae

kcal/h = kW $\times$ 860
 Btu/h = kW $\times$ 3412
 cfm = m³/min $\times$ 35.3

Model			Indoor Unit	FVXV09AVJUW9		FVXV09AVJUT9	
			Outdoor Unit	RXP09AVJU9		RXP09AVJU9	
			Cooling	Heating	Cooling	Heating	
Power Supply			1 ϕ, 208 - 230 V, 60 Hz		1 ϕ, 208 - 230 V, 60 Hz		
Capacity Rated (Min. - Max.)		Btu/h	9,000 (3,700 ~ 10,900)	12,000 (4,600 ~ 17,100)	9,000 (3,700 ~ 10,900)	12,000 (4,600 ~ 17,100)	
Running Current (Rated)		A	3.70 - 3.35	4.50 - 4.07	3.70 - 3.35	4.50 - 4.07	
Power Consumption (Rated)		W	750 - 750	921 - 921	750 - 750	921 - 921	
Power Factor (Rated)		%	97.5 - 97.4	98.4 - 98.5	97.5 - 97.4	98.4 - 98.5	
SEER2			19.5	—	19.5	—	
HSPF2 (Region IV)			—	9.7	—	9.7	
HSPF2 (Region V)			—	8.5	—	8.5	
EER2 (Rated)		Btu/W·h	12.0	—	12.0	—	
COP2 (°F (–15°C))		W/W	—	1.8	—	1.8	
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)		ϕ1/4 (6.4)		
	Gas	in. (mm)	ϕ3/8 (9.5)		ϕ3/8 (9.5)		
	Drain	in. (mm)	ϕ13/16 (20)		ϕ13/16 (20)		
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
Max. Interunit Piping Length		ft (m)	65-5/8 (20)		65-5/8 (20)		
Max. Interunit Height Difference		ft (m)	49-1/4 (15)		49-1/4 (15)		
Chargeless		ft (m)	49-1/4 (15)		49-1/4 (15)		
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)		0.22 (20)		
Indoor Unit			FVXV09AVJUW9		FVXV09AVJUT9		
Front Panel Color (Mancel No.)			White (N9.5)		Espresso (B-690)		
Heat Exchanger	Rows × Stages, Fin per Inch		2 × 22, 21		2 × 22, 21		
	Fin Spec / Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		
Airflow Rate	H / M / L / SL	cfm m³/min	297 / 265 / 201 / 173 8.4 / 7.5 / 5.7 / 4.9	321 / 261 / 219 / 191 9.1 / 7.4 / 6.2 / 5.4	297 / 265 / 201 / 173 8.4 / 7.5 / 5.7 / 4.9	321 / 261 / 219 / 191 9.1 / 7.4 / 6.2 / 5.4	
Air Direction Control			Right, Left, Upward, Downward		Right, Left, Upward, Downward		
Air Filter			Removable, Washable, Mildew Proof		Removable, Washable, Mildew Proof		
Fan Motor	H / M / L / SL	rpm	650 / 590 / 460 / 410		650 / 590 / 460 / 410		
	Motor output	Hp	0.05		0.05		
Fan	Type		Turbo Fan		Turbo Fan		
Running Current (Rated)		A	0.08 - 0.07	0.10 - 0.09	0.08 - 0.07	0.10 - 0.09	
Power Consumption (Rated)		W	9 - 9	11 - 11	9 - 9	11 - 11	
Power Factor (Rated)		%	48.0 - 56.3	48.0 - 54.2	48.0 - 56.3	48.0 - 54.2	
Temperature Control			Microcomputer Control		Microcomputer Control		
Dimensions (H × W × D)		in. (mm)	23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		
Packaged Dimensions (H × W × D)		in. (mm)	29-5/16 × 34-7/16 × 133-5/8 (757 × 874 × 346)		29-5/16 × 34-7/16 × 133-5/8 (757 × 874 × 346)		
Weight (Mass)		lbs (kg)	40 (18)		40 (18)		
Gross Weight (Gross Mass)		lbs (kg)	50 (23)		50 (23)		
Sound Pressure Level (H / M / L / SL)		dB(A)	39 / 36 / 30 / 26	40 / 35 / 31 / 26	39 / 36 / 30 / 26	40 / 35 / 31 / 26	
Remote Controller			ARC466A89		ARC466A89		
Outdoor Unit			RXP09AVJU9		RXP09AVJU9		
Casing Color			Ivory White		Ivory White		
Heat Exchanger	Fin Spec / Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		
Fan Motor	Motor output	Hp	0.04		0.04		
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model		2Y147BKBX1A		2Y147BKBX1A		
Refrigerant Oil	Type		FW68DA		FW68DA		
	Charge	oz (L)	21.98 (0.65)		21.98 (0.65)		
Refrigerant	Type		R-32		R-32		
	Charge	lbs (kg)	1.74 (0.79)		1.74 (0.79)		
Airflow Rate		cfm (m³/min)	1,088 (30.8)	1,126 (31.9)	1,088 (30.8)	1,126 (31.9)	
Fan	Type		Propeller		Propeller		
Running Current (Rated)		A	3.62 - 3.28	4.40 - 3.98	3.62 - 3.28	4.40 - 3.98	
Power Consumption (Rated)		W	741 - 741	910 - 910	741 - 741	910 - 910	
Power Factor (Rated)		%	98.4 - 98.3	99.4 - 99.5	98.4 - 98.3	99.4 - 99.5	
Dimensions (H × W × D)		in. (mm)	21-15/16 × 26-9/16 × 11-3/16 (557 × 675 × 284)		21-15/16 × 26-9/16 × 11-3/16 (557 × 675 × 284)		
Packaged Dimensions (H × W × D)		in. (mm)	24-7/16 × 31-1/4 × 14-1/8 (620 × 794 × 359)		24-7/16 × 31-1/4 × 14-1/8 (620 × 794 × 359)		
Weight (Mass)		lbs (kg)	72 (33)		72 (33)		
Gross Weight (Gross Mass)		lbs (kg)	77 (35)		77 (35)		
Sound Pressure Level		dB(A)	50	52	50	52	
Conditions Based on	Indoor	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)		
	Outdoor	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)		
	Piping Length	25 ft		25 ft			
Drawing No.			3D159397A				
Note(s)			SL: The quiet fan level of the airflow rate setting. When indoor unit is connected with multi-system outdoor unit. Please refer to the specifications of the multi-system outdoor unit to be connected.				

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m³/min × 35.3

Model			Indoor Unit	FVXV12AVJUW9		FVXV12AVJUT9	
			Outdoor Unit	RXP12AVJU9		RXP12AVJU9	
			Cooling	Heating	Cooling	Heating	
Power Supply			1 ϕ, 208 - 230 V, 60 Hz		1 ϕ, 208 - 230 V, 60 Hz		
Capacity Rated (Min. - Max.)		Btu/h	12,000 (3,700 ~ 12,600)	14,000 (4,600 ~ 19,900)	12,000 (3,700 ~ 12,600)	14,000 (4,600 ~ 19,900)	
Running Current (Rated)		A	5.58 - 5.05	5.17 - 4.67	5.58 - 5.05	5.17 - 4.67	
Power Consumption (Rated)		W	1,143 - 1,143	1,060 - 1,060	1,143 - 1,143	1,060 - 1,060	
Power Factor (Rated)		%	98.5 - 98.4	98.6 - 98.6	98.5 - 98.4	98.6 - 98.6	
SEER2			19.5	—	19.5	—	
HSPF2 (Region IV)			—	9.5	—	9.5	
HSPF2 (Region V)			—	8.1	—	8.1	
EER2 (Rated)		Btu/W·h	10.5	—	10.5	—	
COP2 (°F (–15°C))		W/W	—	1.8	—	1.8	
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)		ϕ1/4 (6.4)		
	Gas	in. (mm)	ϕ3/8 (9.5)		ϕ3/8 (9.5)		
	Drain	in. (mm)	ϕ13/16 (20)		ϕ13/16 (20)		
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
Max. Interunit Piping Length		ft (m)	65-5/8 (20)		65-5/8 (20)		
Max. Interunit Height Difference		ft (m)	49-1/4 (15)		49-1/4 (15)		
Chargeless		ft (m)	49-1/4 (15)		49-1/4 (15)		
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)		0.22 (20)		
Indoor Unit			FVXV12AVJUW9		FVXV12AVJUT9		
Front Panel Color (Mancel No.)			White (N9.5)		Espresso (B-690)		
Heat Exchanger	Rows × Stages, Fin per Inch		2 × 22, 21		2 × 22, 21		
	Fin Spec / Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		
Airflow Rate	H / M / L / SL	cfm m³/min	321 / 265 / 201 / 173 9.1 / 7.5 / 5.7 / 4.9	371 / 300 / 219 / 191 10.5 / 8.5 / 6.2 / 5.4	321 / 265 / 201 / 173 9.1 / 7.5 / 5.7 / 4.9	371 / 300 / 219 / 191 10.5 / 8.5 / 6.2 / 5.4	
Air Direction Control			Right, Left, Upward, Downward		Right, Left, Upward, Downward		
Air Filter			Removable, Washable, Mildew Proof		Removable, Washable, Mildew Proof		
Fan Motor	H / M / L / SL	rpm	700 / 590 / 460 / 410		700 / 590 / 460 / 410		
	Motor output	Hp	0.05		0.05		
Fan	Type		Sirocco Fan		Sirocco Fan		
Running Current (Rated)		A	0.10 - 0.09	0.15 - 0.14	0.10 - 0.09	0.15 - 0.14	
Power Consumption (Rated)		W	11 - 11	16 - 16	11 - 11	16 - 16	
Power Factor (Rated)		%	48.0 - 54.2	48.0 - 50.7	48.0 - 54.2	48.0 - 50.7	
Temperature Control			Microcomputer Control		Microcomputer Control		
Dimensions (H × W × D)		in. (mm)	23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		
Packaged Dimensions (H × W × D)		in. (mm)	29-13/16 × 34-7/16 × 13-5/8 (757 × 874 × 346)		29-13/16 × 34-7/16 × 13-5/8 (757 × 874 × 346)		
Weight (Mass)		lbs (kg)	40 (18)		40 (18)		
Gross Weight (Gross Mass)		lbs (kg)	50 (23)		50 (23)		
Sound Pressure Level (H / M / L / SL)		dB(A)	41 / 36 / 30 / 26	43 / 38 / 31 / 26	41 / 36 / 30 / 26	43 / 38 / 31 / 26	
Remote Controller			ARC466A89		ARC466A89		
Outdoor Unit			RXP12AVJU9		RXP12AVJU9		
Casing Color			Ivory White		Ivory White		
Heat Exchanger	Fin Spec / Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		
Fan Motor	Motor output	Hp	0.04		0.04		
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model		2Y147BKBX1A		2Y147BKBX1A		
Refrigerant Oil	Type		FW68DA		FW68DA		
	Charge	oz (L)	21.98 (0.65)		21.98 (0.65)		
Refrigerant	Type		R-32		R-32		
	Charge	lbs (kg)	1.74 (0.79)		1.74 (0.79)		
Airflow Rate		cfm (m³/min)	1,126 (31.9)	1,126 (31.9)	1,126 (31.9)	1,126 (31.9)	
Fan	Type		Propeller		Propeller		
Running Current (Rated)		A	5.48 - 4.96	5.02 - 4.53	5.48 - 4.96	5.02 - 4.53	
Power Consumption (Rated)		W	1,132 - 1,132	1,044 - 1,044	1,132 - 1,132	1,044 - 1,044	
Power Factor (Rated)		%	99.3 - 99.2	99.9 - 99.9	99.3 - 99.2	99.9 - 99.9	
Dimensions (H × W × D)		in. (mm)	21-15/16 × 26-9/16 × 11-3/16 (557 × 675 × 284)		21-15/16 × 26-9/16 × 11-3/16 (557 × 675 × 284)		
Packaged Dimensions (H × W × D)		in. (mm)	24-7/16 × 31-1/4 × 14-1/8 (620 × 794 × 359)		24-7/16 × 31-1/4 × 14-1/8 (620 × 794 × 359)		
Weight (Mass)		lbs (kg)	72 (33)		72 (33)		
Gross Weight (Gross Mass)		lbs (kg)	77 (35)		77 (35)		
Sound Pressure Level		dB(A)	50	52	50	52	
Conditions Based on	Indoor		80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)	
	Outdoor		95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)	
	Piping Length		25 ft		25 ft		
Drawing No.			3D159398A				
Note(s)			SL: The quiet fan level of the airflow rate setting. When indoor unit is connected with multi-system outdoor unit. Please refer to the specifications of the multi-system outdoor unit to be connected.				

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m³/min × 35.3

Model			Indoor Unit	FVXV15AVJUW9		FVXV15AVJUT9	
			Outdoor Unit	RXP15AVJU9		RXP15AVJU9	
				Cooling	Heating	Cooling	Heating
Power Supply				1 ϕ, 208 - 230 V, 60 Hz		1 ϕ, 208 - 230 V, 60 Hz	
Capacity Rated (Min. - Max.)		Btu/h	15,000 (6,100 ~ 19,100)		18,000 (7,300 ~ 20,400)		
Running Current (Rated)		A	6.46 - 5.48		7.89 - 7.14		
Power Consumption (Rated)		W	1,250 - 1,250		1,628 - 1,628		
Power Factor (Rated)		%	93.0 - 93.1		99.2 - 99.2		
SEER2			19.5		—		
HSPF2 (Region IV)			—		9.5		
HSPF2 (Region V)			—		8.0		
EER2 (Rated)		Btu/W·h	12.0		—		
COP2 (°F (–15°C))		W/W	—		1.8		
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)		ϕ1/4 (6.4)		
	Gas	in. (mm)	ϕ1/2 (12.7)		ϕ1/2 (12.7)		
	Drain	in. (mm)	ϕ13/16 (20)		ϕ13/16 (20)		
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
Max. Interunit Piping Length		ft (m)	98-1/2 (30)		98-1/2 (30)		
Max. Interunit Height Difference		ft (m)	65-5/8 (20)		65-5/8 (20)		
Chargeless		ft (m)	49-1/4 (15)		49-1/4 (15)		
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)		0.22 (20)		
Indoor Unit			FVXV15AVJUW9		FVXV15AVJUT9		
Front Panel Color (Mancel No.)			White (N9.5)		Espresso (B-690)		
Heat Exchanger	Rows × Stages, Fin per Inch		2 × 22, 21		2 × 22, 21		
	Fin Spec / Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		
Airflow Rate	H / M / L / SL	cfm	392 / 311 / 254 / 201	417 / 321 / 272 / 215	392 / 311 / 254 / 201	417 / 321 / 272 / 215	
		m³/min	11.1 / 8.8 / 7.2 / 5.7	11.8 / 9.1 / 7.7 / 6.1	11.1 / 8.8 / 7.2 / 5.7	11.8 / 9.1 / 7.7 / 6.1	
Air Direction Control			Right, Left, Upward, Downward		Right, Left, Upward, Downward		
Air Filter			Removable, Washable, Mildew Proof		Removable, Washable, Mildew Proof		
Fan Motor	H / M / L / SL	rpm	840 / 680 / 570 / 460	890 / 700 / 600 / 490	840 / 680 / 570 / 460	890 / 700 / 600 / 490	
	Motor output	Hp	0.05		0.05		
Fan	Type		Sirocco Fan		Sirocco Fan		
Running Current (Rated)		A	0.17 - 0.15	0.20 - 0.18	0.17 - 0.15	0.20 - 0.18	
Power Consumption (Rated)		W	19 - 19	22 - 22	19 - 19	22 - 22	
Power Factor (Rated)		%	48.0 - 54.1	48.0 - 52.6	48.0 - 54.1	48.0 - 52.6	
Temperature Control			Microcomputer Control		Microcomputer Control		
Dimensions (H × W × D)		in. (mm)	23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		
Packaged Dimensions (H × W × D)		in. (mm)	29-13/16 × 34-7/16 × 13-5/8 (757 × 874 × 346)		29-13/16 × 34-7/16 × 13-5/8 (757 × 874 × 346)		
Weight (Mass)		lbs (kg)	40 (18)		40 (18)		
Gross Weight (Gross Mass)		lbs (kg)	50 (23)		50 (23)		
Sound Pressure Level (H / M / L / SL)		dB(A)	46 / 40 / 36 / 30	46 / 40 / 36 / 30	46 / 40 / 36 / 30	46 / 40 / 36 / 30	
Remote Controller			ARC466A89		ARC466A89		
Outdoor Unit			RXP15AVJU9		RXP15AVJU9		
Casing Color			Ivory White		Ivory White		
Heat Exchanger	Fin Spec / Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		
Fan Motor	Motor output	Hp	0.02		0.02		
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type			
	Model	2Y260BPAX1A		2Y260BPAX1A			
Refrigerant Oil	Type	FW68DA		FW68DA			
	Charge	oz (L)	30.43 (0.90)		30.43 (0.90)		
Refrigerant	Type	R-32		R-32			
	Charge	lbs (kg)	3.04 (1.38)		3.04 (1.38)		
Airflow Rate		cfm (m³/min)	2,383 (67.5)	2,327 (65.9)	2,383 (67.5)	2,327 (65.9)	
Fan	Type		Propeller		Propeller		
Running Current (Rated)		A	6.29 - 5.69	7.69 - 6.96	6.29 - 5.69	7.69 - 6.96	
Power Consumption (Rated)		W	1,231 - 1,231	1,606 - 1,606	1,231 - 1,231	1,606 - 1,606	
Power Factor (Rated)		%	94.1 - 94.1	99.9 - 99.9	94.1 - 94.1	99.9 - 99.9	
Dimensions (H × W × D)		in. (mm)	29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)		29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)		
Packaged Dimensions (H × W × D)		in. (mm)	32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)		32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)		
Weight (Mass)		lbs (kg)	127 (58)		127 (58)		
Gross Weight (Gross Mass)		lbs (kg)	135 (61)		135 (61)		
Sound Pressure Level		dB(A)	55	57	55	57	
Conditions Based on	Indoor	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)		80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)			
	Outdoor	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)		95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)			
	Piping Length	25 ft		25 ft			
Drawing No.			3D159399A				
Note(s)			SL: The quiet fan level of the airflow rate setting. When indoor unit is connected with multi-system outdoor unit. Please refer to the specifications of the multi-system outdoor unit to be connected.				

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m³/min × 35.3


Model			Indoor Unit	FVXV18AVJUW9		FVXV18AVJUT9	
			Outdoor Unit	RXP18AVJU9		RXP18AVJU9	
			Cooling	Heating	Cooling	Heating	
Power Supply			1 ϕ, 208 - 230 V, 60 Hz		1 ϕ, 208 - 230 V, 60 Hz		
Capacity Rated (Min. - Max.)		Btu/h	17,600 (6,200 ~ 21,400)	20,000 (8,300 ~ 21,800)	17,600 (6,200 ~ 21,400)	20,000 (8,300 ~ 21,800)	
Running Current (Rated)		A	7.51 - 6.79	8.36 - 7.56	7.51 - 6.79	8.36 - 7.56	
Power Consumption (Rated)		W	1,467 - 1,467	1,724 - 1,724	1,467 - 1,467	1,724 - 1,724	
Power Factor (Rated)		%	93.9 - 93.9	99.1 - 99.1	93.9 - 93.9	99.1 - 99.1	
SEER2			19.5	—	19.5	—	
HSPF2 (Region IV)			—	9.5	—	9.5	
HSPF2 (Region V)			—	7.9	—	7.9	
EER2 (Rated)		Btu/W·h	12.0	—	12.0	—	
COP2 (°F (–15°C))		W/W	—	1.8	—	1.8	
Piping Connections	Liquid	in. (mm)	ϕ1/4 (6.4)		ϕ1/4 (6.4)		
	Gas	in. (mm)	ϕ1/2 (12.7)		ϕ1/2 (12.7)		
	Drain	in. (mm)	ϕ13/16 (20)		ϕ13/16 (20)		
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
Max. Interunit Piping Length		ft (m)	98-1/2 (30)		98-1/2 (30)		
Max. Interunit Height Difference		ft (m)	65-5/8 (20)		65-5/8 (20)		
Chargeless		ft (m)	49-1/4 (15)		49-1/4 (15)		
Amount of Additional Charge of Refrigerant		oz/ft (g/m)	0.22 (20)		0.22 (20)		
Indoor Unit			FVXV18AVJUW9		FVXV18AVJUT9		
Front Panel Color (Mancel No.)			White (N9.5)		Espresso (B-690)		
Heat Exchanger	Rows × Stages, Fin per Inch		2 × 22, 21		2 × 22, 21		
	Fin Spec / Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		Multi Slit Fin / ϕ5 Hi-XB Tube		
Airflow Rate	H / M / L / SL	cfm	448 / 332 / 286 / 240	455 / 360 / 290 / 240	448 / 332 / 286 / 240	455 / 360 / 290 / 240	
		m³/min	12.7 / 9.4 / 8.1 / 6.8	12.9 / 10.2 / 8.2 / 6.8	12.7 / 9.4 / 8.1 / 6.8	12.9 / 10.2 / 8.2 / 6.8	
Air Direction Control			Right, Left, Upward, Downward		Right, Left, Upward, Downward		
Air Filter			Removable, Washable, Mildew Proof		Removable, Washable, Mildew Proof		
Fan Motor	H / M / L / SL	rpm	950 / 720 / 630 / 540	970 / 780 / 640 / 540	950 / 720 / 630 / 540	970 / 780 / 640 / 540	
	Motor output	Hp	0.05		0.05		
Fan	Type		Sirocco Fan		Sirocco Fan		
Running Current (Rated)		A	0.23 - 0.21	0.25 - 0.23	0.23 - 0.21	0.25 - 0.23	
Power Consumption (Rated)		W	26 - 26	27 - 27	26 - 26	27 - 27	
Power Factor (Rated)		%	48.0 - 53.6	48.0 - 51.7	48.0 - 53.6	48.0 - 51.7	
Temperature Control			Microcomputer Control		Microcomputer Control		
Dimensions (H × W × D)		in. (mm)	23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		23-5/8 × 29-1/2 × 9-3/8 (600 × 750 × 238)		
Packaged Dimensions (H × W × D)		in. (mm)	29-13/16 × 34-7/16 × 13-5/8 (757 × 874 × 346)		29-13/16 × 34-7/16 × 13-5/8 (757 × 874 × 346)		
Weight (Mass)		lbs (kg)	40 (18)		40 (18)		
Gross Weight (Gross Mass)		lbs (kg)	50 (23)		50 (23)		
Sound Pressure Level (H / M / L / SL)		dB(A)	49 / 42 / 38 / 34	49 / 43 / 37 / 33	49 / 42 / 38 / 34	49 / 43 / 37 / 33	
Remote Controller			ARC466A89		ARC466A89		
Outdoor Unit			RXP18AVJU9		RXP18AVJU9		
Casing Color			Ivory White		Ivory White		
Heat Exchanger	Fin Spec / Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		Waffle Fin (PE) / ϕ7 Hi-XSL Tube		
Fan Motor	Motor output	Hp	0.02		0.02		
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model		2Y260BPAX1A		2Y260BPAX1A		
Refrigerant Oil	Type		FW68DA		FW68DA		
	Charge	oz (L)	30.43 (0.90)		30.43 (0.90)		
Refrigerant	Type		R-32		R-32		
	Charge	lbs (kg)	3.04 (1.38)		3.04 (1.38)		
Airflow Rate		cfm (m³/min)	2,383 (67.5)	2,327 (65.9)	2,383 (67.5)	2,327 (65.9)	
Fan	Type		Propeller		Propeller		
Running Current (Rated)		A	7.28 - 6.58	8.11 - 7.33	7.28 - 6.58	8.11 - 7.33	
Power Consumption (Rated)		W	1,441 - 1,441	1,697 - 1,697	1,441 - 1,441	1,697 - 1,697	
Power Factor (Rated)		%	95.2 - 95.2	99.9 - 99.9	95.2 - 95.2	99.9 - 99.9	
Dimensions (H × W × D)		in. (mm)	29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)		29-1/2 × 34-1/4 × 12-5/8 (750 × 870 × 320)		
Packaged Dimensions (H × W × D)		in. (mm)	32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)		32-1/16 × 40-5/16 × 16 (814 × 1,024 × 406)		
Weight (Mass)		lbs (kg)	127 (58)		127 (58)		
Gross Weight (Gross Mass)		lbs (kg)	135 (61)		135 (61)		
Sound Pressure Level		dB(A)	55	57	55	57	
Conditions Based on	Indoor	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)		
	Outdoor	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)		
	Piping Length	25 ft		25 ft			
Drawing No.			3D159400A				
Note(s)			SL: The quiet fan level of the airflow rate setting. When indoor unit is connected with multi-system outdoor unit. Please refer to the specifications of the multi-system outdoor unit to be connected.				

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m³/min × 35.3

4. Dimensions


4.1 Indoor Unit

FDMA09/12AVJU9

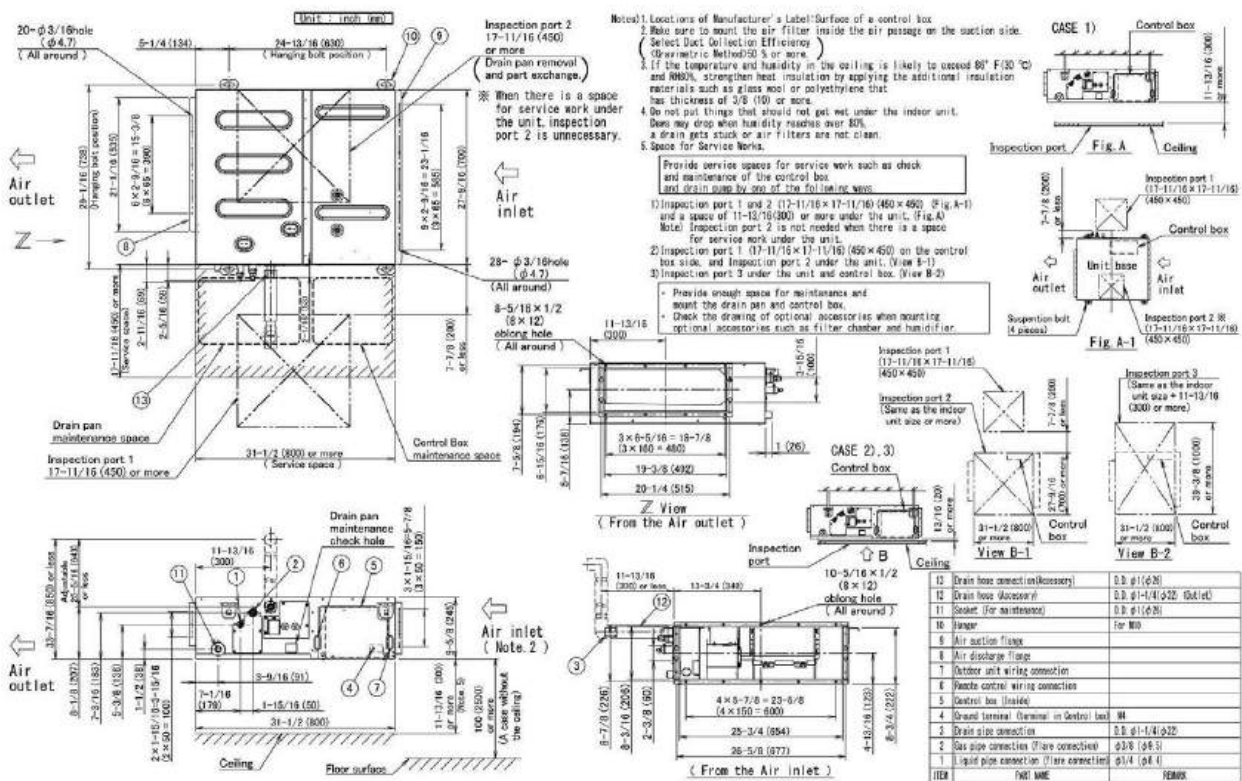


3D112918D

FDMA15/18/24AVJU9

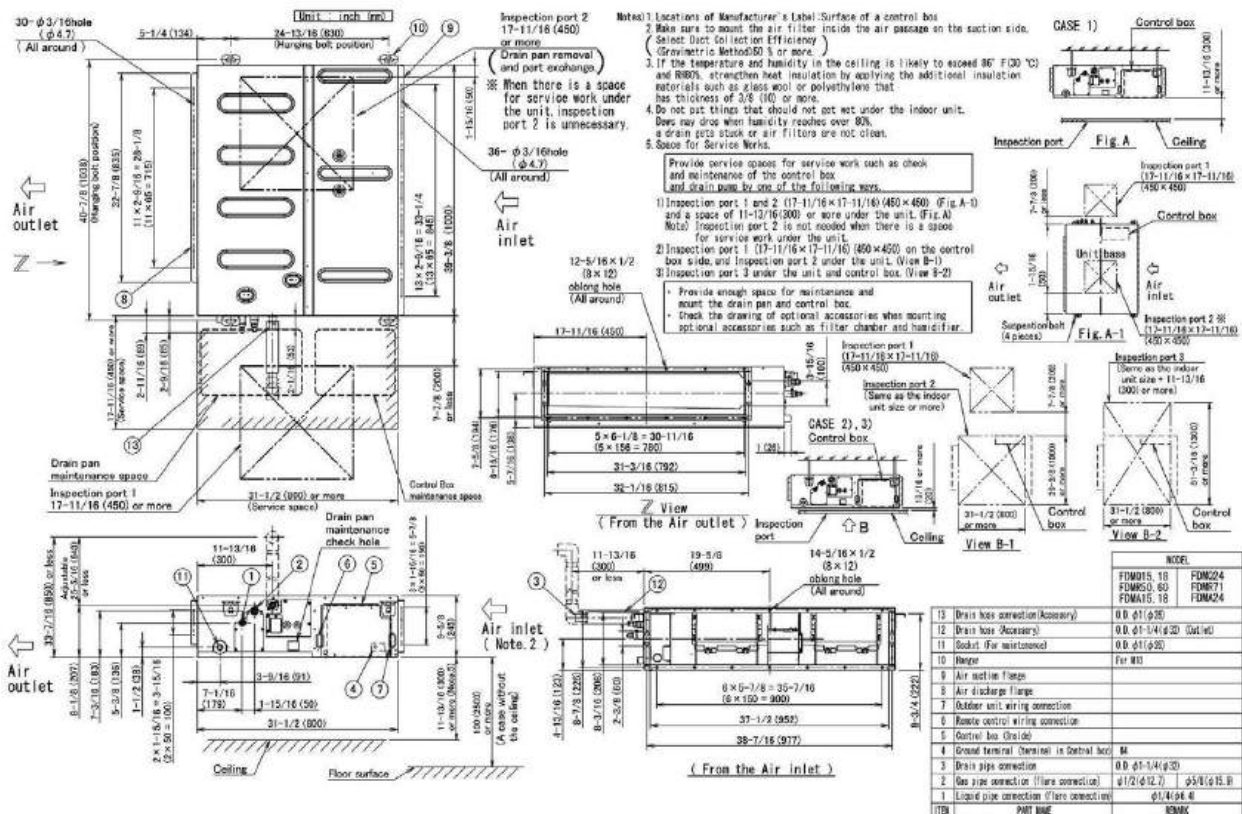


3D112919C

FVXV09/12AVJUW(T)9

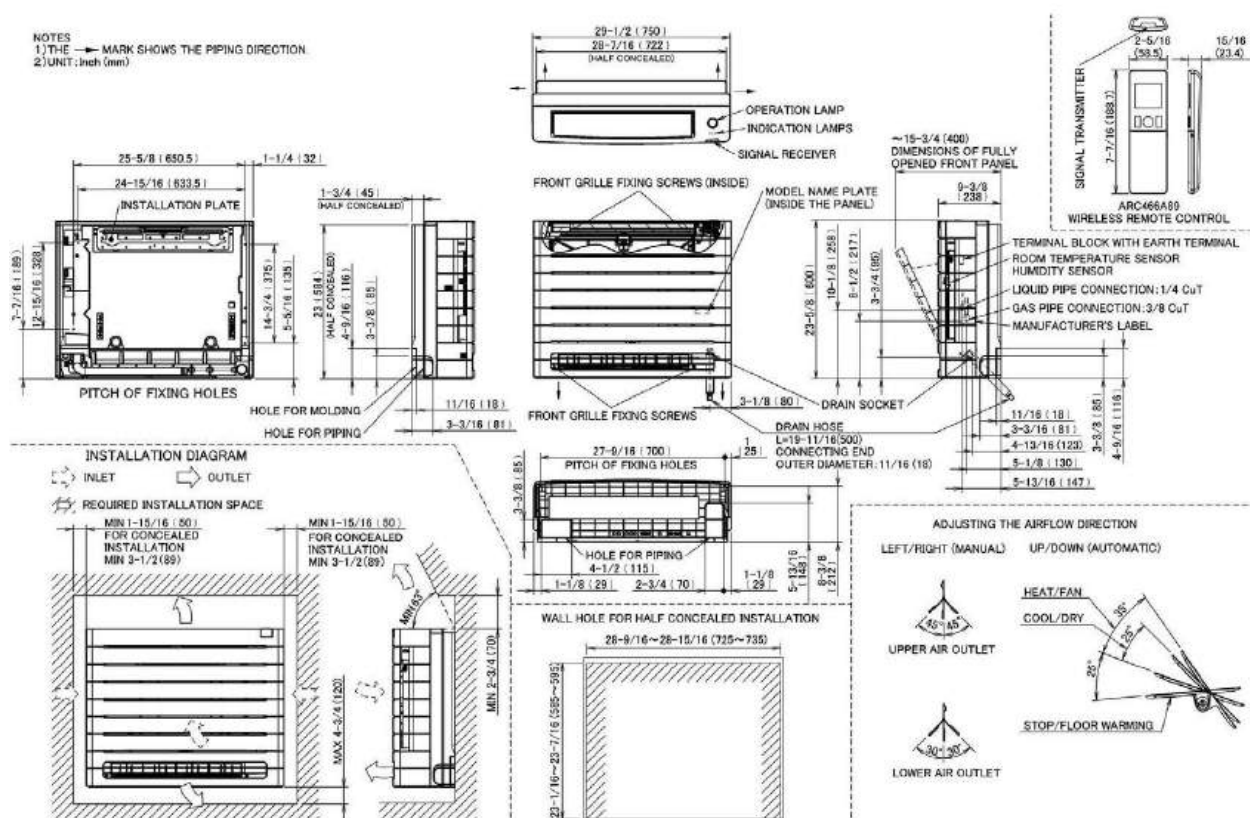


3D158881

FVXV15/18AVJUW(T)9

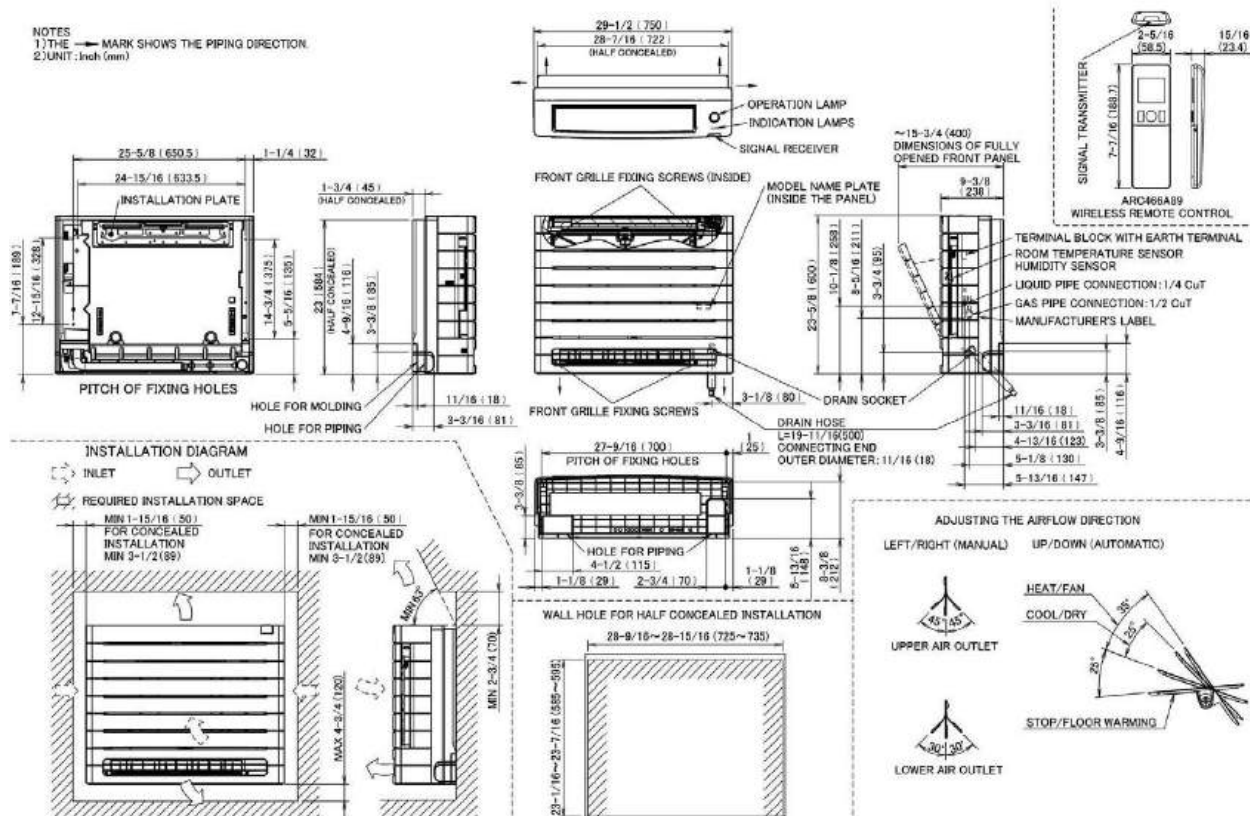


3D158883

BRC1NRV71 — Wired Remote Controller (Option) —

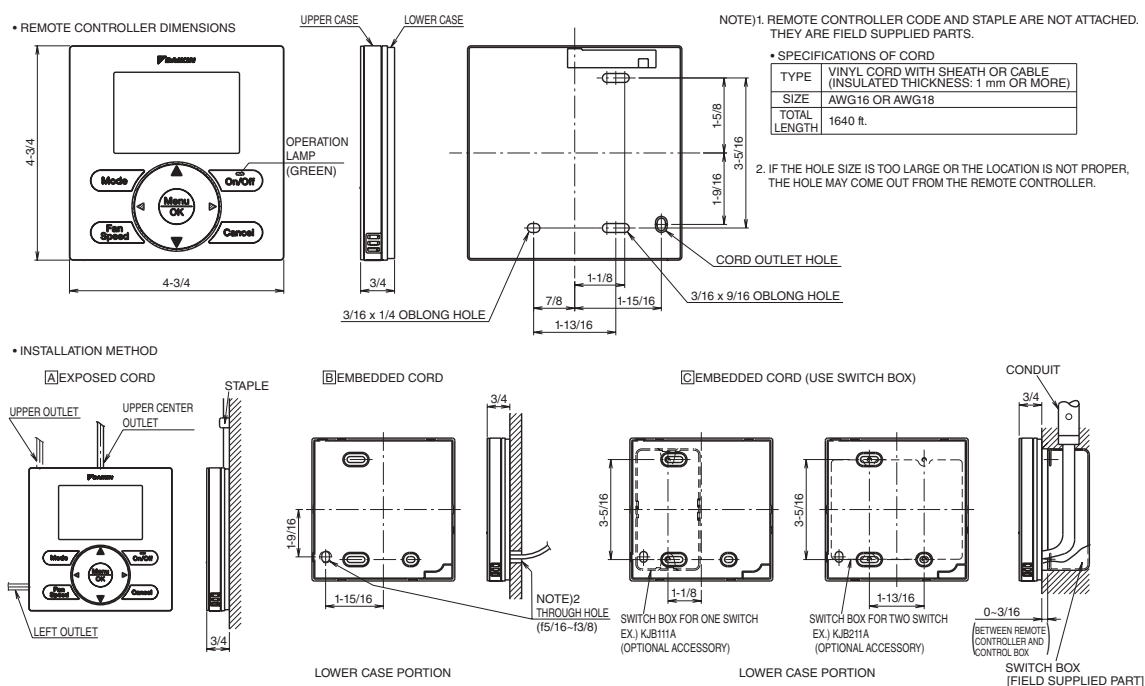

3D091305A


BRC073A6 — Wired Remote Controller (Option) —

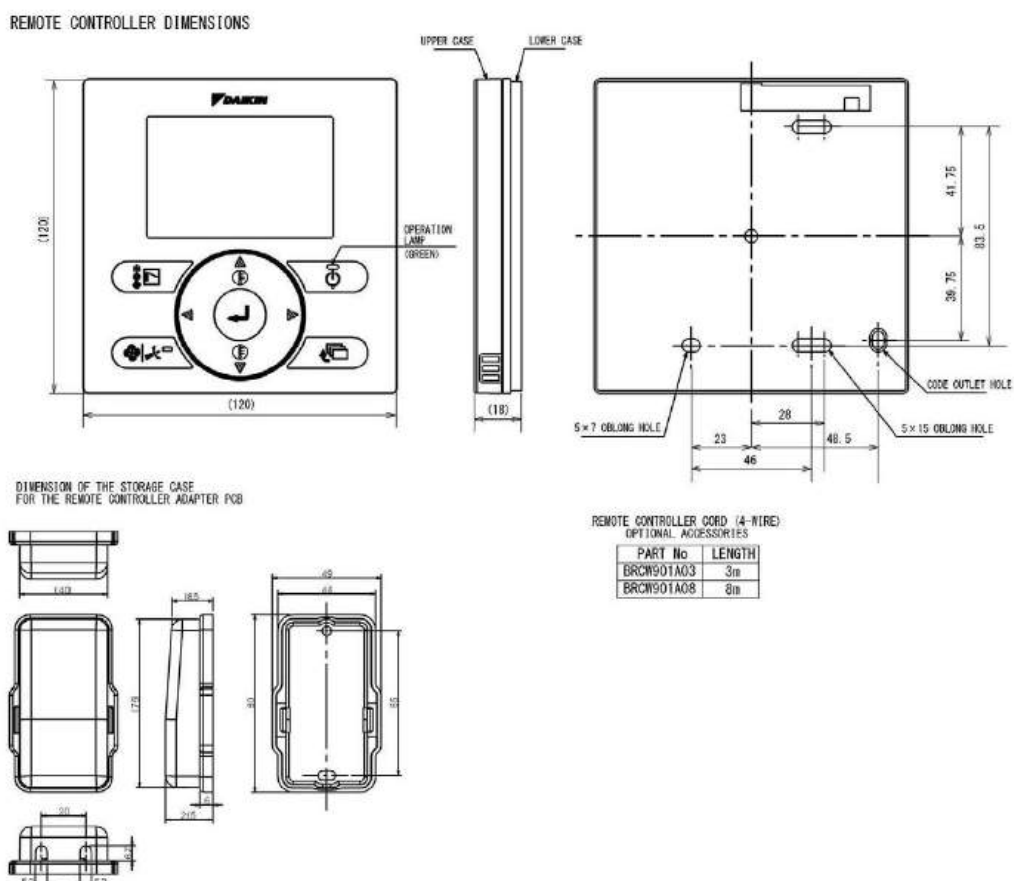

3D152615


4.2 Outdoor Unit

RXP09/12AVJU9

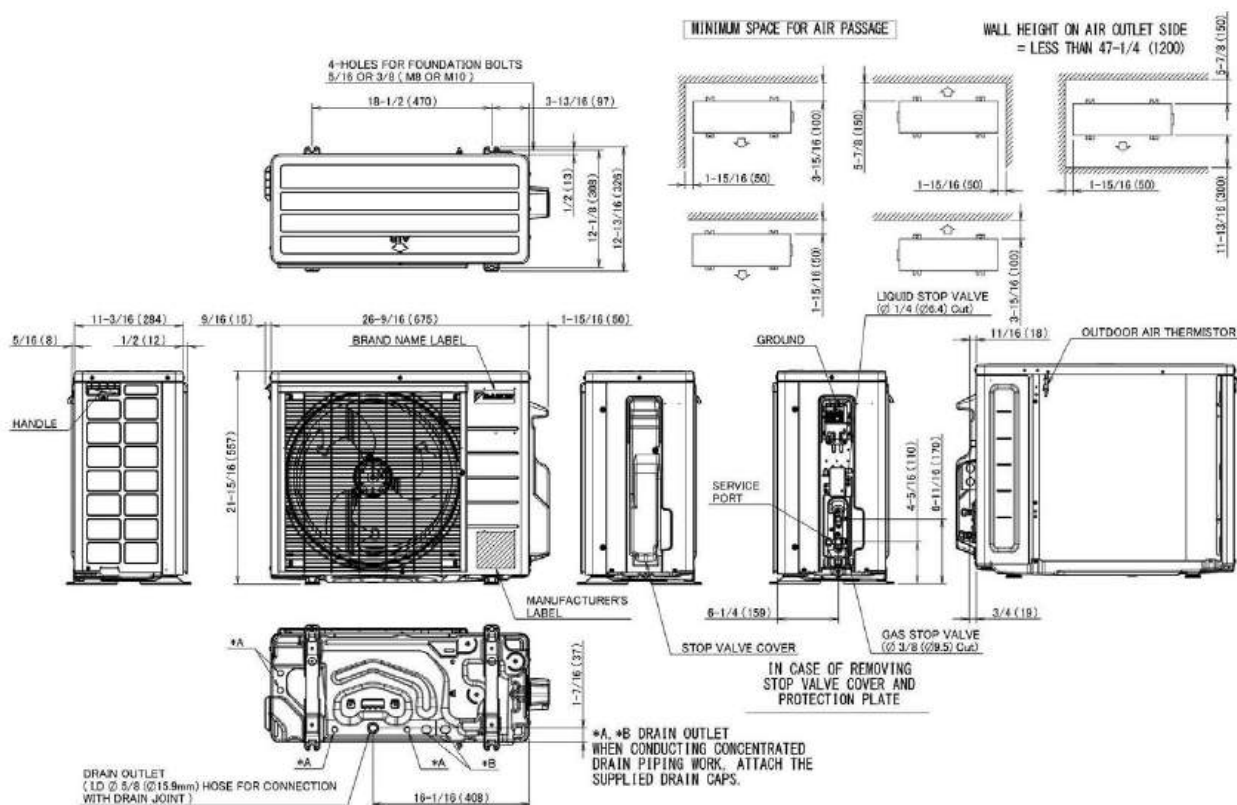


3D152019

RXP15/18AVJU9

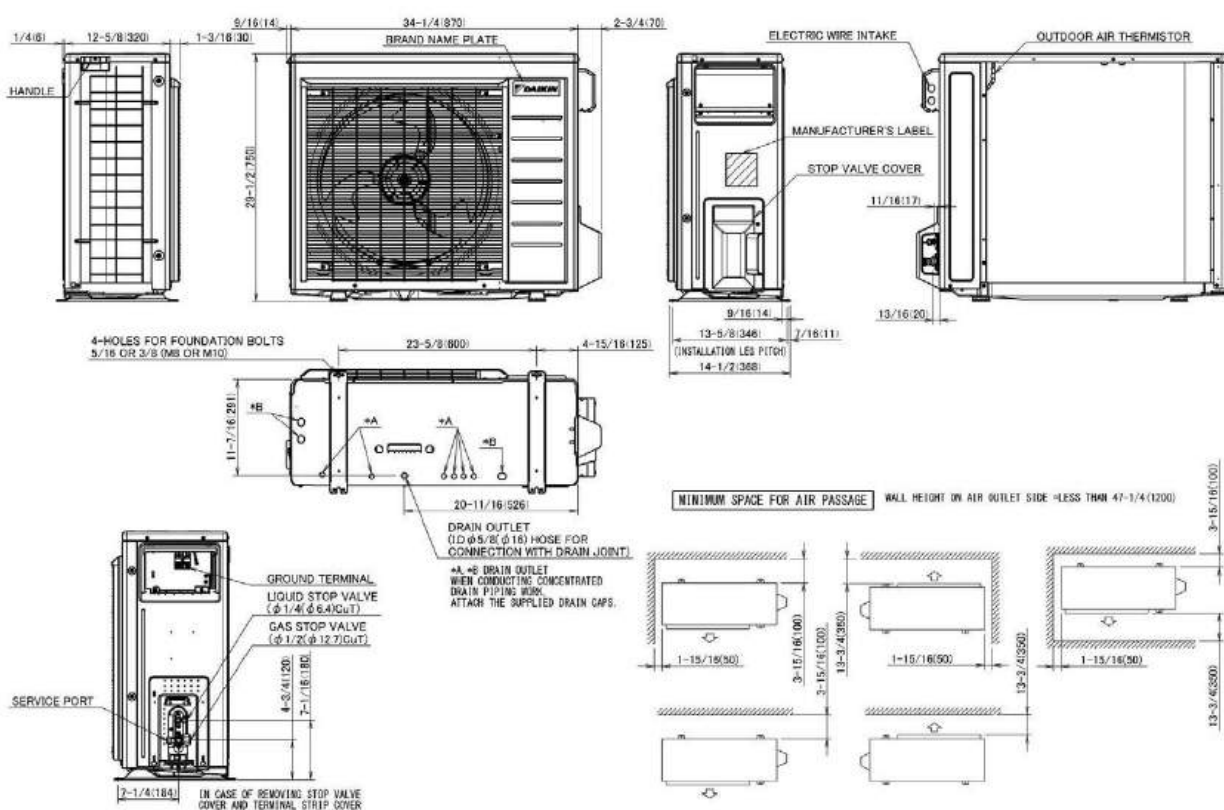

3D150942

RXP24AVJU9

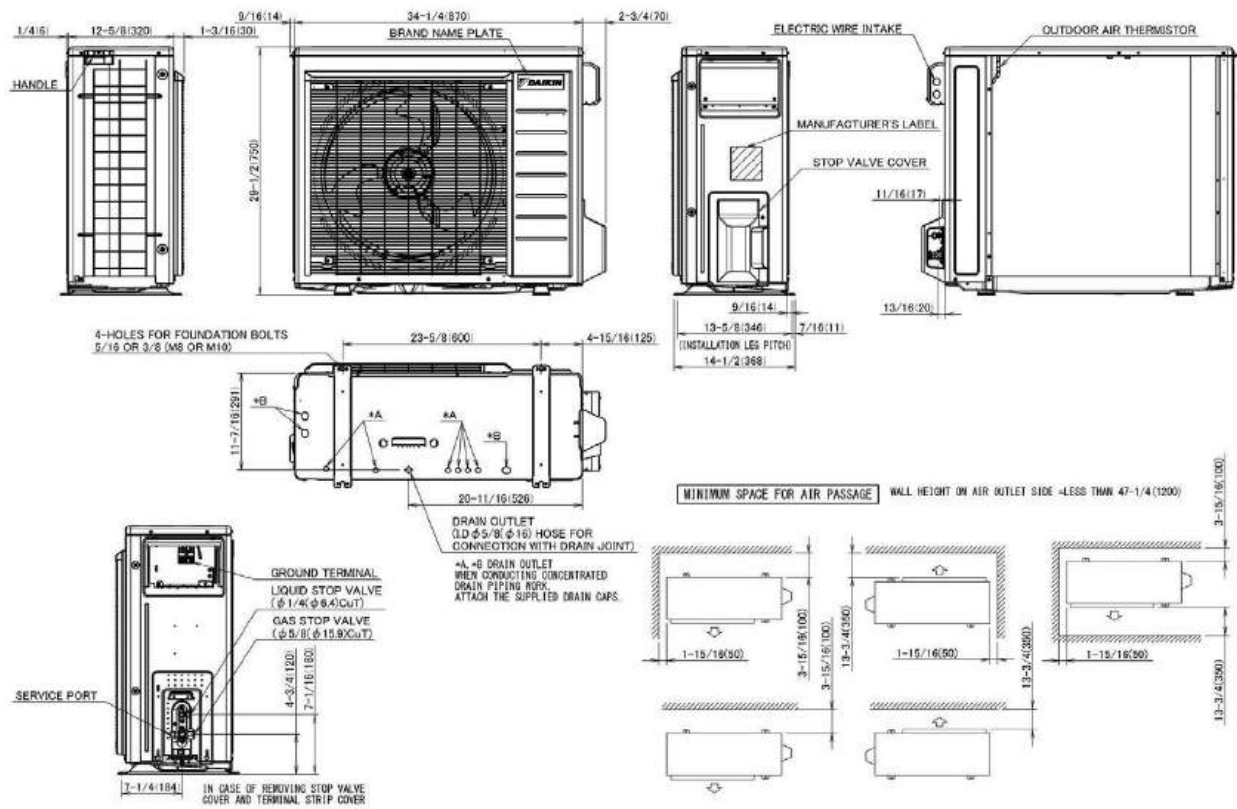


3D150943

5. Wiring Diagrams


5.1 Indoor Unit

FDMA09/12/15/18/24AVJU9

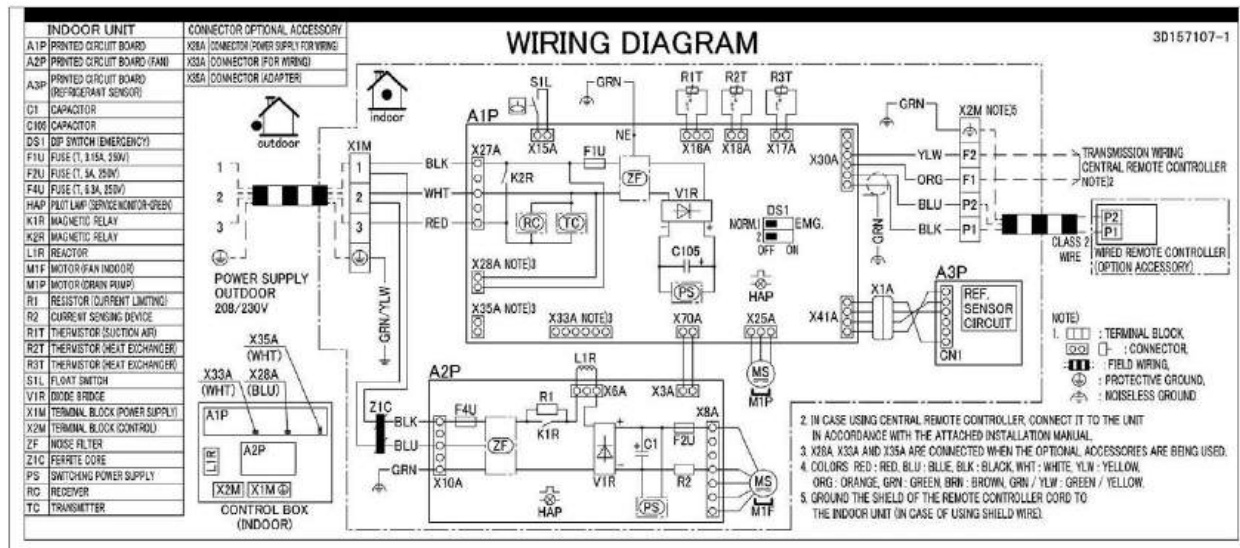

3D157107


FVXV09/12/15/18AVJUW(T)9

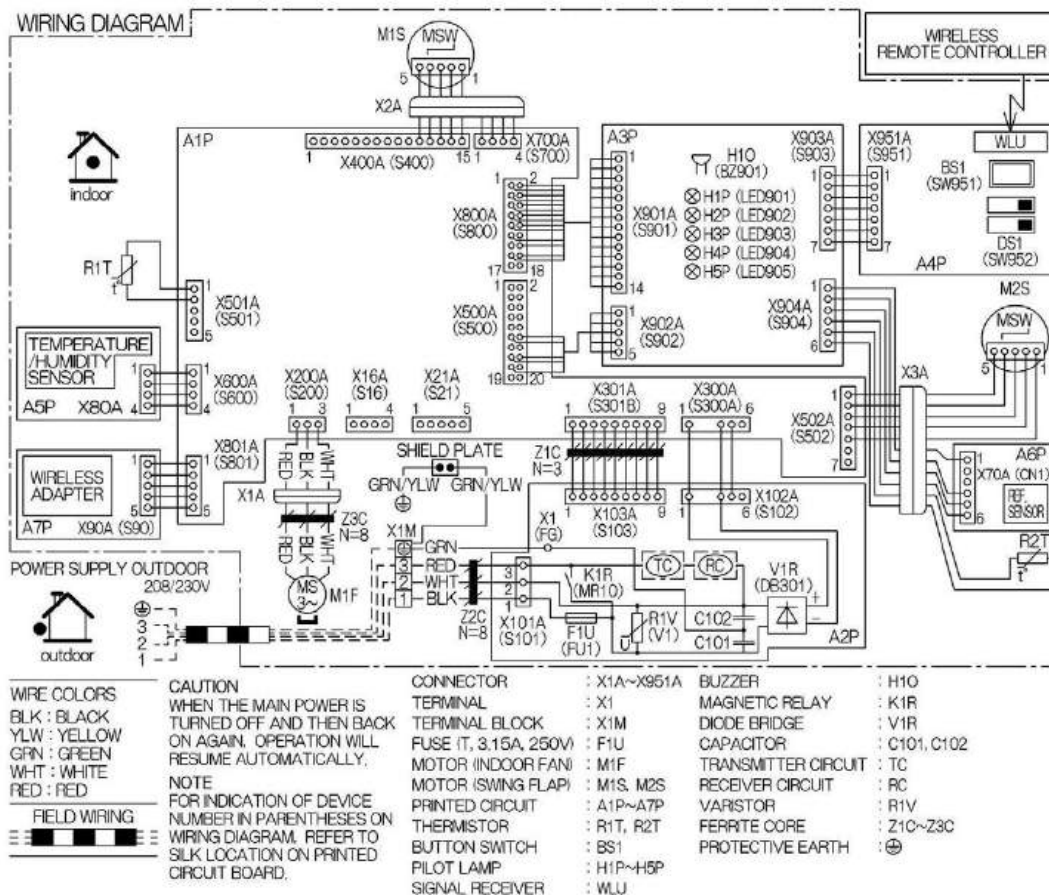

3D157789


5.2 Outdoor Unit

RXP09/12AVJU9

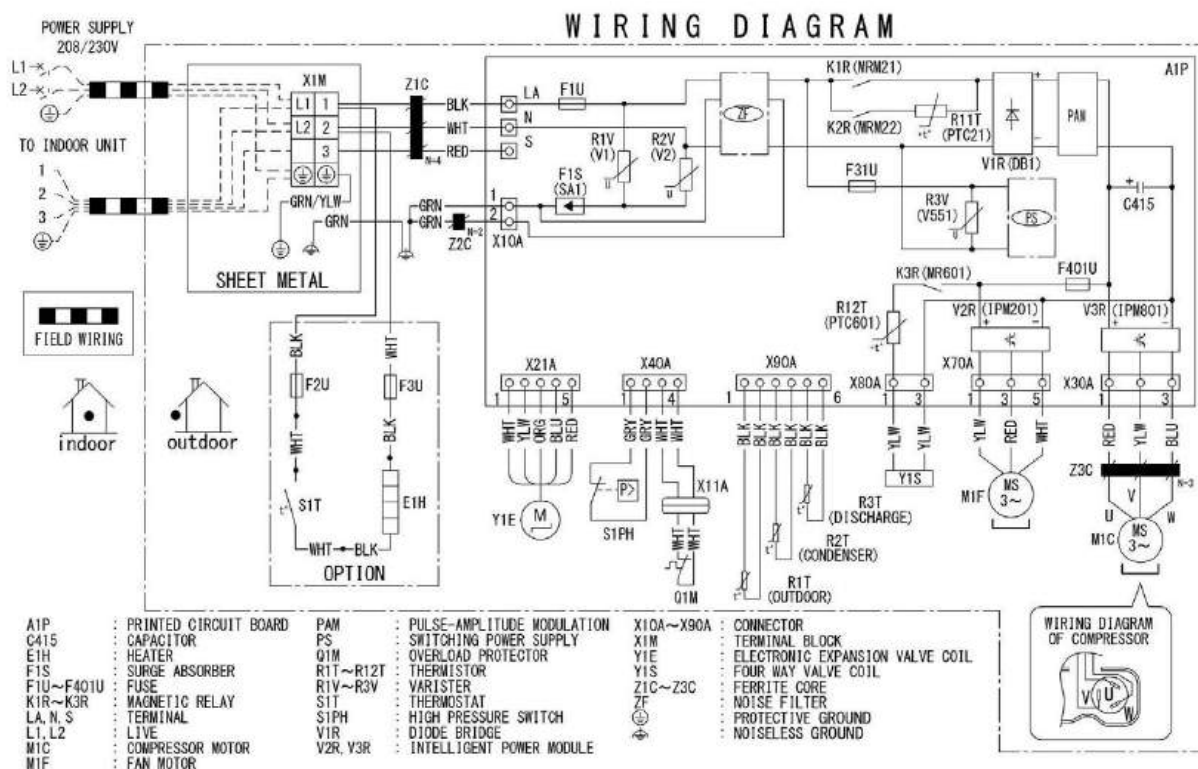

C: 3D149647A

RXP15/18/24AVJU9

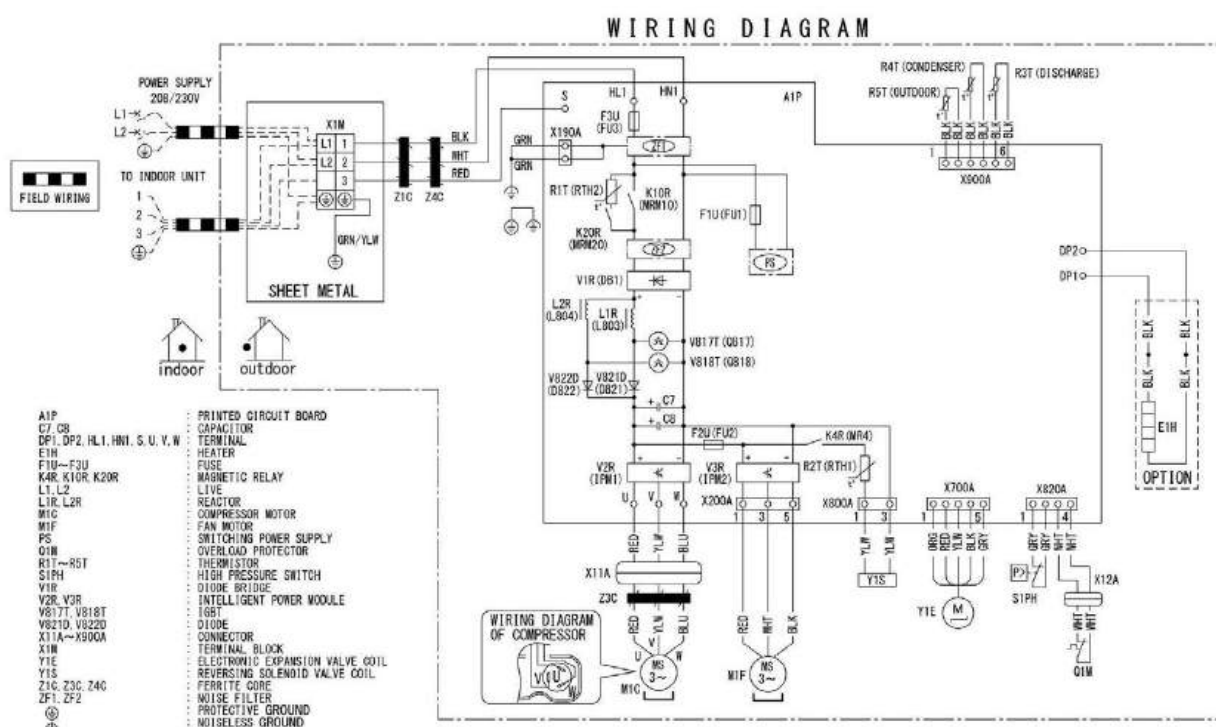


C: 3D149181

6. Piping Diagrams


6.1 Indoor Unit

FDMA09/12/15/18/24AVJU9

FVXV09/12AVJUW(T)9

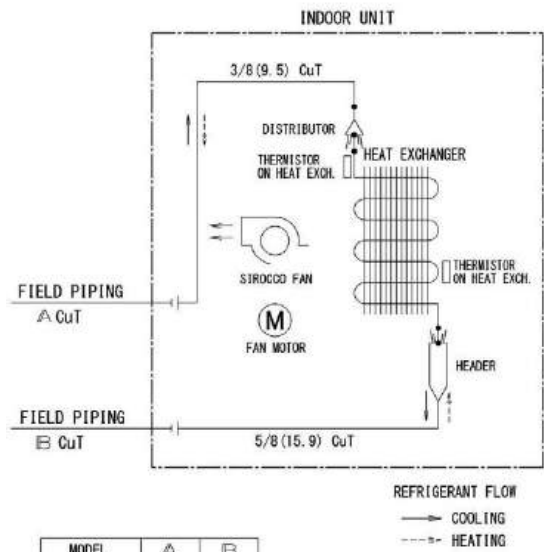


MODEL	A	B
FDMA09 - 12 FDMA12 - 12 CDMA07	1/4 (6.4)	3/8 (9.5)
FDMA15 - 18 FDMA20 - 60 FDMA15 - 18	1/4 (6.4)	1/2 (12.7)
FDMA24 FDMA21 FDMA24	1/4 (6.4)	5/8 (15.9)

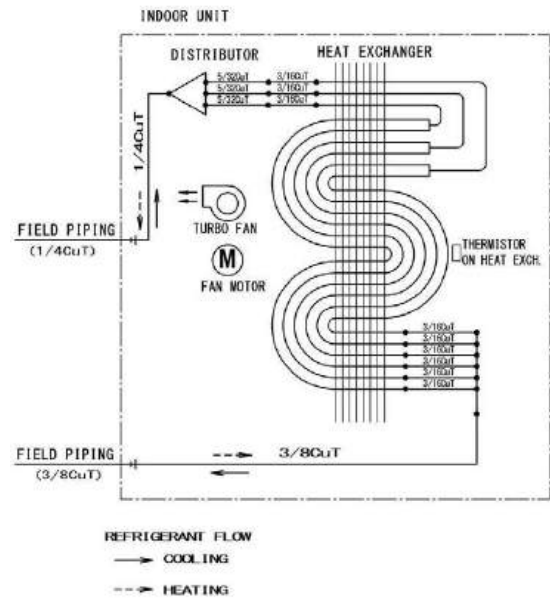

4D112974C

4D158898


FVXV15/18AVJUW(T)9

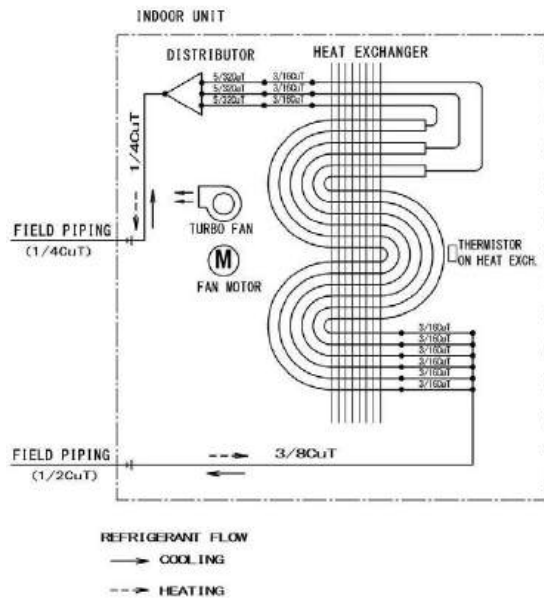

4D158899


6.2 Outdoor Unit

RXP09/12AVJU9

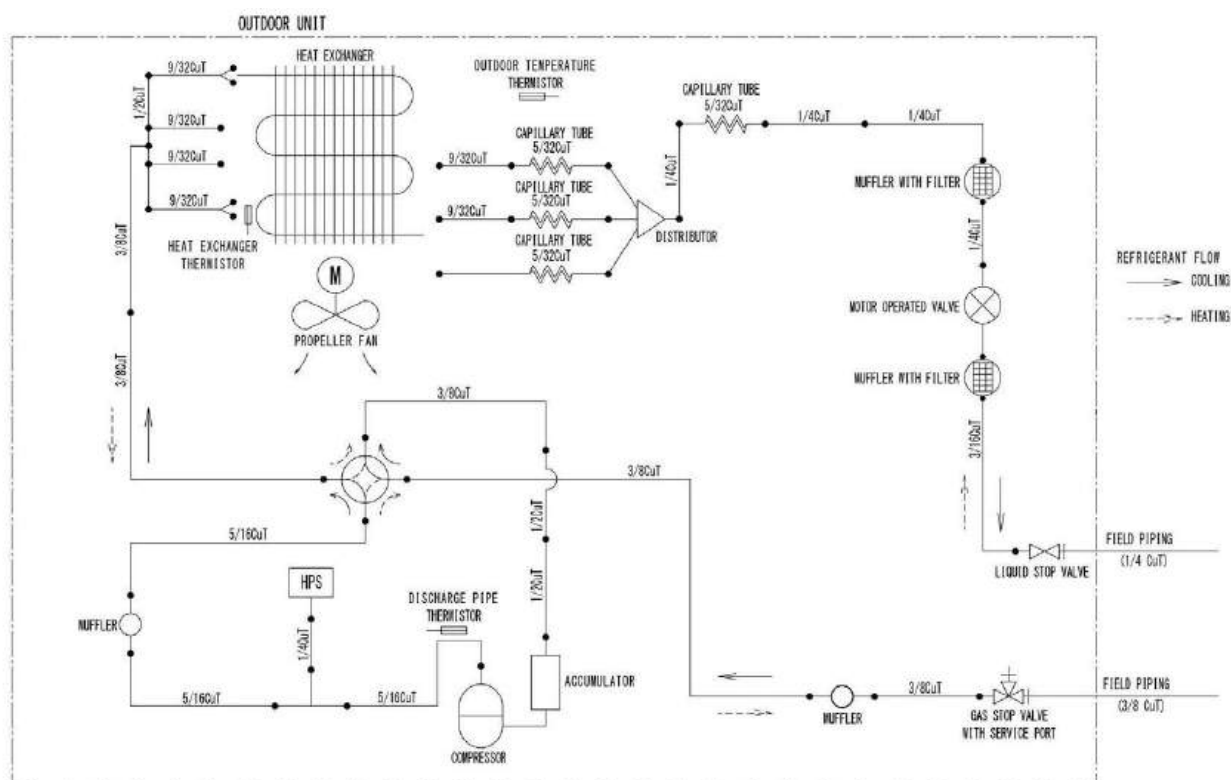


3D150947

RXP15/18AVJU9

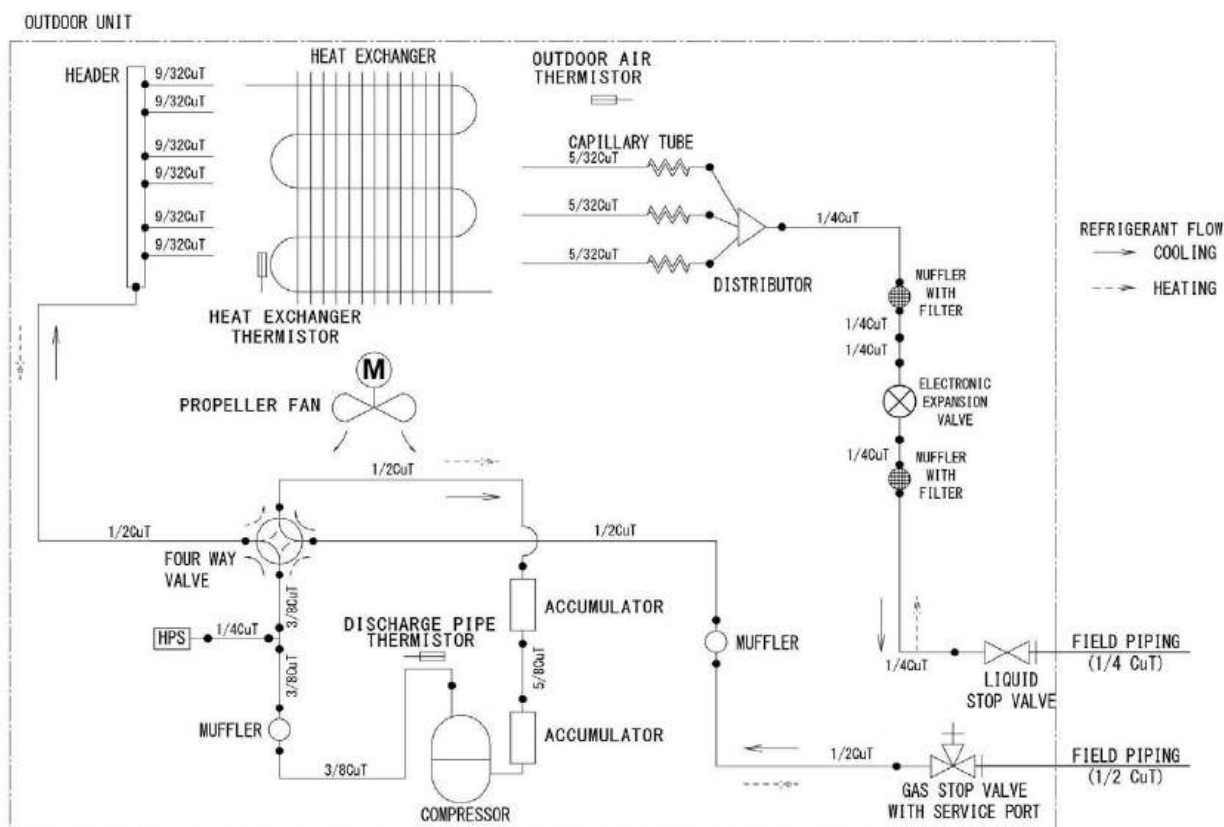

3D150095

RXP24AVJU9

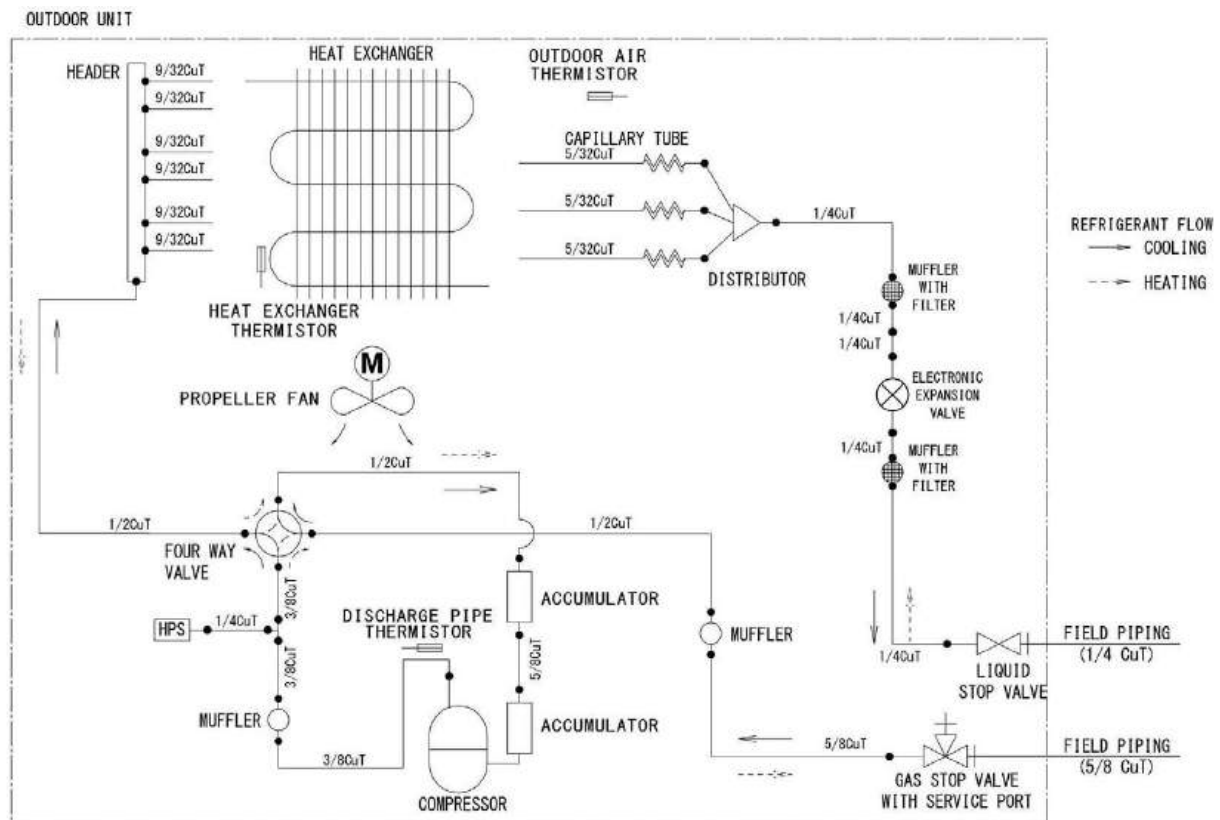

3D150096

7. Capacity Tables

FDMA09AVJU9 + RXP09AVJU9

Cooling (60 Hz, 208 V)

AFR	8.3
BF	0.13

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.05	2.23	0.53	2.80	2.10	0.66	2.54	1.98	0.78	2.41	1.92	0.85	2.28	1.85	0.91	2.13	1.78	0.99
16.0	22.0	3.18	2.19	0.53	2.92	2.07	0.66	2.67	1.95	0.79	2.54	1.89	0.85	2.41	1.83	0.91	2.26	1.77	0.99
18.0	25.0	3.31	2.28	0.54	3.05	2.17	0.66	2.79	2.06	0.79	2.67	2.01	0.85	2.54	1.95	0.92	2.38	1.89	0.99
19.4	26.7	3.40	2.29	0.54	3.14	2.18	0.67	2.88	2.08	0.79	2.75	2.03	0.86	2.63	1.97	0.92	2.47	1.91	1.00
22.0	30.0	3.56	2.31	0.67	3.30	2.21	0.67	3.05	2.12	0.80	2.92	2.07	0.86	2.79	2.03	0.92	2.64	1.98	1.00
24.0	32.0	3.69	2.25	0.67	3.43	2.16	0.67	3.18	2.07	0.80	3.05	2.03	0.86	2.92	1.99	0.93	2.76	1.94	1.00

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	10.42	7.62	0.53	9.54	7.18	0.66	8.67	6.75	0.78	8.23	6.54	0.85	7.79	6.33	0.91	7.27	6.08	0.99
60.8	71.6	10.85	7.47	0.53	9.98	7.06	0.66	9.10	6.65	0.79	8.66	6.45	0.85	8.23	6.26	0.91	7.70	6.03	0.99
64.4	77.0	11.29	7.80	0.54	10.41	7.41	0.66	9.53	7.03	0.79	9.10	6.85	0.85	8.66	6.67	0.92	8.13	6.45	0.99
67.0	80.0	11.59	7.81	0.54	10.71	7.44	0.67	9.84	7.09	0.79	9.40	6.91	0.86	8.96	6.74	0.92	8.44	6.53	1.00
71.6	86.0	12.15	7.88	0.67	11.28	7.56	0.67	10.40	7.24	0.80	9.96	7.08	0.86	9.53	6.92	0.92	9.00	6.74	1.00
75.2	89.6	12.58	7.66	0.67	11.71	7.36	0.67	10.83	7.07	0.80	10.40	6.93	0.86	9.96	6.79	0.93	9.43	6.62	1.00

Heating (60 Hz, 208 V)

AFR	9.1

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.22	1.64	2.85	1.68	3.45	1.72	3.55	1.61	3.65	1.50	3.77	1.39	3.91	1.25	4.14	1.36
21.1		1.62	1.24	2.58	1.74	3.19	1.77	3.33	1.66	3.46	1.54	3.59	1.43	3.75	1.29	4.00	1.39
22.0		1.48	1.10	2.54	1.74	3.16	1.78	3.29	1.67	3.43	1.55	3.57	1.43	3.73	1.30	3.98	1.40
24.0		1.16	0.83	2.46	1.76	3.07	1.80	3.22	1.68	3.37	1.57	3.51	1.45	3.68	1.31	3.94	1.41
25.0		0.99	0.70	2.38	1.73	3.03	1.81	3.19	1.69	3.34	1.57	3.48	1.45	3.65	1.31	3.91	1.41
27.0		0.67	0.45	2.06	1.43	2.95	1.83	3.11	1.71	3.27	1.59	3.42	1.47	3.60	1.32	3.87	1.43

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		7.57	1.64	9.71	1.68	11.77	1.72	12.10	1.61	12.47	1.50	12.85	1.39	13.34	1.25	14.13	1.36
70.0		5.53	1.24	8.81	1.74	10.90	1.77	11.35	1.66	11.80	1.54	12.26	1.43	12.80	1.29	13.66	1.39
71.6		5.04	1.10	8.68	1.74	10.77	1.78	11.24	1.67	11.71	1.55	12.17	1.43	12.72	1.30	13.59	1.40
75.2		3.94	0.83	8.38	1.76	10.48	1.80	11.00	1.68	11.49	1.57	11.97	1.45	12.54	1.31	13.43	1.41
77.0		3.39	0.70	8.14	1.73	10.34	1.81	10.87	1.69	11.38	1.57	11.88	1.45	12.46	1.31	13.36	1.41
80.6		2.30	0.45	7.04	1.43	10.06	1.83	10.63	1.71	11.17	1.59	11.68	1.47	12.28	1.32	13.20	1.43

Cooling (60 Hz, 230 V)

AFR	8.3
BF	0.13

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.05	2.23	0.53	2.80	2.10	0.66	2.54	1.98	0.78	2.41	1.92	0.85	2.28	1.85	0.91	2.13	1.78	0.99
16.0	22.0	3.18	2.19	0.53	2.92	2.07	0.66	2.67	1.95	0.79	2.54	1.89	0.85	2.41	1.83	0.91	2.26	1.77	0.99
18.0	25.0	3.31	2.28	0.54	3.05	2.17	0.66	2.79	2.06	0.79	2.67	2.01	0.85	2.54	1.95	0.92	2.38	1.89	0.99
19.4	26.7	3.40	2.29	0.54	3.14	2.18	0.67	2.88	2.08	0.79	2.75	2.03	0.86	2.63	1.97	0.92	2.47	1.91	1.00
22.0	30.0	3.56	2.31	0.67	3.30	2.21	0.67	3.05	2.12	0.80	2.92	2.07	0.86	2.79	2.03	0.92	2.64	1.98	1.00
24.0	32.0	3.69	2.25	0.67	3.43	2.16	0.67	3.18	2.07	0.80	3.05	2.03	0.86	2.92	1.99	0.93	2.76	1.94	1.00

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	10.42	7.62	0.53	9.54	7.18	0.66	8.67	6.75	0.78	8.23	6.54	0.85	7.79	6.33	0.91	7.27	6.08	0.99
60.8	71.6	10.85	7.47	0.53	9.98	7.06	0.66	9.10	6.65	0.79	8.66	6.45	0.85	8.23	6.26	0.91	7.70	6.03	0.99
64.4	77.0	11.29	7.80	0.54	10.41	7.41	0.66	9.53	7.03	0.79	9.10	6.85	0.85	8.66	6.67	0.92	8.13	6.45	0.99
67.0	80.0	11.59	7.81	0.54	10.71	7.44	0.67	9.84	7.09	0.79	9.40	6.91	0.86	8.96	6.74	0.92	8.44	6.53	1.00
71.6	86.0	12.15	7.88	0.67	11.28	7.56	0.67	10.40	7.24	0.80	9.96	7.08	0.86	9.53	6.92	0.92	9.00	6.74	1.00
75.2	89.6	12.58	7.66	0.67	11.71	7.36	0.67	10.83	7.07	0.80	10.40	6.93	0.86	9.96	6.79	0.93	9.43	6.62	1.00

Heating (60 Hz, 230 V)

AFR	9.1

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.22	1.64	2.85	1.68	3.45	1.72	3.55	1.61	3.65	1.50	3.77	1.39	3.91	1.25	4.14	1.36
21.1		1.62	1.24	2.58	1.74	3.19	1.77	3.33	1.66	3.46	1.54	3.59	1.43	3.75	1.29	4.00	1.39
22.0		1.48	1.10	2.54	1.74	3.16	1.78	3.29	1.67	3.43	1.55	3.57	1.43	3.73	1.30	3.98	1.40
24.0		1.16	0.83	2.46	1.76	3.07	1.80	3.22	1.68	3.37	1.57	3.51	1.45	3.68	1.31	3.94	1.41
25.0		0.99	0.70	2.38	1.73	3.03	1.81	3.19	1.69	3.34	1.57	3.48	1.45	3.65	1.31	3.91	1.41
27.0		0.67	0.45	2.06	1.43	2.95	1.83	3.11	1.71	3.27	1.59	3.42	1.47	3.60	1.32	3.87	1.43

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		7.57	1.64	9.71	1.68	11.77	1.72	12.10	1.61	12.47	1.50	12.85	1.39	13.34	1.25	14.13	1.36
70.0		5.53	1.24	8.81	1.74	10.90	1.77	11.35	1.66	11.80	1.54	12.26	1.43	12.80	1.29	13.66	1.39
71.6		5.04	1.10	8.68	1.74	10.77	1.78	11.24	1.67	11.71	1.55	12.17	1.43	12.72	1.30	13.59	1.40
75.2		3.94	0.83	8.38	1.76	10.48	1.80	11.00	1.68	11.49	1.57	11.97	1.45	12.54	1.31	13.43	1.41
77.0		3.39	0.70	8.14	1.73	10.34	1.81	10.87	1.69	11.38	1.57	11.88	1.45	12.46	1.31	13.36	1.41
80.6		2.30	0.45	7.04	1.43	10.06	1.83	10.63	1.71	11.17	1.59	11.68	1.47	12.28	1.32	13.20	1.43

Symbols:

AFR	: Airflow rate	(m³/min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

- shows MAX capacities and power input (Cooling/Heating).
- TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
- Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
- Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FDMA12AVJU9 + RXP12AVJU9**Cooling (60 Hz, 208 V)**

AFR	9.0
BF	0.15

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																			
EWB	EDB	10			20			30			35			40			46				
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
14.0	20.0	4.03	2.79	0.77	3.69	2.60	0.96	3.35	2.43	1.14	3.18	2.34	1.24	3.01	2.25	1.33	2.81	2.15	1.20		
16.0	22.0	4.20	2.73	0.78	3.86	2.56	0.96	3.52	2.39	1.15	3.35	2.31	1.24	3.18	2.23	1.33	2.98	2.14	1.20		
18.0	25.0	4.36	2.82	0.78	4.03	2.66	0.97	3.69	2.50	1.15	3.52	2.43	1.25	3.35	2.35	1.34	3.15	2.26	1.20		
19.4	26.7	4.48	2.81	0.79	4.14	2.66	0.97	3.80	2.51	1.16	3.63	2.44	1.25	3.47	2.37	1.34	3.26	2.28	1.20		
22.0	30.0	4.70	2.81	0.80	4.36	2.68	0.98	4.02	2.54	1.16	3.85	2.48	1.26	3.68	2.41	1.35	3.48	2.34	1.20		
24.0	32.0	4.87	2.73	0.99	4.53	2.60	0.99	4.19	2.48	1.17	4.02	2.42	1.26	3.85	2.36	1.36	3.65	2.29	1.20		

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																			
EWB	EDB	50			68			86			95			104			115				
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
57.2	68.0	13.75	9.51	0.77	12.59	8.89	0.96	11.44	8.28	1.14	10.86	7.98	1.24	10.28	7.69	1.33	9.59	7.35	1.20		
60.8	71.6	14.32	9.32	0.78	13.16	8.73	0.96	12.01	8.16	1.15	11.43	7.88	1.24	10.85	7.61	1.33	10.16	7.29	1.20		
64.4	77.0	14.89	9.62	0.78	13.74	9.07	0.97	12.58	8.54	1.15	12.00	8.28	1.25	11.43	8.02	1.34	10.73	7.72	1.20		
67.0	80.0	15.29	9.60	0.79	14.14	9.08	0.97	12.98	8.57	1.16	12.40	8.33	1.25	11.85	8.08	1.34	11.13	7.80	1.20		
71.6	86.0	16.03	9.60	0.80	14.88	9.13	0.98	13.72	8.68	1.16	13.15	8.46	1.26	12.57	8.24	1.35	11.87	7.98	1.20		
75.2	89.6	16.60	9.30	0.99	15.45	8.87	0.99	14.29	8.46	1.17	13.72	8.25	1.26	13.14	8.05	1.36	12.45	7.81	1.20		

Heating (60 Hz, 208 V)

AFR	9.9

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.40	1.78	3.08	1.81	3.74	1.86	4.07	1.81	4.42	1.77	4.77	1.73	5.19	1.67	5.87	1.81
21.1		1.76	1.36	2.80	1.88	3.46	1.92	3.82	1.87	4.18	1.83	4.55	1.78	4.98	1.72	5.67	1.85
22.0		1.61	1.22	2.75	1.89	3.42	1.93	3.78	1.88	4.15	1.83	4.51	1.79	4.95	1.73	5.60	1.84
24.0		1.26	0.92	2.66	1.91	3.33	1.95	3.70	1.90	4.07	1.85	4.44	1.80	4.88	1.74	5.25	1.68
25.0		1.08	0.78	2.59	1.89	3.28	1.96	3.66	1.91	4.03	1.86	4.41	1.81	4.85	1.75	5.08	1.61
27.0		0.73	0.51	2.24	1.58	3.19	1.98	3.58	1.93	3.96	1.88	4.33	1.83	4.73	1.73	4.73	1.46

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		8.19	1.78	10.51	1.81	12.74	1.86	13.90	1.81	15.08	1.77	16.27	1.73	17.72	1.67	20.03	1.81
70.0		6.02	1.36	9.54	1.88	11.80	1.92	13.04	1.87	14.28	1.83	15.52	1.78	17.00	1.72	19.36	1.85
71.6		5.48	1.22	9.40	1.89	11.66	1.93	12.91	1.88	14.16	1.83	15.40	1.79	16.90	1.73	19.11	1.84
75.2		4.29	0.92	9.08	1.91	11.35	1.95	12.63	1.90	13.90	1.85	15.16	1.80	16.66	1.74	17.92	1.68
77.0		3.69	0.78	8.85	1.89	11.20	1.96	12.49	1.91	13.77	1.86	15.03	1.81	16.54	1.75	17.32	1.61
80.6		2.50	0.51	7.66	1.58	10.89	1.98	12.21	1.93	13.50	1.88	14.78	1.83	16.13	1.73	16.13	1.46

Cooling (60 Hz, 230 V)

AFR	9.0
BF	0.15

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	4.03	2.79	0.77	3.69	2.60	0.96	3.35	2.43	1.14	3.18	2.34	1.24	3.01	2.25	1.33	2.81	2.15	1.20
16.0	22.0	4.20	2.73	0.78	3.86	2.56	0.96	3.52	2.39	1.15	3.35	2.31	1.24	3.18	2.23	1.33	2.98	2.14	1.20
18.0	25.0	4.36	2.82	0.78	4.03	2.66	0.97	3.69	2.50	1.15	3.52	2.43	1.25	3.35	2.35	1.34	3.15	2.26	1.20
19.4	26.7	4.48	2.81	0.79	4.14	2.66	0.97	3.80	2.51	1.16	3.63	2.44	1.25	3.47	2.37	1.34	3.26	2.28	1.20
22.0	30.0	4.70	2.81	0.80	4.36	2.68	0.98	4.02	2.54	1.16	3.85	2.48	1.26	3.68	2.41	1.35	3.48	2.34	1.20
24.0	32.0	4.87	2.73	0.99	4.53	2.60	0.99	4.19	2.48	1.17	4.02	2.42	1.26	3.85	2.36	1.36	3.65	2.29	1.20

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	13.75	9.51	0.77	12.59	8.89	0.96	11.44	8.28	1.14	10.86	7.98	1.24	10.28	7.69	1.33	9.59	7.35	1.20
60.8	71.6	14.32	9.32	0.78	13.16	8.73	0.96	12.01	8.16	1.15	11.43	7.88	1.24	10.85	7.61	1.33	10.16	7.29	1.20
64.4	77.0	14.89	9.62	0.78	13.74	9.07	0.97	12.58	8.54	1.15	12.00	8.28	1.25	11.43	8.02	1.34	10.73	7.72	1.20
67.0	80.0	15.29	9.60	0.79	14.14	9.08	0.97	12.98	8.57	1.16	12.40	8.33	1.25	11.43	8.08	1.34	11.13	7.80	1.20
71.6	86.0	16.03	9.60	0.80	14.88	9.13	0.98	13.72	8.68	1.16	13.15	8.46	1.26	12.57	8.24	1.35	11.87	7.98	1.20
75.2	89.6	16.60	9.30	0.99	15.45	8.87	0.99	14.29	8.46	1.17	13.72	8.25	1.26	13.14	8.05	1.36	12.45	7.81	1.20

Heating (60 Hz, 230 V)

AFR	9.9

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.40	1.78	3.08	1.81	3.74	1.86	4.07	1.81	4.42	1.77	4.77	1.73	5.19	1.67	5.87	1.81
21.1		1.76	1.36	2.80	1.88	3.46	1.92	3.82	1.87	4.18	1.83	4.55	1.78	4.98	1.72	5.67	1.85
22.0		1.61	1.22	2.75	1.89	3.42	1.93	3.78	1.88	4.15	1.83	4.51	1.79	4.95	1.73	5.60	1.84
24.0		1.26	0.92	2.66	1.91	3.33	1.95	3.70	1.90	4.07	1.85	4.44	1.80	4.88	1.74	5.25	1.68
25.0		1.08	0.78	2.59	1.89	3.28	1.96	3.66	1.91	4.03	1.86	4.41	1.81	4.85	1.75	5.08	1.61
27.0		0.73	0.51	2.24	1.58	3.19	1.98	3.58	1.93	3.96	1.88	4.33	1.83	4.73	1.73	4.73	1.46

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		8.19	1.78	10.51	1.81	12.74	1.86	13.90	1.81	15.08	1.77	16.27	1.73	17.72	1.67	20.03	1.81
70.0		6.02	1.36	9.54	1.88	11.80	1.92	13.04	1.87	14.28	1.83	15.52	1.78	17.00	1.72	19.36	1.85
71.6		5.48	1.22	9.40	1.89	11.66	1.93	12.91	1.88	14.16	1.83	15.40	1.79	16.90	1.73	19.11	1.84
75.2		4.29	0.92	9.08	1.91	11.35	1.95	12.63	1.90	13.90	1.85	15.16	1.80	16.66	1.74	17.92	1.68
77.0		3.69	0.78	8.85	1.89	11.20	1.96	12.49	1.91	13.77	1.86	15.03	1.81	16.54	1.75	17.32	1.61
80.6		2.50	0.51	7.66	1.58	10.89	1.98	12.21	1.93	13.50	1.88	14.78	1.83	16.13	1.73	16.13	1.46

Symbols:

AFR	: Airflow rate	(m³/min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FDMA15AVJU9 + RXP15AVJU9

Cooling (60 Hz, 208 V)

AFR	13.2
BF	0.14

Temp: Celsius / TC, SHC, PI: kW

Temp. Celsius / °C, SHC, PI, kW																				
INDOOR		OUTDOOR TEMPERATURE (°CDB)																		
EWB	EDB	10			20			30			35			40			46			
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	
14.0	20.0	5.10	3.67	0.83	4.67	3.45	1.03	4.24	3.23	1.23	4.03	3.13	1.33	3.81	3.02	1.43	3.56	2.90	1.55	
16.0	22.0	5.31	3.59	0.84	4.88	3.39	1.04	4.46	3.19	1.24	4.24	3.09	1.34	4.03	2.99	1.44	3.77	2.87	1.56	
18.0	25.0	5.52	3.74	0.85	5.10	3.55	1.05	4.67	3.36	1.25	4.45	3.27	1.35	4.24	3.18	1.45	3.98	3.07	1.57	
19.4	26.7	5.67	3.74	0.85	5.24	3.56	1.05	4.82	3.38	1.25	4.60	3.29	1.35	4.39	3.21	1.45	4.13	3.10	1.57	
22.0	30.0	5.95	3.77	0.86	5.52	3.60	1.06	5.09	3.44	1.26	4.88	3.36	1.36	4.66	3.29	1.46	4.41	3.20	1.58	
24.0	32.0	6.16	3.66	0.86	5.73	3.51	1.06	5.30	3.36	1.26	5.09	3.29	1.36	4.87	3.22	1.46	4.62	3.14	1.58	

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	17.40	12.51	0.83	15.94	11.76	1.03	14.48	11.03	1.23	13.75	10.67	1.33	13.02	10.31	1.43	12.14	9.89	1.55
60.8	71.6	18.13	12.26	0.84	16.66	11.56	1.04	15.20	10.87	1.24	14.47	10.53	1.34	13.74	10.20	1.44	12.86	9.81	1.56
64.4	77.0	18.85	12.75	0.85	17.39	12.10	1.05	15.92	11.46	1.25	15.19	11.14	1.35	14.46	10.83	1.45	13.59	10.47	1.57
67.0	80.0	19.36	12.76	0.85	17.89	12.14	1.05	16.43	11.53	1.25	15.70	11.23	1.35	14.97	10.94	1.45	14.09	10.59	1.57
71.6	86.0	20.30	12.85	0.86	18.83	12.29	1.06	17.37	11.75	1.26	16.64	11.48	1.36	15.91	11.22	1.46	15.03	10.90	1.58
75.2	89.6	21.02	12.48	0.86	19.56	11.97	1.06	18.09	11.47	1.26	17.36	11.23	1.36	16.63	10.98	1.46	15.76	10.70	1.58

Heating (60 Hz, 208 V)

AFR	14.5

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.12	2.27	4.86	2.56	5.62	2.85	5.60	2.60	5.59	2.36	5.59	2.11	5.61	1.81	6.77	1.95
21.1		3.69	2.34	4.48	2.64	5.28	2.93	5.31	2.67	5.35	2.42	5.38	2.16	5.42	1.85	6.59	1.99
22.0		3.52	2.37	4.33	2.67	5.14	2.96	5.20	2.70	5.25	2.44	5.29	2.18	5.35	1.87	6.51	2.01
24.0		3.35	2.40	4.18	2.70	5.00	2.99	5.08	2.73	5.15	2.46	5.21	2.20	5.27	1.88	6.44	2.03
25.0		3.27	2.42	4.11	2.71	4.93	3.01	5.02	2.74	5.10	2.48	5.17	2.21	5.23	1.89	6.40	2.04
27.0		3.10	2.44	3.67	2.42	4.54	2.77	4.91	2.77	5.00	2.50	5.08	2.23	5.16	1.91	6.32	2.05

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		14.05	2.27	16.58	2.56	19.18	2.85	19.10	2.60	19.08	2.36	19.09	2.11	19.14	1.81	23.11	1.95
70.0		12.60	2.34	15.30	2.64	18.00	2.93	18.12	2.67	18.24	2.42	18.36	2.16	18.50	1.85	22.47	1.99
71.6		12.02	2.37	14.79	2.67	17.53	2.96	17.73	2.70	17.90	2.44	18.06	2.18	18.24	1.87	22.21	2.01
75.2		11.44	2.40	14.28	2.70	17.05	2.99	17.34	2.73	17.57	2.46	17.77	2.20	17.99	1.88	21.96	2.03
77.0		11.15	2.42	14.02	2.71	16.82	3.01	17.14	2.74	17.40	2.48	17.62	2.21	17.86	1.89	21.83	2.04
80.6		10.57	2.44	12.54	2.42	15.50	2.77	16.75	2.77	17.07	2.50	17.33	2.23	17.61	1.91	21.58	2.05

Cooling (60 Hz, 230 V)

AFR	13.2
BF	0.14

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																			
EWB	EDB	10			20			30			35			40			46				
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
14.0	20.0	5.10	3.67	0.83	4.67	3.45	1.03	4.24	3.23	1.23	4.03	3.13	1.33	3.81	3.02	1.43	3.56	2.90	1.55		
16.0	22.0	5.31	3.59	0.84	4.88	3.39	1.04	4.46	3.19	1.24	4.24	3.09	1.34	4.03	2.99	1.44	3.77	2.87	1.56		
18.0	25.0	5.52	3.74	0.85	5.10	3.55	1.05	4.67	3.36	1.25	4.45	3.27	1.35	4.24	3.18	1.45	3.98	3.07	1.57		
19.4	26.7	5.67	3.74	0.85	5.24	3.56	1.05	4.82	3.38	1.25	4.60	3.29	1.35	4.39	3.21	1.45	4.13	3.10	1.57		
22.0	30.0	5.95	3.77	0.86	5.52	3.60	1.06	5.09	3.44	1.26	4.88	3.36	1.36	4.66	3.29	1.46	4.41	3.20	1.58		
24.0	32.0	6.16	3.66	0.86	5.73	3.51	1.06	5.30	3.36	1.26	5.09	3.29	1.36	4.87	3.22	1.46	4.62	3.14	1.58		

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																			
EWB	EDB	50			68			86			95			104			115				
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
57.2	68.0	17.40	12.51	0.83	15.94	11.76	1.03	14.48	11.03	1.23	13.75	10.67	1.33	13.02	10.31	1.43	12.14	9.89	1.55		
60.8	71.6	18.13	12.26	0.84	16.66	11.56	1.04	15.20	10.87	1.24	14.47	10.53	1.34	13.74	10.20	1.44	12.86	9.81	1.56		
64.4	77.0	18.85	12.75	0.85	17.39	12.10	1.05	15.92	11.46	1.25	15.19	11.14	1.35	14.46	10.83	1.45	13.59	10.47	1.57		
67.0	80.0	19.36	12.76	0.85	17.89	12.14	1.05	16.43	11.53	1.25	15.70	11.23	1.35	14.97	10.94	1.45	14.09	10.59	1.57		
71.6	86.0	20.30	12.85	0.86	18.83	12.29	1.06	17.37	11.75	1.26	16.64	11.48	1.36	15.91	11.22	1.46	15.03	10.90	1.58		
75.2	89.6	21.02	12.48	0.86	19.56	11.97	1.06	18.09	11.47	1.26	17.36	11.23	1.36	16.63	10.98	1.46	15.76	10.70	1.58		

Heating (60 Hz, 230 V)

AFR	14.5

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.12	2.27	4.86	2.56	5.62	2.85	5.60	2.60	5.59	2.36	5.59	2.11	5.61	1.81	6.77	1.95
21.1		3.69	2.34	4.48	2.64	5.28	2.93	5.31	2.67	5.35	2.42	5.38	2.16	5.42	1.85	6.59	1.99
22.0		3.52	2.37	4.33	2.67	5.14	2.96	5.20	2.70	5.25	2.44	5.29	2.18	5.35	1.87	6.51	2.01
24.0		3.35	2.40	4.18	2.70	5.00	2.99	5.08	2.73	5.15	2.46	5.21	2.20	5.27	1.88	6.44	2.03
25.0		3.27	2.42	4.11	2.71	4.93	3.01	5.02	2.74	5.10	2.48	5.17	2.21	5.23	1.89	6.40	2.04
27.0		3.10	2.44	3.67	2.42	4.54	2.77	4.91	2.77	5.00	2.50	5.08	2.23	5.16	1.91	6.32	2.05

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		14.05	2.27	16.58	2.56	19.18	2.85	19.10	2.60	19.08	2.36	19.09	2.11	19.14	1.81	23.11	1.95
70.0		12.60	2.34	15.30	2.64	18.00	2.93	18.12	2.67	18.24	2.42	18.36	2.16	18.50	1.85	22.47	1.99
71.6		12.02	2.37	14.79	2.67	17.53	2.96	17.73	2.70	17.90	2.44	18.06	2.18	18.24	1.87	22.21	2.01
75.2		11.44	2.40	14.28	2.70	17.05	2.99	17.34	2.73	17.57	2.46	17.77	2.20	17.99	1.88	21.96	2.03
77.0		11.15	2.42	14.02	2.71	16.82	3.01	17.14	2.74	17.40	2.48	17.62	2.21	17.86	1.89	21.83	2.04
80.6		10.57	2.44	12.54	2.42	15.50	2.77	16.75	2.77	17.07	2.50	17.33	2.23	17.61	1.91	21.58	2.05

Symbols:

AFR	: Airflow rate	(m³/min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FDMA18AVJU9 + RXP18AVJU9**Cooling (60 Hz, 208 V)**

AFR	18.5
BF	0.18

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	6.37	4.67	1.04	5.83	4.40	1.29	5.30	4.14	1.54	5.03	4.01	1.66	4.76	3.88	1.78	4.44	3.73	1.93
16.0	22.0	6.63	4.58	1.05	6.10	4.32	1.29	5.56	4.08	1.54	5.29	3.96	1.67	5.03	3.84	1.79	4.71	3.70	1.94
18.0	25.0	6.90	4.78	1.05	6.36	4.54	1.30	5.83	4.31	1.55	5.56	4.20	1.67	5.29	4.09	1.80	4.97	3.96	1.95
19.4	26.7	7.08	4.79	1.06	6.55	4.56	1.31	6.01	4.34	1.56	5.74	4.24	1.68	5.48	4.13	1.80	5.16	4.01	1.95
22.0	30.0	7.43	4.83	1.07	6.89	4.63	1.32	6.36	4.44	1.57	6.09	4.34	1.69	5.82	4.25	1.81	5.50	4.13	1.96
24.0	32.0	7.69	4.70	1.08	7.16	4.52	1.32	6.62	4.34	1.57	6.35	4.25	1.70	6.09	4.16	1.82	5.76	4.06	1.97

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	21.72	15.93	1.04	19.90	15.01	1.29	18.07	14.11	1.54	17.16	13.67	1.66	16.25	13.24	1.78	15.15	12.72	1.93
60.8	71.6	22.63	15.62	1.05	20.80	14.75	1.29	18.98	13.91	1.54	18.06	13.50	1.67	17.15	13.09	1.79	16.06	12.61	1.94
64.4	77.0	23.53	16.30	1.05	21.71	15.49	1.30	19.88	14.71	1.55	18.97	14.33	1.67	18.06	13.95	1.80	16.96	13.50	1.95
67.0	80.0	24.16	16.33	1.06	22.34	15.57	1.31	20.51	14.82	1.56	19.60	14.46	1.68	18.69	14.10	1.80	17.59	13.67	1.95
71.6	86.0	25.34	16.49	1.07	23.51	15.81	1.32	21.69	15.14	1.57	20.77	14.81	1.69	19.86	14.49	1.81	18.77	14.11	1.96
75.2	89.6	26.24	16.03	1.08	24.41	15.41	1.32	22.59	14.80	1.57	21.68	14.50	1.70	20.76	14.20	1.82	19.67	13.85	1.97

Heating (60 Hz, 208 V)

AFR	18.5

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.94	2.73	5.83	3.07	6.75	3.42	6.92	3.20	7.12	2.97	7.32	2.75	7.58	2.47	9.15	2.67
21.1		4.43	2.81	5.38	3.17	6.33	3.52	6.57	3.28	6.81	3.05	7.04	2.81	7.33	2.53	8.90	2.73
22.0		4.23	2.85	5.20	3.20	6.16	3.56	6.43	3.32	6.68	3.08	6.93	2.84	7.23	2.55	8.80	2.75
24.0		4.02	2.88	5.02	3.24	6.00	3.59	6.28	3.35	6.56	3.11	6.82	2.87	7.12	2.58	8.70	2.77
25.0		3.92	2.90	4.93	3.26	5.91	3.61	6.21	3.37	6.49	3.12	6.76	2.88	7.07	2.59	8.65	2.78
27.0		3.72	2.93	4.75	3.29	5.75	3.65	6.07	3.40	6.37	3.15	6.65	2.91	6.97	2.61	8.54	2.81

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		16.86	2.73	19.90	3.07	23.02	3.42	23.62	3.20	24.29	2.97	24.99	2.75	25.86	2.47	31.23	2.67
70.0		15.12	2.81	18.36	3.17	21.60	3.52	22.41	3.28	23.22	3.05	24.03	2.81	25.00	2.53	30.36	2.73
71.6		14.42	2.85	17.75	3.20	21.03	3.56	21.93	3.32	22.79	3.08	23.64	2.84	24.65	2.55	30.02	2.75
75.2		13.73	2.88	17.13	3.24	20.47	3.59	21.44	3.35	22.37	3.11	23.26	2.87	24.31	2.58	29.67	2.77
77.0		13.38	2.90	16.82	3.26	20.18	3.61	21.20	3.37	22.15	3.12	23.07	2.88	24.14	2.59	29.50	2.78
80.6		12.68	2.93	16.21	3.29	19.61	3.65	20.71	3.40	21.73	3.15	22.69	2.91	23.79	2.61	29.16	2.81

Cooling (60 Hz, 230 V)

AFR	18.5
BF	0.18

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	6.37	4.67	1.04	5.83	4.40	1.29	5.30	4.14	1.54	5.03	4.01	1.66	4.76	3.88	1.78	4.44	3.73	1.93
16.0	22.0	6.63	4.58	1.05	6.10	4.32	1.29	5.56	4.08	1.54	5.29	3.96	1.67	5.03	3.84	1.79	4.71	3.70	1.94
18.0	25.0	6.90	4.78	1.05	6.36	4.54	1.30	5.83	4.31	1.55	5.56	4.20	1.67	5.29	4.09	1.80	4.97	3.96	1.95
19.4	26.7	7.08	4.79	1.06	6.55	4.56	1.31	6.01	4.34	1.56	5.74	4.24	1.68	5.48	4.13	1.80	5.16	4.01	1.95
22.0	30.0	7.43	4.83	1.07	6.89	4.63	1.32	6.36	4.44	1.57	6.09	4.34	1.69	5.82	4.25	1.81	5.50	4.13	1.96
24.0	32.0	7.69	4.70	1.08	7.16	4.52	1.32	6.62	4.34	1.57	6.35	4.25	1.70	6.09	4.16	1.82	5.76	4.06	1.97

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	21.72	15.93	1.04	19.90	15.01	1.29	18.07	14.11	1.54	17.16	13.67	1.66	16.25	13.24	1.78	15.15	12.72	1.93
60.8	71.6	22.63	15.62	1.05	20.80	14.75	1.29	18.98	13.91	1.54	18.06	13.50	1.67	17.15	13.09	1.79	16.06	12.61	1.94
64.4	77.0	23.53	16.30	1.05	21.71	15.49	1.30	19.88	14.71	1.55	18.97	14.33	1.67	18.06	13.95	1.80	16.96	13.50	1.95
67.0	80.0	24.16	16.33	1.06	22.34	15.57	1.31	20.51	14.82	1.56	19.60	14.46	1.68	18.69	14.10	1.80	17.59	13.67	1.95
71.6	86.0	25.34	16.49	1.07	23.51	15.81	1.32	21.69	15.14	1.57	20.77	14.81	1.69	19.86	14.49	1.81	18.77	14.11	1.96
75.2	89.6	26.24	16.03	1.08	24.41	15.41	1.32	22.59	14.80	1.57	21.68	14.50	1.70	20.76	14.20	1.82	19.67	13.85	1.97

Heating (60 Hz, 230 V)

AFR	20.1

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.94	2.73	5.83	3.07	6.75	3.42	6.92	3.20	7.12	2.97	7.32	2.75	7.58	2.47	9.15	2.67
21.1		4.43	2.81	5.38	3.17	6.33	3.52	6.57	3.28	6.81	3.05	7.04	2.81	7.33	2.53	8.90	2.73
22.0		4.23	2.85	5.20	3.20	6.16	3.56	6.43	3.32	6.68	3.08	6.93	2.84	7.23	2.55	8.80	2.75
24.0		4.02	2.88	5.02	3.24	6.00	3.59	6.28	3.35	6.56	3.11	6.82	2.87	7.12	2.58	8.70	2.77
25.0		3.92	2.90	4.93	3.26	5.91	3.61	6.21	3.37	6.49	3.12	6.76	2.88	7.07	2.59	8.65	2.78
27.0		3.72	2.93	4.75	3.29	5.75	3.65	6.07	3.40	6.37	3.15	6.65	2.91	6.97	2.61	8.54	2.81

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		16.86	2.73	19.90	3.07	23.02	3.42	23.62	3.20	24.29	2.97	24.99	2.75	25.86	2.47	31.23	2.67
70.0		15.12	2.81	18.36	3.17	21.60	3.52	22.41	3.28	23.22	3.05	24.03	2.81	25.00	2.53	30.36	2.73
71.6		14.42	2.85	17.75	3.20	21.03	3.56	21.93	3.32	22.79	3.08	23.64	2.84	24.65	2.55	30.02	2.75
75.2		13.73	2.88	17.13	3.24	20.47	3.59	21.44	3.35	22.37	3.11	23.26	2.87	24.31	2.58	29.67	2.77
77.0		13.38	2.90	16.82	3.26	20.18	3.61	21.20	3.37	22.15	3.12	23.07	2.88	24.14	2.59	29.50	2.78
80.6		12.68	2.93	16.21	3.29	19.61	3.65	20.71	3.40	21.73	3.15	22.69	2.91	23.79	2.61	29.16	2.81

Symbols:

AFR	: Airflow rate	(m³/min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FDMA24AVJU9 + RXP24AVJU9

Cooling (60 Hz, 208 V)

AFR	18.9
BF	0.21

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																			
EWB	EDB	10			20			30			35			40			46				
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
14.0	20.0	7.47	5.23	1.37	6.84	4.89	1.69	6.22	4.57	2.02	5.90	4.41	2.18	5.59	4.25	2.35	5.21	4.07	2.54		
16.0	22.0	7.78	5.12	1.38	7.15	4.81	1.70	6.53	4.50	2.03	6.21	4.36	2.19	5.90	4.21	2.36	5.52	4.03	2.54		
18.0	25.0	8.09	5.30	1.39	7.47	5.01	1.71	6.84	4.72	2.04	6.52	4.58	2.20	6.21	4.45	2.37	5.83	4.29	2.54		
19.4	26.7	8.31	5.29	1.39	7.68	5.02	1.72	7.05	4.75	2.05	6.74	4.61	2.21	6.43	4.48	2.37	6.05	4.33	2.54		
22.0	30.0	8.71	5.31	1.41	8.09	5.06	1.73	7.46	4.81	2.06	7.14	4.70	2.22	6.83	4.58	2.39	6.45	4.44	2.54		
24.0	32.0	9.02	5.14	1.42	8.40	4.92	1.74	7.77	4.69	2.07	7.46	4.58	2.23	7.14	4.48	2.40	6.76	4.35	2.54		

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																			
EWB	EDB	50			68			86			95			104			115				
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
57.2	68.0	25.49	17.84	1.37	23.35	16.70	1.69	21.21	15.59	2.02	20.14	15.05	2.18	19.07	14.52	2.35	17.78	13.89	2.54		
60.8	71.6	26.55	17.48	1.38	24.41	16.41	1.70	22.27	15.37	2.03	21.20	14.86	2.19	20.13	14.36	2.36	18.84	13.77	2.54		
64.4	77.0	27.61	18.09	1.39	25.47	17.09	1.71	23.33	16.12	2.04	22.26	15.64	2.20	21.19	15.17	2.37	19.90	14.62	2.54		
67.0	80.0	28.35	18.06	1.39	26.21	17.11	1.72	24.07	16.19	2.05	23.00	15.74	2.21	21.93	15.30	2.37	20.64	14.77	2.54		
71.6	86.0	29.73	18.11	1.41	27.59	17.25	1.73	25.45	16.43	2.06	24.38	16.02	2.22	23.31	15.62	2.39	22.02	15.15	2.54		
75.2	89.6	30.79	17.55	1.42	28.65	16.77	1.74	26.51	16.01	2.07	25.44	15.64	2.23	24.37	15.28	2.40	23.08	14.85	2.54		

Heating (60 Hz, 208 V)

AFR	20.5

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		5.49	3.03	6.48	3.41	7.50	3.80	7.68	3.54	7.88	3.29	8.10	3.03	8.37	2.73	10.10	2.95
21.1		4.92	3.12	5.98	3.51	7.03	3.90	7.29	3.64	7.54	3.37	7.79	3.11	8.09	2.79	9.82	3.01
22.0		4.70	3.16	5.78	3.55	6.85	3.95	7.13	3.68	7.40	3.41	7.66	3.14	7.98	2.82	9.71	3.03
24.0		4.47	3.20	5.58	3.59	6.66	3.96	6.97	3.71	7.26	3.44	7.54	3.17	7.87	2.84	9.60	3.06
25.0		4.36	3.22	5.48	3.61	6.57	3.96	6.89	3.73	7.19	3.46	7.48	3.18	7.81	2.85	9.55	3.07
27.0		4.13	3.25	4.96	3.29	6.13	3.77	6.73	3.77	7.05	3.49	7.35	3.21	7.70	2.88	9.43	3.10

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		18.73	3.03	22.11	3.41	25.58	3.80	26.20	3.54	26.90	3.29	27.63	3.03	28.55	2.73	34.47	2.95
70.0		16.80	3.12	20.40	3.51	24.00	3.90	24.86	3.64	25.71	3.37	26.57	3.11	27.60	2.79	33.52	3.01
71.6		16.03	3.16	19.72	3.55	23.37	3.95	24.32	3.68	25.24	3.41	26.15	3.14	27.22	2.82	33.14	3.03
75.2		15.25	3.20	19.04	3.59	22.73	3.96	23.78	3.71	24.77	3.44	25.72	3.17	26.84	2.84	32.76	3.06
77.0		14.87	3.22	18.69	3.61	22.42	3.96	23.51	3.73	24.53	3.46	25.51	3.18	26.65	2.85	32.57	3.07
80.6		14.09	3.25	16.92	3.29	20.91	3.77	22.98	3.77	24.06	3.49	25.09	3.21	26.27	2.88	32.19	3.10

Cooling (60 Hz, 230 V)

AFR	18.9
BF	0.21

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	7.47	5.23	1.37	6.84	4.89	1.69	6.22	4.57	2.02	5.90	4.41	2.18	5.59	4.25	2.35	5.21	4.07	2.54
16.0	22.0	7.78	5.12	1.38	7.15	4.81	1.70	6.53	4.50	2.03	6.21	4.36	2.19	5.90	4.21	2.36	5.52	4.03	2.54
18.0	25.0	8.09	5.30	1.39	7.47	5.01	1.71	6.84	4.72	2.04	6.52	4.58	2.20	6.21	4.45	2.37	5.83	4.29	2.54
19.4	26.7	8.31	5.29	1.39	7.68	5.02	1.72	7.05	4.75	2.05	6.74	4.61	2.21	6.43	4.48	2.37	6.05	4.33	2.54
22.0	30.0	8.71	5.31	1.41	8.09	5.06	1.73	7.46	4.81	2.06	7.14	4.70	2.22	6.83	4.58	2.39	6.45	4.44	2.54
24.0	32.0	9.02	5.14	1.42	8.40	4.92	1.74	7.77	4.69	2.07	7.46	4.58	2.23	7.14	4.48	2.40	6.76	4.35	2.54

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	25.49	17.84	1.37	23.35	16.70	1.69	21.21	15.59	2.02	20.14	15.05	2.18	19.07	14.52	2.35	17.78	13.89	2.54
60.8	71.6	26.55	17.48	1.38	24.41	16.41	1.70	22.27	15.37	2.03	21.20	14.86	2.19	20.13	14.36	2.36	18.84	13.77	2.54
64.4	77.0	27.61	18.09	1.39	25.47	17.09	1.71	23.33	16.12	2.04	22.26	15.64	2.20	21.19	15.17	2.37	19.90	14.62	2.54
67.0	80.0	28.35	18.06	1.39	26.21	17.11	1.72	24.07	16.19	2.05	23.00	15.74	2.21	21.93	15.30	2.37	20.64	14.77	2.54
71.6	86.0	29.73	18.11	1.41	27.59	17.25	1.73	25.45	16.43	2.06	24.38	16.02	2.22	23.31	15.62	2.39	22.02	15.15	2.54
75.2	89.6	30.79	17.55	1.42	28.65	16.77	1.74	26.51	16.01	2.07	25.44	15.64	2.23	24.37	15.28	2.40	23.08	14.85	2.54

Heating (60 Hz, 230 V)

AFR	20.5

Temp: Celsius / TC, PI: kW

Temp. Celsius / °C, F. / °F, R.W.																
INDOOR			OUTDOOR TEMPERATURE (°CWB)													
EDB	-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	5.49	3.03	6.48	3.41	7.50	3.80	7.68	3.54	7.88	3.29	8.10	3.03	8.37	2.73	10.10	2.95
21.1	4.92	3.12	5.98	3.51	7.03	3.90	7.29	3.64	7.54	3.37	7.79	3.11	8.09	2.79	9.82	3.01
22.0	4.70	3.16	5.78	3.55	6.85	3.95	7.13	3.68	7.40	3.41	7.66	3.14	7.98	2.82	9.71	3.03
24.0	4.47	3.20	5.58	3.59	6.66	3.99	6.97	3.71	7.26	3.44	7.54	3.17	7.87	2.84	9.60	3.06
25.0	4.36	3.22	5.48	3.61	6.57	4.01	6.89	3.73	7.19	3.46	7.48	3.18	7.81	2.85	9.55	3.07
27.0	4.13	3.25	4.96	3.29	6.13	3.77	6.73	3.77	7.05	3.49	7.35	3.21	7.70	2.88	9.43	3.10

Temp: Fahrenheit / TC: kBtu/h / PI: kW

Temp. Fahrenheit / °C, kBTU/h / P, kW																
INDOOR	OUTDOOR TEMPERATURE (°FWB)															
EDB	-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	18.73	3.03	22.11	3.41	25.58	3.80	26.20	3.54	26.90	3.29	27.63	3.03	28.55	2.73	34.47	2.95
70.0	16.80	3.12	20.40	3.51	24.00	3.90	24.86	3.64	25.71	3.37	26.57	3.11	27.60	2.79	33.52	3.01
71.6	16.03	3.16	19.72	3.55	23.37	3.95	24.32	3.68	25.24	3.41	26.15	3.14	27.22	2.82	33.14	3.03
75.2	15.25	3.20	19.04	3.59	22.74	3.99	23.78	3.71	24.77	3.44	25.72	3.17	26.84	2.84	32.76	3.06
77.0	14.87	3.22	18.69	3.61	22.42	4.01	23.51	3.73	24.53	3.46	25.51	3.18	26.65	2.85	32.57	3.07
80.6	14.09	3.25	16.92	3.29	20.91	3.77	22.98	3.77	24.06	3.49	25.09	3.21	26.27	2.88	32.19	3.10

Symbols:

AFR	: Airflow rate	(m ³ /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

C: 3D158787

FVXV09AVJUW(T)9 + RXP09AVJU9**Cooling (60 Hz, 208 V)**

AFR	8.4
BF	0.17

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.54	2.45	0.53	3.24	2.29	0.66	2.95	2.13	0.79	2.80	2.05	0.85	2.65	1.98	0.91	2.47	1.89	0.99
16.0	22.0	3.69	2.40	0.54	3.39	2.25	0.66	3.09	2.10	0.79	2.94	2.03	0.85	2.80	1.96	0.92	2.62	1.87	0.99
18.0	25.0	3.84	2.48	0.54	3.54	2.33	0.67	3.24	2.20	0.79	3.09	2.13	0.86	2.94	2.06	0.92	2.76	1.99	1.00
19.4	26.7	3.94	2.47	0.54	3.64	2.34	0.67	3.34	2.21	0.80	3.19	2.14	0.86	3.05	2.08	0.92	2.87	2.00	1.00
22.0	30.0	4.13	2.47	0.55	3.83	2.35	0.67	3.54	2.23	0.80	3.39	2.18	0.86	3.24	2.12	0.93	3.06	2.05	1.00
24.0	32.0	4.28	2.39	0.68	3.98	2.28	0.68	3.68	2.17	0.80	3.53	2.12	0.87	3.38	2.07	0.93	3.21	2.01	1.01

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	12.08	8.36	0.53	11.07	7.80	0.66	10.05	7.27	0.79	9.55	7.01	0.85	9.04	6.75	0.91	8.43	6.45	0.99
60.8	71.6	12.59	8.19	0.54	11.57	7.67	0.66	10.56	7.17	0.79	10.05	6.92	0.85	9.54	6.68	0.92	8.93	6.40	0.99
64.4	77.0	13.09	8.45	0.54	12.07	7.97	0.67	11.06	7.50	0.79	10.55	7.27	0.86	10.04	7.04	0.92	9.43	6.78	1.00
67.0	80.0	13.44	8.43	0.54	12.42	7.97	0.67	11.41	7.53	0.80	10.90	7.31	0.86	3.20	7.09	0.92	9.78	6.84	1.00
71.6	86.0	14.09	8.43	0.55	13.08	8.02	0.67	12.06	7.62	0.80	11.55	7.42	0.86	11.05	7.23	0.93	10.44	7.00	1.00
75.2	89.6	14.59	8.16	0.68	13.58	7.79	0.68	12.56	7.42	0.80	12.06	7.24	0.87	11.55	7.06	0.93	10.94	6.86	1.01

Heating (60 Hz, 208 V)

AFR	9.1

Temp: Celsius / TC, PI: kW

Temp. Celsius / °C, F. °F																
INDOOR		OUTDOOR TEMPERATURE (°CWB)														
EDB	-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	2.22	1.64	2.85	1.68	3.45	1.72	3.87	1.69	4.29	1.67	4.71	1.65	5.22	1.63	6.04	1.76
21.1	1.77	1.42	2.58	1.74	3.19	1.77	3.63	1.75	4.06	1.73	4.49	1.70	5.01	1.67	5.77	1.76
22.0	1.61	1.25	2.54	1.74	3.16	1.78	3.59	1.76	4.03	1.73	4.46	1.71	4.98	1.68	5.61	1.69
24.0	1.26	0.91	2.46	1.76	3.07	1.80	3.51	1.78	3.95	1.75	4.39	1.72	4.91	1.69	5.26	1.53
25.0	1.08	0.76	2.41	1.77	3.03	1.81	3.47	1.79	3.91	1.76	4.35	1.73	4.88	1.70	5.09	1.46
27.0	0.73	0.48	2.25	1.67	2.95	1.83	3.40	1.80	3.84	1.78	4.28	1.75	4.74	1.66	4.74	1.31

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)														
EDB	−13.8/(−13)		−4/(−4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	7.57	1.64	9.71	1.68	11.77	1.72	13.19	1.69	14.63	1.67	16.08	1.65	17.82	1.63	20.60	1.76
70.0	6.03	1.42	8.81	1.74	10.90	1.77	12.38	1.75	13.85	1.73	15.33	1.70	17.10	1.67	19.69	1.76
71.6	5.50	1.25	8.68	1.74	10.77	1.78	12.26	1.76	13.74	1.73	15.22	1.71	16.99	1.68	19.15	1.69
75.2	4.30	0.91	8.38	1.76	10.48	1.80	11.99	1.78	13.48	1.75	14.97	1.72	16.76	1.69	17.96	1.53
77.0	3.70	0.76	8.24	1.77	10.34	1.81	11.85	1.79	13.36	1.76	14.85	1.73	16.64	1.70	17.36	1.46
80.6	2.50	0.48	7.67	1.67	10.06	1.83	11.59	1.80	13.10	1.78	14.61	1.75	16.16	1.66	16.16	1.31

Cooling (60 Hz, 230 V)

AFR	8.4
BF	0.17

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.54	2.45	0.53	3.24	2.29	0.66	2.95	2.13	0.79	2.80	2.05	0.85	2.65	1.98	0.91	2.47	1.89	0.99
16.0	22.0	3.69	2.40	0.54	3.39	2.25	0.66	3.09	2.10	0.79	2.94	2.03	0.85	2.80	1.96	0.92	2.62	1.87	0.99
18.0	25.0	3.84	2.48	0.54	3.54	2.33	0.67	3.24	2.20	0.79	3.09	2.13	0.86	2.94	2.06	0.92	2.76	1.99	1.00
19.4	26.7	3.94	2.47	0.54	3.64	2.34	0.67	3.34	2.21	0.80	3.19	2.14	0.86	3.05	2.08	0.92	2.87	2.00	1.00
22.0	30.0	4.13	2.47	0.55	3.83	2.35	0.67	3.54	2.23	0.80	3.39	2.18	0.86	3.24	2.12	0.93	3.06	2.05	1.00
24.0	32.0	4.28	2.39	0.68	3.98	2.28	0.68	3.68	2.17	0.80	3.53	2.12	0.87	3.38	2.07	0.93	3.21	2.01	1.01

Temp: Fahrenheit / TC, SHC: kBTu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	12.08	8.36	0.53	11.07	7.80	0.66	10.05	7.27	0.79	9.55	7.01	0.85	9.04	6.75	0.91	8.43	6.45	0.99
60.8	71.6	12.59	8.19	0.54	11.57	7.67	0.66	10.56	7.17	0.79	10.05	6.92	0.85	9.54	6.68	0.92	8.93	6.40	0.99
64.4	77.0	13.09	8.45	0.54	12.07	7.97	0.67	11.06	7.50	0.79	10.55	7.27	0.86	10.04	7.04	0.92	9.43	6.78	1.00
67.0	80.0	13.44	8.43	0.54	12.42	7.97	0.67	11.41	7.53	0.80	10.90	7.31	0.86	3.20	7.09	0.92	9.78	6.84	1.00
71.6	86.0	14.09	8.43	0.55	13.08	8.02	0.67	12.06	7.62	0.80	11.55	7.42	0.86	11.05	7.23	0.93	10.44	7.00	1.00
75.2	89.6	14.59	8.16	0.68	13.58	7.79	0.68	12.56	7.42	0.80	12.06	7.24	0.87	11.55	7.06	0.93	10.94	6.86	1.01

Heating (60 Hz, 230 V)

AFR	9.1

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.22	1.64	2.85	1.68	3.45	1.72	3.87	1.69	4.29	1.67	4.71	1.65	5.22	1.63	6.04	1.76
21.1		1.77	1.42	2.58	1.74	3.19	1.77	3.63	1.75	4.06	1.73	4.49	1.70	5.01	1.67	5.77	1.76
22.0		1.61	1.25	2.54	1.74	3.16	1.78	3.59	1.76	4.03	1.73	4.46	1.71	4.98	1.68	5.61	1.69
24.0		1.26	0.91	2.46	1.76	3.07	1.80	3.51	1.78	3.95	1.75	4.39	1.72	4.91	1.69	5.26	1.53
25.0		1.08	0.76	2.41	1.77	3.03	1.81	3.47	1.79	3.91	1.76	4.35	1.73	4.88	1.70	5.09	1.46
27.0		0.73	0.48	2.25	1.67	2.95	1.83	3.40	1.80	3.84	1.78	4.28	1.75	4.74	1.66	4.74	1.31

Temp: Fahrenheit / TC: kBTu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		7.57	1.64	9.71	1.68	11.77	1.72	13.19	1.69	14.63	1.67	16.08	1.65	17.82	1.63	20.60	1.76
70.0		6.03	1.42	8.81	1.74	10.90	1.77	12.38	1.75	13.85	1.73	15.33	1.70	17.10	1.67	19.69	1.76
71.6		5.50	1.25	8.68	1.74	10.77	1.78	12.26	1.76	13.74	1.73	15.22	1.71	16.99	1.68	19.15	1.69
75.2		4.30	0.91	8.38	1.76	10.48	1.80	11.99	1.78	13.48	1.75	14.97	1.72	16.76	1.69	17.96	1.53
77.0		3.70	0.76	8.24	1.77	10.34	1.81	11.85	1.79	13.36	1.76	14.85	1.73	16.64	1.70	17.36	1.46
80.6		2.50	0.48	7.67	1.67	10.06	1.83	11.59	1.80	13.10	1.78	14.61	1.75	16.16	1.66	16.16	1.31

Symbols:

AFR	: Airflow rate	(m ³ /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBTu/h)
SHC	: Sensible heat capacity	(kW) / (kBTu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FVXV12AVJUW(T)9 + RXP12AVJU9**Cooling (60 Hz, 208 V)**

AFR	9.1
BF	0.21

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	4.08	2.76	0.72	3.75	2.58	0.90	3.41	2.39	1.07	3.23	2.30	1.16	3.06	2.21	1.24	2.86	2.10	1.17
16.0	22.0	4.26	2.72	0.73	3.92	2.53	0.90	3.58	2.35	1.07	3.40	2.27	1.16	3.23	2.18	1.25	3.03	2.08	1.17
18.0	25.0	4.43	2.79	0.73	4.09	2.62	0.91	3.75	2.45	1.08	3.57	2.37	1.17	3.40	2.29	1.25	3.20	2.20	1.17
19.4	26.7	4.55	2.78	0.74	4.21	2.61	0.91	3.86	2.46	1.08	3.69	2.38	1.17	3.52	2.30	1.26	3.31	2.21	1.17
22.0	30.0	4.77	2.76	0.74	4.43	2.62	0.92	4.09	2.47	1.09	3.91	2.40	1.18	3.74	2.34	1.26	3.54	2.26	1.17
24.0	32.0	4.94	2.67	0.75	4.60	2.54	0.92	4.26	2.41	1.09	4.08	2.34	1.18	3.91	2.28	1.27	3.71	2.21	1.17

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	13.92	9.43	0.72	12.79	8.79	0.90	11.62	8.15	1.07	11.03	7.84	1.16	10.45	7.53	1.24	9.74	7.17	1.17
60.8	71.6	14.55	9.27	0.73	13.37	8.64	0.90	12.20	8.04	1.07	11.61	7.74	1.16	11.03	7.45	1.25	10.32	7.11	1.17
64.4	77.0	15.13	9.51	0.73	13.95	8.93	0.91	12.78	8.36	1.08	12.19	8.08	1.17	11.61	7.81	1.25	10.90	7.49	1.17
67.0	80.0	15.53	9.47	0.74	14.36	8.92	0.91	13.19	8.38	1.08	12.60	8.11	1.17	3.69	7.86	1.26	11.31	7.55	1.17
71.6	86.0	16.29	9.43	0.74	15.12	8.93	0.92	13.94	8.44	1.09	13.36	8.20	1.18	12.77	7.97	1.26	12.06	7.70	1.17
75.2	89.6	16.87	9.11	0.75	15.70	8.65	0.92	14.52	8.21	1.09	13.94	7.99	1.18	13.35	7.78	1.27	12.64	7.53	1.17

Heating (60 Hz, 208 V)

AFR	10.5

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.22	1.64	2.85	1.68	3.45	1.72	4.07	1.76	4.70	1.80	5.33	1.84	6.08	1.89	7.27	2.04
21.1		1.94	1.70	2.58	1.74	3.19	1.77	3.82	1.81	4.45	1.86	5.08	1.90	5.83	1.94	6.74	1.93
22.0		1.88	1.68	2.54	1.74	3.16	1.78	3.78	1.82	4.41	1.86	5.04	1.90	5.80	1.95	6.56	1.85
24.0		1.47	1.21	2.46	1.76	3.07	1.80	3.70	1.84	4.33	1.88	4.96	1.92	5.72	1.97	6.15	1.69
25.0		1.27	1.00	2.41	1.77	3.03	1.81	3.66	1.85	4.29	1.89	4.92	1.93	5.67	1.98	5.94	1.61
27.0		0.86	0.63	2.33	1.79	2.95	1.83	3.58	1.87	4.21	1.91	4.84	1.95	5.53	1.95	5.53	1.46

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		7.57	1.64	9.71	1.68	11.77	1.72	13.90	1.76	16.04	1.80	18.17	1.84	20.74	1.89	24.80	2.04
70.0		6.63	1.70	8.81	1.74	10.90	1.77	13.04	1.81	15.19	1.86	17.33	1.90	19.90	1.94	23.00	1.93
71.6		6.42	1.68	8.68	1.74	10.77	1.78	12.92	1.82	15.06	1.86	17.20	1.90	19.78	1.95	22.37	1.85
75.2		5.02	1.21	8.38	1.76	10.48	1.80	12.63	1.84	14.78	1.88	16.93	1.92	19.50	1.97	20.97	1.69
77.0		4.32	1.00	8.24	1.77	10.34	1.81	12.49	1.85	14.64	1.89	16.79	1.93	19.36	1.98	20.28	1.61
80.6		2.92	0.63	7.94	1.79	10.06	1.83	12.21	1.87	14.36	1.91	16.51	1.95	18.88	1.95	18.88	1.46

Cooling (60 Hz, 230 V)

AFR	9.1
BF	0.21

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	4.08	2.76	0.72	3.75	2.58	0.90	3.41	2.39	1.07	3.23	2.30	1.16	3.06	2.21	1.24	2.86	2.10	1.17
16.0	22.0	4.26	2.72	0.73	3.92	2.53	0.90	3.58	2.35	1.07	3.40	2.27	1.16	3.23	2.18	1.25	3.03	2.08	1.17
18.0	25.0	4.43	2.79	0.73	4.09	2.62	0.91	3.75	2.45	1.08	3.57	2.37	1.17	3.40	2.29	1.25	3.20	2.20	1.17
19.4	26.7	4.55	2.78	0.74	4.21	2.61	0.91	3.86	2.46	1.08	3.69	2.38	1.17	3.52	2.30	1.26	3.31	2.21	1.17
22.0	30.0	4.77	2.76	0.74	4.43	2.62	0.92	4.09	2.47	1.09	3.91	2.40	1.18	3.74	2.34	1.26	3.54	2.26	1.17
24.0	32.0	4.94	2.67	0.75	4.60	2.54	0.92	4.26	2.41	1.09	4.08	2.34	1.18	3.91	2.28	1.27	3.71	2.21	1.17

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	13.92	9.43	0.72	12.79	8.79	0.90	11.62	8.15	1.07	11.03	7.84	1.16	10.45	7.53	1.24	9.74	7.17	1.17
60.8	71.6	14.55	9.27	0.73	13.37	8.64	0.90	12.20	8.04	1.07	11.61	7.74	1.16	11.03	7.45	1.25	10.32	7.11	1.17
64.4	77.0	15.13	9.51	0.73	13.95	8.93	0.91	12.78	8.36	1.08	12.19	8.08	1.17	11.61	7.81	1.25	10.90	7.49	1.17
67.0	80.0	15.53	9.47	0.74	14.36	8.92	0.91	13.19	8.38	1.08	12.60	8.11	1.17	11.61	7.86	1.26	11.31	7.55	1.17
71.6	86.0	16.29	9.43	0.74	15.12	8.93	0.92	13.94	8.44	1.09	13.36	8.20	1.18	12.77	7.97	1.26	12.06	7.70	1.17
75.2	89.6	16.87	9.11	0.75	15.70	8.65	0.92	14.52	8.21	1.09	13.94	7.99	1.18	13.35	7.78	1.27	12.64	7.53	1.17

Heating (60 Hz, 230 V)

AFR	10.5

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.22	1.64	2.85	1.68	3.45	1.72	4.07	1.76	4.70	1.80	5.33	1.84	6.08	1.89	7.27	2.04
21.1		1.94	1.70	2.58	1.74	3.19	1.77	3.82	1.81	4.45	1.86	5.08	1.90	5.83	1.94	6.74	1.93
22.0		1.88	1.68	2.54	1.74	3.16	1.78	3.78	1.82	4.41	1.86	5.04	1.90	5.80	1.95	6.56	1.85
24.0		1.47	1.21	2.46	1.76	3.07	1.80	3.70	1.84	4.33	1.88	4.96	1.92	5.72	1.97	6.15	1.69
25.0		1.27	1.00	2.41	1.77	3.03	1.81	3.66	1.85	4.29	1.89	4.92	1.93	5.67	1.98	5.94	1.61
27.0		0.86	0.63	2.33	1.79	2.95	1.83	3.58	1.87	4.21	1.91	4.84	1.95	5.53	1.95	5.53	1.46

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		7.57	1.64	9.71	1.68	11.77	1.72	13.90	1.76	16.04	1.80	18.17	1.84	20.74	1.89	24.80	2.04
70.0		6.63	1.70	8.81	1.74	10.90	1.77	13.04	1.81	15.19	1.86	17.33	1.90	19.90	1.94	23.00	1.93
71.6		6.42	1.68	8.68	1.74	10.77	1.78	12.92	1.82	15.06	1.86	17.20	1.90	19.78	1.95	22.37	1.85
75.2		5.02	1.21	8.38	1.76	10.48	1.80	12.63	1.84	14.78	1.88	16.93	1.92	19.50	1.97	20.97	1.69
77.0		4.32	1.00	8.24	1.77	10.34	1.81	12.49	1.85	14.64	1.89	16.79	1.93	19.36	1.98	20.28	1.61
80.6		2.92	0.63	7.94	1.79	10.06	1.83	12.21	1.87	14.36	1.91	16.51	1.95	18.88	1.95	18.88	1.46

Symbols:

AFR	: Airflow rate	(m³/min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FVXV15AVJUW(T)9 + RXP15AVJU9**Cooling (60 Hz, 208 V)**

AFR	11.1
BF	0.22

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																			
EWB	EDB	10			20			30			35			40			46				
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
14.0	20.0	4.93	3.34	0.75	4.93	3.34	1.03	4.93	3.34	1.41	4.90	3.32	1.64	4.64	3.18	1.76	4.33	3.00	1.91		
16.0	22.0	5.85	3.67	0.90	5.85	3.67	1.25	5.42	3.43	1.53	5.16	3.29	1.65	4.90	3.15	1.77	4.59	2.98	1.92		
18.0	25.0	6.72	4.10	1.04	6.20	3.81	1.29	5.68	3.53	1.53	5.42	3.40	1.66	5.16	3.27	1.78	4.84	3.11	1.93		
19.4	26.7	6.90	4.07	1.05	6.38	3.80	1.29	5.86	3.53	1.54	5.60	3.40	1.66	5.34	3.28	1.78	5.02	3.13	1.93		
22.0	30.0	7.24	4.02	1.06	6.72	3.77	1.30	6.19	3.53	1.55	5.93	3.41	1.67	5.67	3.30	1.79	5.36	3.16	1.94		
24.0	32.0	7.49	3.87	1.06	6.97	3.64	1.31	6.45	3.42	1.56	6.19	3.31	1.68	5.93	3.21	1.80	5.62	3.09	1.95		

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																			
EWB	EDB	50			68			86			95			104			115				
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
57.2	68.0	16.82	11.40	0.75	16.82	11.40	1.03	16.82	11.40	1.41	16.72	11.34	1.64	15.84	10.84	1.76	14.77	10.24	1.91		
60.8	71.6	19.97	12.54	0.90	19.97	12.54	1.25	18.49	11.70	1.53	17.60	11.21	1.65	16.72	10.73	1.77	15.65	10.17	1.92		
64.4	77.0	22.93	14.00	1.04	21.15	13.01	1.29	19.37	12.06	1.53	18.48	11.60	1.66	17.60	11.15	1.78	16.53	10.62	1.93		
67.0	80.0	23.55	13.90	1.05	21.77	12.95	1.29	19.99	12.05	1.54	19.10	11.61	1.66	18.21	11.18	1.78	17.14	10.68	1.93		
71.6	86.0	24.69	13.72	1.06	22.91	12.86	1.30	21.13	12.04	1.55	20.24	11.64	1.67	19.35	11.25	1.79	18.29	10.80	1.94		
75.2	89.6	25.57	13.22	1.06	23.79	12.43	1.31	22.01	11.68	1.56	21.12	11.31	1.68	20.23	10.95	1.80	19.17	10.53	1.95		

Heating (60 Hz, 208 V)

AFR	11.8

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.12	2.27	4.86	2.56	5.62	2.85	5.74	2.62	5.87	2.39	6.01	2.16	6.19	1.89	7.47	2.04
21.1		3.69	2.34	4.48	2.64	5.28	2.93	5.44	2.69	5.61	2.45	5.78	2.22	5.98	1.93	7.23	2.06
22.0		3.52	2.37	4.30	2.63	5.04	2.85	5.33	2.72	5.51	2.48	5.69	2.24	5.90	1.95	6.81	1.91
24.0		3.33	2.37	3.89	2.34	4.63	2.56	5.21	2.75	5.40	2.50	5.59	2.26	5.81	1.96	6.40	1.77
25.0		3.12	2.22	3.68	2.20	4.43	2.42	5.15	2.76	5.35	2.51	5.55	2.27	5.77	1.97	6.20	1.70
27.0		2.71	1.92	3.27	1.92	4.01	2.15	5.03	2.79	5.25	2.54	5.46	2.29	5.69	1.99	5.78	1.56

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		14.05	2.27	16.58	2.56	19.18	2.85	19.58	2.62	20.02	2.39	20.50	2.16	21.10	1.89	25.48	2.04
70.0		12.60	2.34	15.30	2.64	18.00	2.93	18.57	2.69	19.14	2.45	19.71	2.22	20.40	1.93	24.66	2.06
71.6		12.02	2.37	14.68	2.63	17.21	2.85	18.17	2.72	18.79	2.48	19.40	2.24	20.12	1.95	23.25	1.91
75.2		11.36	2.37	13.27	2.34	15.80	2.56	17.77	2.75	18.44	2.50	19.08	2.26	19.84	1.96	21.84	1.77
77.0		10.66	2.22	12.57	2.20	15.10	2.42	17.57	2.76	18.26	2.51	18.93	2.27	19.70	1.97	21.14	1.70
80.6		9.25	1.92	11.16	1.92	13.69	2.15	17.17	2.79	17.91	2.54	18.61	2.29	19.41	1.99	19.73	1.56

Cooling (60 Hz, 230 V)

AFR	11.1
BF	0.22

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	4.93	3.34	0.75	4.93	3.34	1.03	4.93	3.34	1.41	4.90	3.32	1.64	4.64	3.18	1.76	4.33	3.00	1.91
16.0	22.0	5.85	3.67	0.90	5.85	3.67	1.25	5.42	3.43	1.53	5.16	3.29	1.65	4.90	3.15	1.77	4.59	2.98	1.92
18.0	25.0	6.72	4.10	1.04	6.20	3.81	1.29	5.68	3.53	1.53	5.42	3.40	1.66	5.16	3.27	1.78	4.84	3.11	1.93
19.4	26.7	6.90	4.07	1.05	6.38	3.80	1.29	5.86	3.53	1.54	5.60	3.40	1.66	5.34	3.28	1.78	5.02	3.13	1.93
22.0	30.0	7.24	4.02	1.06	6.72	3.77	1.30	6.19	3.53	1.55	5.93	3.41	1.67	5.67	3.30	1.79	5.36	3.16	1.94
24.0	32.0	7.49	3.87	1.06	6.97	3.64	1.31	6.45	3.42	1.56	6.19	3.31	1.68	5.93	3.21	1.80	5.62	3.09	1.95

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	16.82	11.40	0.75	16.82	11.40	1.03	16.82	11.40	1.41	16.72	11.34	1.64	15.84	10.84	1.76	14.77	10.24	1.91
60.8	71.6	19.97	12.54	0.90	19.97	12.54	1.25	18.49	11.70	1.53	17.60	11.21	1.65	16.72	10.73	1.77	15.65	10.17	1.92
64.4	77.0	22.93	14.00	1.04	21.15	13.01	1.29	19.37	12.06	1.53	18.48	11.60	1.66	17.60	11.15	1.78	16.53	10.62	1.93
67.0	80.0	23.55	13.90	1.05	21.77	12.95	1.29	19.99	12.05	1.54	19.10	11.61	1.66	18.21	11.18	1.78	17.14	10.68	1.93
71.6	86.0	24.69	13.72	1.06	22.91	12.86	1.30	21.13	12.04	1.55	20.24	11.64	1.67	19.35	11.25	1.79	18.29	10.80	1.94
75.2	89.6	25.57	13.22	1.06	23.79	12.43	1.31	22.01	11.68	1.56	21.12	11.31	1.68	20.23	10.95	1.80	19.17	10.53	1.95

Heating (60 Hz, 230 V)

AFR	11.8

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.12	2.27	4.86	2.56	5.62	2.85	5.74	2.62	5.87	2.39	6.01	2.16	6.19	1.89	7.47	2.04
21.1		3.69	2.34	4.48	2.64	5.28	2.93	5.44	2.69	5.61	2.45	5.78	2.22	5.98	1.93	7.23	2.06
22.0		3.52	2.37	4.30	2.63	5.04	2.85	5.33	2.72	5.51	2.48	5.69	2.24	5.90	1.95	6.81	1.91
24.0		3.33	2.37	3.89	2.34	4.63	2.56	5.21	2.75	5.40	2.50	5.59	2.26	5.81	1.96	6.40	1.77
25.0		3.12	2.22	3.68	2.20	4.43	2.42	5.15	2.76	5.35	2.51	5.55	2.27	5.77	1.97	6.20	1.70
27.0		2.71	1.92	3.27	1.92	4.01	2.15	5.03	2.79	5.25	2.54	5.46	2.29	5.69	1.99	5.78	1.56

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		14.05	2.27	16.58	2.56	19.18	2.85	19.58	2.62	20.02	2.39	20.50	2.16	21.10	1.89	25.48	2.04
70.0		12.60	2.34	15.30	2.64	18.00	2.93	18.57	2.69	19.14	2.45	19.71	2.22	20.40	1.93	24.66	2.06
71.6		12.02	2.37	14.68	2.63	17.21	2.85	18.17	2.72	18.79	2.48	19.40	2.24	20.12	1.95	23.25	1.91
75.2		11.36	2.37	13.27	2.34	15.80	2.56	17.77	2.75	18.44	2.50	19.08	2.26	19.84	1.96	21.84	1.77
77.0		10.66	2.22	12.57	2.20	15.10	2.42	17.57	2.76	18.26	2.51	18.93	2.27	19.70	1.97	21.14	1.70
80.6		9.25	1.92	11.16	1.92	13.69	2.15	17.17	2.79	17.91	2.54	18.61	2.29	19.41	1.99	19.73	1.56

Symbols:

AFR	: Airflow rate	(m ³ /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

FVXV18AVJUW(T)9 + RXP18AVJU9**Cooling (60 Hz, 208 V)**

AFR	12.7
BF	0.24

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	5.52	3.74	0.83	5.52	3.74	1.16	5.52	3.74	1.63	5.49	3.72	1.94	5.20	3.56	2.09	4.85	3.36	2.26
16.0	22.0	6.55	4.11	1.03	6.55	4.11	1.47	6.07	3.84	1.81	5.78	3.68	1.95	5.49	3.52	2.10	5.14	3.34	2.27
18.0	25.0	7.53	4.60	1.23	6.95	4.27	1.52	6.36	3.96	1.81	6.07	3.81	1.96	5.78	3.66	2.11	5.43	3.49	2.28
19.4	26.7	7.73	4.56	1.24	7.15	4.25	1.53	6.56	3.95	1.82	6.27	3.81	1.97	5.98	3.67	2.11	5.63	3.50	2.29
22.0	30.0	8.11	4.50	1.25	7.52	4.22	1.54	6.94	3.95	1.83	6.65	3.82	1.98	6.36	3.69	2.12	6.01	3.54	2.30
24.0	32.0	8.40	4.34	1.26	7.81	4.08	1.55	7.23	3.83	1.84	6.94	3.71	1.99	6.64	3.60	2.13	6.29	3.46	2.31

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	18.82	12.75	0.83	18.82	12.75	1.16	18.82	12.75	1.63	18.74	12.70	1.94	17.74	12.14	2.09	16.55	11.47	2.26
60.8	71.6	22.34	14.02	1.03	22.34	14.02	1.47	20.72	13.11	1.81	19.72	12.56	1.95	18.73	12.02	2.10	17.53	11.39	2.27
64.4	77.0	25.69	15.69	1.23	23.70	14.57	1.52	21.71	13.51	1.81	20.71	12.99	1.96	19.71	12.49	2.11	18.52	11.90	2.28
67.0	80.0	26.38	15.57	1.24	24.39	14.51	1.53	22.40	13.49	1.82	21.40	13.00	1.97	20.40	12.52	2.11	19.21	11.96	2.29
71.6	86.0	27.66	15.37	1.25	25.67	14.40	1.54	23.68	13.48	1.83	22.68	13.04	1.98	21.69	12.60	2.12	20.49	12.09	2.30
75.2	89.6	28.65	14.81	1.26	26.66	13.92	1.55	24.66	13.08	1.84	23.67	12.67	1.99	22.67	12.27	2.13	21.48	11.80	2.31

Heating (60 Hz, 208 V)

AFR	12.9

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.12	2.27	4.86	2.56	5.62	2.85	5.84	2.61	6.07	2.37	6.31	2.13	6.61	1.84	7.98	1.99
21.1		3.69	2.34	4.48	2.64	5.28	2.93	5.54	2.68	5.81	2.43	6.07	2.18	6.39	1.89	7.74	2.02
22.0		3.52	2.37	4.33	2.67	5.14	2.96	5.42	2.71	5.70	2.46	5.97	2.20	6.30	1.90	7.30	1.91
24.0		3.35	2.40	4.16	2.68	4.96	2.96	5.30	2.74	5.59	2.48	5.88	2.23	6.21	1.92	6.85	1.79
25.0		3.27	2.42	3.94	2.55	4.74	2.83	5.24	2.75	5.54	2.49	5.83	2.24	6.17	1.93	6.63	1.74
27.0		2.90	2.22	3.50	2.28	4.30	2.56	5.12	2.78	5.43	2.52	5.73	2.26	6.08	1.94	6.19	1.62

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		14.05	2.27	16.58	2.56	19.18	2.85	19.93	2.61	20.72	2.37	21.54	2.13	22.55	1.84	27.23	1.99
70.0		12.60	2.34	15.30	2.64	18.00	2.93	18.90	2.68	19.81	2.43	20.71	2.18	21.80	1.89	26.40	2.02
71.6		12.02	2.37	14.79	2.67	17.53	2.96	18.50	2.71	19.45	2.46	20.38	2.20	21.50	1.90	24.89	1.91
75.2		11.44	2.40	14.21	2.68	16.92	2.96	18.09	2.74	19.08	2.48	20.05	2.23	21.20	1.92	23.39	1.79
77.0		11.15	2.42	13.45	2.55	16.17	2.83	17.88	2.75	18.90	2.49	19.89	2.24	21.05	1.93	22.63	1.74
80.6		9.90	2.22	11.94	2.28	14.66	2.56	17.47	2.78	18.54	2.52	19.56	2.26	20.75	1.94	21.12	1.62

Cooling (60 Hz, 230 V)

AFR	12.7
BF	0.24

Temp: Celsius / TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	5.52	3.74	0.83	5.52	3.74	1.16	5.52	3.74	1.63	5.49	3.72	1.94	5.20	3.56	2.09	4.85	3.36	2.26
16.0	22.0	6.55	4.11	1.03	6.55	4.11	1.47	6.07	3.84	1.81	5.78	3.68	1.95	5.49	3.52	2.10	5.14	3.34	2.27
18.0	25.0	7.53	4.60	1.23	6.95	4.27	1.52	6.36	3.96	1.81	6.07	3.81	1.96	5.78	3.66	2.11	5.43	3.49	2.28
19.4	26.7	7.73	4.56	1.24	7.15	4.25	1.53	6.56	3.95	1.82	6.27	3.81	1.97	5.98	3.67	2.11	5.63	3.50	2.29
22.0	30.0	8.11	4.50	1.25	7.52	4.22	1.54	6.94	3.95	1.83	6.65	3.82	1.98	6.36	3.69	2.12	6.01	3.54	2.30
24.0	32.0	8.40	4.34	1.26	7.81	4.08	1.55	7.23	3.83	1.84	6.94	3.71	1.99	6.64	3.60	2.13	6.29	3.46	2.31

Temp: Fahrenheit / TC, SHC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	18.82	12.75	0.83	18.82	12.75	1.16	18.82	12.75	1.63	18.74	12.70	1.94	17.74	12.14	2.09	16.55	11.47	2.26
60.8	71.6	22.34	14.02	1.03	22.34	14.02	1.47	20.72	13.11	1.81	19.72	12.56	1.95	18.73	12.02	2.10	17.53	11.39	2.27
64.4	77.0	25.69	15.69	1.23	23.70	14.57	1.52	21.71	13.51	1.81	20.71	12.99	1.96	19.71	12.49	2.11	18.52	11.90	2.28
67.0	80.0	26.38	15.57	1.24	24.39	14.51	1.53	22.40	13.49	1.82	21.40	13.00	1.97	20.40	12.52	2.11	19.21	11.96	2.29
71.6	86.0	27.66	15.37	1.25	25.67	14.40	1.54	23.68	13.48	1.83	22.68	13.04	1.98	21.69	12.60	2.12	20.49	12.09	2.30
75.2	89.6	28.65	14.81	1.26	26.66	13.92	1.55	24.66	13.08	1.84	23.67	12.67	1.99	22.67	12.27	2.13	21.48	11.80	2.31

Heating (60 Hz, 230 V)

AFR	12.9

Temp: Celsius / TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)															
EDB		-25.5/(-25)		-20/(-20)		-15/(-15)		-10/(-9)		-5/(-4)		0/(1.5)		6/(8.3)		15.5/(24)	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		4.12	2.27	4.86	2.56	5.62	2.85	5.84	2.61	6.07	2.37	6.31	2.13	6.61	1.84	7.98	1.99
21.1		3.69	2.34	4.48	2.64	5.28	2.93	5.54	2.68	5.81	2.43	6.07	2.18	6.39	1.89	7.74	2.02
22.0		3.52	2.37	4.33	2.67	5.14	2.96	5.42	2.71	5.70	2.46	5.97	2.20	6.30	1.90	7.30	1.91
24.0		3.35	2.40	4.16	2.68	4.96	2.96	5.30	2.74	5.59	2.48	5.88	2.23	6.21	1.92	6.85	1.79
25.0		3.27	2.42	3.94	2.55	4.74	2.83	5.24	2.75	5.54	2.49	5.83	2.24	6.17	1.93	6.63	1.74
27.0		2.90	2.22	3.50	2.28	4.30	2.56	5.12	2.78	5.43	2.52	5.73	2.26	6.08	1.94	6.19	1.62

Temp: Fahrenheit / TC: kBtu/h / PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)															
EDB		-13.8/(-13)		-4/(-4)		5/(5)		14/(15.8)		23/(24.8)		32/(34.7)		43/(47)		60/(75.2)	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		14.05	2.27	16.58	2.56	19.18	2.85	19.93	2.61	20.72	2.37	21.54	2.13	22.55	1.84	27.23	1.99
70.0		12.60	2.34	15.30	2.64	18.00	2.93	18.90	2.68	19.81	2.43	20.71	2.18	21.80	1.89	26.40	2.02
71.6		12.02	2.37	14.79	2.67	17.53	2.96	18.50	2.71	19.45	2.46	20.38	2.20	21.50	1.90	24.89	1.91
75.2		11.44	2.40	14.21	2.68	16.92	2.96	18.09	2.74	19.08	2.48	20.05	2.23	21.20	1.92	23.39	1.79
77.0		11.15	2.42	13.45	2.55	16.17	2.83	17.88	2.75	18.90	2.49	19.89	2.24	21.05	1.93	22.63	1.74
80.6		9.90	2.22	11.94	2.28	14.66	2.56	17.47	2.78	18.54	2.52	19.56	2.26	20.75	1.94	21.12	1.62

Symbols:

AFR	: Airflow rate	(m³/min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)


Notes:

1.  shows MAX capacities and power input (Cooling/Heating).
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables.
(Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.
Corresponding refrigerant piping length : 25 ft (7.5 m)
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.


7.1 Capacity Correction Factor by the Length of Refrigerant Piping (Reference)

The cooling capacity and the heating capacity of the unit have to be corrected in accordance with the length of refrigerant piping — the distance between the indoor unit and the outdoor unit.


7.1.1 09/12 Class

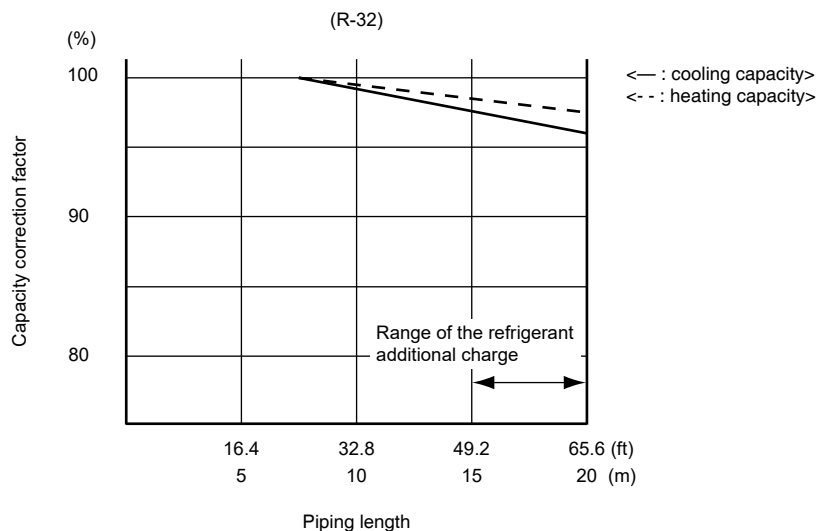

7.1.2 15/18 Class

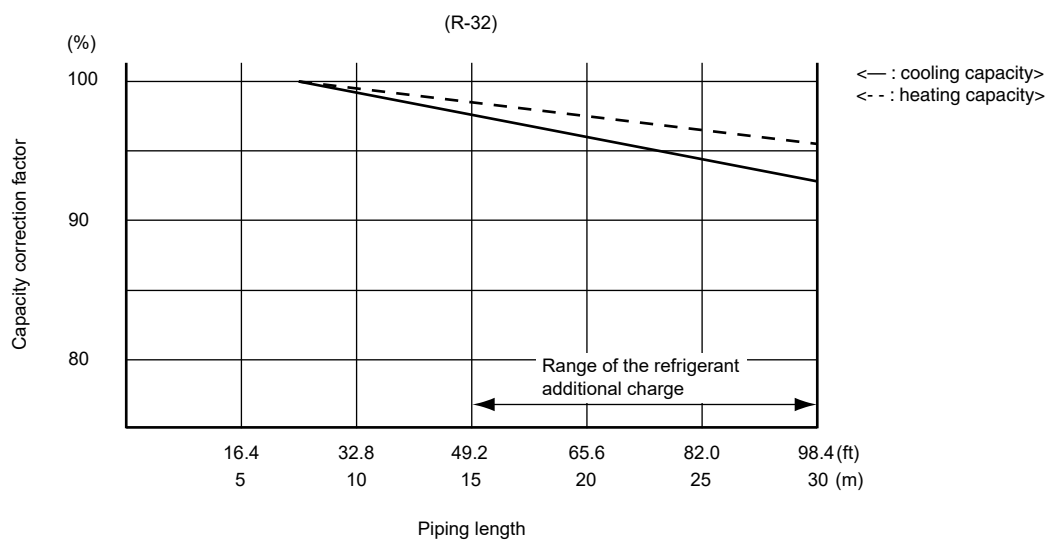


7.1.3 24 Class

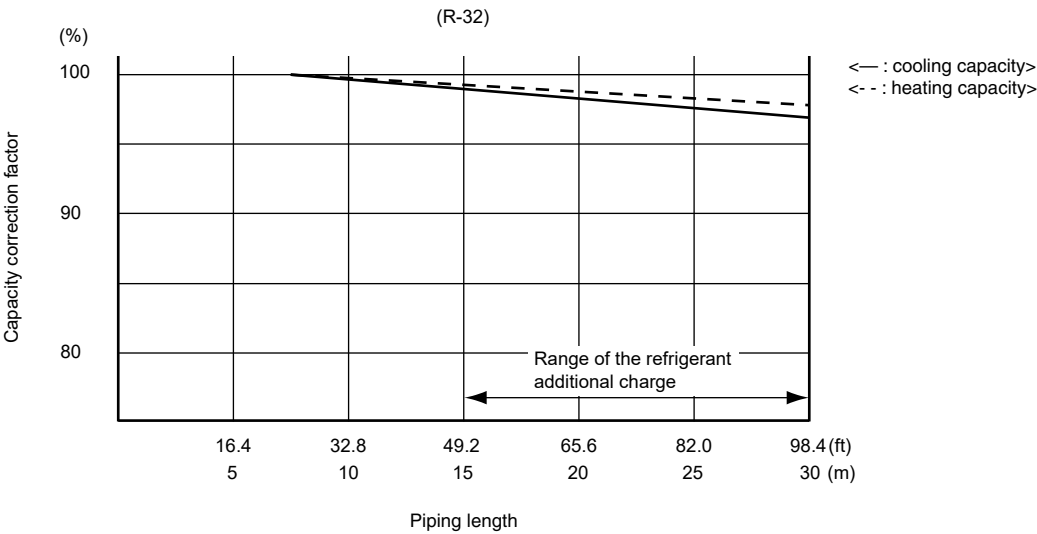

Note: The graphs show the factor when additional refrigerant of the proper quantity is charged.

8. Operation Limit

RXP09/12/15/18/24AVJU9

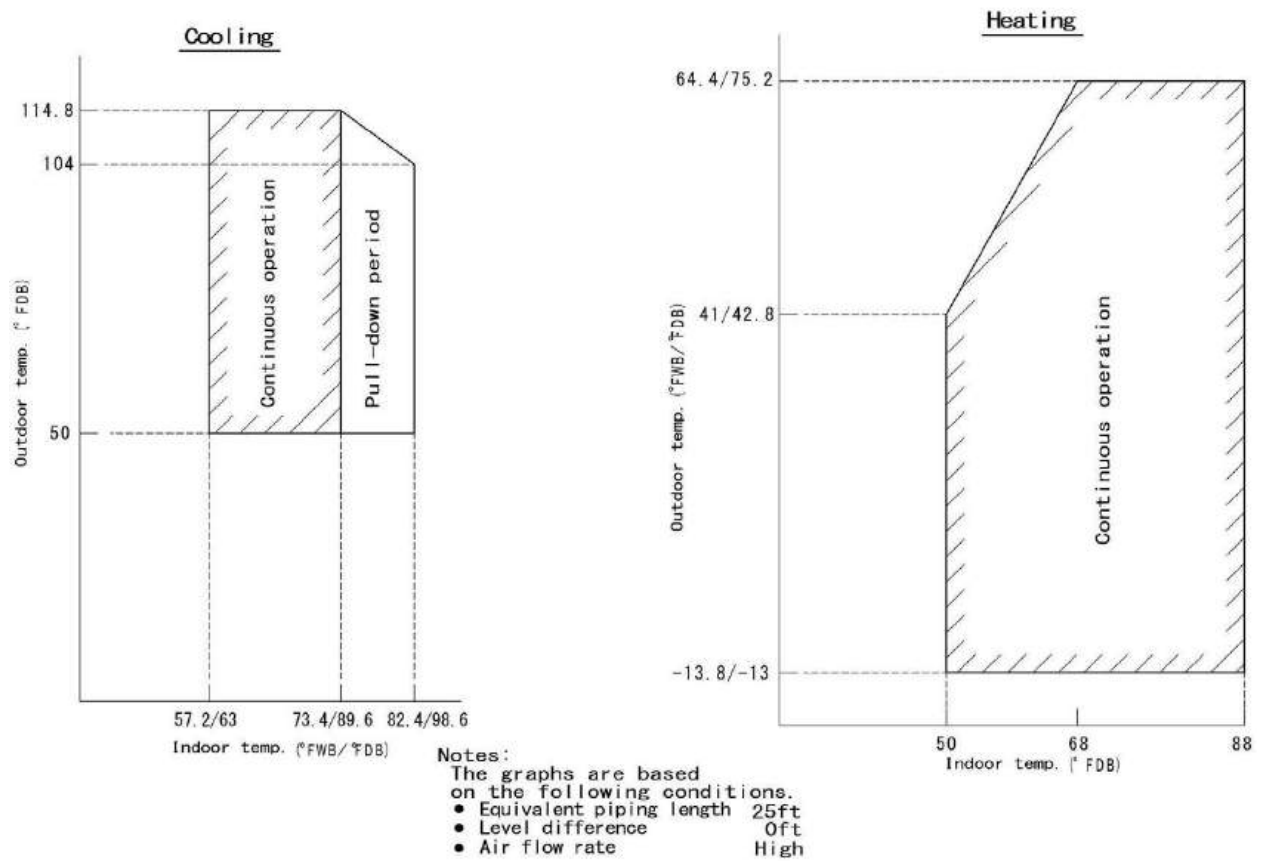


3D158354

9. Fan Characteristics

9.1 External Static Pressure

FDMA09AVJU9


Fan characteristics ①

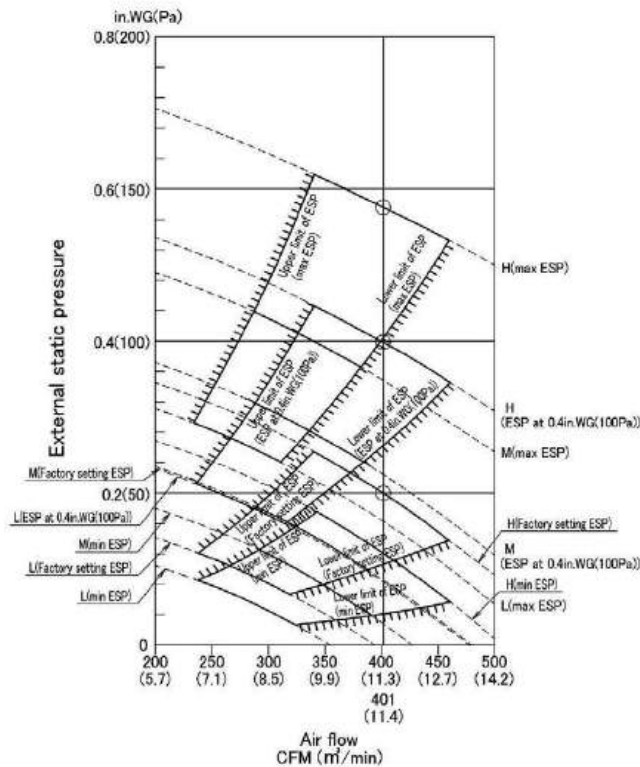

Notes:


1. Fan characteristics at the time of rear suction and bottom suction are similar to each other.
2. Fan characteristics ① shows a representative of fan characteristics at the time of "Maximum ESP", "ESP at 0.4in.WG(100Pa)", "Factory setting ESP" and "Minimum ESP".
3. A remote controller can be used to change airflow rate of "H", "M" and "L".
4. Set the ESP on suction side to 0.4in.WG(100Pa) or less.
5. Fan characteristics ② (for field setting of remote controller) shows fan characteristics of airflow "H" which can be changed in the field setting by a remote controller.
6. Select ESP setting in accordance with resistance of the connected duct by using Fan characteristics ① and ② (Factory setting ESP is 0.2in.WG(50Pa). See installation manual for ESP setting procedure.)
7. The ESP setting of this unit can be changed into 13 levels.
8. The value of Fan characteristics ② mentioned in this drawing shows the ESP of rated airflow.

ESP : external static pressure

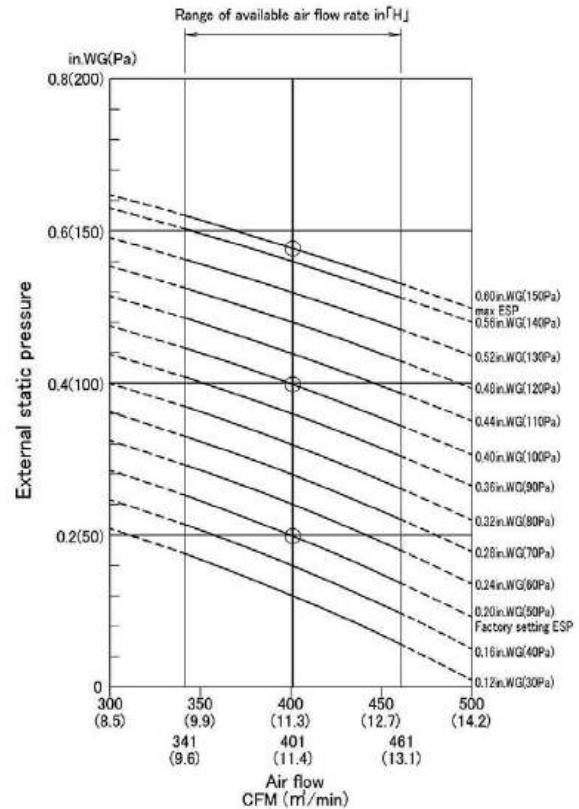Fan characteristics ②
(For field setting of remote controller)

FDMA12AVJU9


Fan characteristics ①

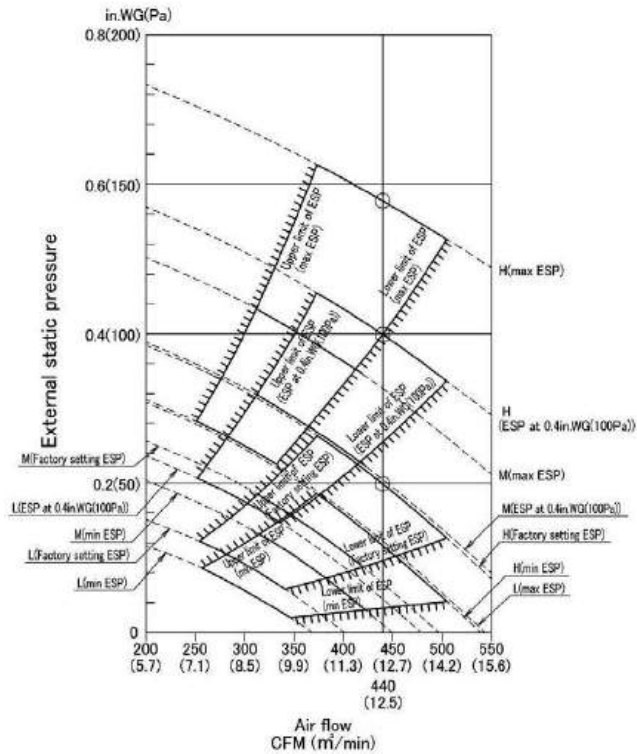

Notes:


1. Fan characteristics at the time of rear suction and bottom suction are similar to each other.
2. Fan characteristics ① shows a representative of fan characteristics at the time of "Maximum ESP", "ESP at 0.4in.WG(100Pa)", "Factory setting ESP" and "Minimum ESP".
3. A remote controller can be used to change airflow rate of "H", "M" and "L".
4. Set the ESP on suction side to 0.4in.WG(100Pa) or less.
5. Fan characteristics ② (for field setting of remote controller) shows fan characteristics of airflow "H" which can be changed in the field setting by a remote controller.
6. Select ESP setting in accordance with resistance of the connected duct by using Fan characteristics ① and ②. (Factory setting ESP is 0.2in.WG(50Pa). See installation manual for ESP setting procedure.)
7. The ESP setting of this unit can be changed into 13 levels.
8. The value of Fan characteristics ② mentioned in this drawing shows the ESP of rated airflow.

ESP : external static pressure

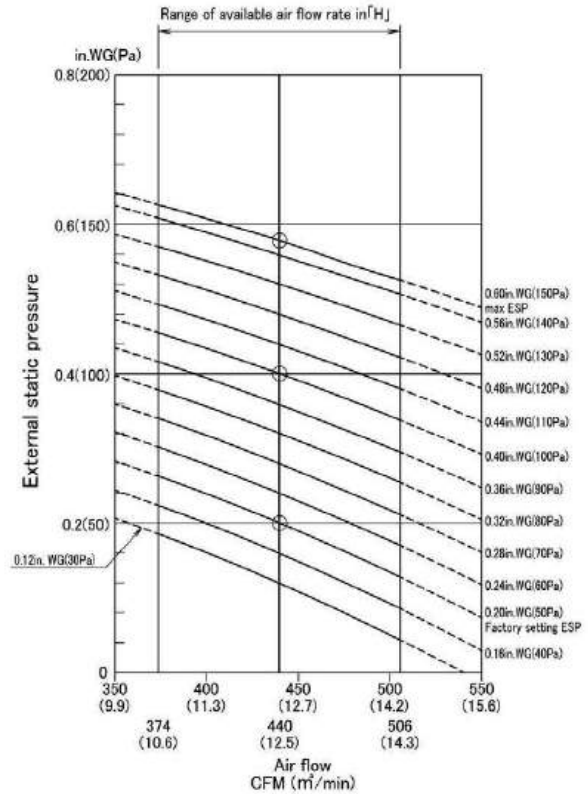Fan characteristics ②
(For field setting of remote controller)

FDMA15AVJU9


Fan characteristics ①

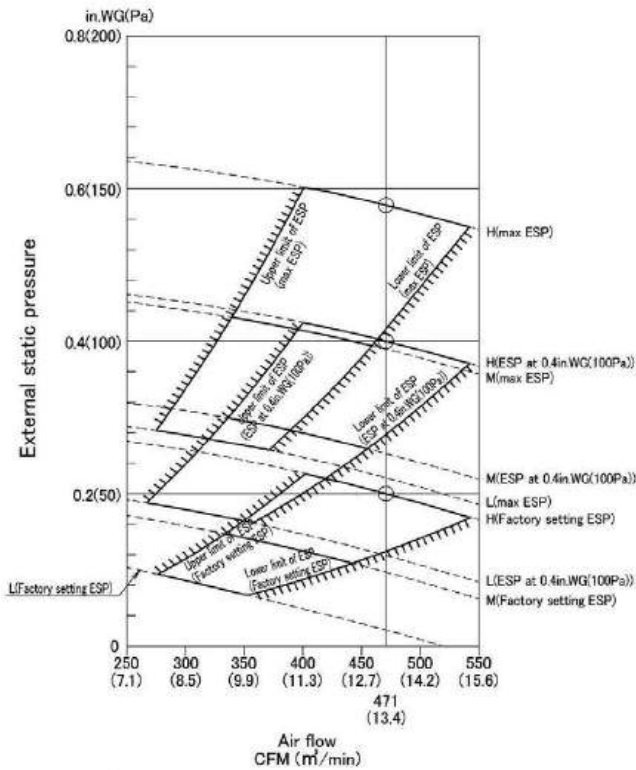

Notes:



1. Fan characteristics at the time of rear suction and bottom suction are similar to each other.
2. Fan characteristics ① shows a representative of fan characteristics at the time of "Maximum ESP", "ESP at 0.4in.WG(100Pa)" and "Factory setting ESP".
3. A remote controller can be used to change airflow rate of "H", "M" and "L".
4. Set the ESP on suction side to 0.4in.WG(100Pa) or less.
5. Fan characteristics ② (for field setting of remote controller) shows fan characteristics of airflow "H" which can be changed in the field setting by a remote controller.
6. Select ESP setting in accordance with resistance of the connected duct by using Fan characteristics ① and ② (Factory setting ESP is 0.2in.WG(50Pa). See installation manual for ESP setting procedure.)
7. The ESP setting of this unit can be changed into 11 levels.
8. The value of Fan characteristics ② mentioned in this drawing shows the ESP of rated airflow.

ESP : external static pressure

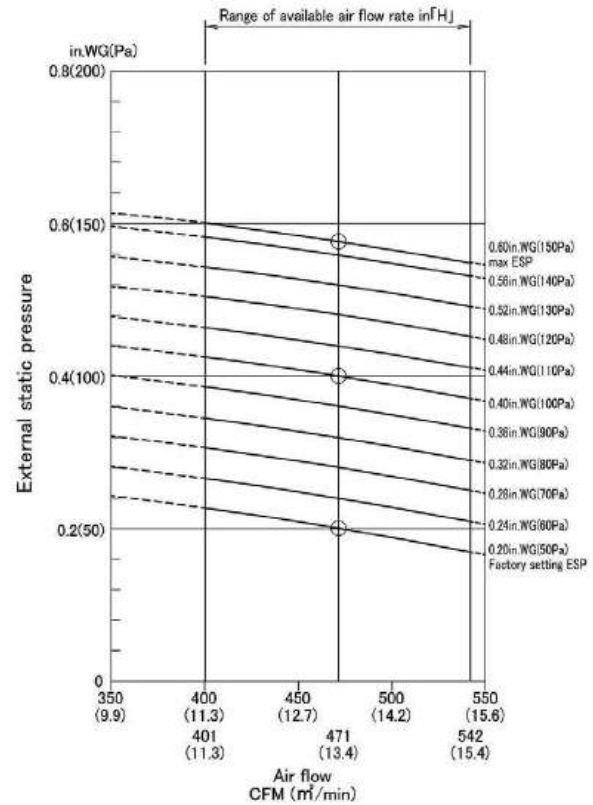Fan characteristics ②
(For field setting of remote controller)

FDMA18AVJU9

Fan characteristics ①

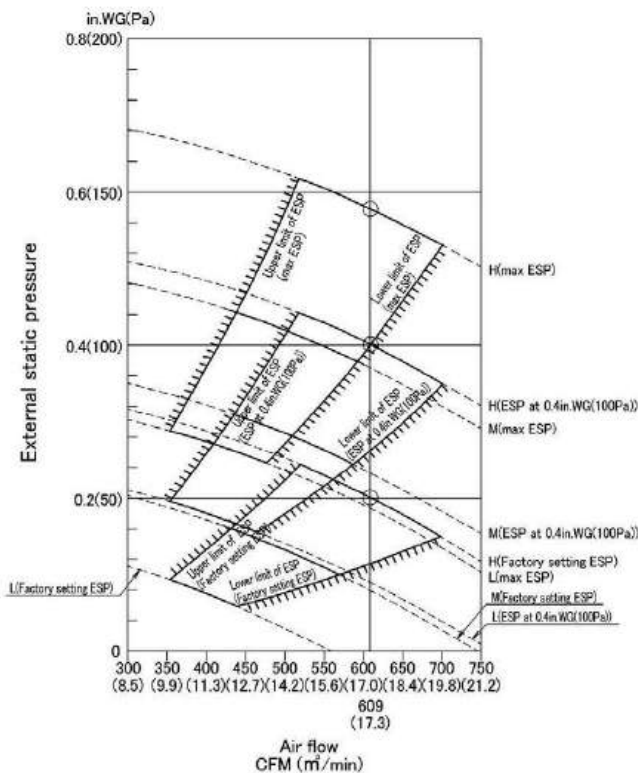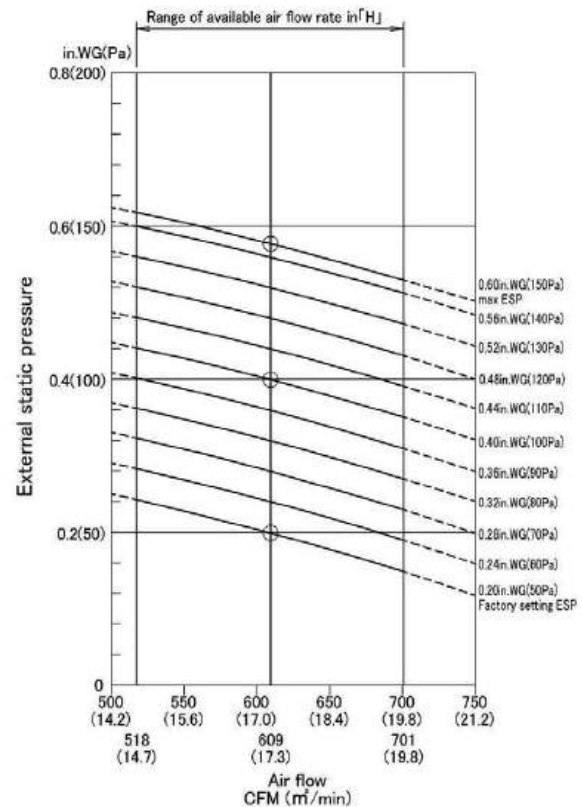Fan characteristics ②
(For field setting of remote controller)



Notes:

1. Fan characteristics at the time of rear suction and bottom suction are similar to each other.
2. Fan characteristics ① shows a representative of fan characteristics at the time of "Maximum ESP", "ESP at 0.4in.WG(100Pa)" and "Factory setting ESP".
3. A remote controller can be used to change airflow rate of "H", "M" and "L".
4. Set the ESP on suction side to 0.4in.WG(100Pa) or less.
5. Fan characteristics ② (for field setting of remote controller) shows fan characteristics of airflow "H" which can be changed in the field setting by a remote controller.
6. Select ESP setting in accordance with resistance of the connected duct by using Fan characteristics ① and ②. (Factory setting ESP is 0.2in.WG(50Pa). See installation manual for ESP setting procedure.)
7. The ESP setting of this unit can be changed into 11 levels.
8. The value of Fan characteristics ② mentioned in this drawing shows the ESP of rated airflow.

ESP : external static pressure

FDMA24AVJU9

Fan characteristics ①

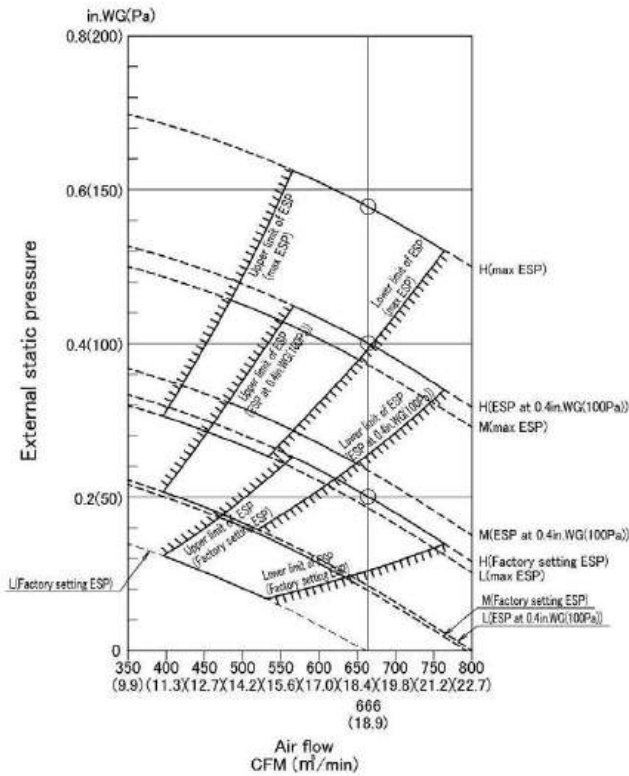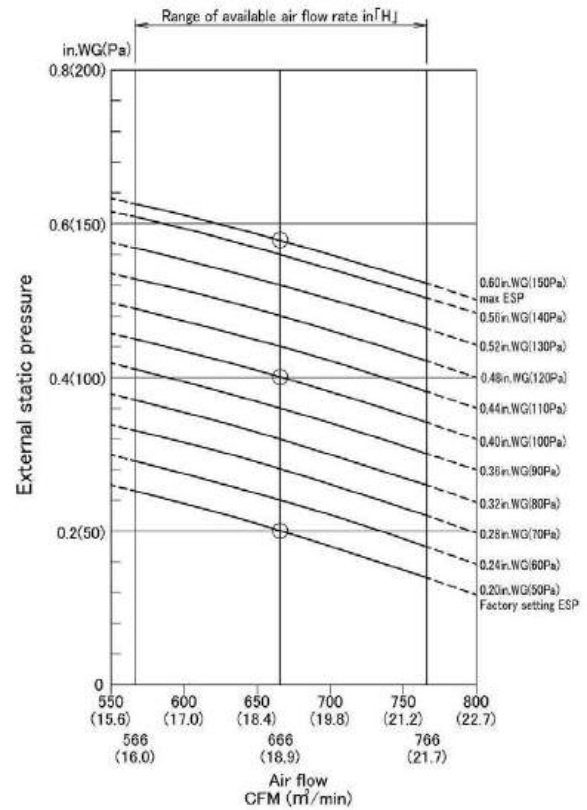Fan characteristics ②
(For field setting of remote controller)


Notes:

1. Fan characteristics at the time of rear suction and bottom suction are similar to each other.
2. Fan characteristics ① shows a representative of fan characteristics at the time of "Maximum ESP", "ESP at 0.4in.WG(100Pa)" and "Factory setting ESP".
3. A remote controller can be used to change airflow rate of "H", "M" and "L".
4. Set the ESP on suction side to 0.4in.WG(100Pa) or less.
5. Fan characteristics ② (for field setting of remote controller) shows fan characteristics of airflow "H" which can be changed in the field setting by a remote controller.
6. Select ESP setting in accordance with resistance of the connected duct by using Fan characteristics ① and ②. (Factory setting ESP is 0.2in.WG(50Pa). See installation manual for ESP setting procedure.)
7. The ESP setting of this unit can be changed into 11 levels.
8. The value of Fan characteristics ② mentioned in this drawing shows the ESP of rated airflow.

ESP : external static pressure

9.2 Airflow Auto Adjustment

FDMA09AVJU9

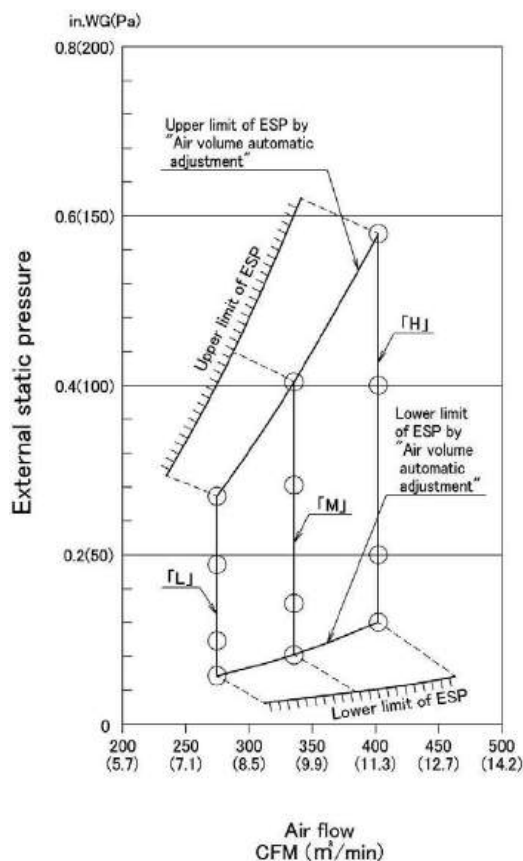


Notes :

1. This indoor unit has the "Air volume automatic adjustment" function, which automatically adjusts the air flow rate so as to be approximately in the range of $\pm 10\%$ of the rated value, at the time of installation.
2. After duct construction completion, please perform field setting "Air volume automatic adjustment" by remote controller.
3. About the field setting method of the "Air volume automatic adjustment", look at the installation manual which is attached to an indoor unit.
4. ESP that can adjust by "Air volume automatic adjustment" function is 0.12in.WG(30Pa) ~ 0.6in.WG(150Pa) (When air flow is "H").
5. If the unit is used beyond the range of the above-mentioned ESP, the air flow rate can not be well-adjusted automatically, and the unit will operate with the air flow rate different from the rated value.
6. This figure shows a fan characteristics at the time of "H" "M" and "L".
7. The remote controller can be used to change "H" "M" and "L".

ESP : external static pressure.

3D158872

FDMA12AVJU9

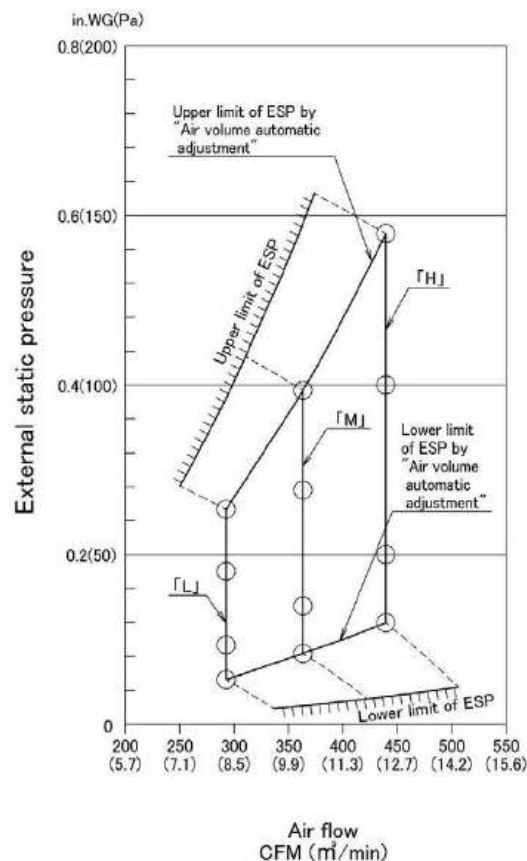


Notes :

1. This indoor unit has the "Air volume automatic adjustment" function, which automatically adjusts the air flow rate so as to be approximately in the range of $\pm 10\%$ of the rated value, at the time of installation.
2. After duct construction completion, please perform field setting "Air volume automatic adjustment" by remote controller.
3. About the field setting method of the "Air volume automatic adjustment", look at the installation manual which is attached to an indoor unit.
4. ESP that can adjust by "Air volume automatic adjustment" function is 0.12in.WG(30Pa) ~ 0.6in.WG(150Pa) (When air flow is "H").
5. If the unit is used beyond the range of the above-mentioned ESP, the air flow rate can not be well-adjusted automatically, and the unit will operate with the air flow rate different from the rated value.
6. This figure shows a fan characteristics at the time of "H" "M" and "L".
7. The remote controller can be used to change "H" "M" and "L".

ESP : external static pressure.

3D158873

FDMA15AVJU9

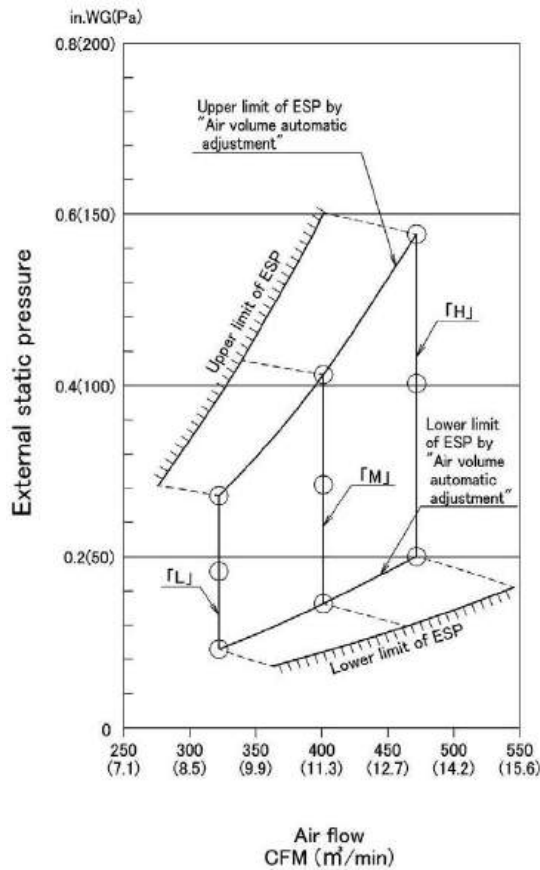


Notes :

1. This indoor unit has the "Air volume automatic adjustment" function, which automatically adjusts the air flow rate so as to be approximately in the range of $\pm 10\%$ of the rated value, at the time of installation.
2. After duct construction completion, please perform field setting "Air volume automatic adjustment" by remote controller.
3. About the field setting method of the "Air volume automatic adjustment", look at the installation manual which is attached to an indoor unit.
4. ESP that can adjust by "Air volume automatic adjustment" function is 0.2in.WG(50Pa) ~ 0.6in.WG(150Pa) (When air flow is "H").
5. If the unit is used beyond the range of the above-mentioned ESP, the air flow rate can not be well-adjusted automatically, and the unit will operate with the air flow rate different from the rated value.
6. This figure shows a fan characteristics at the time of "H" "M" and "L".
7. The remote controller can be used to change "H" "M" and "L".

ESP : external static pressure.

3D158874

FDMA18AVJU9

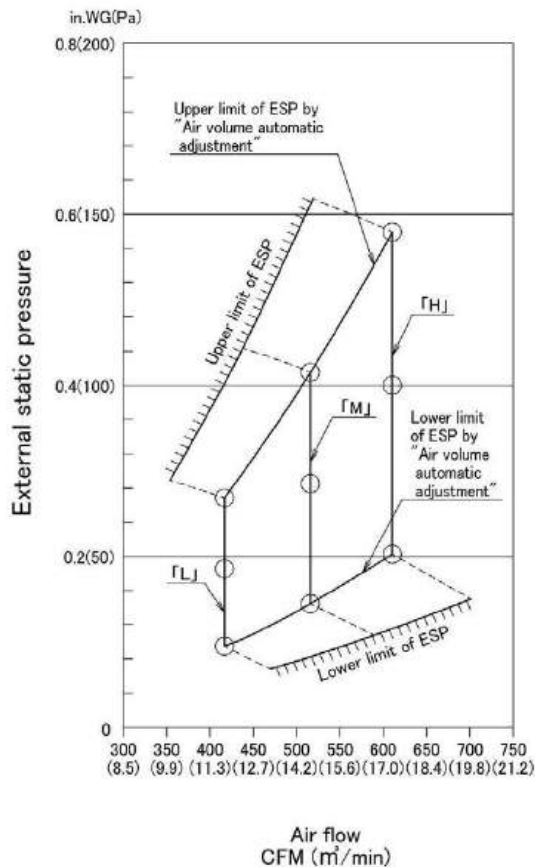


Notes :

1. This indoor unit has the "Air volume automatic adjustment" function, which automatically adjusts the air flow rate so as to be approximately in the range of $\pm 10\%$ of the rated value, at the time of installation.
2. After duct construction completion, please perform field setting "Air volume automatic adjustment" by remote controller.
3. About the field setting method of the "Air volume automatic adjustment", look at the installation manual which is attached to an indoor unit.
4. ESP that can adjust by "Air volume automatic adjustment" function is 0.2in.WG(50Pa) ~ 0.6in.WG(150Pa) (When air flow is "H").
5. If the unit is used beyond the range of the above-mentioned ESP, the air flow rate can not be well-adjusted automatically, and the unit will operate with the air flow rate different from the rated value.
6. This figure shows a fan characteristics at the time of "H" "M" and "L".
7. The remote controller can be used to change "H" "M" and "L".

ESP : external static pressure.

3D158875

FDMA24AVJU9

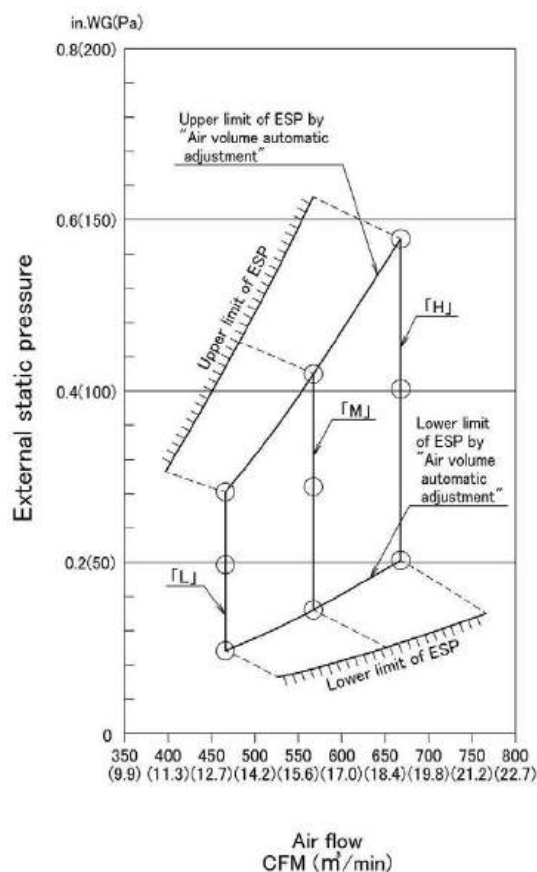

Notes :



1. This indoor unit has the "Air volume automatic adjustment" function, which automatically adjusts the air flow rate so as to be approximately in the range of $\pm 10\%$ of the rated value, at the time of installation.
2. After duct construction completion, please perform field setting "Air volume automatic adjustment" by remote controller.
3. About the field setting method of the "Air volume automatic adjustment", look at the installation manual which is attached to an indoor unit.
4. ESP that can adjust by "Air volume automatic adjustment" function is 0.2in.WG(50Pa) – 0.6in.WG(150Pa) (When air flow is "H").
5. If the unit is used beyond the range of the above-mentioned ESP, the air flow rate can not be well-adjusted automatically, and the unit will operate with the air flow rate different from the rated value.
6. This figure shows a fan characteristics at the time of "H" "M" and "L".
7. The remote controller can be used to change "H" "M" and "L".

ESP : external static pressure.

3D158876

10. Sound Level


10.1 Measuring Location

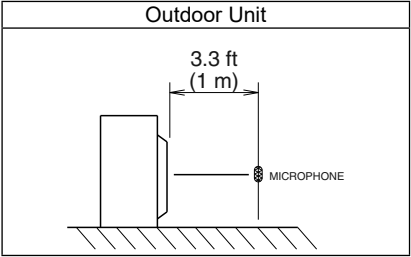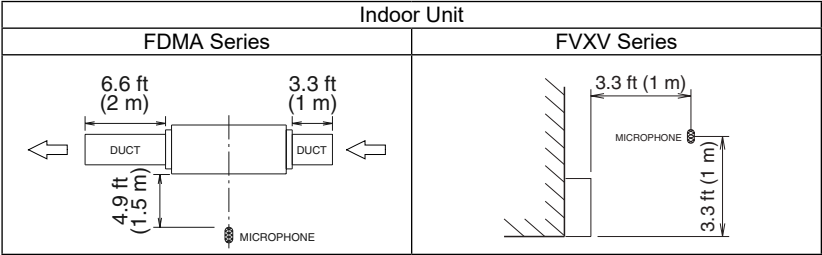

- Notes:**
- 1. Operation sound is measured in an anechoic chamber.
 - 2. The data are based on the conditions shown in the table below.


	Cooling	Heating	Piping Length
Indoor	80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB)	70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB)	25 ft (7.5 m)
Outdoor	95.0°FDB (35.0°CDB) / 75.0°FWB (24.0°CWB)	47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)	

10.2 Indoor Unit
FDMA09AVJU9

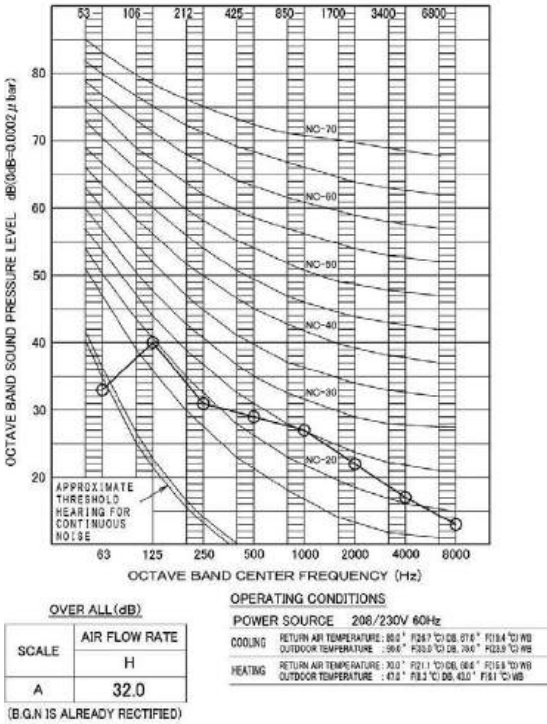


4D158169

FDMA12AVJU9

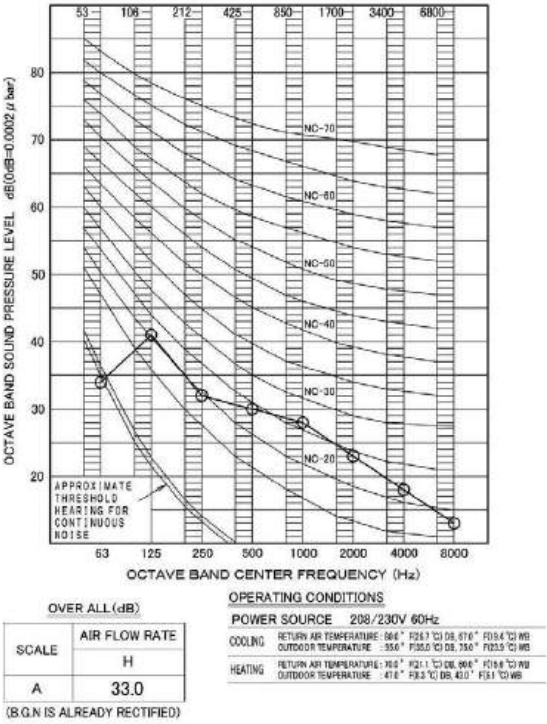


4D158170

FDMA15AVJU9

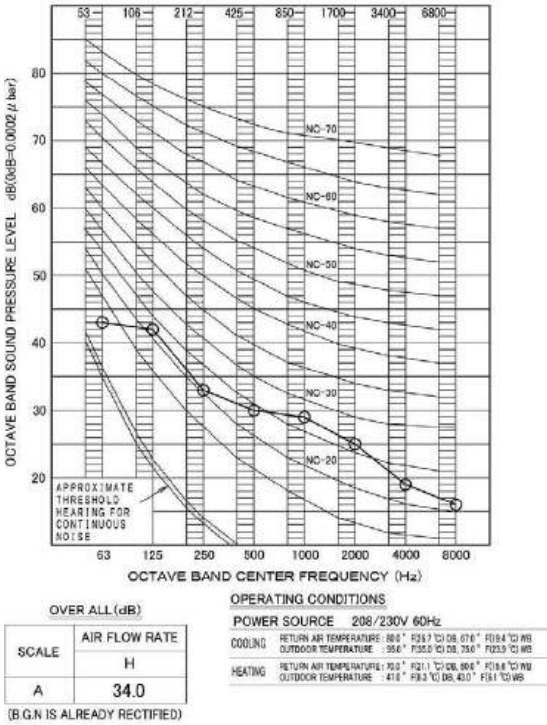


4D158171

FDMA18AVJU9

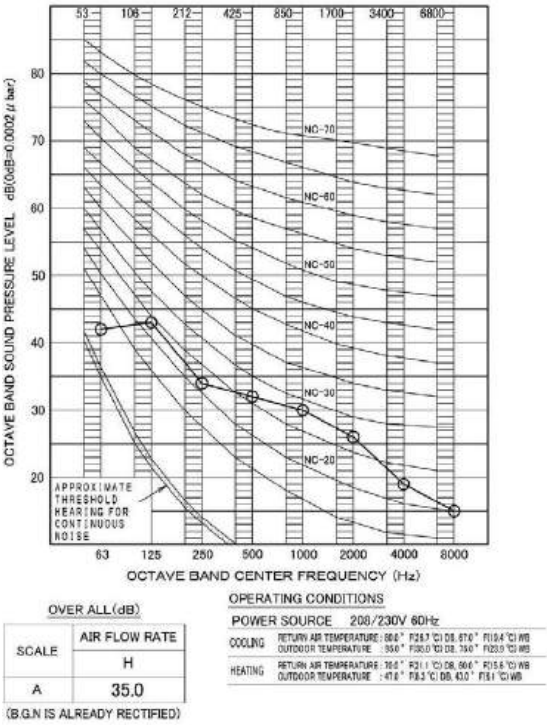



4D158172

FDMA24AVJU9

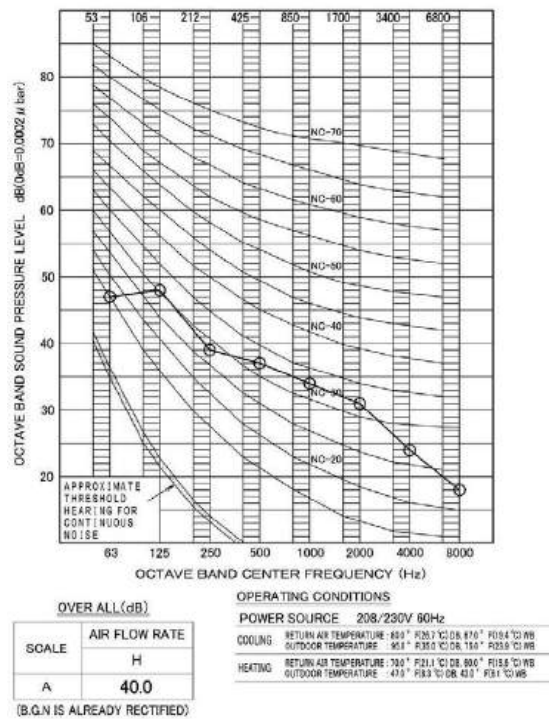



4D158173

FVXV09AVJUW(T)9

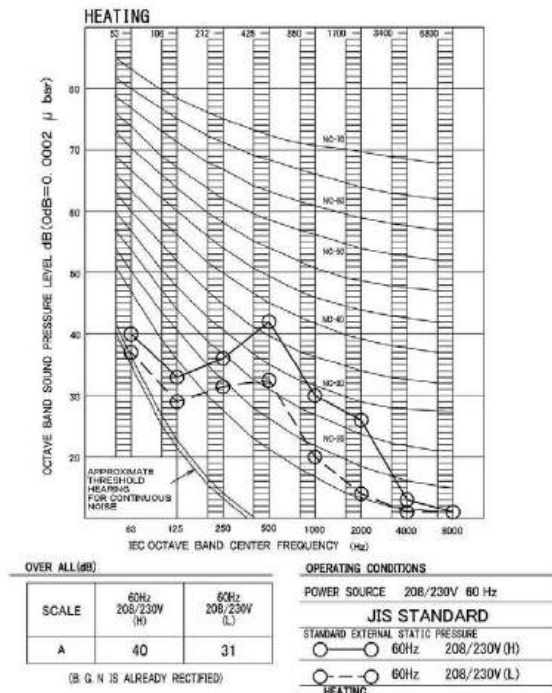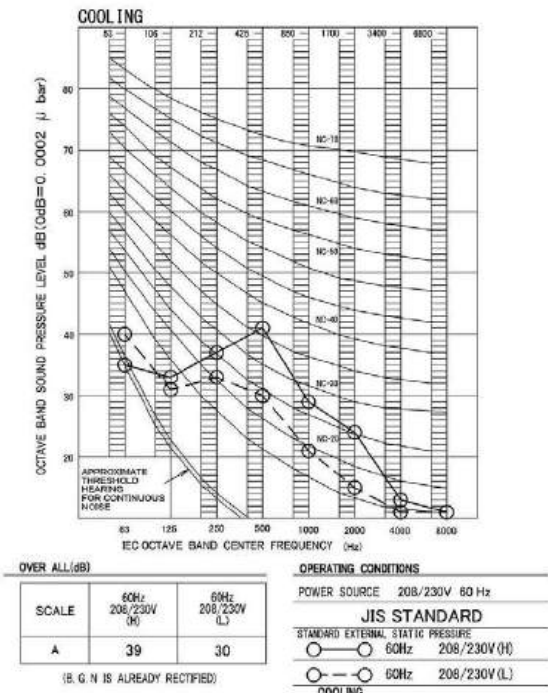



3D159244

FVXV12AVJUW(T)9

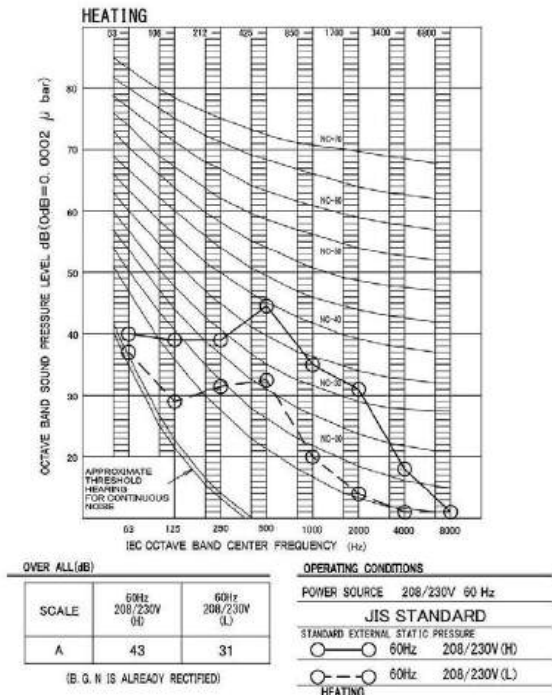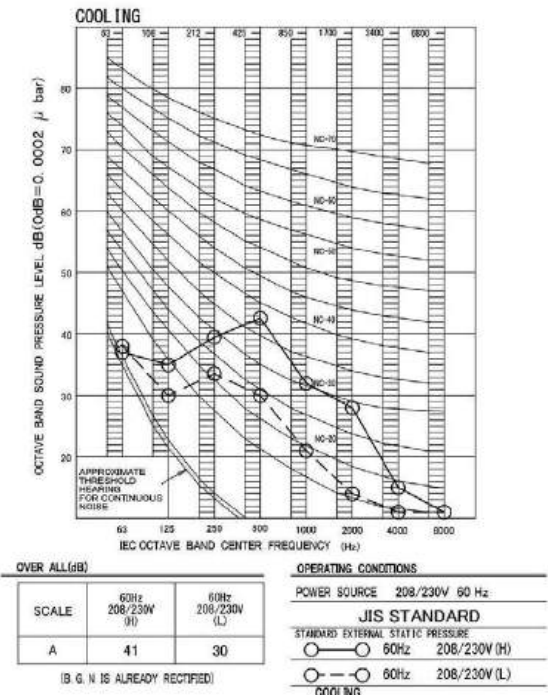



3D159245

FVXV15AVJUW(T)9

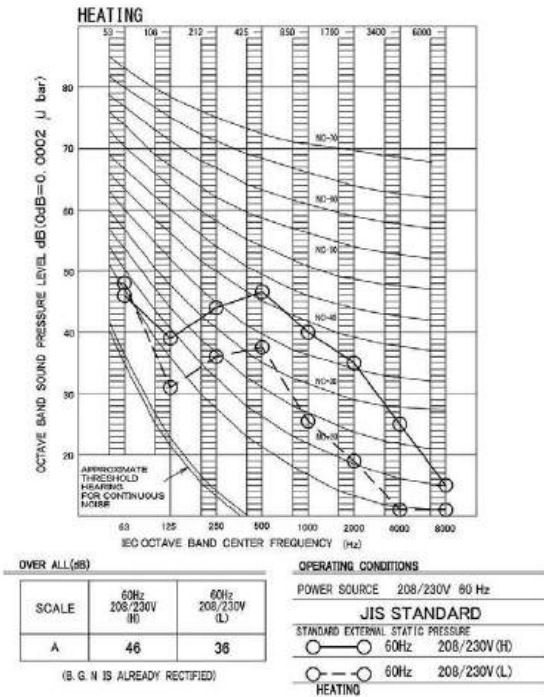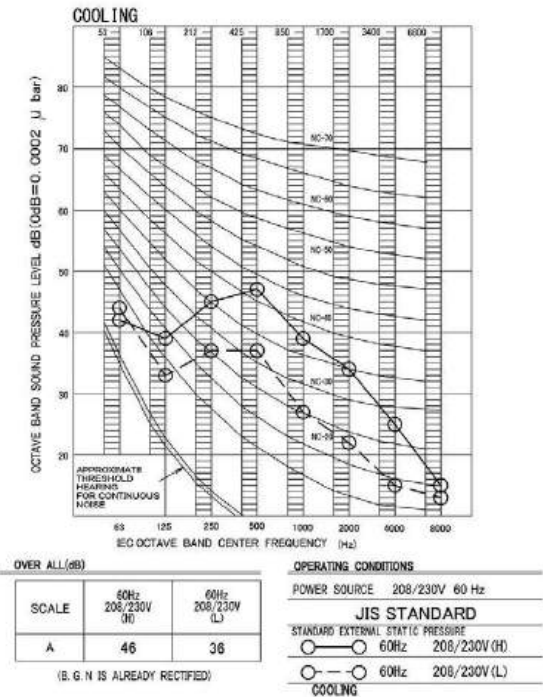

3D159251


FVXV18AVJUW(T)9

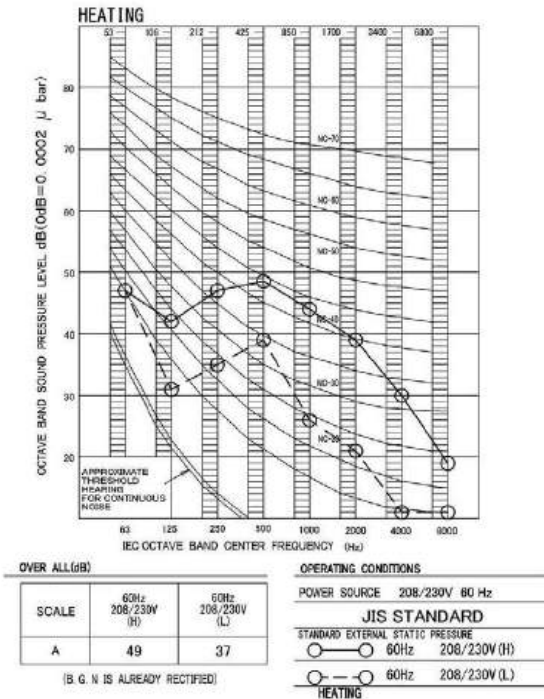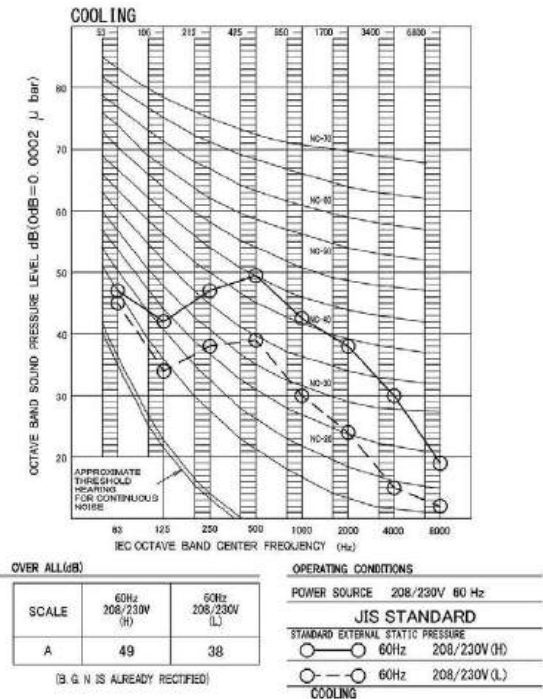

3D159252


10.3 Outdoor Unit

RXP09/12AVJU9

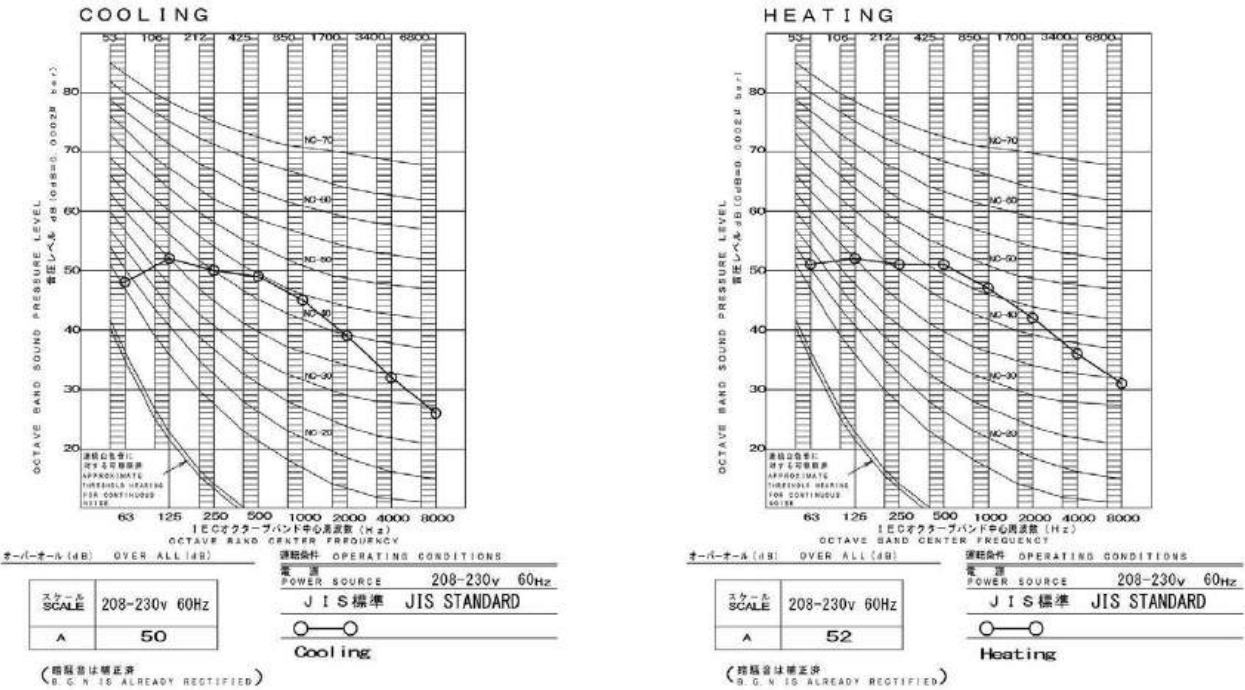

3D152632

RXP15/18/24AVJU9

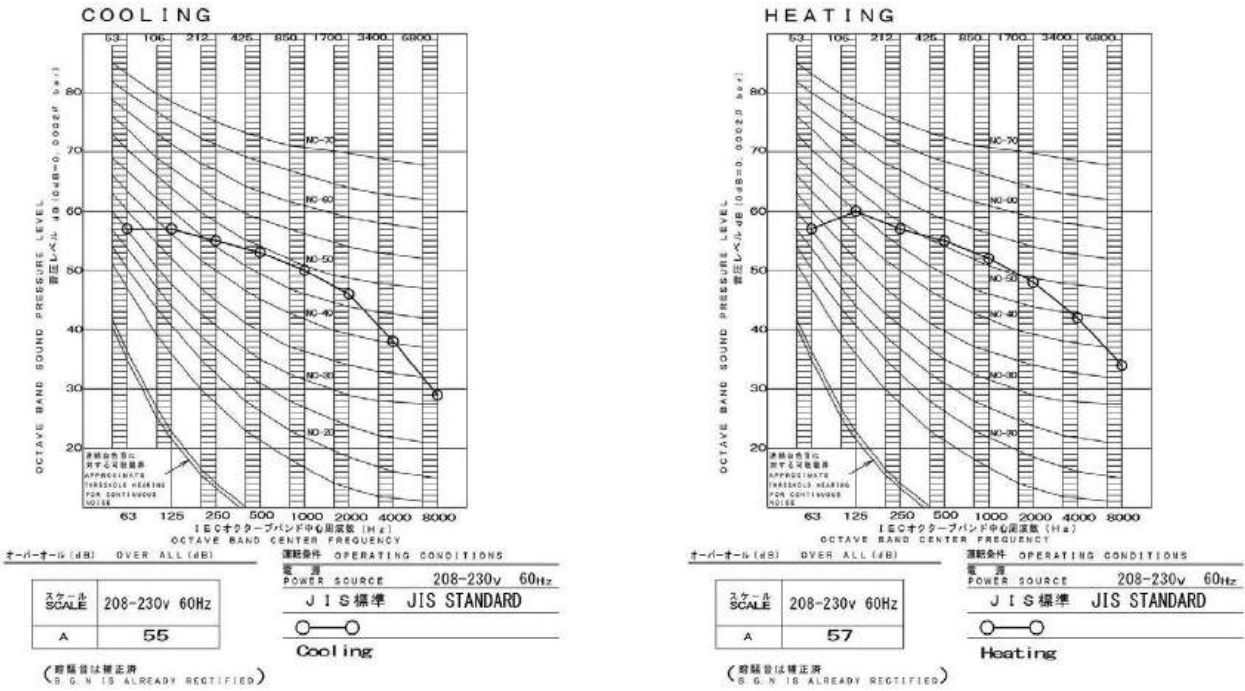

3D152193

11. Electric Characteristics

Indoor Unit	Outdoor Unit	Power Supply				Fan/Compressor	Indoor Fan
		Hz - Volts	Voltage Range	MCA	MOP	Inverter Drive Input	Inverter Drive Input
FDMA09AVJU9	RXP09AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	11.6	15	9.0	0.52
FDMA12AVJU9	RXP12AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	14.6	15	11.4	0.61
FDMA15AVJU9	RXP15AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	16.1	20	12.7	0.87
FDMA18AVJU9	RXP18AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	21.4	25	17.4	1.12
FDMA24AVJU9	RXP24AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	21.6	25	17.6	1.24
FVXV09AVJUW(T)9	RXP09AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	11.6	15	9.0	0.13
FVXV12AVJUW(T)9	RXP12AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	14.6	15	11.4	0.16
FVXV15AVJUW(T)9	RXP15AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	16.1	20	12.7	0.18
FVXV18AVJUW(T)9	RXP18AVJU9	60 Hz - 208 V 60 Hz - 230 V	Max. 60 Hz, 253 V Min. 60 Hz, 187 V	21.4	25	17.6	0.21

Symbols:

MCA : Min. circuit ampacity

MOP : Max. overcurrent protective device

Notes:

1. Inverter drive input is the current value specified in annex 101. DVA.
2. Maximum allowable voltage variation between phases is 2%.
3. Select wire size based on the larger value of MCA.

C: 3D158350

12. Installation Manual

12.1 FDMA09/12/15/18/24AVJU9

Contents

Safety Considerations	1	7. Installing the indoor unit	8
Before Installation	3	8. Drain piping work.....	9
Accessories	4	9. Wiring	12
Choosing an Installation Site	5	10. Duct work	16
Indoor Unit Installation	6	Refrigerant Piping Work	17
1. Check the relation of location between the ceiling opening and the indoor unit suspension bolts. (unit: inch (mm))	6	1. Flaring the pipe end.....	17
2. Mount canvas ducts, sound absorbing material and anti-vibration rubber.....	7	2. Refrigerant piping	17
3. The indoor unit is set to standard external static pressure.....	7	Field Settings	19
4. Open installation holes (in the case of installation onto the existing ceiling).....	7	1. Settings for external static pressure	19
5. Installing the suspension bolts	7	2. Setting for options.....	20
6. In the case of changing the preset suction to underside suction, replace the chamber cover and the suction flange.....	7	3. Setting air filter sign.....	20
		Test operation and Testing	21
		1. Test operation and testing	21
		2. Test items	22
		3. How to diagnose for malfunction	24
		4. Malfunction code	24
		5. Pump down operation.....	25

The pictures in this document are for illustrative purposes only.

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	Read the precautions in this manual carefully before operating the unit.
	This appliance is filled with R32.

Read these **Safety Considerations for Installation** carefully before installing an air conditioner or heat pump. After completing the installation, make sure that the unit operates properly during the startup operation. Instruct the user on how to operate and maintain the unit. Inform users that they should store this installation manual with the operation manual for future reference. Always use a licensed installer or contractor to install this product. Improper installation can result in water or refrigerant leakage, electric shock, fire, or explosion. Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

-  **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** Indicates situations that may result in equipment or property-damage accidents only.

DANGER

- Refrigerant gas is heavier than air and replaces oxygen. A massive leak can lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death. Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.
- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerant gas may produce toxic gas if it comes into contact with fire. Exposure to this gas could cause severe injury or death.
- After completing the installation work, check that the refrigerant gas does not leak throughout the system.
- Do not install unit in an area where flammable materials are present due to risk of explosions that can cause serious injury or death.
- Safely dispose all packing and transportation materials in accordance with federal/state/local laws or ordinances. Packing materials such as nails and other metal or wood parts, including plastic packing materials used for transportation may cause injury or death by suffocation.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal.

WARNING

- Only qualified personnel licensed or certified in their jurisdiction must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in water leakage, electric shock, or fire.
- Pipe-work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.

- When installing the unit in a small room, take measures to keep the refrigerant concentration from exceeding allowable safety limits. Excessive refrigerant leaks, in the event of an accident in a closed ambient space, can lead to oxygen deficiency.
- Use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shock, fire, or the unit falling.
- Install the air conditioner or heat pump on a foundation strong enough that it can withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injury.
- Take into account strong winds, typhoons, or earthquakes when installing. Improper installation may result in the unit falling and causing accidents.
- The unit must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur.
The electrical ground circuit may consist of an appropriately sized electrical wire connecting the ground lug in the unit and control box wire to the building's electrical service panel.
Other methods of grounding are permitted if performed in accordance with the "National Electrical Code" (NEC)/ "American National Standards Institute" (ANSI)/ "National Fire Protection Association" (NFPA) 70 and local/state codes.
In CANADA, electrical grounding is to be in accordance with the Canadian Electrical Code CSA C22.1.
Failure to observe this warning can result in electrical shock that can cause personal injury or death.
- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel licensed or certified in their jurisdiction according to local, state, and national regulations. An insufficient power supply capacity or improper electrical construction may lead to electric shock or fire.
- Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
- When wiring, position the wires so that the electrical wiring box cover can be securely fastened. Improper positioning of the electrical wiring box cover may result in electric shock, fire, or the terminals overheating.
- Before touching electrical parts, turn off the unit.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Securely fasten the outdoor unit terminal cover (panel). If the terminal cover/panel is not installed properly, dust or water may enter the outdoor unit causing fire or electric shock.
- When installing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R32) such as air. Any presence of air or other foreign substance in the refrigerant circuit can cause an abnormal pressure rise or rupture, which may result in equipment damage and even injury.
- Do not change the setting of the protection devices. If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may occur.
- Do not use means to accelerate the defrosting process (if possible) or to clean, other than those recommended by the manufacturer.
- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Comply with national gas regulations.
- The indoor equipment and pipes shall be securely mounted and guarded such that accidental rupture of equipment cannot occur from such events as moving furniture or reconstruction activities.
- When mechanical connectors are reused indoors, sealing parts shall be renewed.
- When flared joints are reused indoors, the flared part shall be refabricated.

CAUTION

- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.
- The heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.
- Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor, and other refrigerant cycle parts. Your hands may suffer burns or frostbite if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear proper gloves.
- Install drain piping to ensure proper drainage. Improper drain piping may result in water leakage and property damage.
- Insulate piping to prevent condensation.
- Be careful when transporting the product.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- Do not use a charging cylinder. Using a charging cylinder may cause the refrigerant to deteriorate.
- Refrigerant R32 in the system must be kept clean, dry, and tight.
 - (a) Clean and Dry -- Foreign materials (including mineral oils such as SUNISO oil or moisture) should be prevented from getting into the system.
 - (b) Tight -- R32 does not contain any chlorine, does not destroy the ozone layer, and does not reduce the earth's protection against harmful ultraviolet radiation. R32 can contribute to the greenhouse effect if it is released. Therefore take proper measures to check for the tightness of the refrigerant piping installation. Read the chapter *Refrigerant piping* and follow the procedures.
- The indoor unit is for R32. See the catalog for outdoor models that can be connected. Normal operation is not possible when connected to non-compatible outdoor units.
- Remote controller (wireless kit) transmitting distance can be shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types). Install the indoor unit far away from fluorescent lamps as much as possible.
- Indoor units are for indoor installation only. Outdoor units can be installed either outdoors or indoors.

Safety Considerations

- Do not install the air conditioner or heat pump in the following locations:
 - Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen. Plastic parts may deteriorate and fall off or result in water leakage.
 - Where corrosive gas, such as sulfurous acid gas, is produced. Corroding copper pipes or soldered parts may result in refrigerant leakage.
 - Near machinery emitting electromagnetic waves. Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
 - Where flammable gas may leak, where there is carbon fiber, or ignitable dust suspension in the air, or where volatile flammables such as thinner or gasoline are handled. Operating the unit in such conditions can cause a fire.
- Take adequate measures to prevent the outdoor unit from being used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke, or fire. Instruct the user to keep the area around the unit clean.
- Servicing shall be performed only as recommended by the manufacturer and licensed or certified in their jurisdiction.


NOTE

- The indoor unit should be positioned where the unit and interunit wires (outdoor to indoor) are at least 3.3ft (1m) away from any televisions or radios. (The unit may cause interference with the picture or sound.) Depending on the radio waves, a distance of 3.3ft (1m) may not be sufficient to eliminate the noise.
- Dismantling the unit, treatment of the refrigerant, oil and additional parts must be done in accordance with the relevant local, state, and national regulations.
- Only use tools for R32, such as a gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, or refrigerant recovery equipment.
- If the conventional refrigerant and refrigerator oil are mixed in R32, the refrigerant may deteriorate.
- As maximum allowable pressure is 604psi (4.17MPa), the wall thickness of field-installed pipes should be selected in accordance with the relevant local, state, and national regulations.

FTN007(R32)-U

Before Installation





- Leave the unit inside its packaging until you reach the installation site. Where unpacking is unavoidable, use a sling of soft material or protective plates together with a rope when lifting, this to avoid damage or scratches to the unit. When unpacking the unit or when moving the unit after unpacking, be sure to lift the unit by holding on to the hanger bracket without exerting any pressure on other parts, especially on refrigerant piping, drain piping and other resin parts.
- Refer to the installation manual of the outdoor unit for items not described in this manual.
- Caution concerning refrigerant series R32:
The connectable outdoor units must be designed exclusively for R32.
- Check the General Safety Considerations and enter the values in the blanks on the model name plate.

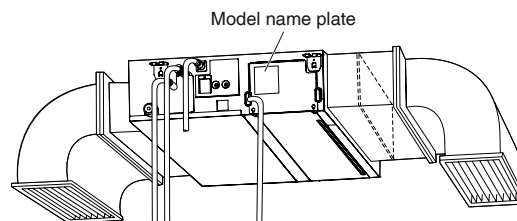

Precautions

- Do not install or operate the unit in places mentioned below.
 - Places with mineral oil, or filled with oil vapor or spray like in kitchens. (Plastic parts may deteriorate.)
 - Where corrosive gas like sulphurous gas exists. (Copper tubing and brazed spots may corrode.)
 - Where volatile flammable gas like thinner or gasoline is used.
 - Where machines generating electromagnetic waves exist. (Control system may malfunction.)
 - Where the air contains high levels of salt such as near the ocean and where voltage fluctuates a lot (e.g. in factories). Also inside vehicles or vessels.
- Do not install accessories on the casing directly. Drilling holes in the casing may damage electrical wires and consequently cause fire.
- Take off static electricity from the body when carrying out wiring and the electrical wiring box cover is removed. The electric parts may be damaged.

    Accessories

Ⓐ Clamp metal  1	Ⓑ Drain hose  1	Ⓒ Duct flange connection screw  10*	Ⓓ Fitting insulation (for liquid pipe) Thin 1
Ⓔ Fitting insulation (for gas pipe) Thick 1	Ⓕ Sealing pad (large) (Dark gray)  1	Ⓖ Sealing pad (medium) (Dark gray)  2	Ⓗ Clamp  8
Ⓙ Washer fixing plate  4	Ⓚ Wire sealing pad (small) (Gray)  2	Ⓛ Washer (for hanger bracket)  8	Ⓜ Conduit mounting plate  1
Ⓝ Operation manual  1	Ⓟ Installation manual  1	Ⓠ Warranty  1	Ⓡ General Safety Considerations  1

*The 15/18/24 class models have 18 screws.

Optional Accessories

A remote controller is required for the indoor unit.

Model name
BRC1NRV71

- The indoor unit can be switched to lower suction. (Refer to “6. In the case of changing the preset suction to underside suction, replace the chamber cover and the suction flange.” (page 7))
The side cover plate (KDBD63A160) is required in the case of wiring from the bottom for underside suction.
For installation work, refer to the instruction sheet provided with the side cover plate.

Choosing an Installation Site

R32 refrigerant is a mildly flammable refrigerant. Do not install indoor or outdoor units in areas where, in the event of a refrigerant leakage, refrigerant concentrations could exceed flammable concentrations.

Hold the unit by the 4 hanger brackets when opening the box and moving it, and do not exert pressure on to any other part, piping (refrigerant, drain, etc.), and air outlet flange.

If the temperature or humidity inside the ceiling might rise above 86°F (30°C) or RH 80%, respectively, add extra insulation to the unit.


Use polyethylene foam as insulation and make sure it is at least 3/8 inch (10mm) thick and fits inside the ceiling opening.

- Before choosing the installation site, obtain user approval.

The indoor unit should be positioned in a place where:

- 1) both the air inlet and air outlet are unobstructed,
- 2) the unit is not exposed to direct sunlight,
- 3) the unit is away from the source of heat or steam,
- 4) there is no source of machine oil vapor (this may shorten the indoor unit service life),
- 5) cool/warm air is circulated throughout the room,
- 6) no laundry equipment is nearby,
- 7) drainage can be performed without any problem,
- 8) the weight of the indoor unit can be adequately supported,
- 9) the wall and the ceiling's lower surface are not significantly tilted,
- 10) room can be left for installation and service work,
- 11) there is no risk of flammable gas leaking,
- 12) the required length of indoor-outdoor piping would not exceed the specified maximum length (see the installation manual that came with the outdoor unit for details).

[Installation Space Requirements]

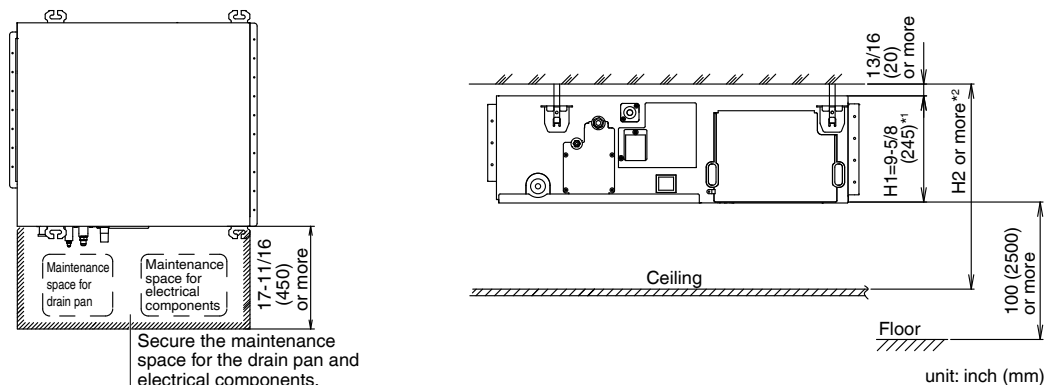

*1 Dimension H1 indicates the product height.

*2 Secure a downward slope of at least 1/100 specified in "8. Drain piping work" (page 9) and determine dimension H2.

<Failure example>

If there is an obstacle in the airflow path or proper installation space is not provided, the indoor unit will cause air volume reduction and take in air blown out of the indoor unit, thus resulting in performance degradation or turning the thermostat OFF frequently.

Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the unit or not. If there is a risk, reinforce the ceiling before installing the unit.

Indoor Unit Installation

2. Mount canvas ducts, sound absorbing material and anti-vibration rubber.

- Mount canvas ducts to the air outlet and inlet so that the vibration of the indoor unit will not be transmitted to the ducts or ceiling.
Furthermore, attach sound absorbing material (thermal insulation material) to the duct inner walls and anti-vibration rubber to the suspension bolts (refer to “10. Duct work” (page 16)).

3. The indoor unit is set to standard external static pressure.

- If external static pressure is higher or lower than the standard set value, the remote controller may be used to make on-site setting change in the external static pressure.
Refer to “Field Settings” (page 19).


4. Open installation holes (in the case of installation onto the existing ceiling).

- Open the installation holes on the ceiling of the installation location, and work on the refrigerant piping, drain piping, remote controller wiring, and wiring between the indoor and outdoor units to the piping connection port and wiring connection port of the indoor unit (refer to each piping and wiring procedure items).
- Ceiling framework reinforcement may be required in order to keep the ceiling horizontal and prevent ceiling vibration after opening the ceiling holes. For details, consult your building and upholstery work contractors.

5. Installing the suspension bolts


(Use either a M8-M10 size bolt or the equivalent)
Use a hole-in anchor for existing ceilings, and a sunken insert, sunken anchor or other field supplied parts for new ceilings to reinforce the ceiling to bear the weight of the unit.
Adjust clearance (2-4 inch (50-100mm)) from the ceiling before proceeding further.

- All the above parts are field supplied.

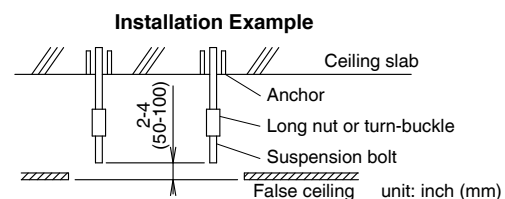

6. In the case of changing the preset suction to underside suction, replace the chamber cover and the suction flange.

- Remove the suction flange and chamber cover.
- Replace the suction flange and the chamber cover.

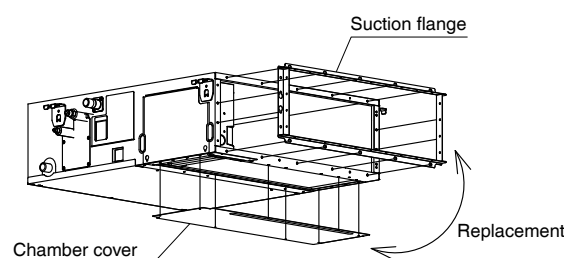

CAUTION

- Secure a sufficient maintenance space for the drain pan and electrical components before installing the indoor unit.
- Secure a sufficient maintenance space for the filter chamber, and peripheral components before installing the indoor unit.

7. Installing the indoor unit

When installing optional accessories, read also the installation manual of the optional accessories. Depending on the field conditions, it may be easier to install optional accessories before the indoor unit is installed.


As for the parts to be used for installation work, be sure to use the provided accessories and specified parts designated by Daikin.

1) Install the indoor unit temporarily.

- Attach the hanger bracket to the suspension bolt. Be sure to fix it securely by using a nut and (L) washer from the upper and lower sides of the hanger bracket.

If the (J) washer fixing plate is used, the upper side (L) washer may be protected from falling off.


Securing the hanger bracket

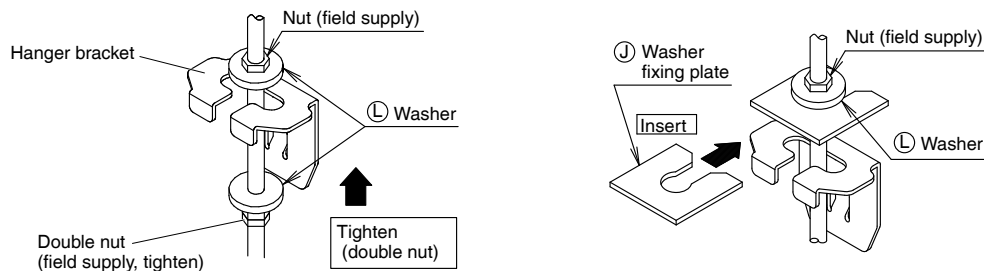

- Keep the air outlet covered with a protective sheet to prevent weld spatter and other foreign materials from entering the indoor unit and damaging the resin drain pan.
(If holes or cracks are generated in the resin drain pan, water can leak.)

2) Adjust the height of the unit.

3) Check the unit is horizontally level.

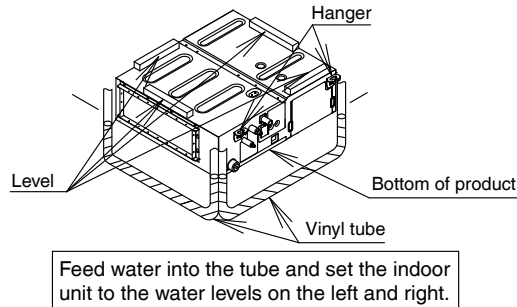

4) Remove the (J) washer fixing plate used for preventing the (L) washer from dropping and tighten the upper side nut.

⚠ CAUTION

- **Install the indoor unit leveled.**

If the indoor unit is inclined and the drain piping side gets high, it may cause malfunction of float switch and result in water leakage.

- **Attach nuts on the upper and lower side of hanger.**

If there is no upper nut and the lower nut is over-tightened, the hanger and the top plate will deform and cause abnormal sound.

- **Do not insert materials other than that specified into the clearance between the hanger and the (L) washer for hanger bracket.**
Unless the washers are properly attached, the suspension bolts may come off from the hanger.

⚠ WARNING

The indoor unit must be securely installed on a place that can withstand the mass.

If the strength is insufficient, the indoor unit may fall down and cause injuries.

Indoor Unit Installation



8. Drain piping work

⚠ CAUTION


- Water pooling in the drainage piping can cause the drain to clog.
- Do not connect the drain piping directly to sewage pipes that smell of ammonia. The ammonia in the sewage might enter the indoor unit through the drain pipes and corrode the heat exchanger.
- Keep in mind that the drain pipe becomes blocked if water collects on it.
- Do not tighten the (A) clamp metal with the torque more than the specified value.
The (B) drain hose, the socket or the (A) clamp metal may be damaged.

1. Install of drain piping



- Install the drain piping as shown in the figure and take measures against condensation. Improperly rigged piping could lead to leaks and eventually wet furniture and belongings.
- Keep piping as short as possible and slope it downwards at a gradient of at least 1/100 so that air may not remain trapped inside the pipe.
- Select the piping diameter equal to or larger than (except for riser) that of the connection piping (polyvinyl chloride piping, nominal diameter 1 inch (25mm), outside diameter 1-1/4 inch (32mm)).
- If the drain hose cannot be sufficiently set on a slope, refer to “**Precautions for drain raising piping**” (page 10).
- To keep the drain hose from sagging, space hanger bracket every 40-60 inch (1000-1500mm).

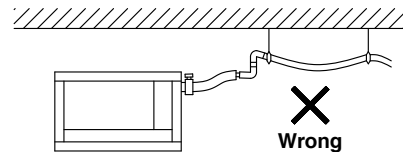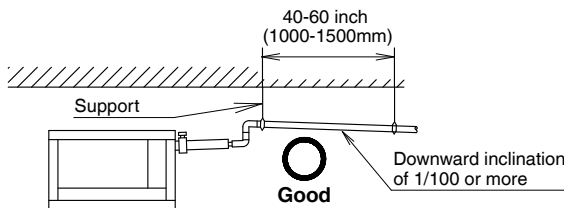

- Make sure to use the attached (B) drain hose and the (A) clamp metal.
Insert the (B) drain hose into the drain socket up to the point where the socket diameter becomes larger. Put the (A) clamp metal to the taped hose end and tighten the (A) clamp metal with torque 0.89~1.11 lbf • ft (120~150 N•cm).

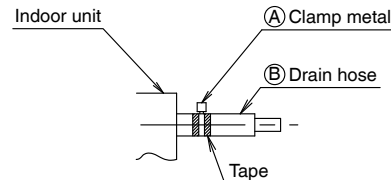


- Wrap the vinyl tape around the end of the (A) clamp metal so that the (F) sealing pad (Large) to be used at the next process may not be damaged with the clamp end or bend the tip of the (A) clamp metal inward as shown.

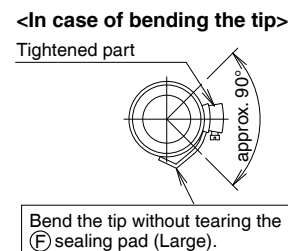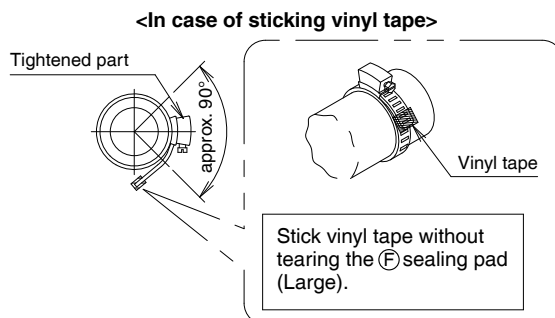


Precautions for drain raising piping

- The maximum height of the drain riser is 26-9/16 inch (675mm). Since the drain pump mounted on this indoor unit is a high head type, from the characteristic point of view, the higher the drain riser the lower the draining noise. Therefore, the drain riser of 11-13/16 inch (300mm) or higher is recommended.
- For upward drain piping, keep the horizontal piping distance of 11-13/16 inch (300mm) or less between the drain socket root to the drain riser.

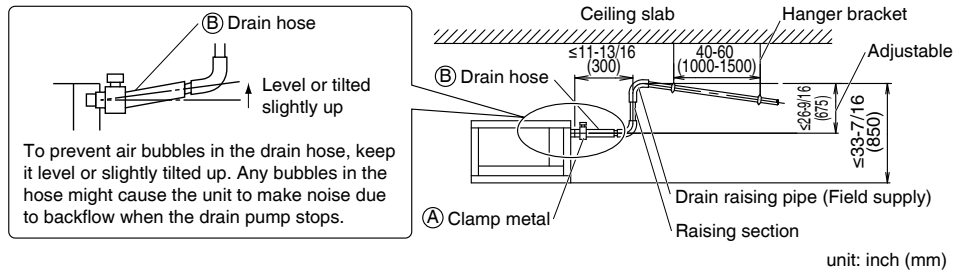

- To ensure no excessive pressure is applied to the included (B) drain hose, do not bend or twist the hose when installing as it could cause leakage.
- If converging multiple drain pipes, install according to the procedure shown below.

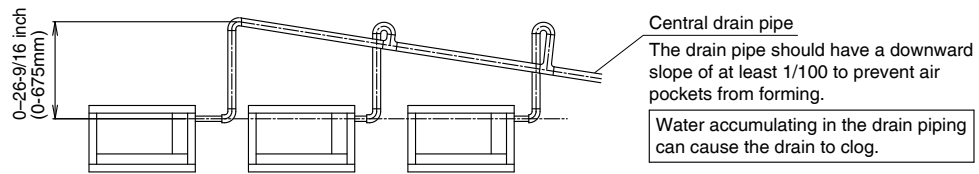


Select converging drain pipes with gauges is suitable for the operating capacity of the unit.

- Positioning the upward drain piping at an angle may cause float switch malfunction and lead to water leakage.
- While replacing with new indoor unit, use the attached new (B) drain hose and the (A) clamp metal. If an old drain hose or a clamp metal is used, it may cause water leakage.

2. After piping work is finished, check if drainage flows smoothly

When electric wiring work is finished

- Gradually pour 1/4 gal of water from the inspection port at the bottom of the drain socket on the left side of the drain socket into the drain pan giving caution to avoid splashing water on the electric components such as drain pump and confirm drainage by operating the indoor unit under cooling mode according to **Field settings**.

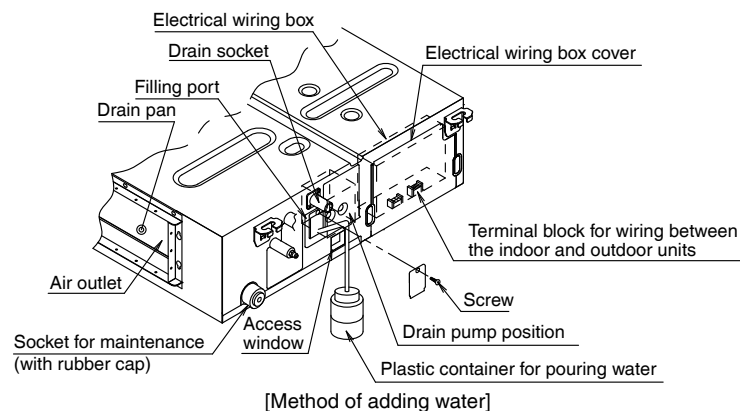

Indoor Unit Installation

When electric wiring work is not finished

- The electric wiring works (including grounding) must be carried out by a qualified electrician.
- If a qualified person is not present, after the electric wiring work is finished, check the drainage according to the method specified in **[When the electric wiring work is finished]**.
 1. Open the electrical wiring box cover and connect the ground wiring to the ground terminal.
 2. Make sure the electrical wiring box cover is closed before turning on the power supply.
 - Throughout the whole process, carry out the work giving caution to the wiring around the electrical wiring box so that the connectors may not come off.
 3. Gradually pour 1 litre of water from the air outlet on the left side of the drain socket into the drain pan giving caution to avoid splashing water on the electric components such as drain pump.
 4. When the power supply is turned on, the drain pump will operate. Drainage can be checked at the transparent part of the drain socket.


(The drain pump will automatically stop after 10 minutes.)

The drainage of water can be confirmed with water level change in the drain pan through the access window.

 - Do not connect the drain piping directly to the sewage that gives off ammonia odor.
 - The ammonia in the sewage may go through the drain piping and corrode the heat exchanger of the indoor unit.
 - Do not apply external force to the float switch. (It may result in malfunction)
 - Do not touch the drain pump.
 - Touching the drain pump may cause electric shock.
 5. Turn off the power supply after checking drainage, and remove the power supply wiring.
 6. Attach the electrical wiring box cover as before.

3. Sweating may occur and result in water leakage. Therefore, make sure to insulate the following 2 locations (drain piping that laid indoors and drain sockets).

- Use the provided (F) sealing pad (large), and perform the thermal insulation of the (A) clamp metal and (B) drain hose after checking the drainage of water.

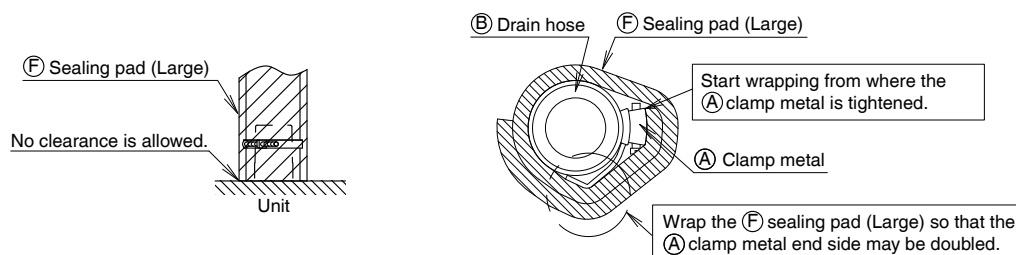

9. Wiring

1. General instructions

- Make certain that all electric wiring work is carried out by qualified personnel according to the applicable legislation and this installation manual, using a separate dedicated circuit. Insufficient capacity of the power supply circuit or improper electrical construction may lead to electric shock or a fire.
- Make sure to install a ground fault circuit interrupter. Failure to do so may cause electric shock and a fire.
- Do not turn on the power supply (branch switch, branch overcurrent circuit breaker) until all the works are finished.
- Multiple number of indoor units are connected to one outdoor unit. Name each indoor unit as A-unit, B-unit and the like. When these indoor units are wired to the outdoor unit, always wire the indoor unit to the terminal indicated with the same symbol on the terminal block. If the wiring and the piping are connected to the different indoor units and operated, it will result in malfunction.
- Make sure to ground the air conditioner. Grounding resistance should be according to applicable legislation.
- Do not connect the ground wiring to gas or water pipings, lightning conductor or telephone ground wiring.
 - Gas piping Ignition or explosion may occur if the gas leaks.
 - Water piping Hard vinyl tubes are not effective grounds.
 - Lightning conductor or telephone ground wiring Electric potential may rise abnormally if struck by a lightning bolt.
- For electric wiring work, refer to also the "WIRING DIAGRAM" attached to the electrical wiring box cover.
- Carry out wiring between the outdoor units, indoor units and the remote controllers according to the wiring diagram.
- Carry out installation and wiring of the remote controller according to the "installation manual" attached to the remote controller.
- Do not touch the Printed Circuit Board assembly. It may cause malfunction.

⚠ WARNING

- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electric shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

⚠ CAUTION

- When clamping wiring, use the included clamping material to prevent outside pressure being exerted on the wiring connections and clamp firmly. When doing the wiring, make sure the wiring is neat and does not cause the electrical wiring box cover to stick up, then close the cover firmly.
- Outside the unit, separate the low voltage wiring (remote controller wiring) and high voltage wiring (wiring between units, ground, and other power wiring) at least 2 in. so that they do not pass through the same place together. Proximity may cause electrical interference, malfunctions, and breakage.

2. Wiring example


For the wiring of outdoor units, refer to the installation manual attached to the outdoor units.

Confirm the system type.

- **Multi system:** 2 through 5 (The number of connectable units will vary according to model) indoor units connect to 1 outdoor unit. The indoor unit is controlled by remote controller connected to each indoor unit.

NOTE

1. All transmission wiring except for the remote controller wires is polarized and must match the terminal symbol.
2. In case a shielding wire is to be used, connect a shielded portion with the  of a remote controller terminal block. (Also, connect the ground for the remote control to a grounded metal part.)

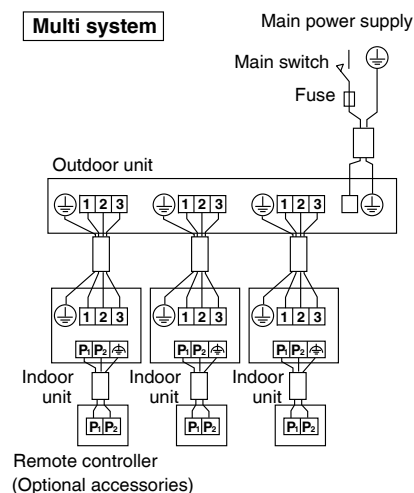

Indoor Unit Installation

3. Specification for field wire

	Wire	Size	Length
Wiring between units	Recommend stranded and shielded. Local code supersedes recommendation.	AWG 14	—
Remote controller wiring	Sheathed (2 wire)	AWG 18 - 16	Max. 1640ft (500m)*
Wiring to ground terminal	Recommend stranded and shielded. Local code supersedes recommendation.	—	—


* This will be the total extended length in the system when doing group control.

4. Wiring connection method

⚠ CAUTION

Precautions to be taken for wiring

- Recommend stranded cable for interunit wiring. Local code always supersedes recommendation.
- For stranded wires, make sure to use the round crimp-style terminal for connection to the power supply terminal block. Place the round crimp-style terminals on the wires up to the covered part and secure in place.
- If solid core wire must be used, be sure to curl the end of the lead. Improper work may cause heat and fire.

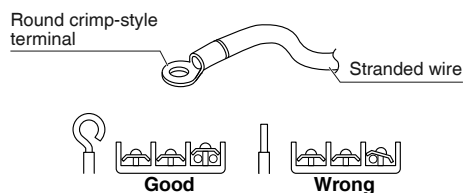

Tightening torque for the terminal blocks

- Use the correct screwdriver for tightening the terminal screws. If the blade of screwdriver is too small, the head of the screw might be damaged, and the screw will not be properly tightened.
- If the terminal screws are tightened too hard, screws might be damaged.
- Refer to the table below for the tightening torque of the terminal screws.


unit: lbf • ft (N • m)

	Tightening torque
Terminal block for remote controller (6P)	0.58 - 0.72 (0.79 - 0.98)
Terminal block for power supply (4P)	0.87 - 1.06 (1.18 - 1.44)


⚠ WARNING

- When wiring, form the wirings orderly so that the electrical wiring box cover can be securely fastened. If the electrical wiring box cover is not in place, the wirings may come out or be sandwiched by the box and the lid and cause electric shock or a fire.


1) Remove the electrical wiring box cover.

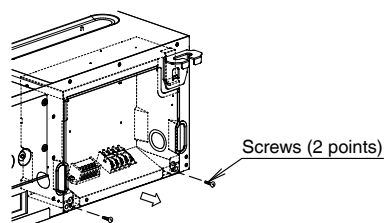


2) Attach the conduit to the (M) conduit mounting plate.

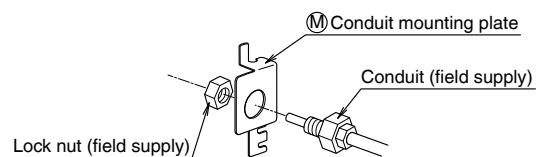


- Attach the (K) wire sealing pad (small) to the conduit, the wiring between the indoor and outdoor units, and the ground wiring.

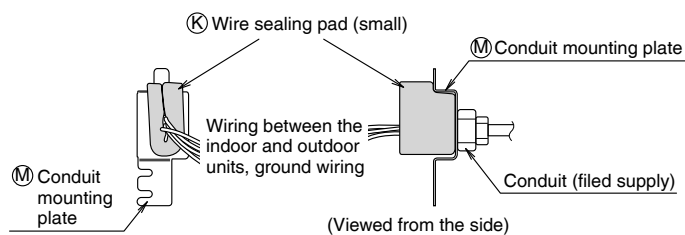

- Loosen the screws (2 points) in part A.

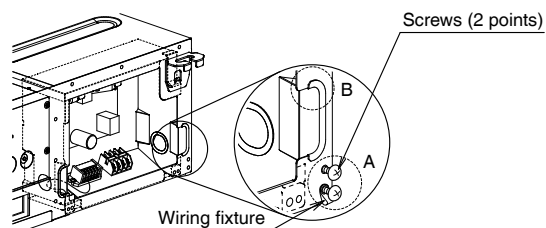


- Insert the hook part of the (M) conduit mounting plate into part B and secure the (M) conduit mounting plate with the screws loosened (2 points).

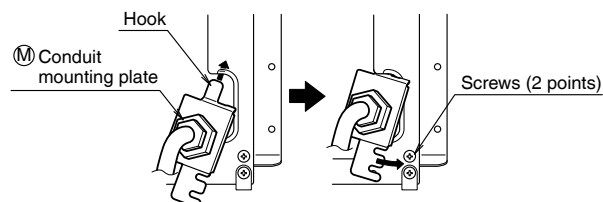

NOTE


Remove the wiring fixture if you have difficulty performing this step.

3) Connect the wiring into the electrical wiring box through the wiring intake beside the electrical wiring box.

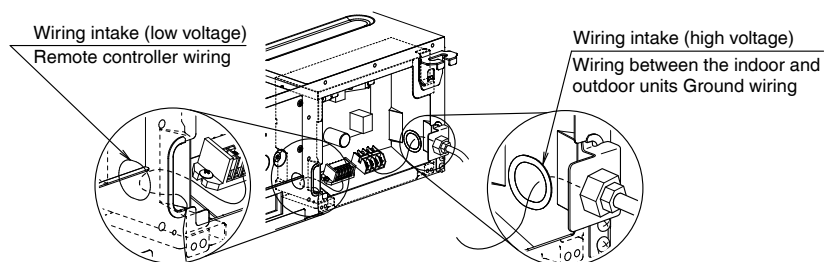

Indoor Unit Installation

4) Follow the instructions below and perform wiring in the electrical wiring box.

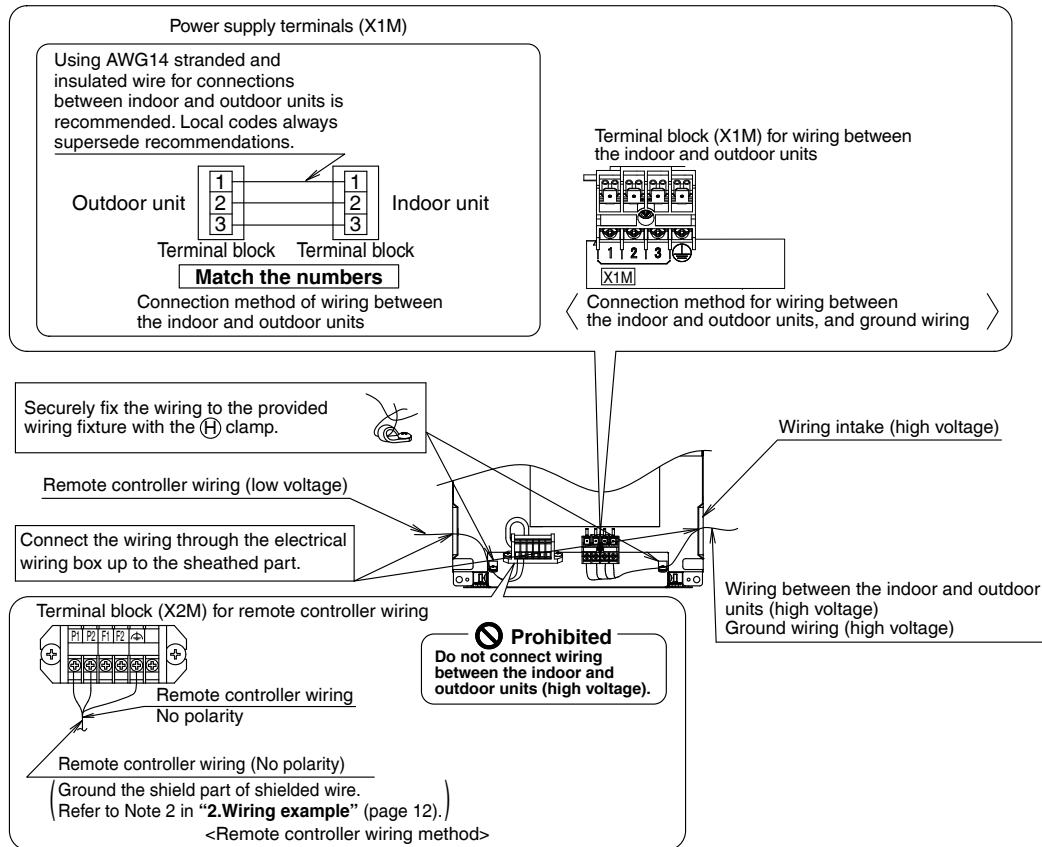


NOTE

Secure the wiring between the wiring intake and conduit with the (H) clamp so that the wiring will not become loose.


5) Mount the electrical wiring box cover and wrap the (K) wire sealing pad (small) so that the wiring through hole will be covered by the sealing pad.

- Seal the clearance around the wirings with putty or insulating material (field supply). (If insects and small animals get into the indoor unit, short-circuiting may occur inside the electrical wiring box.)

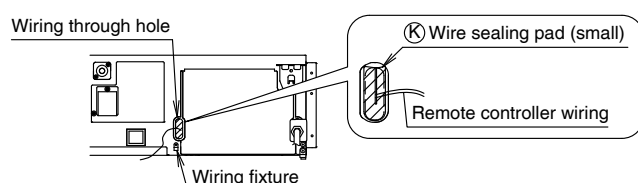

6) Securely fix each wiring with the provided (H) clamp material.

- See the installation manual supplied with the outdoor unit.

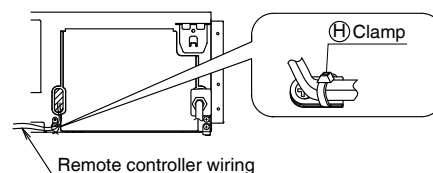


10. Duct work

Pay the utmost attention to the following items and conduct the duct work.

- Check that the duct is not in excess of the setting range of external static pressure for the unit. (Refer to the technical datasheet for the setting range.)
- Attach a canvas duct each to the air outlet and air inlet so that the vibration of the equipment will not be transmitted to the duct or ceiling.
Use a sound-absorbing material (insulation material) for the lining of the duct and apply vibration insulation rubber to the suspension bolts.
- At the time of duct welding, perform the curing of the duct so that the sputter will not come in contact with the drain pan for the filter.
- If the metal duct passes through a metal lath, wire lath, or plate of a wooden structure, separate the duct and wall electrically.
- Be sure to heat insulate the duct for the prevention of dew condensation. (Material: Glass wool or styrene foam; Thickness: 1 inch (25mm))
- Be sure to attach the field supply air filter to the air inlet of the unit or field supply inlet in the air passage on the air suction side. (Be sure to select an air filter with a duct collection efficiency of 50 weight percent.)
- Explain the operation and washing methods of the locally procured components (i.e., the air filter, air inlet grille, and air outlet grille) to the user.
- Locate the air outlet grille on the indoor side for the prevention of drafts in a position where indirect contact with people.
- The air conditioner incorporates a function to adjust the fan to rated speed automatically. (Field settings)
Therefore, do not use booster fans midway in the duct.

Connection method of ducts on air inlet and outlet sides.

- Connect the field supply duct in alignment with the inner side of the flange.
- Connect the flange and unit with the © duct flange connection screw.
- Wrap aluminium tape around the flange and duct joint in order to prevent air leakage.

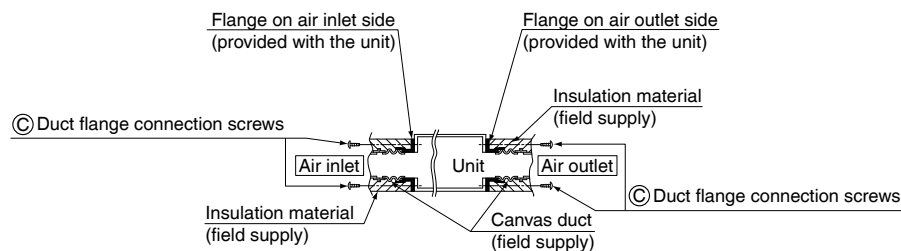

CAUTION

Connect the flange and unit with the © duct flange connection screw regardless of whether the duct is connected to the air inlet side.

Refrigerant Piping Work

Refer also to the installation manual for the outdoor unit.

⚠ WARNING

- Do not apply mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the service life of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a dryer to this R32 unit in order to guarantee its service life.
- The drying material may dissolve and damage the system.
- Incomplete flaring may result in refrigerant gas leakage.

Execute thermal insulation work completely on both sides of the gas and the liquid piping. Otherwise, a water leakage can result sometimes.

 
For gas piping, use insulation material of which heat resistant temperature is not less than 230°F (110°C).

Also, in cases where the temperature and humidity of the refrigerant piping sections might exceed 86°F (30°C) or RH80%, reinforce the refrigerant insulation. (13/16 inch (20mm) or thicker) Condensation may form on the surface of the insulating material.

Before refrigerant piping work, check which type of refrigerant is used. Proper operation is not possible if the types of refrigerant are not the same.

1. Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward, so that the filings do not enter the pipe.



- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring has been done correctly.

Flaring

Set exactly at the position shown below.

Flare tool for R32 or R410A	Conventional flare tool	
	Clutch-type	Wing-nut type (Imperial-type)
A	0-0.020 inch (0-0.5mm)	0.039-0.059 inch (1.0-1.5mm)

Check

The flare's inner surface must be flaw-free.

The pipe end must be evenly flared in a perfect circle.

When flaring, do not over-tighten and crack.


Make sure that the flare nut is fitted.

2. Refrigerant piping

⚠ CAUTION

- Use the flare nut fixed to the main unit. (This is to prevent the flare nut from cracking as a result of deterioration over time.)
- Use a torque wrench when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.
- Excessive tightening of the flare nut can result in the flare nut cracking in the long term, leading to gas leakage.
- Do not have oil adhere to the screw fixing part of resin parts. If oil adheres, it may weaken the strength of screwed part.


- For refrigerant pipe connections, align the center of the flare and the union, tighten the flare nut 3 to 4 turns by hand, and then use a torque wrench and a spanner to firmly tighten to the specified torque.

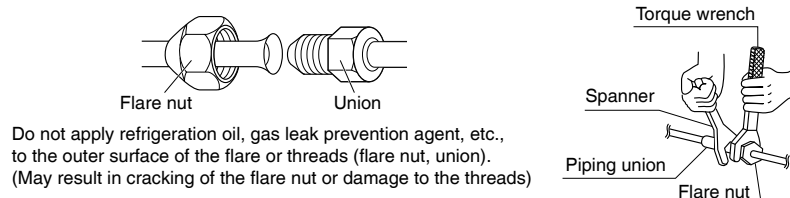

	Piping size	Flare nut tightening torque
Gas side	O.D. 3/8 inch (9.5mm)	24-1/8–29-1/2lbf • ft (32.7-39.9N • m)
	O.D. 1/2 inch (12.7mm)	36-1/2–44-1/2lbf • ft (49.5-60.3N • m)
	O.D. 5/8 inch (15.9mm)	45-5/8–55-5/8lbf • ft (61.8-75.4N • m)
Liquid side	O.D. 1/4 inch (6.4mm)	10-1/2–12-3/4lbf • ft (14.2-17.2N • m)

Cautions on piping handling


- Protect the open end of the pipe from dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

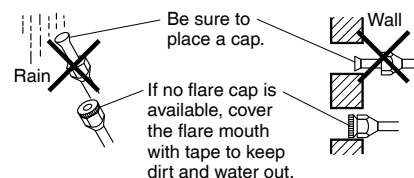

Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.024 to 0.030Btu/ft·h·°F (0.035 to 0.045kcal/mh·°C))
Be sure to use insulation that is designed for use with HVAC Systems.
- ACR Copper pipe only.

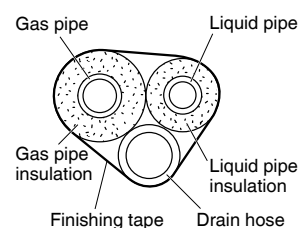


- Be sure to insulate both the gas and liquid piping and observe the insulation dimensions as below.

	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 3/8 inch (9.5mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 15/32-19/32 inch (12-15mm)	13/32 inch (10mm) Min.
	O.D. 1/2 inch (12.7mm)	1-9/16 inch (40mm) or more		I.D. 9/16-5/8 inch (14-16mm)	
	O.D. 5/8 inch (15.9mm)	1-15/16 inch (50mm) or more	0.039 inch (1.0mm) (C1220T-O)	I.D. 5/8-13/16 inch (16-20mm)	
Liquid side	O.D. 1/4 inch (6.4mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 5/16-13/32 inch (8-10mm)	

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.
- Make absolutely sure to execute thermal insulation works on the pipe-connecting section, after checking for gas leakage, by thoroughly studying the following figures and using the included thermal insulating materials (D) fitting insulation and (E) fitting insulation. Fasten both ends with the (H) clamps.
- Make sure to bring the seam of (D) fitting insulation and (E) fitting insulation to the top.

Piping insulation procedure

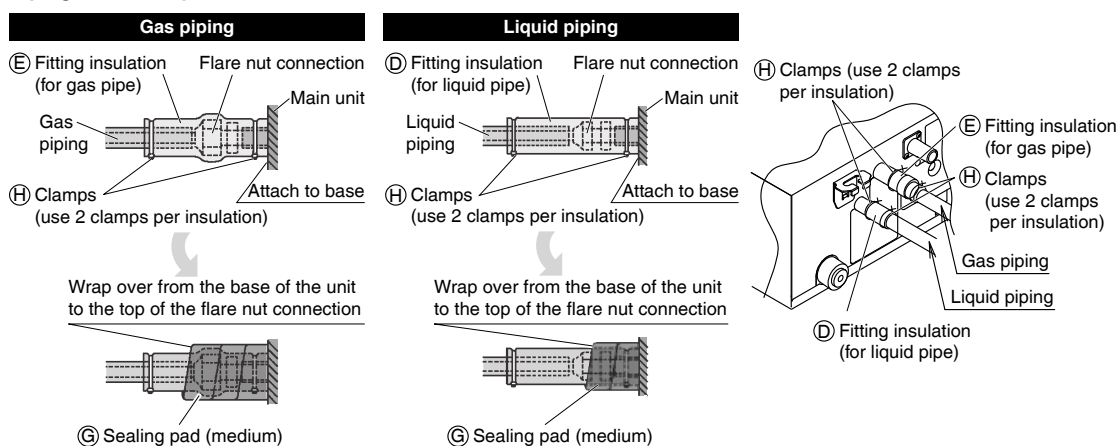

CAUTION

Be sure to insulate any field piping all the way to the piping connection inside the unit. Any exposed piping may cause condensation or burns if touched.

Field Settings

CAUTION

Before carrying out field setting, check the items mentioned in “2. Test items” (page 22).

- Check if all the installation and piping works for the air conditioner are completed.
- Check that the outside panel and piping cover of the indoor and outdoor units are closed.

After turning on the power supply, carry out field setting from the remote controller according to the installation state.

- The settings shown by  in the following tables indicate those when shipped from the factory.
- Carry out setting at 3 places, “Mode No.”, “FIRST CODE No.” and “SECOND CODE No.”.
- The method of setting procedure and operation is shown in the installation manual attached to the remote controller.
- Ask the user to keep the manual attached to the remote controller together with the operation manual.
- Do not carry out settings other than those shown in the table.

NOTE

- Though setting of “Mode No.” is carried out as a group, if you intend to carry out individual setting by each indoor unit or confirmation after setting, carry out setting with the Mode No. shown in the parenthesis ().

1. Settings for external static pressure

Make settings in either method (a) or method (b).

(a) Make settings with Air volume automatic adjustment function.

“Air volume automatic adjustment” function: The air volume is adjusted to the rated air volume automatically.

CAUTION

- Be sure to check that the external static pressure is within the specification range before making settings. The external static pressure will not be automatically adjusted and air volume insufficiency or water leakage may result if the external static pressure is outside the range. (Refer to the technical document for the setting range of external static pressure.)

- 1) Check that the electrical wiring and duct work have been completed.
(If the closing damper is set midway, be sure to check that the damper is opened. Furthermore, check that the air passage on the suction side is provided with an air filter (field supply)).
- 2) If air conditioner has more than one air outlet and air inlet, be sure to make adjustments so that the air volume ratio of each air outlet and the corresponding air inlet will conform to the designed air volume ratio.
In that case, set the operating mode to “Fan”. (In the case of changing the air volume, press Fan Speed button on the remote controller and change the current selection to “High”, “Medium”, or “Low”.)
- 3) Make settings to adjust the air volume automatically.
After setting the operating mode to “Fan”, set the air conditioner to field setting mode with the operation of the air conditioner stopped. Select Mode No. [21] (11 in the case of batch settings), select FIRST CODE No. “7”, and set the SECOND CODE No. to “03”.
Return to the “Basic screen” and press On/Off button.
The operation lamp is lit, and the indoor unit will go into fan operation for air volume automatic adjustments (at which time, do not adjust the opening of the air outlet or inlet). The air volume adjustments will automatically terminate approximately 1 to 15 minutes after the indoor unit comes into operation, and the operation lamp will be OFF and the indoor unit will come to a stop.

Air volume adjustment

Setting content	Mode No.	FIRST CODE No.	SECOND CODE No.
OFF	11 (21)	7	01
Air volume adjustment completion			02
Air volume adjustment start			03

⚠ CAUTION

- If airflow pathway changes, such as duct and air outlet changes, are made after air volume adjustments, be sure to make "Air volume automatic adjustment" again.
- If airflow pathway changes, such as duct and air outlet changes, are made after "Test operation and Testing" (page 21) or air conditioner relocation, contact your dealer.

(b) Select external static pressure with the remote controller.

Check with Mode No. [21] per indoor unit that the SECOND CODE No. for the above "Air volume adjustment" is set to "01" (OFF). (The SECOND CODE No. is factory set to "01" (OFF).)

Change the SECOND CODE No. by referring to the table below according to the external static pressure of the duct to be connected.

External static pressure

For 07/09/12 class

Setting content	Mode No.	FIRST CODE NO.	SECOND CODE NO.
0.12 in. WG (30Pa)	13 (23)	6	03
0.16 in. WG (40Pa)			04
0.20 in. WG (50Pa)			05
0.24 in. WG (60Pa)			06
0.28 in. WG (70Pa)			07
0.32 in. WG (80Pa)			08
0.36 in. WG (90Pa)			09
0.40 in. WG (100Pa)			10
0.44 in. WG (110Pa)			11
0.48 in. WG (120Pa)			12
0.52 in. WG (130Pa)			13
0.56 in. WG (140Pa)			14
0.60 in. WG (150Pa)			15

For 15/18/24 class

Setting content	Mode No.	FIRST CODE NO.	SECOND CODE NO.
0.20 in. WG (50Pa)	13 (23)	6	05
0.24 in. WG (60Pa)			06
0.28 in. WG (70Pa)			07
0.32 in. WG (80Pa)			08
0.36 in. WG (90Pa)			09
0.40 in. WG (100Pa)			10
0.44 in. WG (110Pa)			11
0.48 in. WG (120Pa)			12
0.52 in. WG (130Pa)			13
0.56 in. WG (140Pa)			14
0.60 in. WG (150Pa)			15

2. Setting for options

- For settings for options, see the installation manual provided with the option.

3. Setting air filter sign

- Remote controllers are equipped with liquid crystal display air filter signs to display the time to clean air filters.
- Change the SECOND CODE NO. depending on the amount of dirt or dust in the room.

AIR FILTER CLEANING TIME INDICATOR lamp display interval

Setting content	Contamination	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Approx. 2500 hrs	Contamination-light	10 (20)	0	01
Approx. 1250 hrs	Contamination-heavy			02

AIR FILTER CLEANING TIME INDICATOR lamp display

Setting content	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Display ON	10 (20)	3	01
Display OFF*			02

* Use "Display OFF" setting when cleaning indication is not necessary such as the case of periodical cleaning being carried out.

Test operation and Testing

After finishing the construction of refrigerant piping, drain piping, and electric wiring, conduct test operation accordingly to protect the unit.

1. Test operation and testing

⚠ CAUTION

After test operation is completed, check the items mentioned “Items to be checked at time of delivery” (page 23).
If the interior finish work is not completed when the test operation is finished, for protection of the air conditioner, ask the user not operate the air conditioner until the interior finish work is completed.
If the air conditioner is operated, the inside of the indoor units may be polluted by substances generated from the coating and adhesives used for the interior finish work and cause water splash and leakage.

Test operation should be carried out in either COOL or HEAT operation.

1-1. Measure the supply voltage and make sure that it is within the specified range.

1-2. In COOL operation, select the lowest programmable temperature;

in HEAT operation, select the highest programmable temperature.


1-3. Carry out the test operation following the instructions in the operation manual to ensure that all functions and parts are working properly.

- To protect the air conditioner, restart operation is disabled for 3 minutes after the system has been turned off.

1-4. After test operation is complete, set the temperature to a normal level (78°F to 82°F (26°C to 28°C) in COOL operation, 68°F to 75°F (20°C to 24°C) in HEAT operation).

- When operating the air conditioner in COOL operation in winter, or HEAT operation in summer, set it to the test operation mode using the following method.

- 1) Set to COOL or HEAT operation using the remote controller.
- 2) Press and hold Cancel button for 4 seconds or longer. Service settings menu is displayed.
- 3) Select **Test Operation** in the service settings menu, and press Menu/OK button. Basic screen returns and “Test Operation” is displayed at the bottom.
- 4) Press On/Off button within 10 seconds, and the test operation starts.
Monitor the operation of the indoor unit for a minimum of 10 minutes. During test operation, the indoor unit will continue to cool/heat regardless of the temperature setpoint and room temperature.
 - In the case of above-mentioned procedures 3) and 4) in reverse order, test operation can start as well.
- 5) Press and hold Cancel button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
- 6) Select **Test Operation** in the service settings menu, and press Menu/OK button. Basic screen returns and normal operation is conducted.
 - Test operation will stop automatically after 15-30 minutes. To stop the operation, press On/Off button.

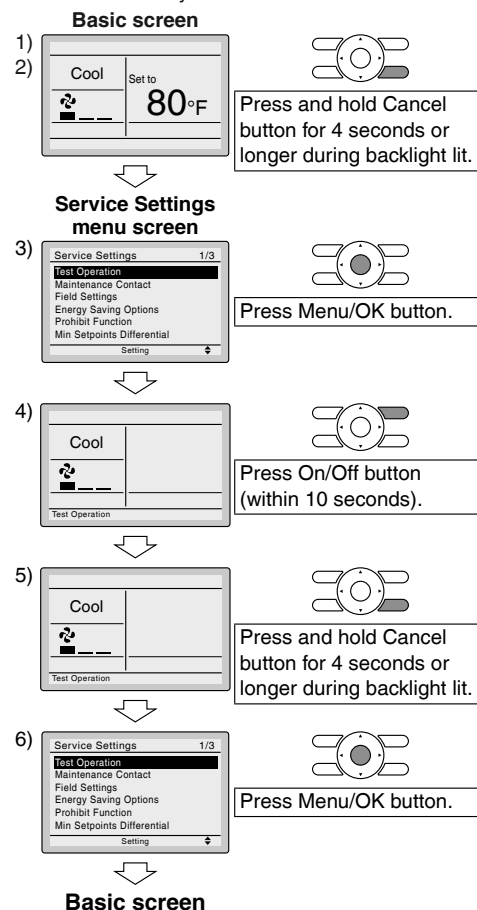

Precautions

Refer to “3. How to diagnose for malfunction” (page 24) if the unit does not operate properly.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed securely.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
The power supply voltage corresponds to that shown on the name plate.	No operation or burn damage	
System is properly grounded.	Electrical leakage	
Only specified wires are used for all wiring, and all wires are connected correctly.	No operation or burn damage	
Indoor or outdoor unit's air inlet or air outlet are unobstructed.	Incomplete cooling/heating function	
Refrigerant piping length and additional refrigerant charge are noted down.	The refrigerant charge in the system is not clear	
Pipes and wires are connected to the corresponding connection ports / terminal blocks for the connected unit.	No cooling/heating	
Stop valves are opened.	Incomplete cooling/heating function	
The external static pressure is set correctly.	Incomplete cooling/heating function or water leakage	

Test operation and Testing

Items to be checked at time of delivery

Also review the “**Precautions**” (page 3)

Test items	Check
The electrical wiring box cover and air filter are attached.	
I explained about operations while showing the operation manual to the user.	
Field setting has been carried out. (if necessary)	
It has been confirmed that the cool air discharges during the COOL operation and the warm air discharges during the HEAT operation. The indoor unit does not make unpleasant sounds of air discharge.	
I explained the set fan speed to the user (if the fan speed was set at thermostat OFF).	
I handed the operation manual over to the user.	
I have checked that there is no generation of abnormal noise (i.e., noise resulting from contamination or missing parts).	
The printed circuit board switch is not on the emergency (EMG.) side. The switch is factory set to the normal (NORM.) side.	
I have checked the operation of the optional accessory and made field settings as needed (if an optional accessory is in use).	
I have explained failure examples of “ 3.How to diagnose for malfunction ” (page 24).	
I explained the power supply status (power supply ON/OFF) to the user.	

Points for explanation about operations

The items with ⚠ WARNING and ⚠ CAUTION marks in the operation manual are the items pertaining to possibilities for bodily injury and material damage in addition to the general usage of the product. Accordingly, it is necessary that you make a full explanation about the described contents and also ask your user to read the operation manual.

Note to the installer

Be sure to instruct user how to properly operate the unit (especially cleaning the filter, operating different functions, and adjusting the temperature) by having them carry out operations while looking at the manual.

⚠ To the operator carrying out test operation

After test operation is completed, before delivering the air conditioner to the user, confirm that the electrical wiring box cover is closed.

In addition, explain the power supply status (power supply ON/OFF) to the user.

- If the test operation is completed with no malfunction code shown on the remote controller, the system is confirmed to be ready for activating safety measures when refrigerant is detected by the built-in refrigerant sensor.
- When the remote controller operation lamp blinks, it shows that something is abnormal.
Check the malfunction codes on the remote controller (refer to “**4. Malfunction code**” (page 24)).
Particularly, if the indication is one of those shown in the table, it may be an error in the electrical wiring or the power supply is disconnected. Therefore, recheck wiring.

Remote controller indication	Details
“U4” turns on	• The power supply to the outdoor unit is not connected. • The power supply wiring to the outdoor unit is not carried out. • The transmission wiring and the remote controller wiring and FORCED OFF wiring are connected wrongly. • The transmission wiring is disconnected.
No indication	• The power supply to the indoor unit is not connected. • The power supply wiring to the indoor unit is not carried out. • The remote controller wiring and the transmission wiring and FORCED OFF wiring are connected wrongly. • The remote controller wiring is disconnected.

3. How to diagnose for malfunction

- If the air conditioner does not operate normally after installing the air conditioner, a malfunction shown in the table below may happen.

Remote controller display	Description
No display	• Power outage, power voltage error or open-phase • Incorrect wiring (between indoor and outdoor units) • Indoor PCB assembly failure • Remote controller wiring not connected • Remote controller failure • Open fuse or tripped circuit breaker (outdoor unit)
"Checking the connection. Please stand by." *	• Indoor PCB assembly failure • Wrong wiring (between indoor and outdoor units)

* "Checking the connection. Please stand by" will be displayed for up to 90 seconds following the application of power to the indoor unit. This is normal and does not indicate a malfunction.

■ Diagnose with the display on the liquid crystal display remote controller.

When the operation stops due to a malfunction, operation lamp blinks, and the malfunction code is indicated on the liquid crystal display. In such a case, diagnose the fault contents by referring to **Error History** in the service settings menu.

In the case of group control, the unit No. is displayed so that the indoor unit with the trouble can be identified.

4. Malfunction code

- Depending on the type of indoor or outdoor unit, the malfunction code may or may not be displayed.

Malfunction code	Descriptions and measures	Remarks
A0	Refrigerant Leak Detection	
A1	Indoor Printed Circuit Board failure	
A3	Drain level abnormal	
A5	Freeze-up protection control/heating peak-cut control	
A6	Indoor fan motor overload, over current, lock	
	Indoor Printed Circuit Board connection failure	
A8	Indoor unit power supply voltage abnormal	
AJ	Capacity setting failure	Capacity setting adapter or capacity data error, or disconnection of the capacity setting adapter, failure to connect the adapter, or the capacity is not set to the data-retention IC.
C1	Transmission error between indoor Printed Circuit Board (Master) and indoor Printed Circuit Board (Slave)	
C4	Indoor heat exchanger liquid pipe temperature sensor malfunction	Abnormal stop is applied depending on the model or condition.
C5	Indoor heat exchanger condenser / evaporator temperature sensor malfunction	Abnormal stop is applied depending on the model or condition.
C9	Suction air thermistor malfunction	Abnormal stop is applied depending on the model or condition.
CH	Refrigerant Sensor disconnect or malfunction	
CJ	Remote controller air thermistor malfunction	Remote controller thermo does not function, but body thermo operation is enabled.
E1	Outdoor Printed Circuit Board failure (Outdoor unit)	
E3	High pressure switch (HPS) activated	
E5	OL (compressor overload) started	
E6	Compressor motor lock by over current (Outdoor unit)	

Test operation and Testing

Malfunction code	Descriptions and measures	Remarks
E7	Outdoor fan motor lock malfunction (Outdoor unit)	
	Outdoor fan instant overcurrent malfunction (Outdoor unit)	
E8	Input overcurrent (Outdoor unit)	
E9	Electronic expansion valve abnormality	
EA	Cooling/heating switch malfunction (Outdoor unit)	
F3	Discharge piping temperature malfunction (Outdoor unit)	
F6	High pressure control (in cooling) (Outdoor unit)	
F8	Operation halt due to compressor internal temperature abnormality	
H0	Sensor fault for inverter (Outdoor unit)	
H3	High pressure switch system abnormality	
H6	Operation halt due to faulty position detection sensor	
H7	Fan IPM temperature error	
H8	CT abnormality (Outdoor unit)	
H9	Outdoor air thermistor system malfunction (Outdoor unit)	Abnormal stop is applied depending on the model or condition.
J3	Discharge piping thermistor system malfunction (Outdoor unit)	Abnormal stop is applied depending on the model or condition.
J6	Outdoor heat exchanger distributor liquid piping thermistor malfunction (Outdoor unit)	Abnormal stop is applied depending on the model or condition.
L3	Reactor thermistor malfunction (Outdoor unit)	
L4	Overheated heat-radiating fin (Outdoor unit)	Inverter cooling failure.
L5	Instantaneous overcurrent (Outdoor unit)	The compressor engines and turbines may be experiencing a ground fault or short circuit.
P4	Heat-radiating fin thermistor malfunction (Outdoor unit)	Abnormal stop is applied depending on the model or condition.
U0	Suction piping temperature abnormal (Outdoor unit)	The refrigerant may be insufficient. Abnormal stop is applied depending on the model or condition.
U2	Power voltage malfunction (Outdoor unit)	The inverter open-phase or main circuit condenser may be malfunctioning. Abnormal stop is applied depending on the model or condition.
U4	Transmission error (between indoor and outdoor units)	Wiring error between indoor and outdoor unit. Or Indoor and outdoor Printed Circuit Board failure.
U5	Transmission error (between indoor and remote controller units)	Transmission between indoor unit and remote controller is not performed properly.
U7	Transmission error of the inverter module	
UA	Field setting error	System setting error of the simultaneous on/off multi-split type.
UE	Transmission error (between indoor unit and centralized remote controller)	
UC	Remote controller address setting error	

5. Pump down operation

Be sure to pump down when relocating or disposing of the unit.
For instructions on how to pump down, refer to the service manual.

12.2 FVXV09/12/15/18AVJUW(T)9

Contents

Safety Considerations	1	8. Installing the indoor unit	15
Accessories	3	9. Completing the pipework	16
Choosing an Installation Site	4	10. Attaching the front grille and front panel	16
1. Indoor unit	4	11. Restricting upward airflow	
2. Wireless remote controller	4	(for concealed installations etc.)	16
Indoor Unit Installation Diagram	4	Installation Tips	17
Indoor Unit Installation	5	1. When connecting to an HA system	17
1. Refrigerant piping	5	2. How to set the different addresses	18
2. Drilling a wall hole and installing wall embedded pipe ...	8	3. Pump down operation	18
3. Remove the front grille	8	4. Room temperature adjustment	19
4. Routing pipes and drain hose	10	Trial Operation and Testing	20
5. Drain piping	11	1. Attaching the titanium apatite deodorizing filter	20
6. Refrigerant piping	13	2. Trial operation and testing	21
7. Wiring	14	3. Test items	22

The pictures in this document are for illustrative purposes only.

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	Read the precautions in this manual carefully before operating the unit.
	This appliance is filled with R32.

Read these **Safety Considerations for Installation** carefully before installing an air conditioner or heat pump. After completing the installation, make sure that the unit operates properly during the startup operation.

Instruct the user on how to operate and maintain the unit. Inform users that they should store this installation manual with the operation manual for future reference.

Always use a licensed installer or contractor to install this product. Improper installation can result in water or refrigerant leakage, electric shock, fire, or explosion.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE**

Symbols:

-  **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** Indicates situations that may result in equipment or property-damage accidents only.

DANGER

- Refrigerant gas is heavier than air and replaces oxygen. A massive leak can lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death. Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.
- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerant gas may produce toxic gas if it comes into contact with fire. Exposure to this gas could cause severe injury or death.
- After completing the installation work, check that the refrigerant gas does not leak throughout the system.
- Do not install unit in an area where flammable materials are present due to risk of explosions that can cause serious injury or death.
- Safely dispose all packing and transportation materials in accordance with federal/state/local laws or ordinances. Packing materials such as nails and other metal or wood parts, including plastic packing materials used for transportation may cause injury or death by suffocation.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal.

⚠ WARNING

- Only qualified personnel licensed or certified in their jurisdiction must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in water leakage, electric shock, or fire.
- Pipe-work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.
- When installing the unit in a small room, take measures to keep the refrigerant concentration from exceeding allowable safety limits. Excessive refrigerant leaks, in the event of an accident in a closed ambient space, can lead to oxygen deficiency.
- Use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shock, fire, or the unit falling.
- Install the air conditioner or heat pump on a foundation strong enough that it can withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injury.
- Take into account strong winds, typhoons, or earthquakes when installing. Improper installation may result in the unit falling and causing accidents.
- The unit must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur.
The electrical ground circuit may consist of an appropriately sized electrical wire connecting the ground lug in the unit and control box wire to the building's electrical service panel.
Other methods of grounding are permitted if performed in accordance with the "National Electrical Code" (NEC)/ "American National Standards Institute" (ANSI)/ "National Fire Protection Association" (NFPA) 70 and local/state codes.
In CANADA, electrical grounding is to be in accordance with the Canadian Electrical Code CSA C22.1.
Failure to observe this warning can result in electrical shock that can cause personal injury or death.
- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel licensed or certified in their jurisdiction according to local, state, and national regulations. An insufficient power supply capacity or improper electrical construction may lead to electric shock or fire.
- Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
- When wiring, position the wires so that the service lid can be securely fastened. Improper positioning of the service lid may result in electric shock, fire, or the terminals overheating.
- Before touching electrical parts, turn off the unit.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Securely fasten the outdoor unit service lid. If the service lid is not installed properly, dust or water may enter the outdoor unit causing fire or electric shock.

- When installing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R32) such as air. Any presence of air or other foreign substance in the refrigerant circuit can cause an abnormal pressure rise or rupture, which may result in equipment damage and even injury.
- Do not change the setting of the protection devices. If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may occur.
- Do not use means to accelerate the defrosting process (if possible) or to clean, other than those recommended by the manufacturer.
- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Comply with national gas regulations.
- The indoor equipment and pipes shall be securely mounted and guarded such that accidental rupture of equipment cannot occur from such events as moving furniture or reconstruction activities.
- When mechanical connectors are reused indoors, sealing parts shall be renewed.
- When flared joints are reused indoors, the flared part shall be refabricated.

⚠ CAUTION

- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.
- The heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.
- Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor, and other refrigerant cycle parts. Your hands may suffer burns or frostbite if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear proper gloves.
- Install drain piping to ensure proper drainage. Improper drain piping may result in water leakage and property damage.
- Insulate piping to prevent condensation.
- Be careful when transporting the product.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- Do not use a charging cylinder. Using a charging cylinder may cause the refrigerant to deteriorate.
- Refrigerant R32 in the system must be kept clean, dry, and tight.
 - (a) Clean and Dry -- Foreign materials (including mineral oils such as SUNISO oil or moisture) should be prevented from getting into the system.
 - (b) Tight -- R32 does not contain any chlorine, does not destroy the ozone layer, and does not reduce the earth's protection against harmful ultraviolet radiation. R32 can contribute to the greenhouse effect if it is released. Therefore take proper measures to check for the tightness of the refrigerant piping installation. Read the chapter *Refrigerant piping* and follow the procedures.

Safety Considerations

- The indoor unit is for R32. See the catalog for outdoor models that can be connected. Normal operation is not possible when connected to non-compatible outdoor units.
- Remote controller (wireless kit) transmitting distance can be shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types). Install the indoor unit far away from fluorescent lamps as much as possible.
- Indoor units are for indoor installation only. Outdoor units can be installed either outdoors or indoors.
- Do not install the air conditioner or heat pump in the following locations:
 - (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen.
Plastic parts may deteriorate and fall off or result in water leakage.
 - (b) Where corrosive gas, such as sulfurous acid gas, is produced.
Corroding copper pipes or soldered parts may result in refrigerant leakage.
 - (c) Near machinery emitting electromagnetic waves.
Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
 - (d) Where flammable gas may leak, where there is carbon fiber, or ignitable dust suspension in the air, or where volatile flammables such as thinner or gasoline are handled.
Operating the unit in such conditions can cause a fire.
- Take adequate measures to prevent the outdoor unit from being used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke, or fire. Instruct the user to keep the area around the unit clean.

 
 
 
- Servicing shall be performed only as recommended by the manufacturer and licensed or certified in their jurisdiction.

NOTE

- The indoor unit should be positioned where the unit and interunit wires (outdoor to indoor) are at least 3.3 ft (1 m) away from any televisions or radios. (The unit may cause interference with the picture or sound.) Depending on the radio waves, a distance of 3.3 ft (1 m) may not be sufficient to eliminate the noise.
- Dismantling the unit, treatment of the refrigerant, oil and additional parts must be done in accordance with the relevant local, state, and national regulations.
- Only use tools for R32, such as a gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, or refrigerant recovery equipment.
- If the conventional refrigerant and refrigerator oil are mixed in R32, the refrigerant may deteriorate.
- As maximum allowable pressure is 604 psi (4.17 MPa), the wall thickness of field-installed pipes should be selected in accordance with the relevant local, state, and national regulations.

FTN007(R32)-U


Accessories

Ⓐ Mounting plate  1	Ⓑ Mounting plate fixing screw M4 × 1" (M4 × 25 mm)  5	Ⓒ Titanium apatite deodorizing filter  2 each
Ⓓ Wireless remote controller  1	Ⓔ Remote controller holder  1	Ⓕ Remote controller holder fixing screw M3 × 13/16" (M3 × 20 mm)  2
Ⓖ Dry battery AAA. LR03 (alkaline)  2	Ⓗ Insulation sheet  2	Ⓙ Operation manual Ⓚ Installation manual Ⓛ Warranty Ⓜ General Safety Considerations 1 each

Choosing an Installation Site

R32 refrigerant is a mildly flammable refrigerant. Do not install indoor or outdoor units in areas where, in the event of a refrigerant leakage, refrigerant concentrations could exceed flammable concentrations.

- Before choosing the installation site, obtain user approval.
- Check the General Safety Considerations and enter the values in the blanks on the indication label.

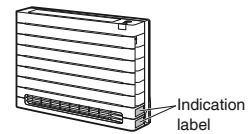


1. Indoor unit

- The indoor unit should be positioned in a place where:
 - 1) the restrictions on the installation requirements specified in “Indoor Unit Installation Diagram” on page 4 are met,
 - 2) both the air inlet and air outlet are unobstructed,
 - 3) the unit is not exposed to direct sunlight,
 - 4) drainage occurs easily,
 - 5) the unit is away from sources of heat or steam,
 - 6) the unit is not exposed to direct airflow from other air blowing devices,
 - 7) there is no source of machine oil vapor (this may shorten the indoor unit service life),
 - 8) cool/warm air is circulated throughout the room,
 - 9) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may affect the remote controller range,
 - 10) the unit is at least 3.3 ft (1 m) away from any television or radio set (the unit may cause interference with the picture or sound),
 - 11) no laundry equipment is nearby,
 - 12) the signal strength of the router is stable (insufficient signal strength can prevent stable communication).
- Do not seal gaps in any doors (including sliding doors) of the room in which the unit is installed.
(If refrigerant leaks, it may accumulate in the room and contact with flames could result in toxic gas emission or a fire.)

2. Wireless remote controller

Turn on all the fluorescent lamps in the room, if any, and find a location where the remote controller signals are properly received by the indoor unit (within 19-11/16 ft (7 m)).



Indoor Unit Installation Diagram

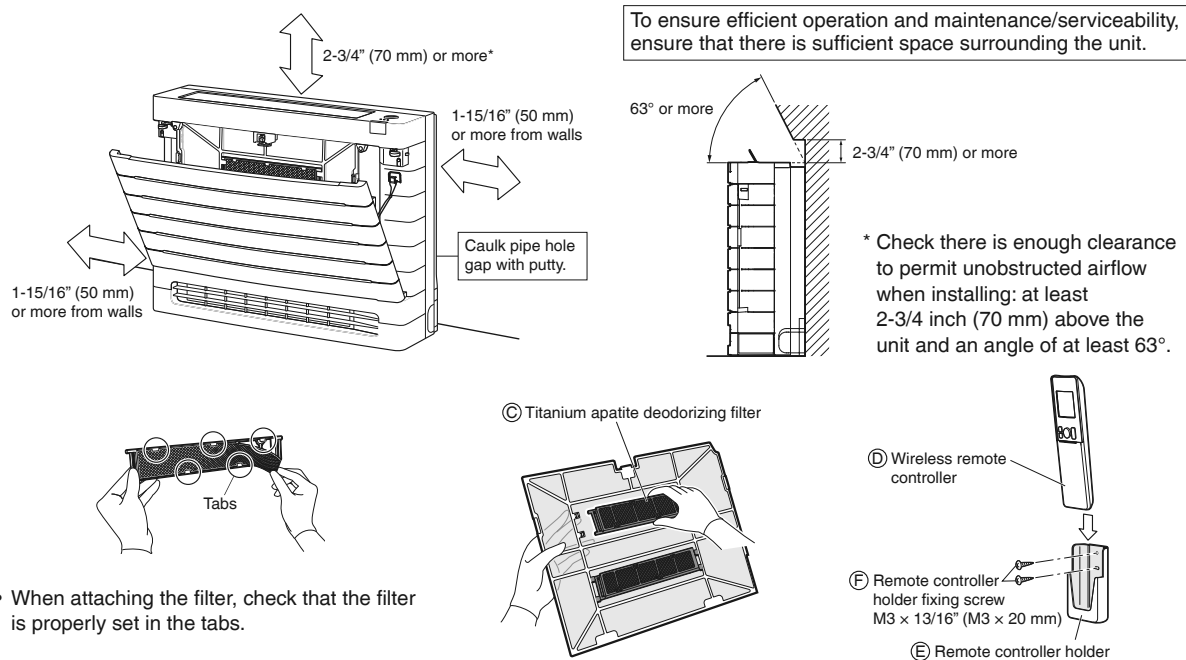



Indoor Unit Installation Diagram

- The indoor unit may be mounted in any of the 4 styles shown here.

 

Configuration A floor exposed installation

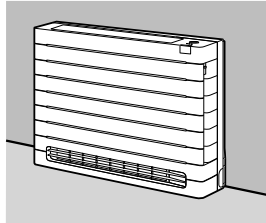



Configuration B wall exposed installation

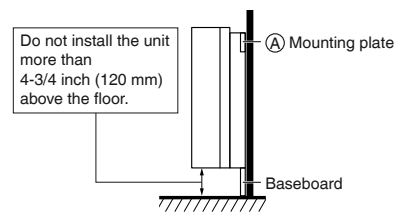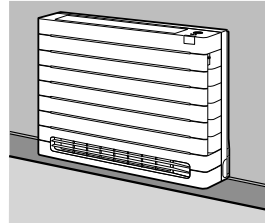

 Configuration C floor half concealed installation

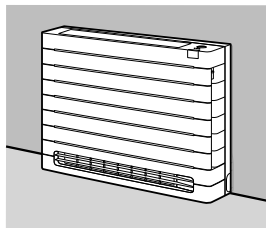

Configuration D concealed installation

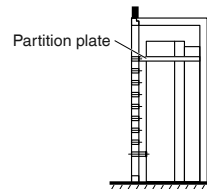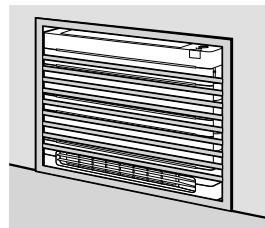

Indoor Unit Installation



1. Refrigerant piping

⚠ CAUTION

Minimum allowable length


- The suggested shortest pipe length is 8.2 ft (2.5 m), in order to avoid noise from the outdoor unit and vibration. (Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)
 - Refer to the installation manual for the outdoor unit for the maximum pipe length.
 - For multi-connections, refer to the installation manual for the multi outdoor unit.
-
- For piping, refer to “**6. Refrigerant piping**” on page 13.
 - Allow space around the pipe for a easier indoor unit pipe connection.

Configuration A floor exposed installation

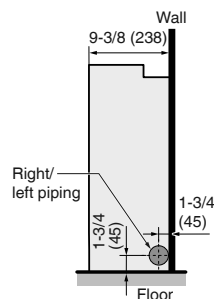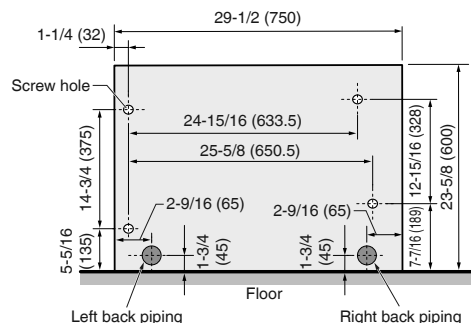


- Drill a hole ($\phi 2\text{-}9/16$ inch (65 mm) in diameter) in the spot indicated by the  symbol in the illustration.
- The location of the hole is different depending on which side of the pipe is taken out.

unit: inch (mm)


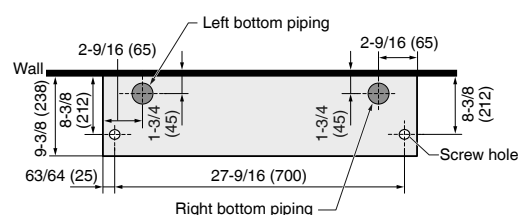


Configuration B wall exposed installation

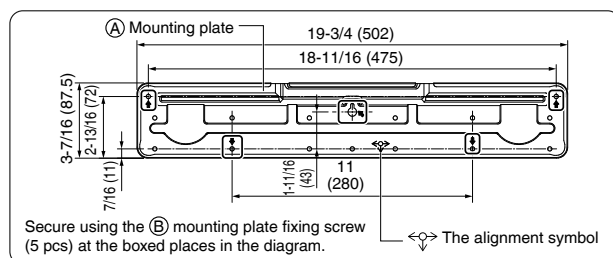

- As a measure against water leakage, make sure to apply a level to the underside of the (A) mounting plate when installing it.
- Drill a hole ($\phi 2-9/16$ inch (65 mm) in diameter) in the spot indicated by the  symbol in the illustration.
 - The location of the hole is different depending on which side of the pipe is taken out.



unit: inch (mm)

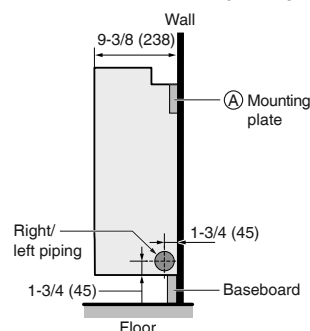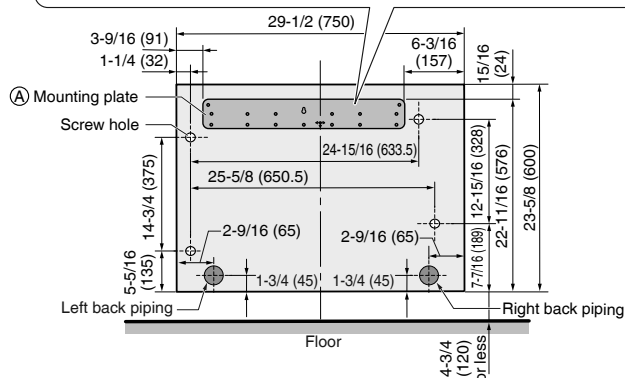

Indoor Unit Installation

Configuration C floor half concealed installation


unit: inch (mm)

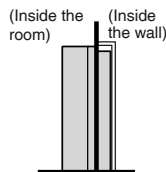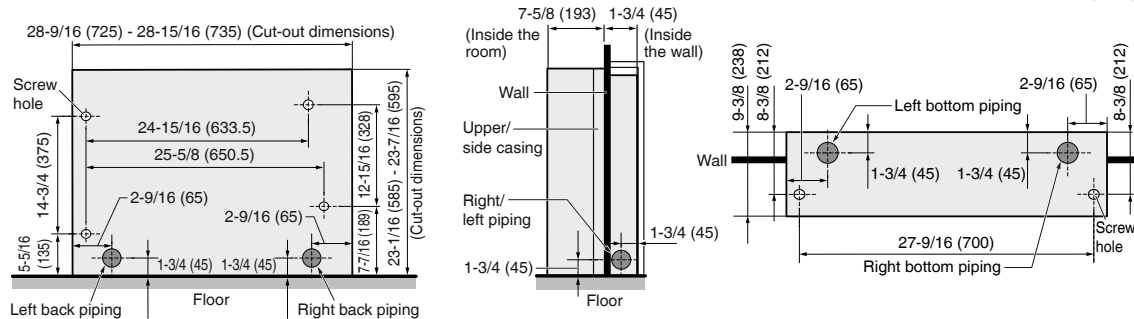

- Make the wall opening in accordance with the cut-out dimensions.
- Drill a hole (φ2-9/16 inch (65 mm) in diameter) in the spot indicated by the  symbol in the illustration.
 - The location of the hole is different depending on which side of the pipe is taken out.
- Install so that there is no gap between the back of the unit and the wall.

Configuration D concealed installation

unit: inch (mm)

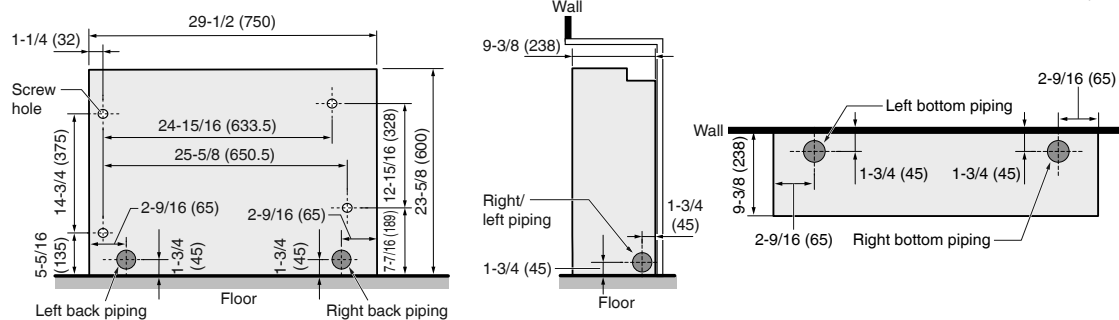


- Drill a hole (φ2-9/16 inch (65 mm) in diameter) in the spot indicated by the  symbol in the illustration.
- The location of the hole is different depending on which side of the pipe is taken out.
- Restrict upward airflow via remote controller settings.
(Refer to “11. Restricting upward airflow (for concealed installations etc.)”)

Requirements for concealed installations

**If the following requirements are not observed, cooling/heating performance and remote controller reception may be impaired.
(May result in failure to cool/warm, condensation on house structure, etc.)**

- Allow enough space between the main unit and ceiling not to obstruct the flow of cool/warm air.
- Place a partition plate on the right side.
- Place a partition plate between outlet and inlet sections.
- Partition plates must not cover the air outlets.
- Partition plates must not be positioned above the signal receiver.
- Partition plates must not be positioned at a height between 1-3/16 inch (30 mm) and 4-5/16 inch (110 mm) above the floor.
- Ensure that the free area ratio of the partition plates is 70% or more.
- Install so that there is no gap between the back of the unit and the wall.

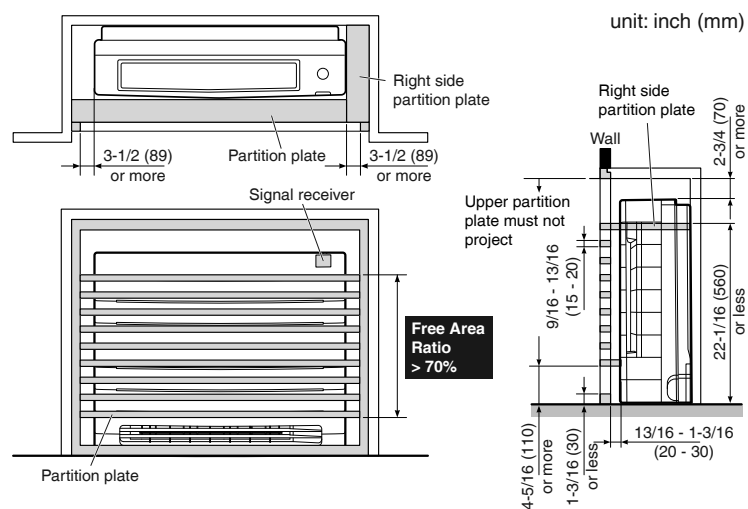


2. Drilling a wall hole and installing wall embedded pipe

⚠ WARNING

For metal frame or metal board walls, be sure to use a wall embedded pipe and wall hole cover in the feed-through hole to prevent possible heat, electric shock, or fire.

- Be sure to caulk the gaps around the pipes with caulking material. (to prevent condensation caused by intrusion of air from outside or within the wall)
- 1) Drill a feed-through hole with a $\phi 2\text{-}9/16$ inch (65 mm) diameter through the wall at a downward angle toward the outside.
 - 2) Insert a wall embedded pipe into the hole.
 - 3) Insert a wall hole cover into wall pipe.
 - 4) After completing refrigerant piping, wiring, and drain piping, caulk the pipe hole gap with putty.

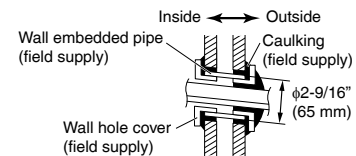


Even if a wall hole cover is not used, caulk both the outdoor and indoor sides with putty.

3. Remove the front grille


The surfaces of the front grille and front panel of the indoor unit are easily scratched, so do not place them directly on the floor, etc.

3-1. Remove the front panel.


- 1) Push in the protrusions on the unit (the left and right sides).

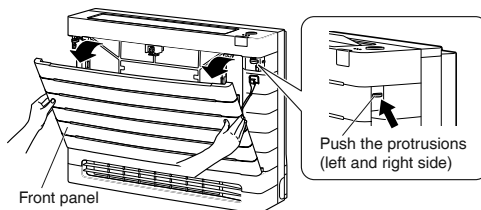



- 2) Unhook the string and tilt the front panel toward you to remove it.

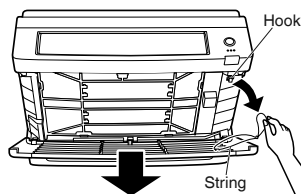

3-2. Remove the 4 screws and open the flap.

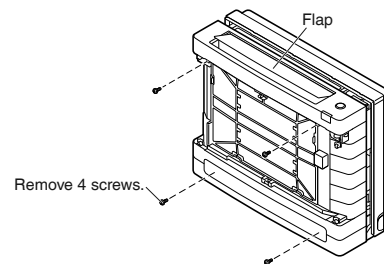

 3-3. Hold the upper part of the front grille, pull it slightly toward you to release the front grille catches, and pull it out diagonally upward so as to avoid the flap.

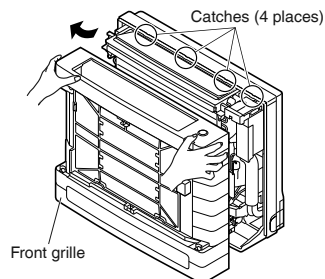


Do not attempt to remove the front grille from the bottom. The grille may be damaged.

Indoor Unit Installation


Cut out the appropriate knockout

- Cut out the knockout for piping at the side (left or right) or at the base (left or right) where the piping is to be routed out.
 - (1) Use nippers or a metal saw to cut out the knockout.
 - (2) Remove burrs on the cut edges.

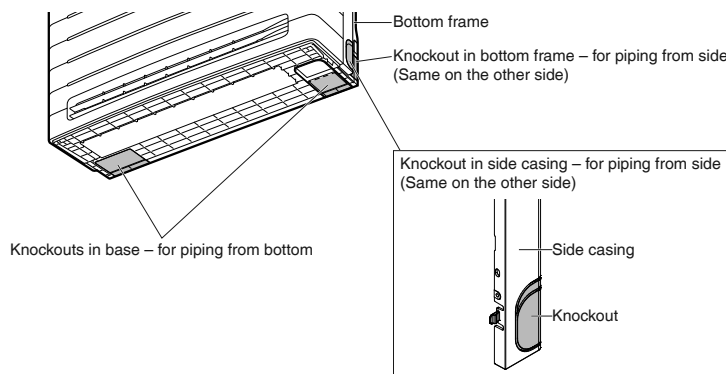

If a knockout for piping was removed, make sure to block any gaps between the indoor unit and piping after pipework is complete.
(Any gaps may result in air infiltration leading to condensation, misdetection of indoor temperature, or the ingress of small animals.)

- **For Exposed floor installation (Configuration A)**, if there is a baseboard, cut out the knockout in the bottom frame using nippers or a metal saw.

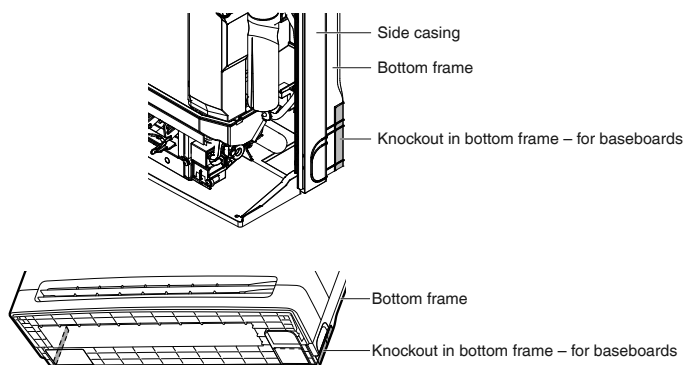

4. Routing pipes and drain hose

Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052 W/mK (0.024 to 0.030 Btu/fth°F (0.035 to 0.045 kcal/mh°C))
Be sure to use insulation that is designed for use with HVAC Systems.
- ACR Copper only.
- Be sure to insulate both the gas and liquid piping and observe the insulation dimensions as below.


	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 3/8 inch (9.5 mm)	1-3/16 inch (30 mm) or more	0.031 inch (0.8 mm) (C1220T-O)	I.D. 15/32-19/32 inch (12-15 mm)	13/32 inch (10 mm) Min.
	O.D. 1/2 inch (12.7 mm)	1-9/16 inch (40 mm) or more		I.D. 9/16-5/8 inch (14-16 mm)	
Liquid side	O.D. 1/4 inch (6.4 mm)	1-3/16 inch (30 mm) or more	0.031 inch (0.8 mm) (C1220T-O)	I.D. 5/16-13/32 inch (8-10 mm)	

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.
- Using finishing tape, bundle and wrap the indoor unit piping and drain hose together so that the drain hose is below the other piping.

Route the pipes and drain hose in the direction shown in the diagrams, and wrap them together with finishing tape (field supply) such that the drain hose is underneath the pipes.


- The drain hose must slope downward.
 - Do not connect a commercially available drain hose directly to the indoor unit. (Water leakage may result.)
- Route the refrigerant pipes in and wrap the pipes and drain hose with finishing tape until they exit the unit.
 - When routing refrigerant pipes, do so in such a way that the pipes do not press against indoor unit structural components (e.g. bottom frame, insulation, etc.). (Condensation and abnormal noises may result.)
- When routing through the back of the unit, bending the piping to match the structure of the unit can make pipework easier.
- For pipe lengths, observe the installation manual supplied with the outdoor unit.
- To make it easier to connect the pipes to the indoor unit, the pipes should be able to move somewhat freely backward and forward, left and right.
The finishing tape bundling the refrigerant pipes should be temporarily fixed where it will not obstruct connection with the indoor unit.

Refrigerant pipe connections must be of a length of at least 13-3/4 inch (350 mm) from the wall.

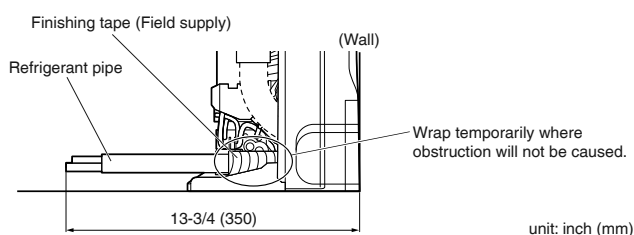


- Seal pipe ends with a cap or vinyl tape to prevent ingress of dust and moisture.


Routing from the side (right)

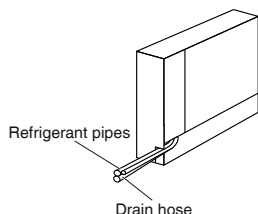

Routing from the rear (right)

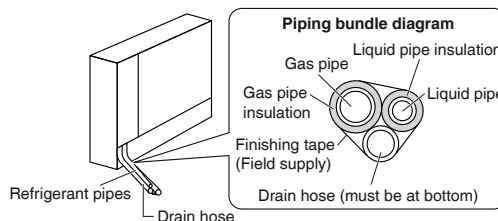


Routing from the bottom (right)

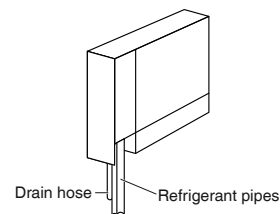


Indoor Unit Installation


Routing from the side (left)

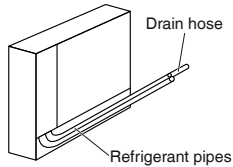


Routing from the rear (left)

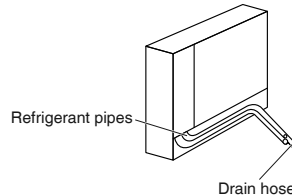




Routing from the bottom (left)

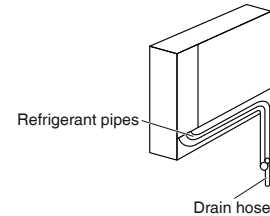

5. Drain piping

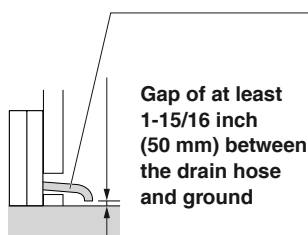

 
Drain pipe must slope downward.
Even small traps are not acceptable.
Descending gradient of 1:100 or more
(High flow resistance can result in poor drainage.)

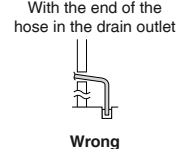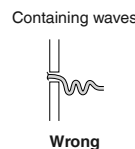

- Avoid placing the end of the drain hose in a drainage location that could cause bad odors or corrosive gas to flow backward into the outlet.
- The drainage water may change color due to bacteria or other organisms. Place in a location where the flow of drainage water will not cause a problem.
- Minimize the number of bends in the drain hose as much as possible. If bending the drain hose, bend it gently.
- Do not connect a commercially available drain hose directly to the indoor unit as this can result in water leakage.
- Do not apply any coatings etc., to drain hose connections as this may result in product damage or water leakage.
- Once pipework is complete, check that drainage is smooth and seal with vinyl tape etc., to prevent the ingress of debris.

- 1) Connect the drain hose (outer diameter $\phi 11/16$ inch ($\phi 18$ mm) at connecting end, 19-11/16 inch (500 mm) long) is supplied with the indoor unit, as described below.

- For drain pipes, use commercially available rigid PVC pipe general pipe VP20 (outer diameter $\phi 1$ inch ($\phi 26$ mm), inner diameter $\phi 13/16$ inch ($\phi 20$ mm)).

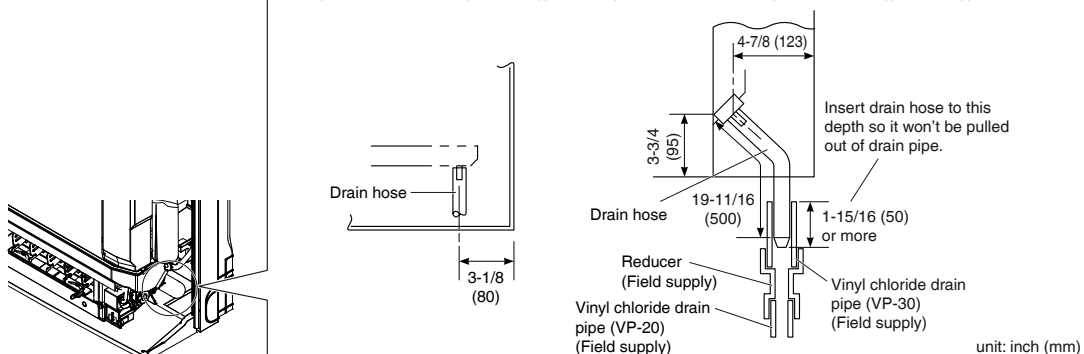


CAUTION

Use polyvinyl chloride adhesive agent for gluing. Failure to do so may cause water leakage.


If the indoor the drain pipe is routed sideways, insulate it so that the wall thickness of the insulation (heat transfer rate: 0.043 W/mK (0.025 Btu/fth°F (0.037 kcal/mh°C)) K or less) is at least 3/8 inch (10 mm) to prevent condensation.

- If on-site pipes are to be concealed in the ceiling or inside walls, wrap them in additional insulation (material: foamed polyethylene foam, 3/16 inch (4 mm) or thicker) to prevent condensation.


- 2) Transfer some water to the indoor heat exchanger by pouring water into the drain pan.
- 3) Make sure that water flows out of the drain hose.

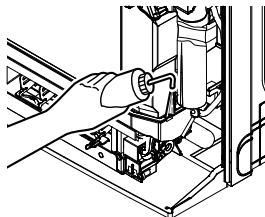

- 4) When drain hose requires extension, obtain an extension hose commercially available.
Be sure to thermally insulate the indoor section of the extension hose with 3/8 inch (10 mm) or more insulation material to prevent condensation.

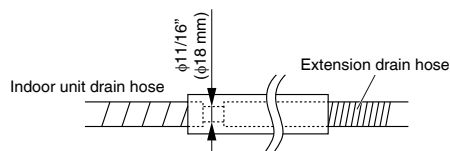

- 5) When connecting a rigid polyvinyl chloride pipe (diameter 1 inch (26 mm)) directly to the drain hose attached to the indoor unit as with embedded piping work, use any commercially available drain socket (inside diameter 13/16 inch (20 mm)) as a joint.

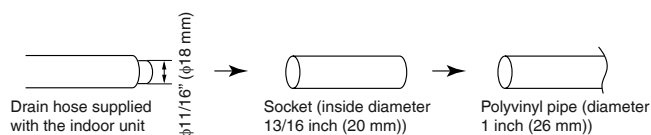

Indoor Unit Installation

6. Refrigerant piping

 
⚠ WARNING

- Do not apply mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the service life of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a dryer to this R32 unit in order to guarantee its service life.
- The drying material may dissolve and damage the system.
- Improper flaring may result in refrigerant gas leakage.

With a multi indoor unit, install as described in the installation manual supplied with the multi outdoor unit.

6-1. Flaring the pipe end

- 1) Remove the flare nut at the end of the auxiliary piping using 2 spanners.
- 2) Cut the pipe end with a pipe cutter.
- 3) Remove burrs with the cut surface facing downward, so that the filings do not enter the pipe.



- 4) Put the flare nut on the pipe.
- 5) Flare the pipe.
- 6) Check that the flaring has been done correctly.

Flaring

Set exactly at the position shown below.

Flare tool for R32 or R410A	Conventional flare tool	
	Clutch-type	Wing-nut type (Imperial-type)
A	0-0.020 inch (0-0.5 mm)	0.039-0.059 inch (1.0-1.5 mm)

Check

The flare's inner surface must be flaw-free.

When flaring, do not over-tighten and crack.

The pipe end must be evenly flared in a perfect circle.


Make sure that the flare nut is fitted.

6-2. Refrigerant piping


⚠ CAUTION

- Use the flare nut fixed to the main unit. (This is to prevent the flare nut from cracking as a result of deterioration over time.)
- Use a torque wrench when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.
- Excessive tightening of the flare nut can result in the flare nut cracking in the long term, leading to gas leakage.

- For refrigerant pipe connections, align the center of the flare and the union, tighten the flare nut 3 to 4 turns by hand, and then use a torque wrench and a spanner to firmly tighten to the specified torque.

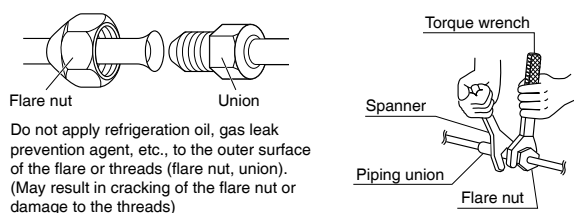


	Piping size	Flare nut tightening torque
Gas side	O.D. 3/8 inch (9.5 mm)	24-1/8–29-1/2 ft • lbf (32.7-39.9 N • m)
	O.D. 1/2 inch (12.7 mm)	36-1/2–44-1/2 ft • lbf (49.5-60.3 N • m)
Liquid side	O.D. 1/4 inch (6.4 mm)	10-1/2–12-3/4 ft • lbf (14.2-17.2 N • m)

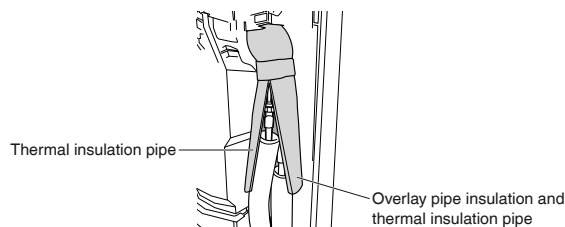

Cautions on pipe handling

- Protect the open end of the pipe from dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

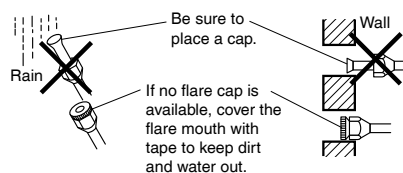

7. Wiring

Refer to the installation manual for the outdoor unit also.


⚠ WARNING

- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electric shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

⚠ CAUTION


Precautions to be taken for wiring

- Recommend stranded cable for interunit wiring. Local code always supersedes recommendation.
- For stranded wires, make sure to use the round crimp-style terminal for connection to the power supply terminal block. Place the round crimp-style terminals on the wires up to the covered part and secure in place.
- If solid core wire must be used, be sure to curl the end of the lead. Improper work may cause heat and fire.

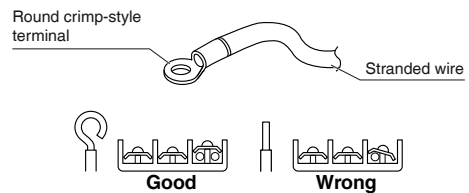


With a multi indoor unit, install as described in the installation manual supplied with the multi outdoor unit.

- 1) Remove the service lid (1 screw).
- 2) Remove the conduit mounting plate and then secure the conduit to the conduit mounting plate with the lock nut, as shown in the illustration.
- 3) Strip wire ends (13/16 inch (20 mm)).
- 4) Match wire colors with terminal numbers on the indoor and outdoor unit's terminal blocks and firmly secure the wires in the corresponding terminals with the screws.
- 5) Connect the ground wire to the corresponding terminals.
- 6) Pull the wires lightly to make sure they are securely connected.

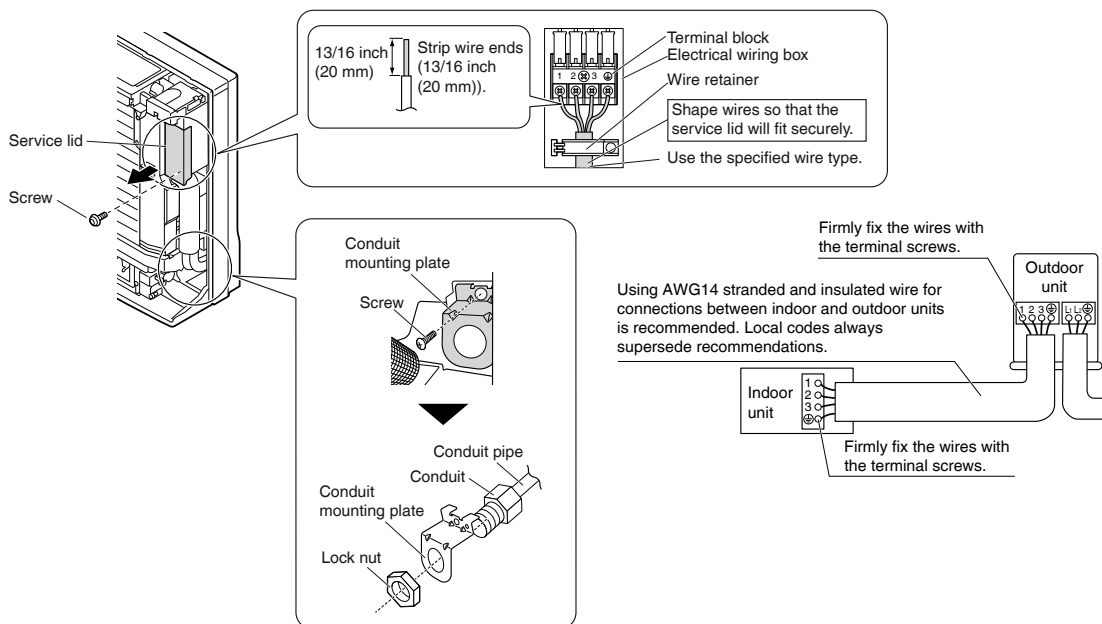


Indoor Unit Installation

- 7) In case of connecting to an adapter system, run the remote controller cable and attach the S21 conversion connector.
(Refer to “1. When connecting to an HA system” on page 17.)
- 8) Attach the conduit mounting plate.

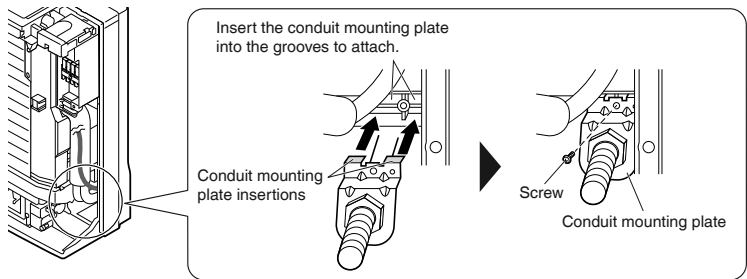

- 9) Shape the wires so that the service lid fits securely.
- 10) Attach the service lid (1 screw).

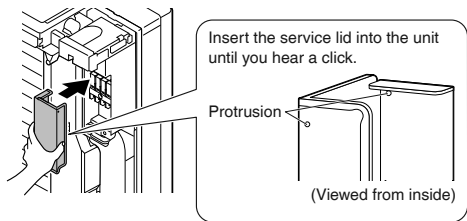


- 11) Take care to ensure that all wiring between the indoor unit and the outdoor unit has a consistent connection. Any splices can cause communication errors.

8. Installing the indoor unit

Once the indoor unit has been mounted, fix it to the floor and wall with installation screws M4 × 1 inch (M4 × 25 mm) screws (field supply).


- Use the front part of the bottom frame to level the indoor unit.
- The number of screws used for indoor unit installation varies by installation configuration.

When wall mounting	4 screws for the main body • For wall-mounted installations, mount the indoor unit on the ① mounting plate before screwing it in.
Other installation configurations	4 screws for the main body, 2 screws for the floor

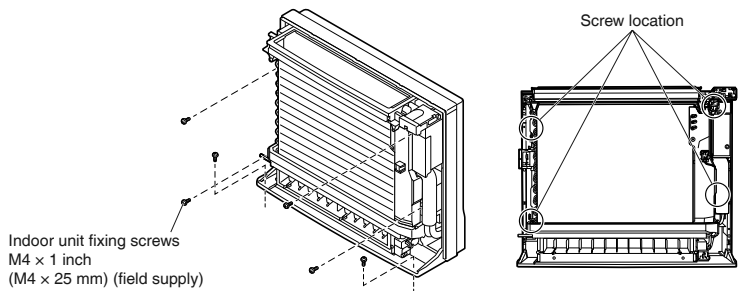

9. Completing the pipework

- 1) After connecting the pipes, overlap the edges of the slit in the thermal insulation pipe and wrap it with vinyl tape ensuring no gaps remain.
 - Gaps or over-tightening can result in condensation or dripping.
- 2) Wrap with $\oplus$ insulation sheet so that the vinyl tape is not visible.
- 3) Finish by wrapping with finishing tape from bottom to top and securing with vinyl tape.
- 4) Push in firmly so that the front grille does not get pushed out.

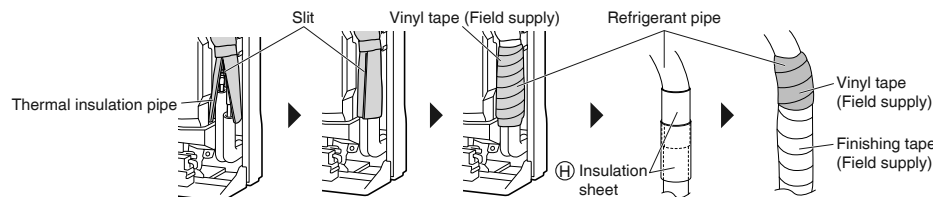

Ensure that the piping is fully insulated so that bare pipe is not visible. Incomplete insulation may result in water leakage.

10. Attaching the front grille and front panel

- 1) After connecting the refrigerant pipes and drain pipes, fill through-holes with putty or caulking material so that there are no gaps.

Any gaps may result in air infiltration leading to condensation, misdetection of indoor temperature, or the ingress of small animals.

- 2) Attach the front grille and the front panel.

11. Restricting upward airflow (for concealed installations etc.)

Turn "ON" the circuit breaker and keep the remote controller pointed at the unit when performing operations.

For concealed installations, fix the flap of the upper air outlet in the down position by setting the restriction on upward airflow.

If the restriction on upward airflow remains disabled, it may result in a failure to cool/warm, condensation on the house structure, etc.

- Measure the supply voltage and make sure that it is within the specified range.

 
- 1) Stop unit operation using the remote controller.

- 2) Press $\uparrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$, $\downarrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$ and **Mode** at the same time.


- 3) Press $\uparrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$ and $\downarrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$, select **SU**, press **Mode**.

- 4) Press $\uparrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$ and $\downarrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$, select **27**, press **Mode**.

- 5) Press $\uparrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$ and $\downarrow$ Temp $^{\circ}\text{F}/^{\circ}\text{C}$, select **!**, press **Mode**.



 - To disable the restriction on upward airflow, press



- 6) When the indoor unit emits a short beep, press **Cancel** twice.

- 7) Use the remote controller to start operation, check that the flap stays in the down position, and then stop operation.

- If the restriction on upward airflow was disabled, use the remote controller to start operation, check that flap position changes when **Swing** is pushed, and then stop operation.

- 8) Be sure to explain to the customer that while the restriction on upward airflow is enabled, airflow direction cannot be changed and auto swing cannot be used.

Settings must be made on the remote controllers for each indoor unit. (Failure to do so will result in a mismatch between the remote controller display and the actual operation of the indoor unit.)


Installation Tips

1. When connecting to an HA system

**For this procedure, accessories which are sold separately are needed.
(wired remote controller, central remote controller, etc.)**


• Removal method for metal plate electrical wiring box cover

- 1) Remove the front panel and front grille.
(Refer to the removal method on page 8.)
- 2) Remove the service lid.
(Refer to the removal method on page 14.)
- 3) Remove the screw and pull the tab on the metal plate electrical wiring box cover.
- 4) Remove the 2 hooks and dismount the metal plate electrical wiring box cover.

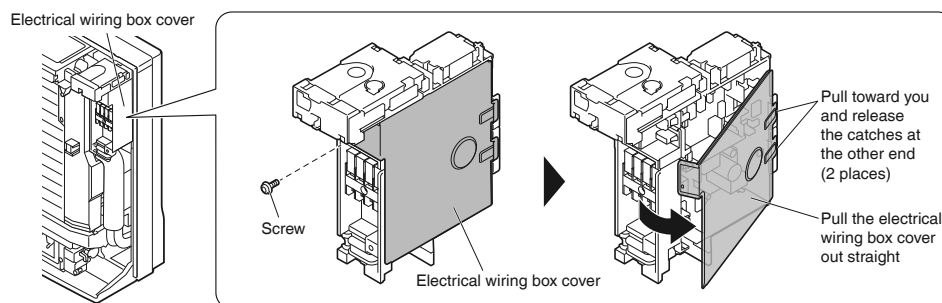

• Attachment methods of connection cord

- 1) Attach the S21 conversion connector to the HA connector (S21).
- 2) Attach the connection cord to the S21 conversion connector.
- 3) Pull the harness out through the notched part in the figure.

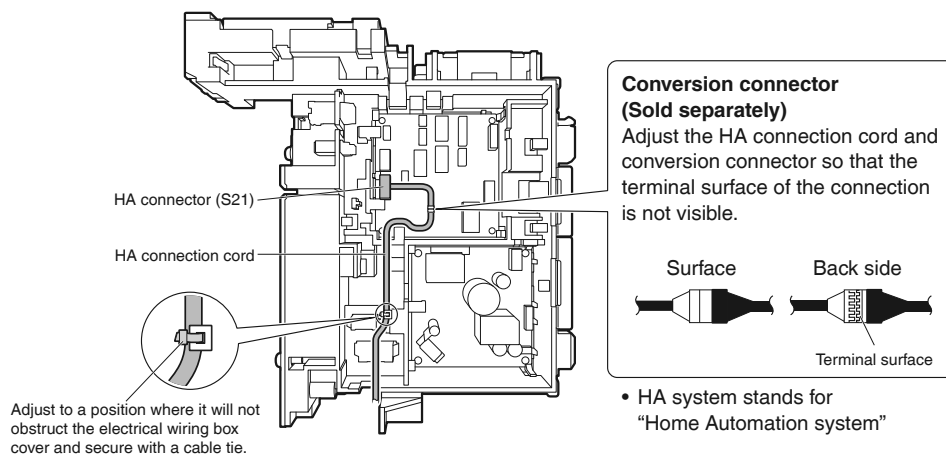

- 4) Secure the HA connection cord with a cable tie (field supplied) to prevent external forces being applied directly to the HA connector.

• Attachment method for metal plate electrical wiring box cover

- 1) Attach the metal plate electrical wiring box cover to the 2 hooks and fasten it with screw.
- 2) Attach the service lid.
(Refer to the installation method on page 15.)
- 3) Install the front grille and front panel.
(Refer to the installation method on page 8.)

2. How to set the different addresses

When 2 indoor units are installed in one room, the 2 wireless remote controllers can be set for different addresses. Change the address setting of one of the 2 units. When cutting the jumper, be careful not to damage any of the surrounding parts.

1) Remove the battery cover on the remote controller and cut the address jumper (J4).



2) Press  and  and  at the same time.

3) Press , select , press .

(The indoor unit OPERATION lamp will blink for about 1 minute.)

4) Press the indoor unit ON/OFF switch while the OPERATION lamp is blinking.

- If setting could not be carried out completely while the OPERATION lamp was blinking, carry out the setting process once again from the beginning.
- After setting is complete, pressing  will cause the remote controller to return to the previous display.

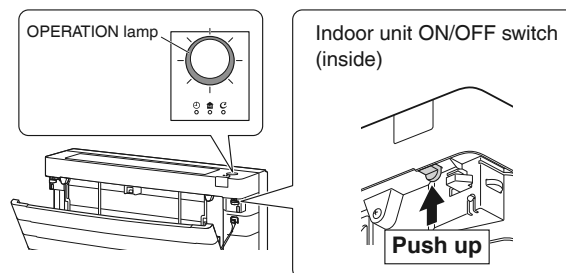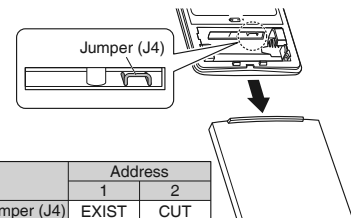

3. Pump down operation

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

For instructions on how to pump down, refer to the installation manual for the outdoor unit to be connected.

Forced cooling operation

For pair connections

■Using the indoor unit ON/OFF switch

Press the indoor unit ON/OFF switch for at least 5 seconds. (The operation will start.)

- Forced cooling operation will stop automatically after about 15 minutes.
To stop the operation, press the indoor unit ON/OFF switch.

■Using the indoor unit's remote controller

1) Press  and  and  at the same time.

2) Press , then select , press .

3) Press  and select the COOL operation.


4) Press  to turn on the system.

- Forced cooling operation will stop automatically after about 30 minutes.

To stop the operation, press .

For multi connections

For instructions on how to perform forced cooling operation, refer to the installation manual for the outdoor unit.

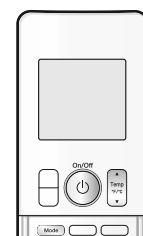



Installation Tips

4. Room temperature adjustment

Adjustment of indoor temperature thermistor in cooling/heating operation.
Used for adjustment of room temperature control.

■Cooling



- 1) Press , , and  at the same time.
- 2) Press , select **SU**, and press  for confirmation.
- 3) Press , select **5**, and press  for confirmation.
- 4) Press , select the setting values, and press  for confirmation.

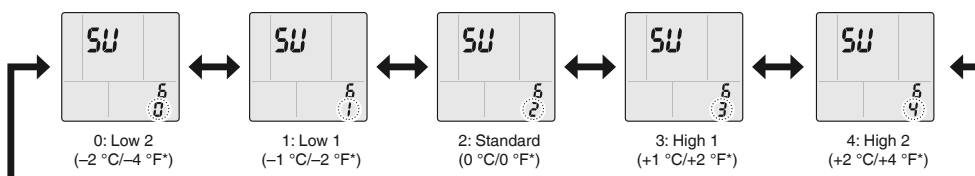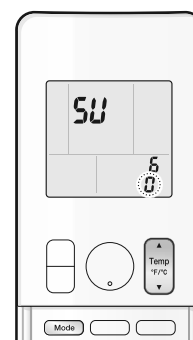

* Fahrenheit values are for reference only and actual temperature changes may deviate from them.

■Heating

- 1) Press , , and  at the same time.
- 2) Press , select **SU**, and press  for confirmation.
- 3) Press , select **7**, and press  for confirmation.
- 4) Press , select the setting values, and press  for confirmation.

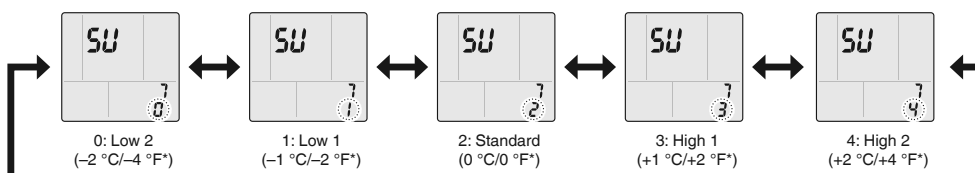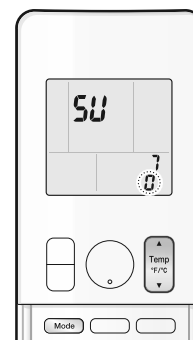

* Fahrenheit values are for reference only and actual temperature changes may deviate from them.

After setting is complete, pressing  twice will cause the remote controller to return to the previous display.

NOTE

To display the room temperature detected by the unit, it is necessary to connect the optional wired remote controller (BRC073A6) and S21 conversion connector (KER087A41).


Trial Operation and Testing

1. Attaching the titanium apatite deodorizing filter

Remove any packaging tape attached to the front panel and air filter.

1-1. Open the front panel and remove the air filter.

- Release from the catches on the left and right.

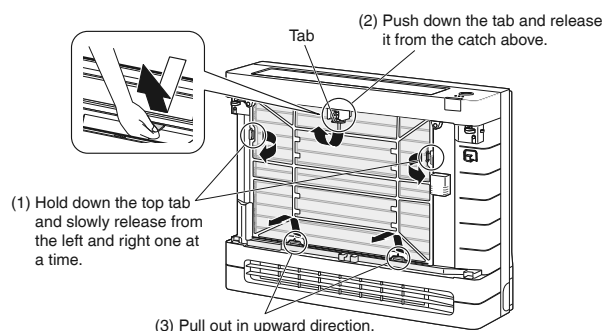


1-2. Attach the © titanium apatite deodorizing filter.

- Attach the titanium apatite deodorizing filter to the filter frame.
- Insert the juts (4 places) on the filter frame into the fixing slots (4 places) on the underside of the air filter.


Wear gloves when working.

(Your hands may get dirty with particles from the titanium apatite deodorizing filter.)

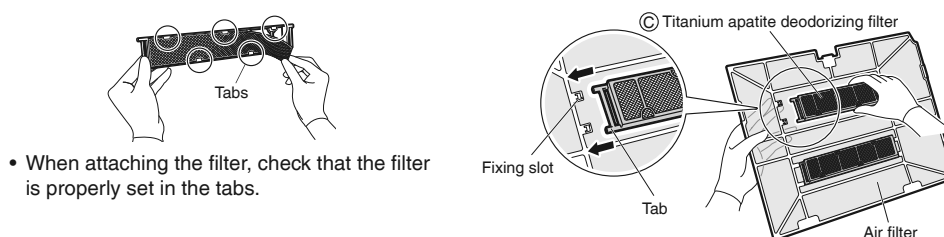

1-3. Attach the air filter and front panel.

- Insert the air filter with the "FRONT" mark facing you.
- Insert the tabs (2 at the bottom, and 1 at the left, right and top) using the △ mark as a guide.

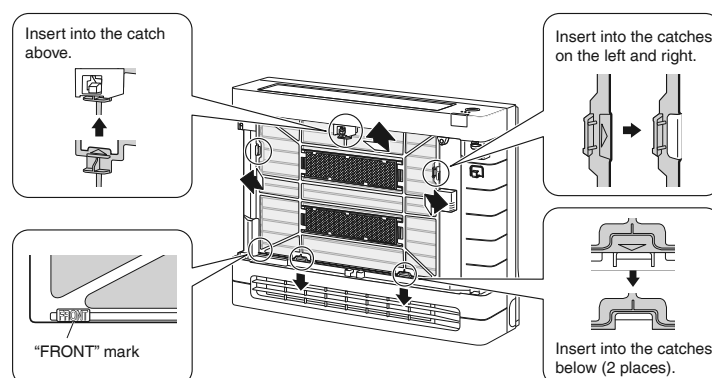

Trial Operation and Testing

2. Trial operation and testing

- Trial operation should be carried out in either COOL or HEAT operation.

2-1. Measure the supply voltage and make sure that it is within the specified range.

**2-2. In COOL operation, select the lowest programmable temperature;
in HEAT operation, select the highest programmable temperature.**

2-3. Carry out the trial operation following the instructions in the operation manual to ensure that all functions and parts, such as the movement of the louvers, are working properly.

- To protect the air conditioner, restart operation is disabled for 3 minutes after the system has been turned off.

2-4. After trial operation is complete, set the temperature to a normal level (78 °F to 82 °F (26.0 °C to 28.0 °C) in COOL operation, 68 °F to 75 °F (20.0 °C to 24.0 °C) in HEAT operation).

- When operating the air conditioner in COOL operation in winter, or HEAT operation in summer, set it to the trial operation mode using the following method.


- 1) Press ,  and  at the same time.
- 2) Press , select **7**, and press  for confirmation.
- 3) Press  to turn on the system.

- Trial operation will stop automatically after about 30 minutes.

To stop the operation, press .

- Some of the functions cannot be used in the trial operation mode.

- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

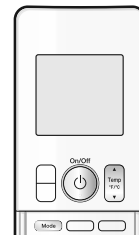

If the LED flashes and the fan of the indoor unit turns by itself when the unit is off, the refrigerant sensor is operating.

- **If long beeps are heard.**

There is a possibility of refrigerant leakage. Ventilate the room, do not switch off the circuit breaker and contact your dealer.

- **If there are no beeps.**

Refrigerant leak detection is in progress.

If the flashing does not stop after 10 minutes or more, there may be a refrigerant leak.

Do not switch off the circuit breaker and contact your dealer.

In addition to refrigerants, insecticides, hairspray etc., can also cause the refrigerant sensor to generate a false alarm.

3. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed securely.	Fall, vibration, noise	
The titanium apatite deodorizing filter is properly attached to the air filter.	Unusual noise, condensation	
The air filter is properly attached.	Unusual noise, condensation	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes, and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly grounded.	Electrical leakage	
Only specified wires are used for all wiring, and all wires are connected correctly.	Unit not operating or burn damage	
Indoor and outdoor unit air inlets and air outlets are unobstructed.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote controller commands.	Unit not operating	
Pipes and wires are connected to the corresponding terminal blocks/connection ports for the connected unit.	Not cooling/heating	
Explain to the user that when using a smartphone for operation, it is necessary to prepare a repeater, or similar device, if the signal from the wireless LAN router is weak near the air conditioner.	Air conditioner not responding to smartphone	
The setting for restriction on upward airflow is configured correctly. (Applicable to concealed installations, etc.) Explained to the customer that while the restriction on upward airflow is enabled, airflow direction cannot be changed and auto swing cannot be used.	Failure to cool/warm, condensation on the house structure, etc.	
Address settings are correct. (If installing 2 indoor units in the same room.)	Unit not operating	
All through-holes are completely sealed with putty.	Failure to detect refrigerant leakages, ingress of insects etc.	
All packaging tape attached to the front panel and air filter has been removed.	Unusual noise	

12.3 RXP09/12AVJU9

Contents

Safety Considerations	1	Wiring	10
Accessories	4	Facility Setting	
Precautions for Selecting a Location	4	(cooling at low outdoor temperature)	12
Precautions on Installation	5	When attaching the drain pan heater	
Outdoor Unit Installation Diagram	5	(Only for heat pump models)	12
Installation Space Requirements	6	Pump Down Operation	13
Outdoor Unit Installation	7	Trial Operation and Testing	13
1. Installing the outdoor unit	7	1. Trial operation and testing	13
2. Drain work (Only for heat pump models)	7	2. Test items	13
3. Flaring the pipe end.....	7		
4. Refrigerant piping	8		
5. Pressure test and evacuating system.....	9		

The pictures in this document are for illustrative purposes only.

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	Read the precautions in this manual carefully before operating the unit.
	This appliance is filled with R32.

Read these **Safety Considerations for Installation** carefully before installing an air conditioner or heat pump. After completing the installation, make sure that the unit operates properly during the startup operation. Instruct the user on how to operate and maintain the unit. Inform users that they should store this installation manual with the operation manual for future reference. Always use a licensed installer or contractor to install this product. Improper installation can result in water or refrigerant leakage, electric shock, fire, or explosion. Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

-  **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** Indicates situations that may result in equipment or property damage accidents only.

DANGER

- Refrigerant gas is heavier than air and replaces oxygen. A massive leak can lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death. Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.
- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerant gas may produce toxic gas if it comes into contact with fire. Exposure to this gas could cause severe injury or death.
- After completing the installation work, check that the refrigerant gas does not leak throughout the system.
- Do not install unit in an area where flammable materials are present due to risk of explosions that can cause serious injury or death.
- Safely dispose all packing and transportation materials in accordance with federal/state/local laws or ordinances. Packing materials such as nails and other metal or wood parts, including plastic packing materials used for transportation may cause injury or death by suffocation.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal.

⚠ WARNING

- During installation, attach the refrigerant piping securely before operating the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is operated, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- During pump down, stop the compressor before removing the refrigerant piping. If the compressor is still operating and the stop valve is open during pump down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- Only qualified personnel licensed or certified in their jurisdiction must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in water leakage, electric shock, or fire.
- Pipe-work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.
- When installing the unit in a small room, take measures to keep the refrigerant concentration from exceeding allowable safety limits. Excessive refrigerant leaks, in the event of an accident in a closed ambient space, can lead to oxygen deficiency.
- Use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shock, fire, or the unit falling.
- Install the air conditioner or heat pump on a foundation strong enough that it can withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injury.
- Take into account strong winds, typhoons, or earthquakes when installing. Improper installation may result in the unit falling and causing accidents.
- The unit must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur.
The electrical ground circuit may consist of an appropriately sized electrical wire connecting the ground lug in the unit and control box wire to the building's electrical service panel.
Other methods of grounding are permitted if performed in accordance with the "National Electrical Code" (NEC)/ "American National Standards Institute" (ANSI)/ "National Fire Protection Association" (NFPA) 70 and local/state codes.
In CANADA, electrical grounding is to be in accordance with the Canadian Electrical Code CSA C22.1.
Failure to observe this warning can result in electrical shock that can cause personal injury or death.
- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel licensed or certified in their jurisdiction according to local, state, and national regulations. An insufficient power supply capacity or improper electrical construction may lead to electric shock or fire.

- Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
- When wiring, position the wires so that the protection plate can be securely fastened. Improper positioning of the protection plate may result in electric shock, fire, or the terminals overheating.
- Before touching electrical parts, turn off the unit.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Securely fasten the outdoor unit protection plate. If the protection plate is not installed properly, dust or water may enter the outdoor unit causing fire or electric shock.
- When installing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R32) such as air. Any presence of air or other foreign substance in the refrigerant circuit can cause an abnormal pressure rise or rupture, which may result in equipment damage and even injury.
- Do not change the setting of the protection devices. If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may occur.
- Do not use means to accelerate the defrosting process (if possible) or to clean, other than those recommended by the manufacturer.
- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Comply with national gas regulations.
- The indoor equipment and pipes shall be securely mounted and guarded such that accidental rupture of equipment cannot occur from such events as moving furniture or reconstruction activities.

⚠ CAUTION

- While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate the piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.
- The refrigerant circuit temperature will be high, therefore the inter-unit wires must be kept away from copper pipes that are not thermally insulated.
- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.
- The heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.

Safety Considerations

- Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor, and other refrigerant cycle parts. Your hands may suffer burns or frostbite if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear proper gloves.
- Install drain piping to ensure proper drainage. Improper drain piping may result in water leakage and property damage.
- Insulate piping to prevent condensation.
- Be careful when transporting the product.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- Do not use a charging cylinder. Using a charging cylinder may cause the refrigerant to deteriorate.
- Refrigerant R32 in the system must be kept clean, dry, and tight.
 - (a) Clean and Dry -- Foreign materials (including mineral oils such as SUNISO oil or moisture) should be prevented from getting into the system.
 - (b) Tight -- R32 does not contain any chlorine, does not destroy the ozone layer, and does not reduce the earth's protection against harmful ultraviolet radiation. R32 can contribute to the greenhouse effect if it is released.
Therefore take proper measures to check for the tightness of the refrigerant piping installation. Read the chapter *Refrigerant piping* and follow the procedures.
- The outdoor unit is for R32. See the catalog for indoor models that can be connected. Normal operation is not possible when connected to non-compatible indoor units.
- Remote controller (wireless kit) transmitting distance can be shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types). Install the indoor unit far away from fluorescent lamps as much as possible.
- Indoor units are for indoor installation only. Outdoor units can be installed either outdoors or indoors.
- Do not install the air conditioner or heat pump in the following locations:
 - (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen.
Plastic parts may deteriorate and fall off or result in water leakage.
 - (b) Where corrosive gas, such as sulfurous acid gas, is produced.
Corroding copper pipes or soldered parts may result in refrigerant leakage.
 - (c) Near machinery emitting electromagnetic waves.
Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
 - (d) Where flammable gas may leak, where there is carbon fiber, or ignitable dust suspension in the air, or where volatile flammables such as thinner or gasoline are handled. Operating the unit in such conditions can cause a fire.

- Take adequate measures to prevent the outdoor unit from being used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke, or fire. Instruct the user to keep the area around the unit clean.
- Servicing shall be performed only as recommended by the manufacturer and licensed or certified in their jurisdiction.




NOTE

- The outdoor unit should be positioned where the unit and power supply wires (breaker panel to outdoor unit) are at least 10ft (3m) away from any televisions or radios. (The unit may cause interference with the picture or sound.) Depending on the radio waves, a distance of 10ft (3m) may not be sufficient to eliminate the noise.
- Dismantling the unit, treatment of the refrigerant, oil and additional parts must be done in accordance with the relevant local, state, and national regulations.
- Only use tools for R32 or R410A, such as a gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, or refrigerant recovery equipment.
- If the conventional refrigerant and refrigerator oil are mixed in R32, the refrigerant may deteriorate.
- This air conditioner or heat pump is an appliance that should not be accessible to the general public.
- As maximum allowable pressure is 604psi (4.17MPa), the wall thickness of field-installed pipes should be selected in accordance with the relevant local, state, and national regulations.

RN008(R32)-U

Accessories

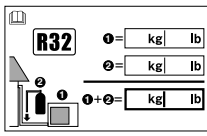Ⓐ Installation manual	1	Ⓑ Drain socket*  This is at the bottom of the packaging.	1
Ⓒ Drain cap (1)* 	4	Ⓓ Drain cap (2)* 	2
Ⓔ Warranty	1	Ⓕ Refrigerant charge label  Affix near the manufacturer's label.	1
Ⓖ General Safety Considerations	1		

* Only for heat pump models

Precautions for Selecting a Location

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operating sound will not be amplified.
- 2) Choose a location where the air discharged from the unit or the operating sound will not cause a nuisance to the neighbors of the user.
- 3) Avoid locations, such as near bedrooms, where the operating sound may cause disturbance.
- 4) There must be sufficient space to carry the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) In coastal areas or other places with a salty atmosphere or one containing sulfate gas, corrosion may shorten the life of the air conditioner.
- 7) Since water will flow from the drain of the outdoor unit, do not place anything under the unit which must be kept away from moisture.
- 8) A location where flammable gas does not leak. Position at least 6-5/8ft (2m) from propane gas cylinders.

NOTE


Cannot be installed suspended from a ceiling or stacked.

⚠ CAUTION

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- In heavy snow areas, select an installation site where the snow will not affect the unit.
- If there is a likelihood of snow accumulating on the outdoor unit, attach a snow protection hood (sold separately).
- In high humidity areas or heavy snow areas, it is recommended to attach a drain pan heater (sold separately) to prevent ice build-up from the bottom frame.


- Construct a large canopy.
- Construct a pedestal.

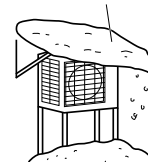

Install the unit high enough off the ground to prevent burying in snow.

Precautions on Installation

- Check the strength and level of the installation surface so that the unit does not cause any operating vibrations or noise after installation.
- Fix the unit in place securely using foundation bolts, as in the figure. (Prepare 4 sets of 5/16 inch (M8) or 3/8 inch (M10) foundation bolts, nuts and washers.)
- It is best to screw in the foundation bolts until their ends are 3/4 inch (20mm) from the foundation surface.

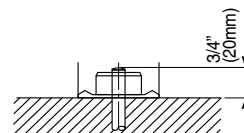

Outdoor Unit Installation Diagram

Max. allowable piping length	65-5/8ft (20m)
Min. allowable piping length	10ft (3m)
Max. allowable piping height	49-1/4ft (15m)
Additional refrigerant required for refrigerant pipe exceeding 49-1/4ft (15m) in length.	0.22oz/ft (20g/m)
Gas pipe	O.D. 3/8 inch (9.5mm)
Liquid pipe	O.D. 1/4 inch (6.4mm)

Refrigerant piping must be kept to a minimum.

*Be sure to add the proper amount of additional refrigerant.

Failure to do so may result in reduced performance.

**The suggested shortest pipe length is 10ft (3m), in order to avoid noise from the outdoor unit and vibration.

(Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)

If strong wind blows into the air discharge side from the front and there is a danger that the fan may be damaged, change the orientation of the air discharge side of the outdoor unit or use an air direction adjustment grille (sold separately).

Allow 11-13/16 (300) of work space below the ceiling surface.


Refrigerant piping must be protected from physical damage. Install a plastic cover or equivalent.

Wrap the insulation pipe with finishing tape from bottom to top.

CAUTION

Keep the piping length between 10ft (3m) and 65-5/8ft (20m)

In sites with poor drainage, use block bases for the outdoor unit. Adjust foot height until the unit is level. Otherwise, water leakage or pooling of water may occur.

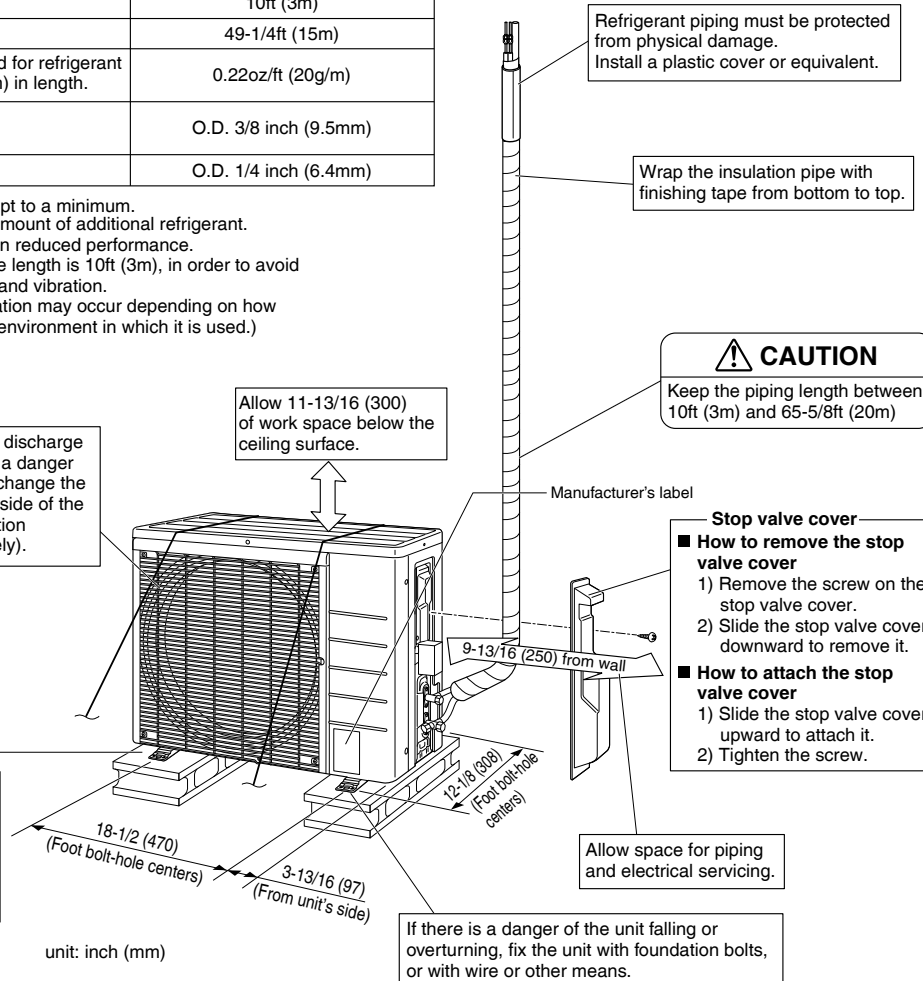

unit: inch (mm)

Stop valve cover

How to remove the stop valve cover

- 1) Remove the screw on the stop valve cover.
- 2) Slide the stop valve cover downward to remove it.

How to attach the stop valve cover

- 1) Slide the stop valve cover upward to attach it.
- 2) Tighten the screw.

Refrigerant charge label

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
- ② the additional refrigerant amount charged in the field and
- ① + ② the total refrigerant charge on ㊟ refrigerant charge label.

Affix ㊟ refrigerant charge label near the manufacturer's label after filling it out.


- 1 factory refrigerant charge of the product: see unit manufacturer's label
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 outdoor unit
- 5 refrigerant cylinder and manifold for charging

- The minimum required floor area of the room where the indoor unit is installed varies depending on the installation height and refrigerant amount. For details, refer to the General Safety Considerations supplied with the indoor unit.

Installation Space Requirements


- Position the unit on a horizontal surface. Any tilt in the unit should be 3° or less to the horizontal.
- Where a wall or other obstacle is in the path of the outdoor unit's intake or exhaust airflow, follow the installation space requirements below.
- For any of the below installation patterns, the wall height on the outlet side should be 47-1/4 inch (1200mm) or less.
- Secure as much installation space around the unit as the location allows, as more space will result in more efficient operation.

Wall facing one side

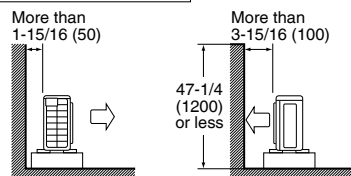


Side view

Walls facing two sides

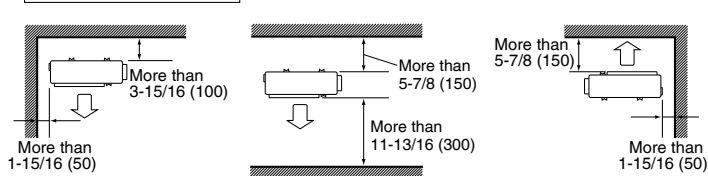

Top view

Walls facing three sides

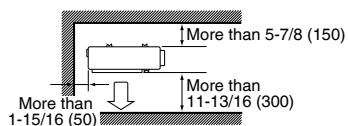

Top view

unit: inch (mm)

When installed as in the figure on the left, it is recommended to either change the orientation of the outdoor unit outlet side or use the air direction adjustment grille (sold separately).

Outdoor Unit Installation

1. Installing the outdoor unit

- When installing the outdoor unit, refer to “Precautions for Selecting a Location” on page 4 and “Outdoor Unit Installation Diagram” on page 5.
- If drain work is necessary, follow the procedures below.

2. Drain work (Only for heat pump models)

⚠ CAUTION


In cold areas, do not use a drain socket, drain caps (1, 2) and a drain hose with the outdoor unit. (Drain water may freeze, impairing heating performance.)

- If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 1-1/4 inch (30mm) in height under the outdoor unit's feet.

1) Attach ③ drain cap (1) and ④ drain cap (2).

2) Attach ⑤ drain socket to the shape of drain hole and fix it by turning.

- When attaching ⑤ drain socket to the bottom frame, make sure to connect the drain hose to the drain socket first.

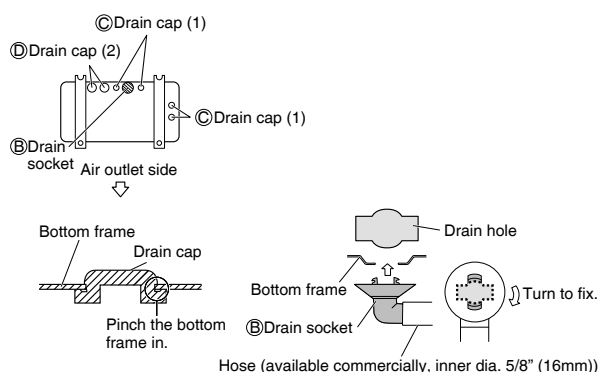

3. Flaring the pipe end


⚠ WARNING

- Do not apply mineral oil to the flare.
- Prevent mineral oil from getting into the system as this would reduce the service life of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with this unit.
- Never install a dryer to this R32 unit in order to guarantee its service life.
- The drying material may dissolve and damage the system.
- Improper flaring may result in refrigerant gas leakage.

⚠ CAUTION

Do not reuse joints which have been used once already.

- Cut the pipe end with a pipe cutter.
- Remove burrs with the cut surface facing downward, so that the filings do not enter the pipe.
- Put the flare nut on the pipe.
- Flare the pipe.
- Check that the flaring has been done correctly.

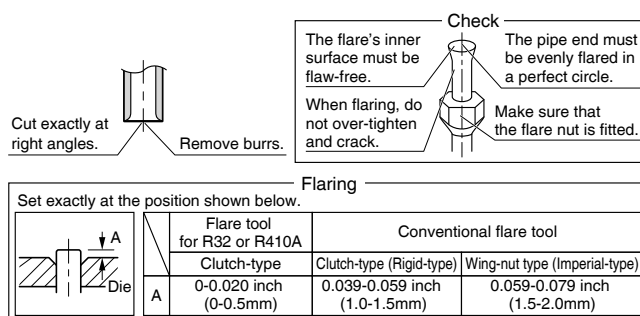


4. Refrigerant piping

⚠ CAUTION

- Use the flare nut fixed to the main unit. (This is to prevent the flare nut from cracking as a result of deterioration over time.)
- Use a torque wrench when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.
- Excessive tightening of the flare nut can result in the flare nut cracking in the long term, leading to gas leakage.

- 1) To prevent gas leakages, apply gas leak prevention agent to the inner surface of the flare only.
- 2) For refrigerant pipe connections, align the center of the flare and the union, tighten the flare nut 3 to 4 turns by hand, and then use a torque wrench and a spanner to firmly tighten to the specified torque.

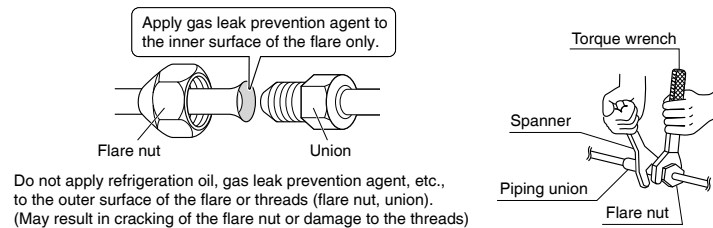

Tightening torque

Piping connection

Flare nut	
Gas side	Liquid side
3/8 inch (9.5mm)	1/4 inch (6.4mm)
24-1/8 – 29-3/8lbf • ft (32.7-39.9N • m)	10-1/2 – 12-5/8lbf • ft (14.2-17.2N • m)

Valve cap

Width across flats	
11/16 inch (17mm)	3/4 inch (19mm)
10-1/2 – 12-5/8lbf • ft (14.2-17.2N • m)	12-5/8 – 15-3/8lbf • ft (17.1-20.9N • m)

Service port cap

7-7/8 – 10-7/8lbf • ft (10.7-14.7N • m)

Cautions on pipe handling

- Protect the open end of the pipe from dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.



Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.024 to 0.030Btu/fth°F) (0.035 to 0.045kcal/mh°C)
Be sure to use insulation that is designed for use with HVAC Systems.
- ACR Copper only.
- Be sure to insulate both the gas and liquid piping and observe the insulation dimensions as below.

	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 3/8 inch (9.5mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 15/32-19/32 inch (12-15mm)	13/32 inch (10mm) Min.
Liquid side	O.D. 1/4 inch (6.4mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 5/16-13/32 inch (8-10mm)	

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.
- Using finishing tape, bundle and wrap the indoor unit piping and drain hose together so that the drain hose is below the other piping.

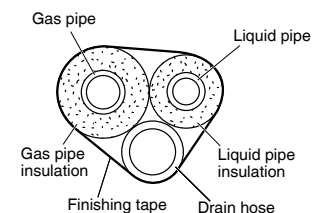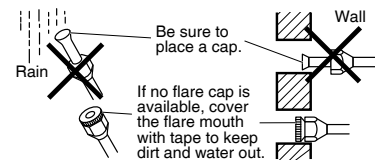

Outdoor Unit Installation

5. Pressure test and evacuating system


⚠ WARNING

- Make sure that air or any matter other than refrigerant (R32) does not get into the refrigeration cycle.
- If refrigerant gas leaks should occur, ventilate the room as soon and as much as possible.
- R32, as well as other refrigerants, should always be recovered and never be released directly into the environment.
- **Use tools for R32 or R410A (such as the gauge manifold, charging hose, or vacuum pump adapter).**

⚠ CAUTION

Do not open/close the stop valves when the outdoor temperature is -5°F (-21°C) or less, as this may result in refrigerant leakage.

- When piping work is complete, it is necessary to perform a pressure test and evacuate system with a vacuum pump.
- If using additional refrigerant, purge the air from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench (3/16 inch (4mm)) to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench to the specified tightening torque.

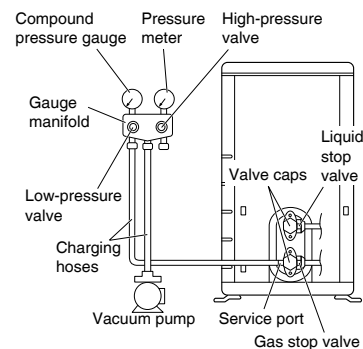

- 1) Pressurize the liquid pipe and gas pipe from the service port of gas stop valve to 604psi (4.17MPa) (do not pressurize more than 604psi (4.17MPa)) for 1 hour minimum, 24 hours recommended. If there is a pressure drop, check for leaks, make repairs and perform the pressure test again.
- 2) Connect the gauge manifold's charging hose to the gas stop valve's service port.
- 3) Fully open the low-pressure valve (Lo) on the gauge manifold and fully close the high-pressure valve (Hi). (High-pressure valve will require no further operation.)
- 4) Evacuate system using vacuum pump to below 500 microns for 1 hour minimum.
- 5) Close the low-pressure valve (Lo) on the gauge manifold and stop vacuum pumping. (Maintain this condition for a few minutes to make sure that the compound pressure gauge pointer does not swing back.)*¹
- 6) Remove the valve caps from the liquid stop valve and gas stop valve.
- 7) To open the liquid stop valve, turn the rod of the valve 90° counter-clockwise using a hexagonal wrench. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from the indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off *².
- 8) Disconnect the charging hoses from the service port for the gas stop valve, then fully open the liquid and gas stop valves. (Do not attempt to turn the valve rods further than they can go.)
- 9) Tighten the valve caps and service port caps for the liquid and gas stop valves with a torque wrench to the specified torques. Refer to "4. Refrigerant piping" on page 8 for details.

*¹ If the compound pressure gauge pointer swings back, the refrigerant pipes may contain water or there may be a loose pipe joint.

Check all pipe joints and retighten nuts as needed, then repeat steps 3) through 5).

*² **Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.**

A halide torch (or any other detector using a naked flame) shall not be used.

Do not use substances containing chlorine and electronic leak detection for gas leak detection.

Wiring

⚠ WARNING

• RISK OF ELECTRIC SHOCK CAUSE INJURY OR DEATH.


- System contains oversize protective earthing (grounding) terminal which shall be properly connected.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death.
Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.
- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electric shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Use an all-pole disconnection type circuit breaker with at least 1/8 inch (3mm) between the contact point gaps.
- When carrying out wiring, take care not to pull at the conduit.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.
- Do not turn on the circuit breaker until all work is completed.

⚠ CAUTION

Precautions to be taken for wiring


- Recommend stranded cable for interunit wiring. Local code always supersedes recommendation.
- For stranded wires, make sure to use the round crimp-style terminal. Place the round crimp-style terminals on the wires up to the covered part and secure in place.

1) Use the following method when installing a round crimp-style terminal.

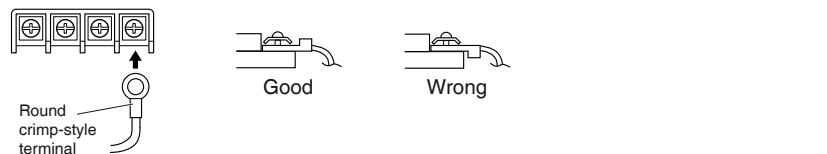

2) Use the following method when installing a solid core wire.



Make sure to curl the end of the lead. Improper work may cause heat and fire.

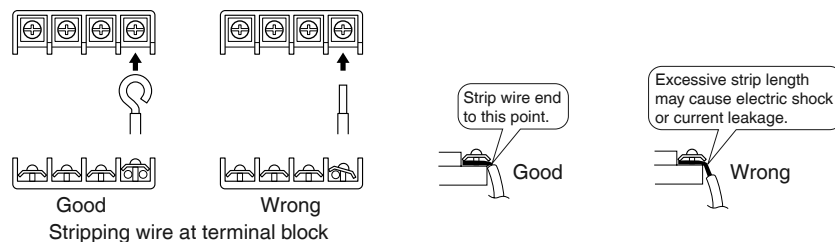

Wiring


[Method of mounting conduit]

- When wiring, remove the top plate and look at the wiring diagram on the back of the top plate.
 - A protection plate is fixed for protection from the high-voltage section.
- 1) Dismount the stop valve cover by removing the screw.
 - 2) Dismount the protection plate by removing the 2 screws.
 - 3) Dismount the conduit mounting cover by removing the 2 screws.
 - 4) Pass wires through the conduit and secure them with a lock nut.

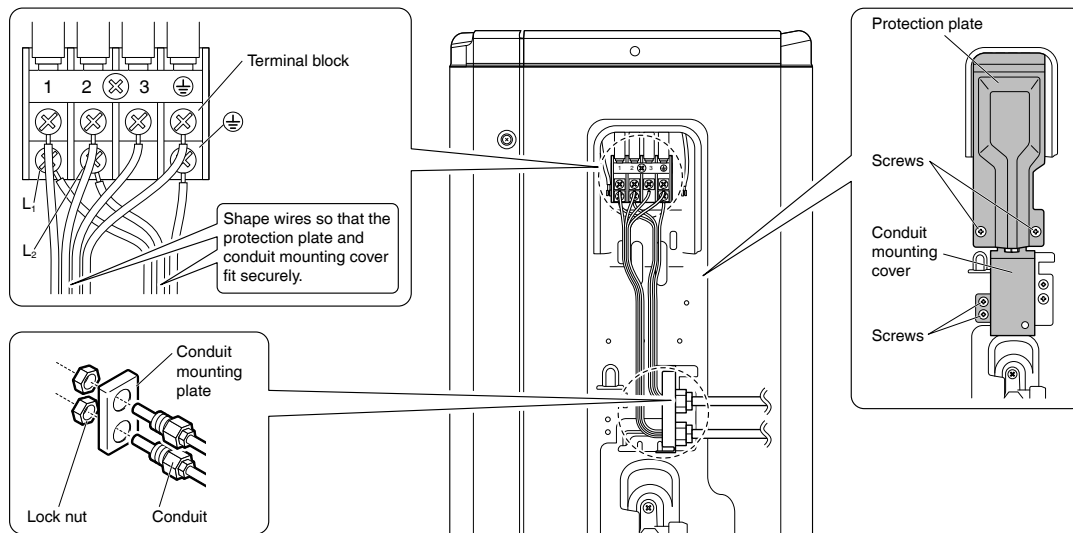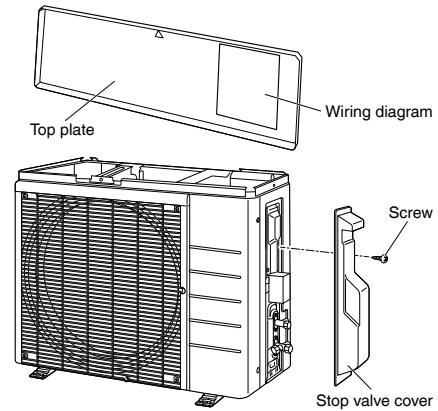

[Wiring procedure]

- 1) Strip the insulation from the wire (3/4 inch (20mm)).
- 2) Connect the inter-unit wires between the indoor and outdoor units so that the terminal numbers match. Tighten the terminal screws securely. It is recommended that a slot-head screwdriver be used to tighten the screws.
- 3) Pull the wire lightly to make sure that it does not disconnect.
- 4) After completing the work, reattach the conduit mounting cover, the protection plate, and the stop valve cover to its original position.

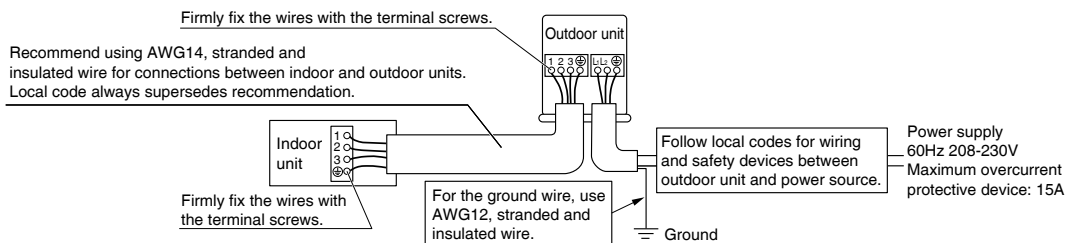

Ground

This air conditioner must be grounded. For grounding, follow all local, and state electrical codes.

NOTE

Take care to ensure that all wiring between indoor unit and outdoor unit has a consistent connection. Any splices can cause communication errors.

Facility Setting (cooling at low outdoor temperature)

⚠ WARNING

Make sure to turn the power OFF before performing work.

⚠ CAUTION


- If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
- Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
- Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used. A humidifier might cause dew condensation from the indoor unit outlet vent.
- Activating the facility setting sets the indoor fan tap to the highest position. Notify the user about this.

This function is designed for facilities such as equipment or computer rooms. It is never to be used in a residence or office where people occupy the space.

- Cutting Jumper (J6) for RXF09, RKF09, RXT09, RXV09/12, Jumper (J7) for RXF12, RKF12, RXT12, RXP09/12 on the circuit board will expand the operation range down to 14°F (–10°C).

Installing an air direction adjustment grille (sold separately) will further extend the operation range to –4°F (–20°C). In these cases, the unit will stop operating if the outdoor temperature falls below –4°F (–20°C), restarting once the temperature rises above this level.

- 1) Remove the top plate of the outdoor unit. (4 screws)
- 2) Remove the front plate. (5 screws)
- 3) Cut Jumper (J6) for RXF09, RKF09, RXT09, RXV09/12, Jumper (J7) for RXF12, RKF12, RXT12, RXP09/12 of the PCB inside.

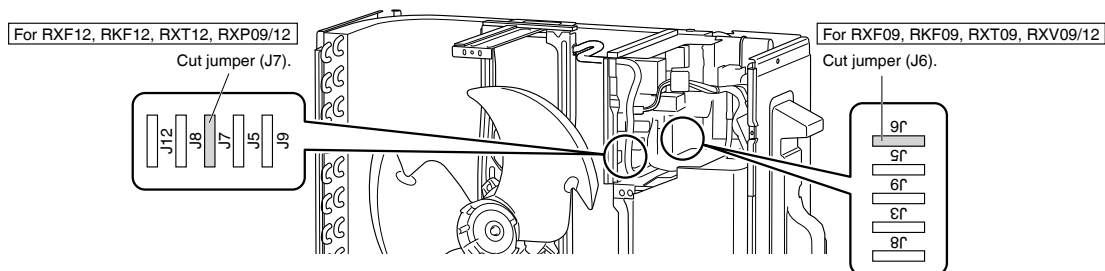


When attaching the drain pan heater (Only for heat pump models)

⚠ WARNING

Make sure to turn the power OFF before performing work.

In high humidity areas or heavy snow areas, it is recommended to attach a drain pan heater to prevent ice build-up from the bottom frame.

- 1) Attach the drain pan heater in accordance with the installation manual included with the drain pan heater.
- 2) Cut jumper (J9) of the PCB inside.

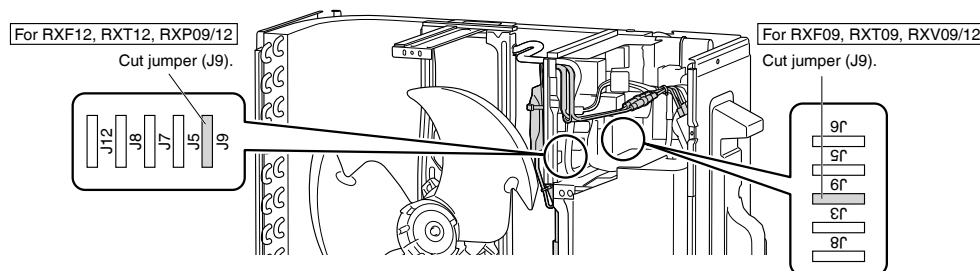


Pump Down Operation

⚠ CAUTION

Do not open/close the stop valves when the outdoor temperature is -5°F (-21°C) or less, as this may result in refrigerant leakage.

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve caps from the liquid stop valve and gas stop valve.
- 2) Begin forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop forced cooling operation.
- 5) Attach the valve caps once procedures are complete.

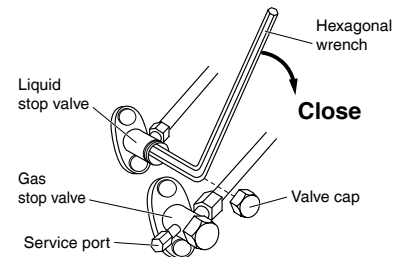

Forced cooling operation

Refer to the installation manual for the indoor unit.

Trial Operation and Testing

- When trial operation is conducted directly after the circuit breaker is turned on, in some cases no air will be output for about 15 minutes in order to protect the air conditioner.

1. Trial operation and testing

Refer to the installation manual for the indoor unit.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed securely.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly grounded.	Electrical leakage	
Only specified wires are used for all wiring, and all wires are connected correctly.	No operation or burn damage	
Indoor or outdoor unit's air inlet or air outlet are unobstructed.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	No operation	

12.4 RXP15/18/24AVJU9

Contents

Safety Considerations	1	Wiring	10
Accessories	4	Facility Setting	
Precautions for Selecting a Location	4	(cooling at low outdoor temperature)	12
Precautions on Installation	5	When attaching the drain pan heater	
Outdoor Unit Installation Diagram	5	(Only for heat pump models)	13
Installation Space Requirements	6	Pump Down Operation	13
Outdoor Unit Installation	7	Trial Operation and Testing	14
1. Installing the outdoor unit	7	1. Trial operation and testing	14
2. Drain work (Only for heat pump models)	7	2. Test items	14
3. Flaring the pipe end.....	7		
4. Refrigerant piping	8		
5. Pressure test and evacuating system.....	9		

The pictures in this document are for illustrative purposes only.

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	Read the precautions in this manual carefully before operating the unit.
	This appliance is filled with R32.

Read these **Safety Considerations for Installation** carefully before installing an air conditioner or heat pump. After completing the installation, make sure that the unit operates properly during the startup operation. Instruct the user on how to operate and maintain the unit. Inform users that they should store this installation manual with the operation manual for future reference. Always use a licensed installer or contractor to install this product. Improper installation can result in water or refrigerant leakage, electric shock, fire, or explosion. Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

-  **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** Indicates situations that may result in equipment or property damage accidents only.

DANGER

- Refrigerant gas is heavier than air and replaces oxygen. A massive leak can lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death. Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.
- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerant gas may produce toxic gas if it comes into contact with fire. Exposure to this gas could cause severe injury or death.
- After completing the installation work, check that the refrigerant gas does not leak throughout the system.
- Do not install unit in an area where flammable materials are present due to risk of explosions that can cause serious injury or death.
- Safely dispose all packing and transportation materials in accordance with federal/state/local laws or ordinances. Packing materials such as nails and other metal or wood parts, including plastic packing materials used for transportation may cause injury or death by suffocation.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal.

⚠ WARNING

- During installation, attach the refrigerant piping securely before operating the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is operated, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- During pump down, stop the compressor before removing the refrigerant piping. If the compressor is still operating and the stop valve is open during pump down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- Only qualified personnel licensed or certified in their jurisdiction must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in water leakage, electric shock, or fire.
- Pipe-work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.
- When installing the unit in a small room, take measures to keep the refrigerant concentration from exceeding allowable safety limits. Excessive refrigerant leaks, in the event of an accident in a closed ambient space, can lead to oxygen deficiency.
- Use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shock, fire, or the unit falling.
- Install the air conditioner or heat pump on a foundation strong enough that it can withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injury.
- Take into account strong winds, typhoons, or earthquakes when installing. Improper installation may result in the unit falling and causing accidents.
- The unit must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur.
The electrical ground circuit may consist of an appropriately sized electrical wire connecting the ground lug in the unit and control box wire to the building's electrical service panel.
Other methods of grounding are permitted if performed in accordance with the "National Electrical Code" (NEC)/ "American National Standards Institute" (ANSI)/ "National Fire Protection Association" (NFPA) 70 and local/state codes.
In CANADA, electrical grounding is to be in accordance with the Canadian Electrical Code CSA C22.1.
Failure to observe this warning can result in electrical shock that can cause personal injury or death.
- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel licensed or certified in their jurisdiction according to local, state, and national regulations. An insufficient power supply capacity or improper electrical construction may lead to electric shock or fire.

- Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
- When wiring, position the wires so that the service lid can be securely fastened. Improper positioning of the service lid may result in electric shock, fire, or the terminals overheating.
- Before touching electrical parts, turn off the unit.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Securely fasten the outdoor unit service lid. If the service lid is not installed properly, dust or water may enter the outdoor unit causing fire or electric shock.
- When installing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R32) such as air. Any presence of air or other foreign substance in the refrigerant circuit can cause an abnormal pressure rise or rupture, which may result in equipment damage and even injury.
- Do not change the setting of the protection devices. If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may occur.
- Do not use means to accelerate the defrosting process (if possible) or to clean, other than those recommended by the manufacturer.
- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Comply with national gas regulations.
- The indoor equipment and pipes shall be securely mounted and guarded such that accidental rupture of equipment cannot occur from such events as moving furniture or reconstruction activities.

⚠ CAUTION

- While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate the piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.
- The refrigerant circuit temperature will be high, therefore the inter-unit wires must be kept away from copper pipes that are not thermally insulated.
- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.
- The heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.

Safety Considerations

- Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor, and other refrigerant cycle parts. Your hands may suffer burns or frostbite if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear proper gloves.
- Install drain piping to ensure proper drainage. Improper drain piping may result in water leakage and property damage.
- Insulate piping to prevent condensation.
- Be careful when transporting the product.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- Do not use a charging cylinder. Using a charging cylinder may cause the refrigerant to deteriorate.
- Refrigerant R32 in the system must be kept clean, dry, and tight.
 - (a) Clean and Dry -- Foreign materials (including mineral oils such as SUNISO oil or moisture) should be prevented from getting into the system.
 - (b) Tight -- R32 does not contain any chlorine, does not destroy the ozone layer, and does not reduce the earth's protection against harmful ultraviolet radiation. R32 can contribute to the greenhouse effect if it is released.
Therefore take proper measures to check for the tightness of the refrigerant piping installation. Read the chapter *Refrigerant piping* and follow the procedures.
- The outdoor unit is for R32. See the catalog for indoor models that can be connected. Normal operation is not possible when connected to non-compatible indoor units.
- Remote controller (wireless kit) transmitting distance can be shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types). Install the indoor unit far away from fluorescent lamps as much as possible.
- Indoor units are for indoor installation only. Outdoor units can be installed either outdoors or indoors.
- Do not install the air conditioner or heat pump in the following locations:
 - (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen.
Plastic parts may deteriorate and fall off or result in water leakage.
 - (b) Where corrosive gas, such as sulfurous acid gas, is produced.
Corroding copper pipes or soldered parts may result in refrigerant leakage.
 - (c) Near machinery emitting electromagnetic waves.
Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
 - (d) Where flammable gas may leak, where there is carbon fiber, or ignitable dust suspension in the air, or where volatile flammables such as thinner or gasoline are handled. Operating the unit in such conditions can cause a fire.

- Take adequate measures to prevent the outdoor unit from being used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke, or fire. Instruct the user to keep the area around the unit clean.
- Servicing shall be performed only as recommended by the manufacturer and licensed or certified in their jurisdiction.




NOTE

- The outdoor unit should be positioned where the unit and power supply wires (breaker panel to outdoor unit) are at least 10ft (3m) away from any televisions or radios. (The unit may cause interference with the picture or sound.) Depending on the radio waves, a distance of 10ft (3m) may not be sufficient to eliminate the noise.
- Dismantling the unit, treatment of the refrigerant, oil and additional parts must be done in accordance with the relevant local, state, and national regulations.
- Only use tools for R32 or R410A, such as a gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, or refrigerant recovery equipment.
- If the conventional refrigerant and refrigerator oil are mixed in R32, the refrigerant may deteriorate.
- This air conditioner or heat pump is an appliance that should not be accessible to the general public.
- As maximum allowable pressure is 604psi (4.17MPa), the wall thickness of field-installed pipes should be selected in accordance with the relevant local, state, and national regulations.

RN008(R32)-U

Accessories

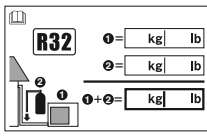Ⓐ Installation manual	1	Ⓑ Drain socket*  This is at the bottom of the packaging.	1
Ⓒ Drain cap (1)* 	6	Ⓓ Drain cap (2)* 	3
Ⓔ Warranty	1	Ⓕ Refrigerant charge label  Affix near the manufacturer's label.	1
Ⓖ General Safety Considerations	1		

* Only for heat pump models

Precautions for Selecting a Location

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operating sound will not be amplified.
- 2) Choose a location where the air discharged from the unit or the operating sound will not cause a nuisance to the neighbors of the user.
- 3) Avoid locations, such as near bedrooms, where the operating sound may cause disturbance.
- 4) There must be sufficient space to carry the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) In coastal areas or other places with a salty atmosphere or one containing sulfate gas, corrosion may shorten the life of the air conditioner.
- 7) Since water will flow from the drain of the outdoor unit, do not place anything under the unit which must be kept away from moisture.
- 8) A location where flammable gas does not leak. Position at least 6-5/8ft (2m) from propane gas cylinders.

NOTE

Cannot be installed suspended from a ceiling or stacked.

CAUTION

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- In heavy snow areas, select an installation site where the snow will not affect the unit.
- If there is a likelihood of snow accumulating on the outdoor unit, attach a snow protection hood (sold separately).
- In high humidity areas or heavy snow areas, it is recommended to attach a drain pan heater (sold separately) to prevent ice build-up from the bottom frame.


- Construct a large canopy.
- Construct a pedestal.



Install the unit high enough off the ground to prevent burying in snow.

Precautions on Installation

- Check the strength and level of the installation surface so that the unit does not cause any operating vibrations or noise after installation.
- Fix the unit in place securely using foundation bolts, as in the figure. (Prepare 4 sets of 5/16 inch (M8) or 3/8 inch (M10) foundation bolts, nuts and washers.)
- It is best to screw in the foundation bolts until their ends are 3/4 inch (20mm) from the foundation surface.

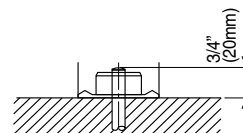

Outdoor Unit Installation Diagram


	RXF18, RKF18, RXT15, RXT18, RXP15, RXP18	RXF24, RKF24, RXT24, RXP24, RXV30, RXV36, RKV30, RKV36
Max. allowable piping length	98-1/2ft (30m)	
Min. allowable piping length	10ft (3m)	
Max. allowable piping height	65-5/8ft (20m)	
Additional refrigerant required for refrigerant pipe exceeding 49-1/4ft (15m) in length.	0.22oz/ft (20g/m)	
Gas pipe	O.D. 1/2 inch (12.7mm)	O.D. 5/8 inch (15.9mm)
Liquid pipe	O.D. 1/4 inch (6.4mm)	

Refrigerant piping must be kept to a minimum.

*Be sure to add the proper amount of additional refrigerant.

Failure to do so may result in reduced performance.

**The suggested shortest pipe length is 10ft (3m), in order to avoid noise from the outdoor unit and vibration.
(Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)

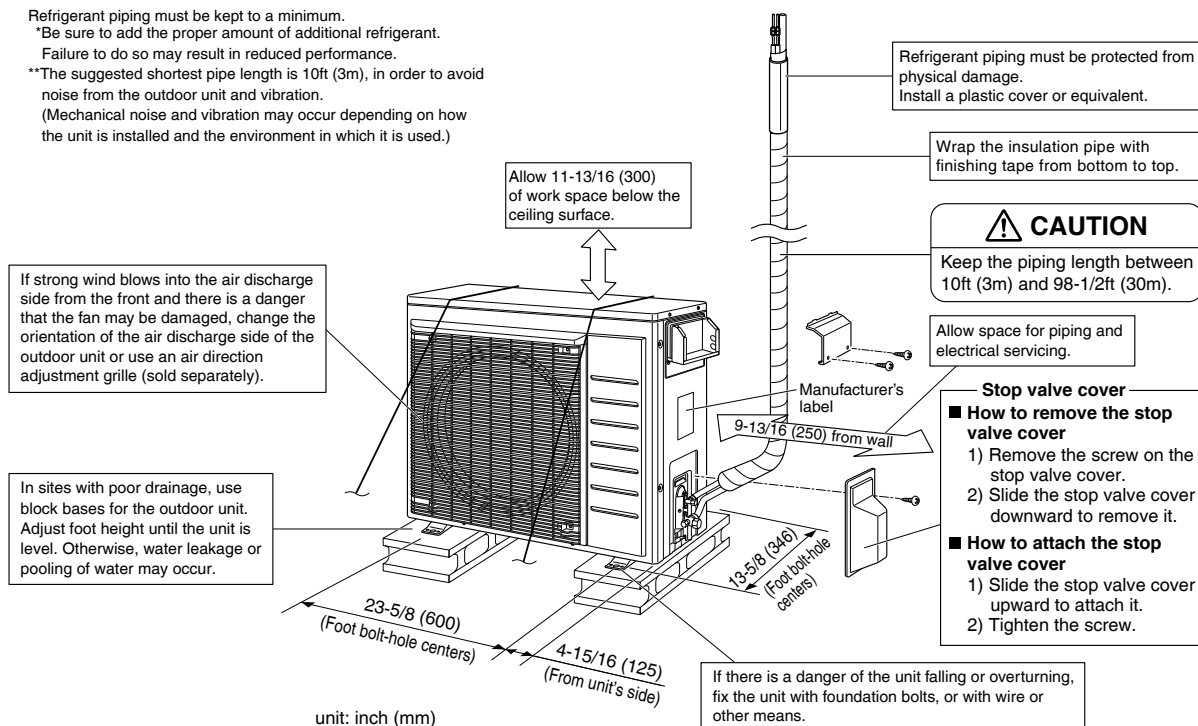

Refrigerant charge label

Please fill in with indelible ink,

1 the factory refrigerant charge of the product,

2 the additional refrigerant amount charged in the field and

1 + 2 the total refrigerant charge on ② refrigerant charge label.

Affix ② refrigerant charge label near the manufacturer's label after filling it out.


- 1 factory refrigerant charge of the product: see unit manufacturer's label
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 outdoor unit
- 5 refrigerant cylinder and manifold for charging

- The minimum required floor area of the room where the indoor unit is installed varies depending on the installation height and refrigerant amount. For details, refer to the General Safety Considerations supplied with the indoor unit.


Installation Space Requirements

- Position the unit on a horizontal surface. Any tilt in the unit should be 3° or less to the horizontal.
- Where a wall or other obstacle is in the path of the outdoor unit's intake or exhaust airflow, follow the installation space requirements below.
- For any of the below installation patterns, the wall height on the outlet side should be $47\frac{1}{4}$ inch (1200mm) or less.
- Secure as much installation space around the unit as the location allows, as more space will result in more efficient operation.


Wall facing one side

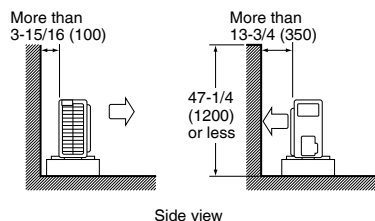

Walls facing two sides

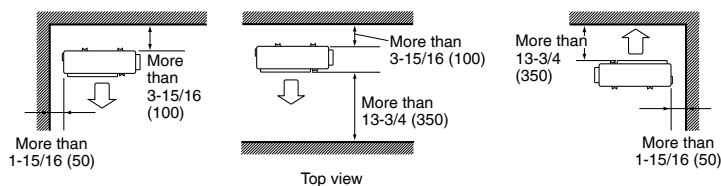

Walls facing three sides

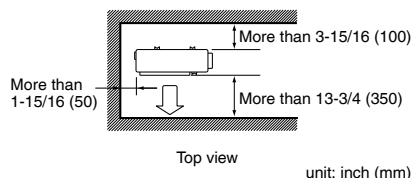

unit: inch (mm)

When installed as in the figure on the left, it is recommended to either change the orientation of the outdoor unit outlet side or use the air direction adjustment grille (sold separately).

Outdoor Unit Installation

1. Installing the outdoor unit

- When installing the outdoor unit, refer to “Precautions for Selecting a Location” on page 4 and “Outdoor Unit Installation Diagram” on page 5.
- If drain work is necessary, follow the procedures below.

2. Drain work (Only for heat pump models)

⚠ CAUTION


- In cold areas, do not use a drain socket, drain caps (1, 2) and a drain hose with the outdoor unit. (Drain water may freeze, impairing heating performance.)

- If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 1-1/4 inch (30mm) in height under the outdoor unit's feet.

1) Attach ③ drain cap (1) and ④ drain cap (2).

2) Attach ⑤ drain socket to the shape of drain hole and fix it by turning.

- When attaching ⑤ drain socket to the bottom frame, make sure to connect the drain hose to the drain socket first.

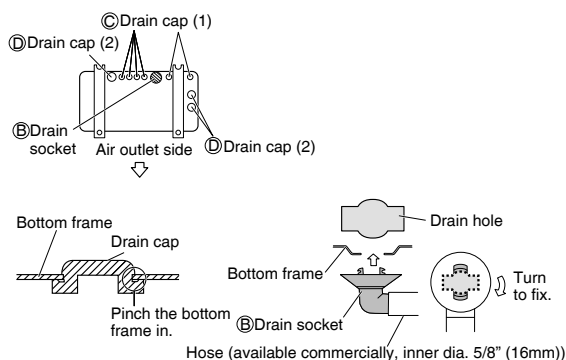

3. Flaring the pipe end


⚠ WARNING

- Do not apply mineral oil to the flare.
- Prevent mineral oil from getting into the system as this would reduce the service life of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with this unit.
- Never install a dryer to this R32 unit in order to guarantee its service life.
- The drying material may dissolve and damage the system.
- Improper flaring may result in refrigerant gas leakage.

⚠ CAUTION

- Do not reuse joints which have been used once already.

- Cut the pipe end with a pipe cutter.
- Remove burrs with the cut surface facing downward, so that the filings do not enter the pipe.
- Put the flare nut on the pipe.
- Flare the pipe.
- Check that the flaring has been done correctly.

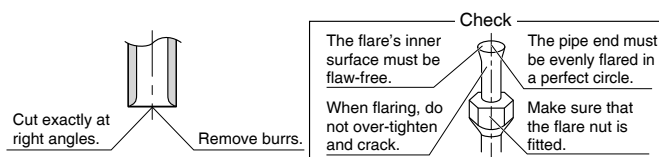



Set exactly at the position shown below.		
Flare tool for R32 or R410A	Conventional flare tool	
	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)
Die	0.039-0.059 inch (1.0-1.5mm)	0.059-0.079 inch (1.5-2.0mm)

4. Refrigerant piping

⚠ CAUTION

- Use the flare nut fixed to the main unit. (This is to prevent the flare nut from cracking as a result of deterioration over time.)
- Use a torque wrench when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.
- Excessive tightening of the flare nut can result in the flare nut cracking in the long term, leading to gas leakage.

- 1) To prevent gas leakages, apply gas leak prevention agent to the inner surface of the flare only.
- 2) For refrigerant pipe connections, align the center of the flare and the union, tighten the flare nut 3 to 4 turns by hand, and then use a torque wrench and a spanner to firmly tighten to the specified torque.

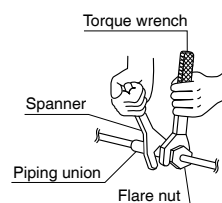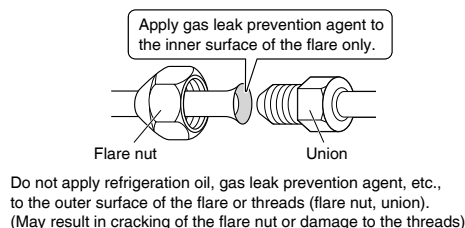

Tightening torque

Piping connection

Flare nut		
Gas side		Liquid side
1/2 inch (12.7mm)	5/8 inch (15.9mm)	1/4 inch (6.4mm)
36-1/2-44-1/2lbf • ft (49.5-60.3N • m)	45-5/8-55-5/8lbf • ft (61.8-75.4N • m)	10-1/2-12-5/8lbf • ft (14.2-17.2N • m)

Service port cap

7-7/8-10-7/8lbf • ft
(10.7-14.7N • m)

Valve cap

Width across flats		
11/16 inch (17mm)	7/8 inch (22mm)	1 inch (26mm)
10-1/2-12-5/8lbf • ft (14.2-17.2N • m)	16-1/4-19-7/8lbf • ft (22.1-26.9N • m)	23-1/4-28-3/8lbf • ft (31.5-38.5N • m)

Cautions on pipe handling

- Protect the open end of the pipe from dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

Selection of copper and heat insulation materials


When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.024 to 0.030Btu/fth°F) (0.035 to 0.045kcal/mh°C)
Be sure to use insulation that is designed for use with HVAC Systems.
- ACR Copper only.
- Be sure to insulate both the gas and liquid piping and observe the insulation dimensions as below.



	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 1/2 inch (12.7mm)	1-9/16 inch (40mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 9/16-5/8 inch (14-16mm)	13/32 inch (10mm) Min.
	O.D. 5/8 inch (15.9mm)	1-15/16 inch (50mm) or more	0.039 inch (1.0mm) (C1220T-O)	I.D. 5/8-13/16 inch (16-20mm)	
Liquid side	O.D. 1/4 inch (6.4mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 5/16-13/32 inch (8-10mm)	

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.
- Using finishing tape, bundle and wrap the indoor unit piping and drain hose together so that the drain hose is below the other piping.

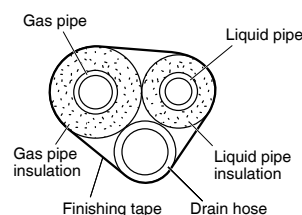

Outdoor Unit Installation

5. Pressure test and evacuating system


⚠ WARNING

- Make sure that air or any matter other than refrigerant (R32) does not get into the refrigeration cycle.
- If refrigerant gas leaks should occur, ventilate the room as soon and as much as possible.
- R32, as well as other refrigerants, should always be recovered and never be released directly into the environment.
- Use tools for R32 or R410A (such as the gauge manifold, charging hose, or vacuum pump adapter).

⚠ CAUTION

Do not open/close the stop valves when the outdoor temperature is -5°F (-21°C) or less, as this may result in refrigerant leakage.

- When piping work is complete, it is necessary to perform a pressure test and evacuate system with a vacuum pump.
- If using additional refrigerant, purge the air from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench (3/16 inch (4mm)) to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench to the specified tightening torque.

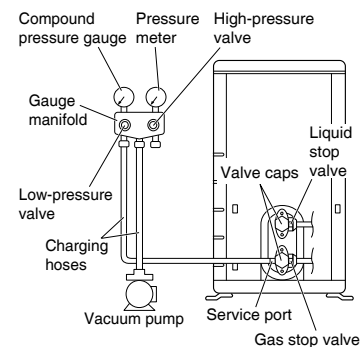

- 1) Pressurize the liquid pipe and gas pipe from the service port of gas stop valve to 604psi (4.17MPa) (do not pressurize more than 604psi (4.17MPa)) for 1 hour minimum, 24 hours recommended. If there is a pressure drop, check for leaks, make repairs and perform the pressure test again.
- 2) Connect the gauge manifold's charging hose to the gas stop valve's service port.
- 3) Fully open the low-pressure valve (Lo) on the gauge manifold and fully close the high-pressure valve (Hi). (High-pressure valve will require no further operation.)
- 4) Evacuate system using vacuum pump to below 500 microns for 1 hour minimum.
- 5) Close the low-pressure valve (Lo) on the gauge manifold and stop vacuum pumping. (Maintain this condition for a few minutes to make sure that the compound pressure gauge pointer does not swing back.)*¹
- 6) Remove the valve caps from the liquid stop valve and gas stop valve.
- 7) To open the liquid stop valve, turn the rod of the valve 90° counter-clockwise using a hexagonal wrench. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from the indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off.*²
- 8) Disconnect the charging hoses from the service port for the gas stop valve, then fully open the liquid and gas stop valves. (Do not attempt to turn the valve rods further than they can go.)
- 9) Tighten the valve caps and service port caps for the liquid and gas stop valves with a torque wrench to the specified torques. Refer to "4. Refrigerant piping" on page 8 for details.

*¹ If the compound pressure gauge pointer swings back, the refrigerant pipes may contain water or there may be a loose pipe joint.

Check all pipe joints and retighten nuts as needed, then repeat steps 3) through 5).

*² Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.

A halide torch (or any other detector using a naked flame) shall not be used.

Do not use substances containing chlorine and electronic leak detection for gas leak detection.

Wiring

⚠ WARNING

• RISK OF ELECTRIC SHOCK CAUSE INJURY OR DEATH.


- System contains oversize protective earthing (grounding) terminal which shall be properly connected.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death.
Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.
- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electric shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Use an all-pole disconnection type circuit breaker with at least 1/8 inch (3mm) between the contact point gaps.
- When carrying out wiring, take care not to pull at the conduit.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.
- Do not turn on the circuit breaker until all work is completed.

⚠ CAUTION

Precautions to be taken for wiring


- Recommend stranded cable for interunit wiring. Local code always supersedes recommendation.
- For stranded wires, make sure to use the round crimp-style terminal. Place the round crimp-style terminals on the wires up to the covered part and secure in place.

1) Use the following method when installing a round crimp-style terminal.

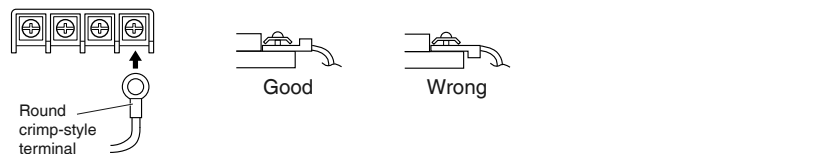

2) Use the following method when installing a solid core wire.

Make sure to curl the end of the lead. Improper work may cause heat and fire.

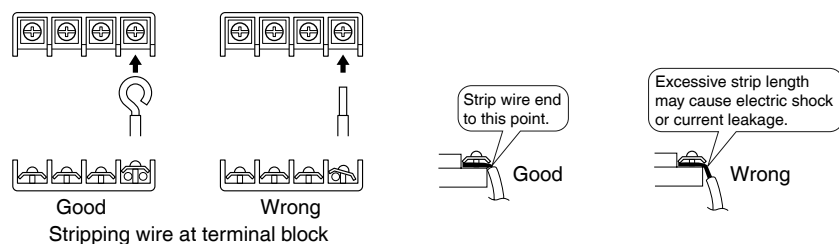


Wiring

[Method of mounting conduit]


When wiring, remove the top plate and look at the wiring diagram on the back of the top plate.

- 1) Dismount the service lid by removing the 2 screws.
- 2) Slide the protection plate up and remove it.
- 3) Pass wires through the conduit and secure them with a lock nut.

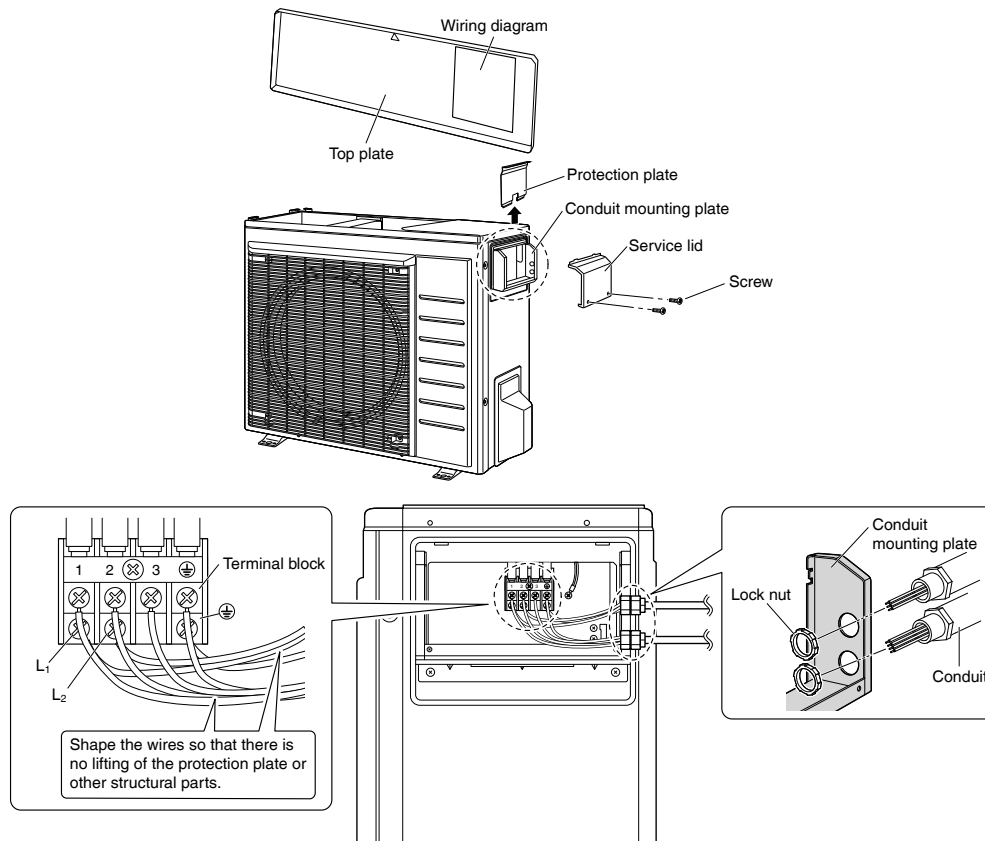

[Wiring procedure]

- 1) Strip the insulation from the wire (3/4 inch (20mm)).
- 2) Connect the inter-unit wires between the indoor and outdoor units so that the terminal numbers match. Tighten the terminal screws securely. It is recommended that a slot-head screwdriver be used to tighten the screws.
- 3) Pull the wire lightly to make sure that it does not disconnect.
- 4) Pass the wiring through the cutout on the bottom of the protection plate and attach the protection plate.
- 5) After completing the work, reattach the service lid to its original position.

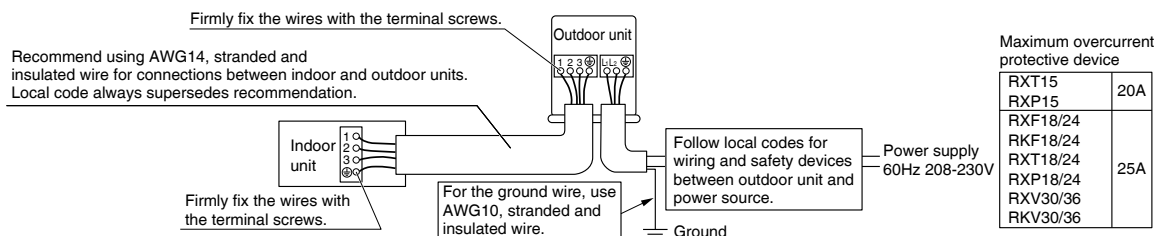

Ground

This air conditioner must be grounded. For grounding, follow all local, and state electrical codes.

NOTE

Take care to ensure that all wiring between indoor unit and outdoor unit has a consistent connection. Any splices can cause communication errors.

Facility Setting (cooling at low outdoor temperature)

⚠ WARNING

- Make sure to turn the power OFF before performing work.



⚠ CAUTION

- If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
- Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
- Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used. A humidifier might cause dew condensation from the indoor unit outlet vent.
- Activating the facility setting sets the indoor fan tap to the highest position. Notify the user about this.

This function is designed for facilities such as equipment or computer rooms. It is never to be used in a residence or office where people occupy the space.

- Cutting jumper (J7) on the PCB will extend the operation range to 14°F (–10°C). Installing an air direction adjustment grille (sold separately) will further extend the operation range to –4°F (–20°C). In these cases, the unit will stop operating if the outdoor temperature falls below –4°F (–20°C), restarting once the temperature rises above this level.


- 1) Remove the top plate of the outdoor unit. (6 screws)
- 2) Remove the front plate. (10 screws)
- 3) Remove the anti-drip cover.
- 4) Cut jumper (J7) of the PCB inside.

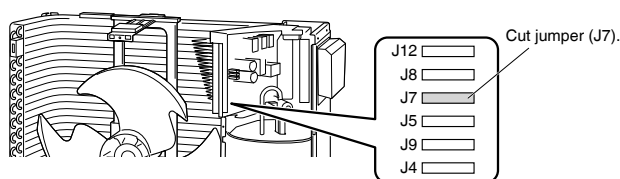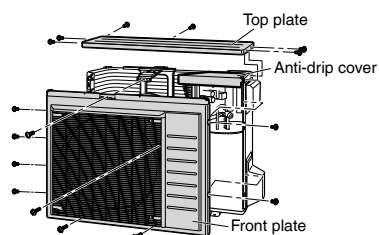

Only for RKV30/36 models

- Cutting jumper (J4) on the PCB, in addition to jumper (J7), will extend the operating range to –22°F (–30°C). The unit will stop operating if the outdoor temperature falls below –22°F (–30°C), and restart once the temperature rises above this level.

- 1) Cut jumper (J4) on the PCB in addition to jumper (J7).

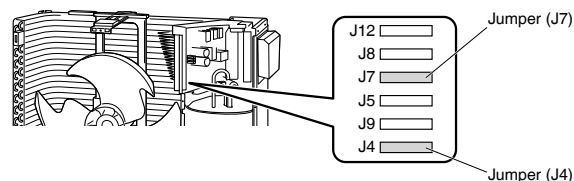

NOTE

When the outdoor temperature is below –4°F (–20°C) and J4 is cut (as in this step), it may take up to 3 hours for operation to begin as the system must be warmed up to protect the compressor.


When attaching the drain pan heater (Only for heat pump models)

WARNING

- Make sure to turn the power OFF before performing work.

In high humidity areas or heavy snow areas, it is recommended to attach a drain pan heater to prevent ice build-up from the bottom frame.

- 1) Attach the drain pan heater in accordance with the installation manual included with the drain pan heater.
- 2) Cut jumper (J9) of the PCB inside.

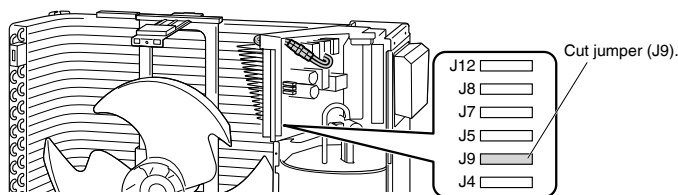


Pump Down Operation

CAUTION

Do not open/close the stop valves when the outdoor temperature is -5°F (-21°C) or less, as this may result in refrigerant leakage.

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve caps from the liquid stop valve and gas stop valve.
- 2) Begin forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop forced cooling operation.
- 5) Attach the valve caps once procedures are complete.

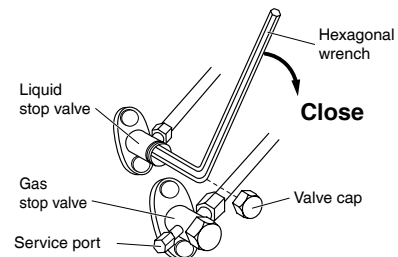

Forced cooling operation

Refer to the installation manual for the indoor unit.

Trial Operation and Testing

- When trial operation is conducted directly after the circuit breaker is turned on, in some cases no air will be output for about 15 minutes in order to protect the air conditioner.

1. Trial operation and testing

Refer to the installation manual for the indoor unit.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed securely.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly grounded.	Electrical leakage	
Only specified wires are used for all wiring, and all wires are connected correctly.	No operation or burn damage	
Indoor or outdoor unit's air inlet or air outlet are unobstructed.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	No operation	

13. Operation Manual

13.1 FDMA09/12/15/18/24AVJU9

Read Before Operation

Contents

■ Read Before Operation	
Safety Considerations.....	1
Names of Parts	4
■ Multi Connection	
Note for Multi System	5
■ Care	
Care and Cleaning.....	7
■ When the Need Arises	
Troubleshooting	9

The pictures in this document are for illustrative purposes only.

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	Read the precautions in this manual carefully before operating the unit.
	This appliance is filled with R32.

Read these **Safety Considerations for Operations** carefully before operating an air conditioner or heat pump. Make sure that the unit operates properly during the startup operation. Instruct the user on how to operate and maintain the unit. Inform users that they should store this operation manual with the installation manual for future reference.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

-  **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** Indicates situations that may result in equipment or property-damage accidents only.

-  **DANGER** —
- Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.
 - Any abnormalities in the operation of the air conditioner or heat pump, such as smoke or fire, could result in severe injury or death. Turn off the power and contact your dealer immediately.
 - Refrigerant gas may produce toxic gas if it comes into contact with fire, such as from a fan heater, stove, or cooking device. Exposure to this gas could cause severe injury or death.
 - For refrigerant leakage, consult your dealer. Refrigerant gas is heavier than air and replaces oxygen. A massive leak could lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
 - If equipment utilizing a burner is used in the same room as the air conditioner or heat pump, there is the danger of oxygen deficiency which could lead to an asphyxiation hazard resulting in serious injury or death. Be sure to ventilate the room sufficiently to avoid this hazard.

Read Before Operation

- Safely dispose of the packing materials. Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.
- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death by suffocation.

⚠ WARNING

- Contact your dealer for repair and maintenance. Improper repair and maintenance may result in water leakage, electric shock, and fire. Only use accessories made by Daikin that are specifically designed for use with the equipment and have them installed by a professional.
- Contact your dealer to move and reinstall the air conditioner or heat pump. Incomplete installation may result in water leakage, electric shock, and fire.
- Never let the indoor unit or the remote controller get wet. Water can cause an electric shock or a fire.
- Never use flammable spray such as hair spray, lacquer, or paint near the unit. Flammable spray may cause a fire.
- When a fuse blows out, never replace it with one of incorrect ampere ratings or different wires. Always replace any blown fuse with a fuse of the same specification.
- Never inspect or service the unit by yourself. Contact a qualified service person to perform this work.
- Turn off all electrical power before doing any maintenance to avoid the risk of serious electric shock; never sprinkle or spill water or liquids on the unit.
- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- The heat exchanger fins are sharp enough to cut. To avoid injury wear gloves or cover the fins while working around them.
- Do not put a finger or other objects into the air inlet or air outlet. The fan is rotating at high speed and will cause injury.
- Check the unit foundation for damage on a continuous basis, especially if it has been in use for a long time. If left in a damaged condition the unit may fall and cause injury.
- Never touch the internal parts of the controller. To check and adjust internal parts, contact your dealer.
- Be sure to establish a ground. Do not ground the unit to a utility pipe, arrester, or telephone ground. Incomplete grounding may cause electrical shock, or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.
- Be sure to install a ground fault circuit interrupter. Failure to install a ground fault circuit interrupter may result in electric shock or fire.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Do not turn off the power to air conditioners or connected devices (detectors and alarms, mechanical ventilators, safety shut-off valves, etc.) except when replacing parts or conducting inspections.
Failure to detect a refrigerant leakage may result in a fire.
- Consult your dealer when making changes to the room layout or partitions.
It will be necessary to re-examine safety measures required in managing refrigerant leakages.
Failure to implement the necessary safety measures may lead to flammable concentrations.

⚠ CAUTION

- Do not use the air conditioner or heat pump for any other purposes other than comfort cooling or heating.
Do not use the unit for cooling precision instruments, food, plants, animals or works of art.
- Do not place items under the indoor unit as they may be damaged by condensates that may form if the humidity is above 80% or if the drain outlet gets blocked.
- For care and cleaning, call service person.
- Before cleaning, stop the operation of the unit by turning the power off or by pulling the supply cord out from its receptacle. Otherwise, an electric shock and injury may result.
- Do not wash the air conditioner or heat pump with excessive water. An electric shock or fire may result.
- Avoid placing the controller in a spot which may be splashed with water. Water entering the controller may cause an electric shock or damage the internal electronic parts.
- Do not operate the air conditioner or heat pump when using a room-fumigation type of insecticide.
Failure to observe this could cause the chemicals to be deposited in the unit and can endanger the health of those who are hypersensitive to chemicals.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- The appliance is not intended for use by young children or infirm persons without supervision.
- The remote controller should be kept away from children so they cannot play with it.
- Consult with the installation contractor for cleaning.
- Incorrect cleaning of the inside of the air conditioner or heat pump could make the plastics parts break and cause water leakage or electric shock.

Read Before Operation

Safety Considerations

- Do not touch the air inlet or aluminum fin of the air conditioner or heat pump as they can cut and cause injury.
- Do not place objects in direct proximity of the outdoor unit. Do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, animals can cause the unit to malfunction, and cause smoke or fire when they make contact with electrical parts.

NOTE

- Never press the button of the remote controller with a hard, pointed object. The remote controller may be damaged.
- Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
- Do not place appliances that produce open flames in places that are exposed to the airflow of the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.
- Do not expose the controller to direct sunlight. The LCD display can become discolored and may fail to display the data.
- Do not wipe the controller operation panel with benzene, thinner, chemical dust cloth, etc. The panel may get discolored or the coating can peel off. If it is heavily dirty, soak a cloth in a water-diluted neutral detergent, squeeze it well and wipe the panel clean. Then wipe it with another dry cloth.
- Dismantling of the unit, disposal of the refrigerant, oil, and additional parts, should be done in accordance with the relevant local, state, and national regulations.
- Operate the air conditioner or heat pump in a sufficiently ventilated area and not surrounded by obstacles. Do not use the air conditioner or heat pump in the following places.
 - a. Places with a mist of mineral oil, such as cutting oil.
 - b. Locations such as coastal areas where there is a lot of salt in the air.
 - c. Locations such as hot springs where there is a lot of sulfur in the air.
 - d. Locations such as factories where the power voltage varies a lot.
 - e. In cars, boats, and other vehicles.
 - f. Locations such as kitchens where oil may splatter or where there is steam in the air.
 - g. Locations where equipment produces electromagnetic waves.
 - h. Places with an acid or alkaline mist.
 - i. Places where fallen leaves can accumulate or where weeds can grow.
- Take snow protection measures. Contact your dealer for the details of snow protection measures, such as the use of a snow protection hood.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with your dealer for electrical work and grounding work.
- Pay attention to operating sound. Be sure to use the following places:
 - a. Places that can sufficiently withstand the weight of the air conditioner or heat pump yet can suppress the operating sound and vibration.
 - b. Places where warm air from the air outlet of the outdoor unit or the operating sound of the outdoor unit does not annoy neighbors.
- Make sure that there are no obstacles close to the outdoor unit. Obstacles close to the outdoor unit may drop the performance of the outdoor unit or increase the operating sound of the outdoor unit.
- Consult your dealer if the air conditioner or heat pump in operation generates unusual noise.
- Make sure that the drainpipe is installed properly to drain water. If no water is discharged from the drainpipe while the air conditioner or heat pump is in the cooling mode, the drainpipe may be clogged with dust or dirt and water leakage from the indoor unit may occur. Stop operating the air conditioner or heat pump and contact your dealer.
- Do not spray the air conditioner unit with any deodorizers, etc. It may cause the unit to malfunction.
- A refrigerant sensor is mounted in the indoor units. Do not use gas appliances using flammable gas (propane, butane, methane, etc.), sprays using flammable gas (LPG, etc.) such as insecticide or hair spray, smoke, medical agent and paint in the vicinity.
- Once the refrigerant sensor reacts, it needs to be replaced with a new one.


FFP003M(R32)-U

This is an appliance that is not accessible to the general public.

Read Before Operation

Names of Parts


Indoor Unit

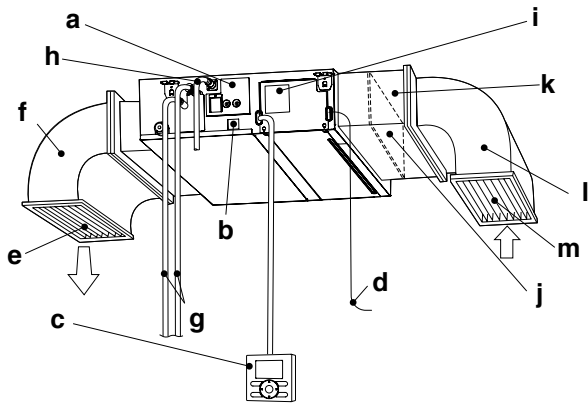

a	Drain discharge device (built-in)	g	Refrigerant piping
b	Drain pan inspection window	h	Drain piping
c	Remote controller • The appearance of the remote controller may differ between different models. • For details on remote controller operation, refer to the operation manual included with the remote controller.	i	Model name (Model name plate)
		j	Air filter (Sold separately)
		k	Suction filter chamber (Sold separately)
d	Wiring between the indoor and outdoor units	l	Suction duct (Field supply)
e	Air outlet grille (Field supply)	m	Suction grille (Field supply)
f	Exhaust duct (Field supply)		

Outdoor Unit

- The appearance of the outdoor unit may differ between different models.

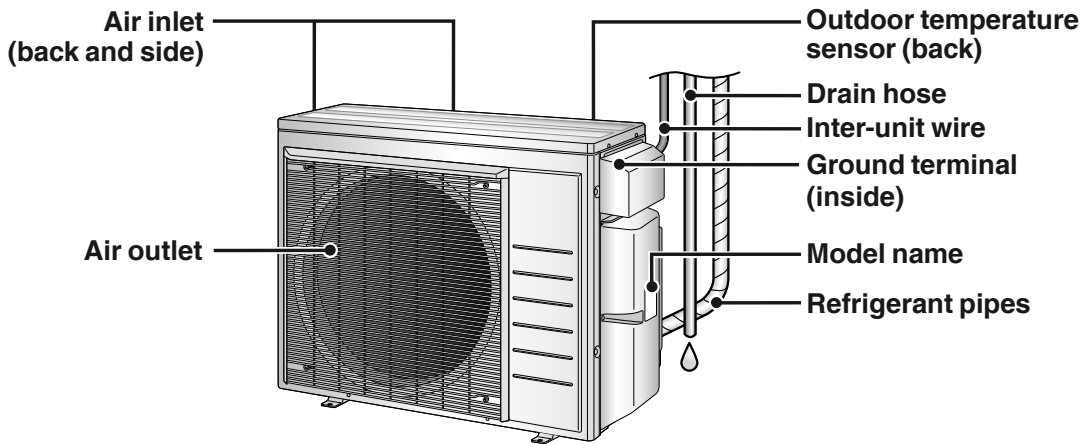

Multi Connection

Note for Multi System

A multi system has one outdoor unit connected to multiple indoor units.


Selecting the operation mode

When the priority room setting is active but the set unit is not operating or when the priority room setting is inactive

When more than one indoor unit is operating, priority is given to the first unit that was turned on.

In this case, set the units that are turned on later to the same operation mode as the first unit.

Otherwise, they will enter the standby state, and when using the wired remote controller the centralized control icon "CENTRAL CONTROL" will light up; this does not indicate malfunction.

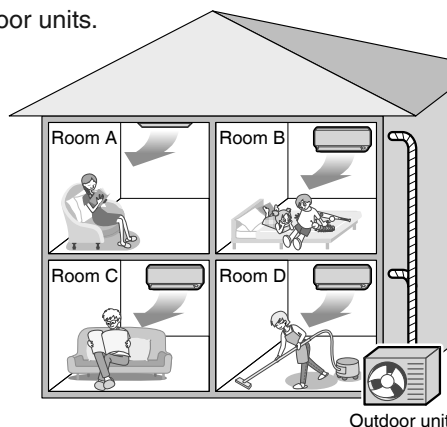

NOTE

Notes on operation mode for a multi system

- COOL, DRY and FAN operation may be used at the same time.
 - AUTO operation automatically selects COOL operation or HEAT operation based on the indoor temperature.
- Therefore, AUTO operation is available when selecting the same operation mode as that of the first unit to be turned on.

CAUTION

- Normally, the operation mode of the first unit that was turned on is given priority, but the following situations are exceptions to this rule. If the operation mode of the first room is FAN operation, using HEAT operation in any room after this will give priority to HEAT operation. In this situation, the indoor unit operating in FAN mode will switch to standby, and when using the wired remote controller the centralized control icon "CENTRAL CONTROL" will light up.

When the priority room setting is active

Refer to "Priority room setting" on the next page.

Multi Connection

COOL/HEAT mode lock

The COOL/HEAT mode lock requires initial programming during installation. Please consult your authorized dealer for assistance. The COOL/HEAT mode lock sets the unit forcibly to either COOL or HEAT operation. This function is convenient when you wish to set all indoor units connected to the multi system to the same operation mode.

NOTE

- The COOL/HEAT mode lock cannot be activated together with the priority room setting.

Priority room setting

The priority room setting requires initial programming during installation. Please consult your authorized dealer for assistance. The room designated as the priority room takes priority in the following situations.

Operation mode priority

- As the operation mode of the priority room takes precedence, you can select a different operation mode from other rooms.

[Example]

- Room A is the priority room in this example.

When COOL operation is selected in room A while operating the following modes in room B, C and D:

Operation mode in room B, C and D	Status of room B, C and D when the unit in room A is in COOL operation
COOL or DRY or FAN	The current operation mode is maintained.
HEAT	The unit enters the standby mode. Operation resumes when the room A unit stops operating.
AUTO	If the unit is set to COOL operation, it continues. If the unit is set to HEAT operation, it enters the standby mode. Operation resumes when the room A unit stops operating.

Care

Care and Cleaning

WARNING

- Only a qualified service person is allowed to perform maintenance.
- Before cleaning, be sure to stop unit operation and turn off the circuit breaker.
Otherwise, an electric shock and injury may result.
If the refrigerant sensor detects a refrigerant leakage, the fan may suddenly start rotating even though operation is stopped.
- Contact a qualified person regarding the attachment of accessories and be sure to use only accessories specified by the manufacturer.
If an accessory is attached incorrectly, water leakage, an electric shock, or fire may result.

CAUTION

- When cleaning, use a sturdy and stable stand and watch your step.
- Do not touch the aluminium fins of the indoor unit. If you touch those parts, this may cause an injury.

■ How to clean the air filter

When the remote controller indicates "Time to clean filter", clean the air filter.

- It indicates after running for a certain time.

Notes on cleaning

For cleaning, do not use any of the following:

- Water hotter than 104°F (40°C)
- Volatile liquid such as benzine, gasoline and thinner
- Polishing compounds or liquid insecticide
- Rough materials such as a scrubbing brush
- Sprays such as deodorizers
- You may change the time of indication "Time to clean filter".



If the indoor unit is used in a space where the air is too contaminated, ask your local dealer for solution.

Contamination	Time until indication is displayed
Normal	2500 hours (equivalent to one year)
More contaminated	1250 hours (equivalent to a half year)

- If it becomes difficult to remove contamination from the air filter, replace the air filter.
(Air filter for replacement is a separately sold accessory.)
- Do not remove the air filter except when cleaning. Unnecessary handling may damage the filter.
(This product is not provided with an air filter as a standard accessory.)
- Do not attach objects other than the genuine air filter (e.g., kitchen paper) to the air inlet.
Otherwise, the performance of the air conditioner will be degraded, and icing or water leakage may result.
- This product is a ceiling mounted duct type air conditioner.

Installing under roof

If the air filter (sold separately) is used, request a special contractor for the cleaning of the air filter.

Not installing under roof

Always use the long-life filter chamber (sold separately). Be sure to request your dealer for the installation of the long-life chamber. For the methods of mounting, dismounting, and cleaning the air filter, refer to the manual provided with the air filter.

- Be sure to use the separately sold filter chamber.
Request your dealer for the installation of the filter chamber.
- Be sure to clean the air filter at the beginning of the cooling or heating season.
(A decrease in the airflow volume of the air conditioner will result and the performance of the air conditioner will be degraded if the air filter is clogged with dust or dirt.)

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.

After completing cleaning and installing an air filter, turn off the indication of "Time to clean filter" on the remote controller.

- For details, refer to the operation manual attached to the remote controller.
- The indication can be turned off while the unit is either operating or stopped.

■ How to clean air outlet, outside panels and remote controller

1. Clean with soft cloth.

2. When it is difficult to remove stains, use water or neutral detergent.

NOTE

- Do not wash the suction grille with water of 122°F (50°C) or higher.
It may cause discoloration and deformation.
- When drying the suction grille, do not heat it with fire. It may cause burning.
- Do not use substances such as gasoline, benzene, thinner, polishing powder and liquid insecticide sold in the market.
It may cause discoloration and deformation.

■ Prior to a long period of non-use

1. Operate the FAN mode for several hours on a fine day to dry out the inside.

- 1) Press the "MODE" selector button and select "FAN" operation.
 - When a multi outdoor unit is connected, make sure the HEAT operation is not being used in other rooms before you use the FAN operation. ▶ Page 5
- 2) Press the "ON/OFF" button and start operation.

2. Clean the air filters and reattach them. ▶ Page 7

■ We recommend periodical maintenance

- In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist.
- For specialist maintenance, please contact the dealer where you bought the air conditioner.
- The maintenance cost must be borne by the user.

When the Need Arises

Troubleshooting

Before making an inquiry or a request for repair, please check the following. If the problem persists, consult your dealer.



Not a problem

This case is not a problem.



Check

Please check again before requesting repairs.

Case	Description / what to check
Operation does not start soon. - When ON/OFF button was pressed soon after operation was stopped. - When the mode was reselected.	☒ This is to protect the air conditioner. You should wait for about 3 minutes.
Air does not come out.	☒ ■ In HEAT operation - The air conditioner is warming up. Wait for about 1 to 4 minutes. - During defrosting operation, hot air does not flow out of the indoor unit. ■ When the air conditioner operates immediately after the circuit breaker is turned on - The air conditioner is preparing to operate. Wait for about 3 to 20 minutes.
The HEAT operation stops suddenly and a flowing sound is heard.	☒ The system is taking away the frost on the outdoor unit. You should wait for about 4 to 12 minutes.
The outdoor unit emits water or steam.	☒ ■ In HEAT mode - The frost on the outdoor unit melts into water or steam when the air conditioner is in defrost operation. ■ In COOL or DRY mode - Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mist comes out of the indoor unit.	☒ This happens when the air in the room is cooled into mist by the cold airflow during cooling operation.
The indoor unit gives out odor.	☒ This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the airflow. (If this happens, we recommend you to have the indoor unit washed by a technician. Consult your dealer where you bought the air conditioner.)
Air is emitted from the air outlet grille even when the air conditioner is not in operation.	☒ ■ This occurs when the refrigerant sensor has been triggered causing the fan in the indoor unit to rotate. The sensor is in the process of detecting a refrigerant leakage. If it is determined that there is no refrigerant leakage, the fan of the indoor unit will automatically stop after a few minutes. If air continues to flow out from the air outlet grille for more than 10 minutes, there may be a refrigerant leakage. Please consult your dealer. In addition to refrigerant, the refrigerant sensor may also be triggered by hairspray, insecticide, etc., resulting in a false positive.
The outdoor fan rotates while the air conditioner is not in operation.	☒ ■ After operation is stopped: - The outdoor fan continues rotating for another 1 minute for system protection. ■ While the air conditioner is not in operation: - When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
The operation stopped suddenly. (OPERATION lamp* is on.)	☒ - For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes. - Are operation modes all the same for indoor units connected to outdoor units in the multi system? If not, set all indoor units to the same operation mode.
The air conditioner does not operate. (OPERATION lamp* is off.)	☐ - Hasn't the circuit breaker turned OFF or a fuse blown? - Isn't it a power failure? - Is the timer setting correct?
Cooling (Heating) effect is poor.	☐ - Are the air filters clean? - Is there anything blocking the air inlet or the outlet of the indoor and the outdoor units? - Is the temperature setting appropriate? - Are the windows and doors closed? - Are the airflow rate set appropriately?
Operation stops suddenly. (OPERATION lamp* is blinking.)	☐ - Are the air filters clean? - Is there anything blocking the air inlet or the outlet of the indoor and the outdoor units? Clean the air filters or take all obstacles away and turn the circuit breaker OFF. Then turn it ON again and try operating the air conditioner with the remote controller. If the lamp still blinks, call your dealer where you bought the air conditioner.

* The OPERATION lamp is on the receiver of the separately sold wired remote controller.

When the Need Arises

Case	Description / what to check
An abnormal functioning happens during operation.	 The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote controller.

Notes on the operating conditions

- If operation continues under any conditions other than those listed in the table,
 - A safety device may activate to stop the operation. (With a multi connection in COOL operation, the safety device may work to stop the operation of the outdoor unit only.)
 - Dew may form on the indoor unit and drip from it when COOL or DRY operation is selected.
- *1 Cutting the jumper on the outdoor unit PCB will extend the cooling operation range to 14°F (–10.0°C). Installing an air direction adjustment grille (sold separately) will further extend the operation range to –4°F (–20.0°C). Please consult your dealer.
- *2 Installing a drain pan heater (sold separately) will further extend the heating operation range to –13°F (–25.0°C). Please consult your dealer.

Mode	Operating conditions
COOL / DRY	Outdoor temperature
	[RXP models] : 50*1 - 115°F (10*1 - 46°C)
	[MXM, MXT, MXTH models] : 14 - 115°F (–10 - 46°C)
	*1 –4°F (–20°C) if an air direction adjustment grille (sold separately) is installed.
	Indoor temperature : 63 - 90°F (17 - 32°C)
	Indoor humidity : 80% max.
HEAT	Outdoor temperature
	[MXM models] : 5 - 75°F (–15 - 24°C)
	[RXP, MXT models] : 5*2 - 75°F (–15*2 - 24°C)
	[MXTH models] : –13 - 75°F (–25 - 24°C)
	*2 –13°F (–25°C) if a drain pan heater (sold separately) is installed.
	Indoor temperature : 50 - 88°F (10 - 31°C)

■ Call your dealer immediately**⚠ WARNING**

When an abnormality (such as a burning smell) occurs, stop operation and turn off the circuit breaker.

- Continued operation in an abnormal condition may result in problems, electric shock or fire.
- Consult the dealer where you bought the air conditioner.

Do not attempt to repair or modify the air conditioner by yourself.

- Incorrect work may result in electric shock or fire.
- Consult the dealer where you bought the air conditioner.

If one of the following symptoms takes place, call your dealer immediately.

- The power cord is abnormally hot or damaged.
- An abnormal sound is heard during operation.
- The circuit breaker cuts off the operation frequently.
- A switch or a button often fails to work properly.
- There is a burning smell.
- Water leaks from the indoor unit.

Turn off the circuit breaker and call your dealer.

**■ After a power failure**

- The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

■ Lightning

- If there is a risk lightning could strike in the neighborhood, stop operation and turn off the circuit breaker to protect the system.

■ Disposal requirements

- Dismantling of the unit, handling of the refrigerant, oil and other parts, should be done in accordance with the relevant local and national regulations.

13.2 General Safety Considerations

For ducted systems
Ducted types

Minimum required floor area for total conditioned space (TA_{min})



The minimum required floor area of the air duct system varies depending on refrigerant amount. For details on determining refrigerant amount (m), refer to page 6.

m Refrigerant amount (kg)	Minimum required floor area for total conditioned space	
	TA _{min} (m ²)	
< 1.84	No restriction	
1.9	5.6	
2.0	5.9	
2.1	6.2	
2.2	6.5	
2.3	6.8	
2.4	7.1	
2.5	7.4	
2.6	7.7	
2.7	8.0	
2.8	8.3	
2.9	8.6	
3.0	8.9	
3.1	9.2	
3.2	9.5	
3.3	9.8	
3.4	10.1	
3.5	10.4	
3.6	10.7	
3.7	11.0	
3.8	11.3	
3.9	11.6	
4.0	11.9	
4.1	12.2	
4.2	12.5	
4.3	12.8	
4.4	13.1	

m²

m Refrigerant amount (lb)	Minimum required floor area for total conditioned space	
	TA _{min} (ft ²)	
< 4.05	No restriction	
4.2	61	
4.4	64	
4.6	67	
4.9	70	
5.1	74	
5.3	77	
5.5	80	
5.7	83	
6.0	86	
6.2	90	
6.4	93	
6.6	96	
6.8	99	
7.1	102	
7.3	106	
7.5	109	
7.7	112	
7.9	115	
8.2	118	
8.4	122	
8.6	125	
8.8	128	
9.0	131	
9.3	134	
9.5	138	
9.7	141	

ft²

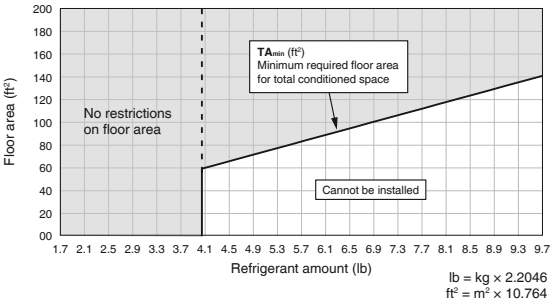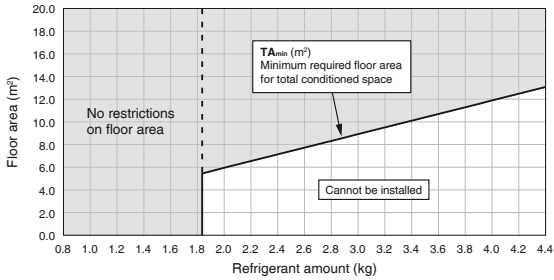

1. General Safety Considerations

1-1 About the documentation

- The original documentation is written in English. All other languages are translations.
- The precautions described in this document cover very important topics, follow them carefully.
- The installation of the system, and all activities described in the installation manual and in the installer reference guide **MUST** be performed by an authorized installer.

1-1-1 Meaning of warnings and symbols

	DANGER Indicates a situation that results in death or serious injury.
	DANGER: RISK OF ELECTROCUTION Indicates a situation that could result in electrocution.
	DANGER: RISK OF BURNING Indicates a situation that could result in burning because of extreme hot or cold temperatures.
	DANGER: RISK OF EXPLOSION Indicates a situation that could result in explosion.
	WARNING Indicates a situation that could result in death or serious injury.
	WARNING: FLAMMABLE MATERIAL
	CAUTION Indicates a situation that could result in minor or moderate injury.
	NOTICE Indicates a situation that could result in equipment or property damage.
	INFORMATION Indicates useful tips or additional information.

Symbols used on the unit:

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.
	The unit contains rotating parts. Be careful when servicing or inspecting the unit.

Symbols used in the documentation:

Symbol	Explanation
	Indicates a figure title or a reference to it. Example: “  1–3 Figure title” means “Figure 3 in chapter 1”.
	Indicates a table title or a reference to it. Example: “  1–3 Table title” means “Table 3 in chapter 1”.

1-2 For the user

	WARNING If you are NOT sure how to operate the unit, contact your installer.
	WARNING This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
	WARNING To prevent electrical shocks or fire: • Do NOT rinse the unit. • Do NOT operate the unit with wet hands. • Do NOT place any objects containing water on the unit.

	CAUTION • Do NOT place any objects or equipment on top of the unit. • Do NOT sit, climb or stand on the unit.

1-3 For the installer

1-3-1 General

If you are NOT sure how to install or operate the unit, contact your dealer.

The manual contains specific information about the required qualification of the working personnel for maintenance, service and repair operations.

Every working procedure that affects safety should only be carried out by competent persons.

Examples for such working procedures are:

- Breaking into the refrigerating circuit
- Opening of sealed components
- Opening of ventilated enclosures



DANGER: RISK OF BURNING

- Do NOT touch the refrigerant piping, water piping or internal parts during and immediately after operation. It could be too hot or too cold. Give it time to return to normal temperature. If you must touch it, wear protective gloves.
- Do NOT touch any accidental leaking refrigerant.



WARNING

Improper installation or attachment of equipment or accessories could result in electrical shock, short-circuit, leaks, fire or other damage to the equipment. Only use accessories, optional equipment and spare parts made or approved by Daikin.



WARNING

Make sure installation, testing and applied materials comply with applicable legislation (on top of the instructions described in the Daikin documentation).



CAUTION

Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.



WARNING

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. Possible risk: suffocation.



WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.



CAUTION

Do NOT touch the air inlet or aluminum fins of the unit.



CAUTION

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.



NOTICE

Works executed on the outdoor unit are best done under dry weather conditions to avoid water ingress.

In accordance with the applicable legislation, it might be necessary to provide a logbook with the product containing at least: information on maintenance, repair work, results of tests, stand-by periods,...

Also, at least, following information **MUST** be provided at an accessible place at the product:

- Instructions for shutting down the system in case of an emergency
- Name and address of fire department, police and hospital
- Name, address and day and night telephone numbers for obtaining service
- UL60335-2-40 provides the necessary guidance for this logbook.

That after completion of field piping for split systems, the field pipework should be pressure tested with an inert gas and then vacuum tested prior to refrigerant charging, according to the following requirements:

- The minimum test pressure for the low side of the system should be the low side maximum allowable pressure and the minimum test pressure for the high side of the system should be the high side maximum allowable pressure, unless the high side of the system cannot be isolated from the low side of the system, in which case the entire system should be pressure tested to the low side maximum allowable pressure.
- The test pressure after removal of the pressure source should be maintained for at least 1 hour with no decrease of pressure indicated by the test gauge, with test gauge resolution not exceeding 5% of the test pressure.
- During the evacuation test, after achieving a vacuum level equal to or less than the vacuum level specified in the manual, the refrigeration system should be isolated from the vacuum pump and the pressure should not rise above 1500 microns within 10 minutes. The vacuum pressure level is specified in the manual, and should be less than 500 microns, or the value required for compliance with national and local codes and standards, which may vary between residential, commercial, and industrial buildings.

1-3-2 Installation site

- Provide sufficient space around the unit for servicing and air circulation as outlined in the unit installation manual.
- Make sure the installation site can withstand the weight and vibrations of the unit.
- Make sure the area is well-ventilated. Do NOT block any ventilation openings.
- Make sure the unit is level.

Do NOT install the unit in the following places:

- Potentially explosive atmospheres.
- Places where there is machinery that emits electromagnetic waves. Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.
- Places where there is a risk of fire due to the leakage of flammable gases (example: thinner or gasoline), carbon fiber, or ignitable dust.
- Places where corrosive gas (example: sulfurous acid gas) is produced. Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.

Instructions for equipment using R32 refrigerant



WARNING: FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



WARNING

- Do NOT pierce or burn.
- Do NOT use means to accelerate the defrosting process or to clean the equipment, other than those recommended by the manufacturer.
- Be aware that R32 refrigerant does NOT contain an odor.



WARNING

The appliance should be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater), and the room size should be as specified.
(Refer to “**Minimum required floor area (A_{min})**” (Ductless systems) on page 1 and “**Minimum required floor area for total conditioned space (TA_{min})**” (Ducted systems) on page 2.)



WARNING

Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation should continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.



WARNING

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulations) and are executed only by authorized persons.



WARNING

If one or more rooms are connected to the unit using a duct system, make sure:

- There are no operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater) if the floor area is less than TA_{min} (m^2 , ft^2) defined in the table.
(Refer to “**Minimum required floor area for total conditioned space (TA_{min})**” (Ducted systems) on page 2.)
- No auxiliary devices, which may be potential ignition sources, are installed in the duct work (example: hot surfaces with a temperature exceeding 158°F and electric switching devices).
- Only auxiliary devices approved by the manufacturer are used in the duct work.
- An air inlet or outlet is connected directly with a room by ducting. Do NOT use spaces such as a false ceiling as a duct for the air inlet or outlet.



CAUTION

Do NOT use potential sources of ignition in searching for or detection of refrigerant leaks.



NOTICE

- Do NOT re-use joints which have been used already.
- Joints made during installation between parts of the refrigerant system should be accessible for maintenance purposes.



NOTICE

- Precautions should be taken to avoid excessive vibration or pulsation of refrigeration piping.
- Protection devices, piping and fittings should be protected as much as possible against adverse environmental effects.
- Provisions should be made for expansion and contraction of long sections of piping.
- Piping in refrigerating systems should be designed and installed so that the likelihood of hydraulic shock damaging the system is minimized.
- The indoor equipment and pipes should be securely mounted and guarded so that accidental rupture of equipment or pipes cannot occur from events such as moving furniture or reconstruction activities.

Installation space requirements



WARNING

If appliances contain R32 refrigerant, the floor area of the room in which the appliances are installed, operated and stored **MUST** be larger than the minimum floor area defined in the table. (Refer to “**Minimum required floor area (A_{min})**” (Ductless systems) on page 1 and “**Minimum required floor area for total conditioned space (TA_{min})**” (Ducted systems) on page 2.) This applies to:

- Indoor units
- Outdoor units installed or stored indoors (e.g. yard, garage, machinery room)
- Pipework in unventilated spaces



NOTICE

- Pipework should be protected from physical damage.
- Installation of pipework should be kept to a minimum.

To determine the minimum floor area

- Determine the total refrigerant charge in the system.
 m (Refrigerant amount)
 = ❶ factory refrigerant charge
 + ❷ additional refrigerant amount charged

R32

❶ = kg | lb

❷ = kg | lb

❶+❷ = kg | lb

- Use the table and graph on pages 1 and 2 to determine the minimum required floor area.
 m : Refrigerant amount
 A_{min} : Minimum required floor area (Ductless systems)
 TA_{min} : Minimum required floor area for total conditioned space (Ducted systems)
 h : Indoor unit installation height

1-3-3 Refrigerant

If applicable, see the installation manual or installer reference guide of your application for more information.



NOTICE

Make sure refrigerant piping installation complies with applicable legislation. UL60335-2-40 is the applicable standard.



NOTICE

Make sure the field piping and connections are NOT subjected to stress.



WARNING

During tests, **NEVER** pressurize the product with a pressure higher than the maximum allowable pressure (as indicated on the nameplate of the unit).



WARNING

Take sufficient precautions in case of refrigerant leakage. If refrigerant gas leaks, ventilate the area immediately.

Possible risks:

- Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.
- In case of R410A or R32 refrigerant: Toxic gas might be produced if refrigerant gas comes into contact with fire.
- In case of CO₂ refrigerant: Refrigerant gas is toxic in high concentrations.



DANGER: RISK OF EXPLOSION

Pump down – Refrigerant leakage. If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. **Possible consequence:** Self-combustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.



WARNING

ALWAYS recover the refrigerant. Do NOT release them directly into the environment. Use a vacuum pump to evacuate the installation.

Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.



WARNING: RISK OF FIRE.

- Flammable refrigerant used. To be repaired only by trained service personnel. Do NOT puncture refrigerant tubing.
- Dispose of properly in accordance with federal or local regulations. Flammable refrigerant used.
- Flammable refrigerant used. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.
- Risk of fire due to flammable refrigerant used. Follow handling instructions carefully in compliance with national regulations.

NOTICE

- After all the piping has been connected, make sure there are no gas leaks. Use nitrogen to perform gas leak detection.
- Under no circumstances should potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) should not be used.
- If a leak is suspected, all naked flames should be removed/extinguished.
- The field-made refrigerant joints indoors should be tightness tested according to the following requirements: The test method should have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure. No leak should be detected.

NOTICE

- To avoid compressor breakdown, do NOT charge more than the specified amount of refrigerant.
- Extreme care should be taken not to overfill the REFRIGERATING SYSTEM.
- Prior to recharging the system, it should be pressure-tested with the appropriate purging gas.
- The system should be leak-tested on completion of charging but prior to commissioning.
- A follow-up leak test should be carried out prior to leaving the site.
- When the refrigerant system is to be opened, refrigerant MUST be treated according to the applicable legislation.

**WARNING**

Make sure there is no oxygen in the system. Refrigerant may only be charged after performing a leak test and vacuum drying.

Possible consequence: Self-combustion and explosion of the compressor because of oxygen going into the operating compressor.

- In case recharge is required, see the nameplate of the unit. It states the type of refrigerant and necessary amount.
- The unit is factory charged with refrigerant, but depending on pipe sizes and pipe lengths some systems require additional charging of refrigerant.
- Only use tools exclusively for the refrigerant type used in the system. This to ensure pressure resistance and prevent foreign materials from entering into the system. Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Charge the liquid refrigerant as follows:

If	Then
A siphon tube is present (i.e., the cylinder is marked with "Liquid filling siphon attached")	Charge with the cylinder upright. 
A siphon tube is NOT present	Charge with the cylinder upside down. 

- Open refrigerant cylinders slowly.
- Charge the refrigerant in liquid form. Adding it in gas form may prevent normal operation.

**CAUTION**

When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately. If the valve is NOT closed immediately, remaining pressure might charge additional refrigerant.

Possible consequence: Incorrect refrigerant amount.

1-3-4 Electrical

**DANGER: RISK OF ELECTROCUTION**

- Turn OFF all power supplies before removing the switch box cover, connecting electrical wiring, or touching electrical parts.
- Disconnect the power supply for more than 1 minute, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage **MUST** be less than 50V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.
- Do NOT touch electrical components with wet hands.
- Do NOT leave the unit unattended when the service cover is removed.

**WARNING**

If NOT factory installed, a main switch or other means for disconnection, having a contact separation in all poles providing full disconnection under overvoltage category III conditions, **MUST** be installed in the fixed wiring.

**WARNING**

 
- **ONLY** use copper wires.
- Make sure the field wiring complies with the applicable legislation.
- All field wiring **MUST** be performed in accordance with the wiring diagram supplied with the product.
- **NEVER** squeeze bundled cables and make sure they do NOT come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check take into account the effects of aging or continual vibration from sources such as compressors or fans.
- Make sure to install ground wiring. Do NOT ground the unit to a utility pipe, surge absorber, or telephone ground. Incomplete grounding may cause electrical shock.
- Ensure that the REFRIGERATING SYSTEM is grounded prior to charging the system with refrigerant.
- Make sure to use a dedicated power circuit. **NEVER** use a power supply shared by another appliance.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install a ground leakage protector where required by local codes. Failure to do so may cause electrical shock or fire.
- When installing the ground leakage protector, make sure it is compatible with the inverter (resistant to high frequency electric noise) to avoid unnecessary opening of the ground leakage protector.

**CAUTION**

- When connecting the power supply: connect the ground cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the ground connection.
- The length of the conductors between the power supply stress relief and the terminal block itself must be such that, in case the power supply is pulled loose from the stress relief, the current-carrying wires become taut before the ground wire becomes taut.

**NOTICE**

Precautions when laying power wiring:



- Do NOT connect wiring of different thicknesses to the power terminal block (slack in the power wiring may cause abnormal heat).
- When connecting wiring which is the same thickness, do as shown in the figure above.
- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will damage the screw heads and make proper tightening impossible.
- Over-tightening the terminal screws may break them.
- This appliance incorporates an earth connection for functional purposes only.

Install power cables at least 3.3ft (1m) away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 3.3ft (1m) may not be sufficient.

**WARNING**

- After finishing the electrical work, confirm that each electrical component and terminal inside the electrical components box is connected securely.
- Make sure all covers are closed before starting up the unit.

1-3-5 Disposal

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerant is removed safely.

- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge is available.
- Ensure that all cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i. e. special cylinders for the recovery of refrigerant).
- Cylinders should be complete with pressure-relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders should be evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment should be in good working order with a set of instructions concerning the equipment that is at hand and should be suitable for the recovery of all appropriate refrigerants including, when applicable, FLAMMABLE REFRIGERANT.
- In addition, a set of calibrated weighing scales should be available and in good working order.
- Hoses should be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
- Consult the manufacturer if in doubt.
- The recovered refrigerant should be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note should be arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.
- The evacuation process should be carried out prior to returning the compressor to the suppliers.
- Only electric heating of the compressor body should be employed to accelerate this process.
- When oil is drained from a system, oil drainage should be carried out safely.

1-4 Glossary

Your dealer

Sales distributor for the product.

Authorized installer

Technically skilled person who is qualified to install the product.

User

Person who is owner of the product and/or operates the product.

Applicable legislation

All international, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

Service company

Qualified company which can perform or coordinate the required service on the product.

Installation manual

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

Operation manual

Instruction manual specified for a certain product or application, explaining how to operate it.

Maintenance instructions

Instruction manual specified for a certain product or application, which explains (if relevant) how to install, configure, operate and/or maintain the product or application.

Accessories

Labels, manuals, information sheets and pieces of equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

Equipment sold separately

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

Field supply

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

13.3 FVXV09/12/15/18AVJUW(T)9

Read Before Operation

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	Read the precautions in this manual carefully before operating the unit.
	This appliance is filled with R32.

Read these **Safety Considerations for Operations** carefully before operating an air conditioner or heat pump.

Make sure that the unit operates properly during the startup operation.

Instruct the user on how to operate and maintain the unit.

Inform users that they should store this operation manual with the installation manual for future reference.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

 **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **NOTE** Indicates situations that may result in equipment or property damage accidents only.

DANGER

- Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.
- Any abnormalities in the operation of the air conditioner or heat pump, such as smoke or fire, could result in severe injury or death. Turn off the power and contact your dealer immediately.
- Refrigerant gas may produce toxic gas if it comes into contact with fire, such as from a fan heater, stove, or cooking device. Exposure to this gas could cause severe injury or death.
- For refrigerant leakage, consult your dealer. Refrigerant gas is heavier than air and replaces oxygen. A massive leak could lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- If equipment utilizing a burner is used in the same room as the air conditioner or heat pump, there is the danger of oxygen deficiency which could lead to an asphyxiation hazard resulting in serious injury or death. Be sure to ventilate the room sufficiently to avoid this hazard.
- Safely dispose of the packing materials. Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.
- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death by suffocation.

WARNING

- Contact your dealer for repair and maintenance. Improper repair and maintenance may result in water leakage, electric shock, and fire. Only use accessories made by Daikin that are specifically designed for use with the equipment and have them installed by a professional.
- Contact your dealer to move and reinstall the air conditioner or heat pump. Incomplete installation may result in water leakage, electric shock, and fire.
- Never let the indoor unit or the remote controller get wet. Water can cause an electric shock or a fire.
- Never use flammable spray such as hair spray, lacquer, or paint near the unit. Flammable spray may cause a fire.
- When a fuse blows out, never replace it with one of incorrect ampere ratings or different wires. Always replace any blown fuse with a fuse of the same specification.
- Never remove the fan guard of the unit. A fan rotating at high speed without the fan guard is very dangerous.
- Never inspect or service the unit by yourself. Contact a qualified service person to perform this work.
- Turn off all electrical power before doing any maintenance to avoid the risk of serious electric shock; never sprinkle or spill water or liquids on the unit.
- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- The heat exchanger fins are sharp enough to cut. To avoid injury wear gloves or cover the fins while working around them.
- Do not put a finger or other objects into the air inlet or air outlet. The fan is rotating at high speed and will cause injury.
- Check the unit foundation for damage on a continuous basis, especially if it has been in use for a long time. If left in a damaged condition the unit may fall and cause injury.
- Placing a flower vase or other containers with water or other liquids on the unit could cause a shock or fire if a spill occurs.
- Do not touch the air outlet or horizontal blades while the swing flap is in operation because fingers could get caught and injured.
- Never touch the internal parts of the controller. Do not remove the front panel because some parts inside are dangerous to touch. To check and adjust internal parts, contact your dealer.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Do not turn off the power to air conditioners or connected devices (detectors and alarms, mechanical ventilators, safety shut-off valves, etc.) except when replacing parts or conducting inspections. Failure to detect a refrigerant leakage may result in a fire.
- Consult your dealer when making changes to the room layout or partitions. It will be necessary to re-examine safety measures required in managing refrigerant leakages. Failure to implement the necessary safety measures may lead to flammable concentrations.

Read Before Operation

⚠ CAUTION

- Do not use the air conditioner or heat pump for any other purposes other than comfort cooling or heating. Do not use the unit for cooling precision instruments, food, plants, animals or works of art.
- Do not place items under the indoor unit as they may be damaged by condensates that may form if the humidity is above 80% or if the drain outlet gets blocked.
- Before cleaning, stop the operation of the unit by turning the power off or by pulling the supply cord out from its receptacle. Otherwise, an electric shock and injury may result.
- After cleaning, be sure to turn on the circuit breaker so that the refrigerant sensor can start operating.
- Do not wash the air conditioner or heat pump with excessive water. An electric shock or fire may result.
- Avoid placing the controller in a spot which may be splashed with water. Water entering the controller may cause an electric shock or damage the internal electronic parts.
- Do not operate the air conditioner or heat pump when using a room-fumigation type of insecticide. Failure to observe this could cause the chemicals to be deposited in the unit and can endanger the health of those who are hypersensitive to chemicals.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- The appliance is not intended for use by young children or infirm persons without supervision.
- The remote controller should be kept away from children so they cannot play with it.
- Consult with the installation contractor for cleaning.
- Incorrect cleaning of the inside of the air conditioner or heat pump could make the plastics parts break and cause water leakage or electric shock.
- Do not touch the air inlet or aluminum fin of the air conditioner or heat pump as they can cut and cause injury.
- Do not place objects in direct proximity of the outdoor unit. Do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, animals can cause the unit to malfunction, and cause smoke or fire when they make contact with electrical parts.

⚠ NOTE

- Never press the button of the remote controller with a hard, pointed object. The remote controller may be damaged.
- Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
- Do not place appliances that produce open flames in places that are exposed to the airflow of the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.
- Do not expose the controller to direct sunlight. The LCD display can become discolored and may fail to display the data.
- Do not wipe the controller operation panel with benzine, thinner, chemical dust cloth, etc. The panel may get discolored or the coating can peel off. If it is heavily dirty, soak a cloth in a water-diluted neutral detergent, squeeze it well and wipe the panel clean. Then wipe it with another dry cloth.

- Dismantling of the unit, disposal of the refrigerant, oil, and additional parts, should be done in accordance with the relevant local, state, and national regulations.
- Operate the air conditioner or heat pump in a sufficiently ventilated area and not surrounded by obstacles. Do not use the air conditioner or heat pump in the following places.
 - a. Places with a mist of mineral oil, such as cutting oil.
 - b. Locations such as coastal areas where there is a lot of salt in the air.
 - c. Locations such as hot springs where there is a lot of sulfur in the air.
 - d. Locations such as factories where the power voltage varies a lot.
 - e. In cars, boats, and other vehicles.
 - f. Locations such as kitchens where oil may splatter or where there is steam in the air.
 - g. Locations where equipment produces electromagnetic waves.
 - h. Places with an acid or alkaline mist.
 - i. Places where fallen leaves can accumulate or where weeds can grow.
- Take snow protection measures. Contact your dealer for the details of snow protection measures, such as the use of a snow protection hood.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with your dealer for electrical work and grounding work.
- Pay attention to operating sound. Be sure to use the following places:
 - a. Places that can sufficiently withstand the weight of the air conditioner or heat pump yet can suppress the operating sound and vibration.
 - b. Places where warm air from the air outlet of the outdoor unit or the operating sound of the outdoor unit does not annoy neighbors.
- Make sure that there are no obstacles close to the outdoor unit. Obstacles close to the outdoor unit may drop the performance of the outdoor unit or increase the operating sound of the outdoor unit.
- Consult your dealer if the air conditioner or heat pump in operation generates unusual noise.
- Make sure that the drainpipe is installed properly to drain water. If no water is discharged from the drainpipe while the air conditioner or heat pump is in the cooling mode, the drainpipe may be clogged with dust or dirt and water leakage from the indoor unit may occur. Stop operating the air conditioner or heat pump and contact your dealer.
- Do not spray the air conditioner unit with any deodorizers, etc. It may cause the unit to malfunction.
- A refrigerant sensor is mounted in the indoor units. Do not use gas appliances using flammable gas (propane, butane, methane, etc.), sprays using flammable gas (LPG, etc.) such as insecticide or hair spray, smoke, medical agent and paint in the vicinity.
- Once the refrigerant sensor reacts, it needs to be replaced with a new one.

FVP003(R32)-U

Read Before Operation

Names of Parts

Indoor Unit

Display



Signal receiver

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.

Case	Sound type
Operation start	beep-beep
Setting change	beep
Operation stop	long beep

Attention

If you find that the lamps of the indoor unit are too bright, adjust lamp brightness to personal preference, or turn them OFF. ▶ Page 38

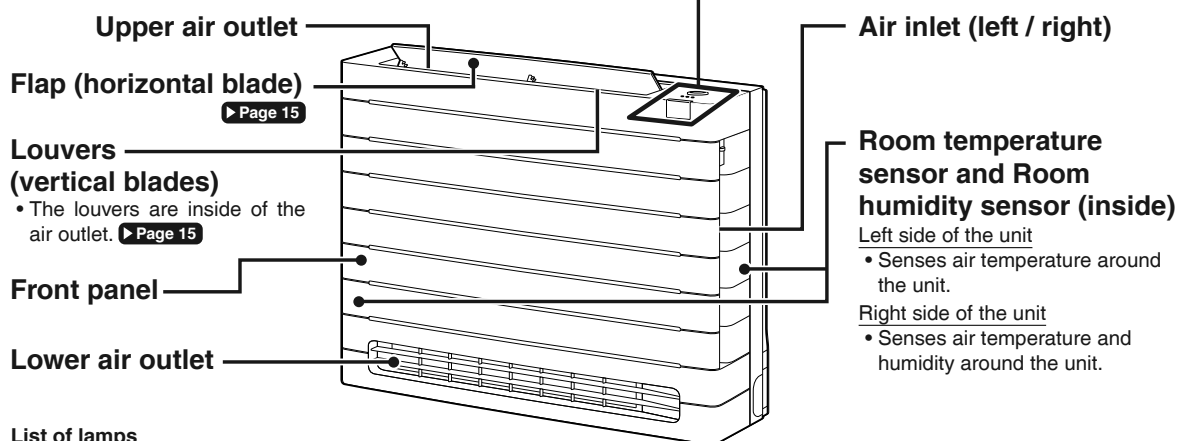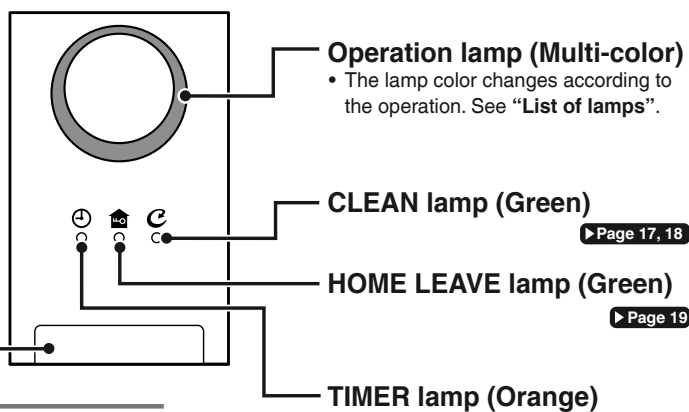


List of lamps

- Lamp color varies by operation.

Lamp	Color	State	Description
Operation lamp	Red/Blue	Lights up	AUTO operation ▶ Page 13
	Green	Lights up	DRY operation ▶ Page 13
	Blue	Lights up	COOL operation ▶ Page 13
	Red	Lights up	HEAT operation ▶ Page 13
	White	Lights up	FAN operation ▶ Page 13
	Depends on operation mode	Blinks	Check the error code.
	Red	Blinks	Operation is stopped but the wireless LAN connecting adapter is enabled. ▶ Page 36
	Blue	Blinks	Operation is stopped but the wireless LAN connecting adapter is connected. ▶ Page 36
TIMER lamp	Orange	Lights up	TIMER is set. ▶ Page 24-26, 29, 31
CLEAN lamp	Green	Lights up	CLEAN operation ▶ Page 17, 18
HOME LEAVE lamp	Green	Lights up	HOME LEAVE operation ▶ Page 19, 20

Read Before Operation

■ Open the front panel

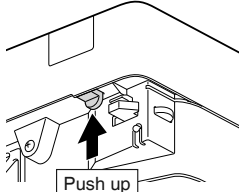


Push up

Indoor unit ON/OFF switch (inside)

- Press this switch once to start operation. Press once again to stop it.
- For the operation mode setting, refer to the following table.

Mode	Temperature setting	Airflow rate
AUTO	77 °F (25.0 °C)	AUTO

- This switch can be used when the remote controller is missing or out of batteries.

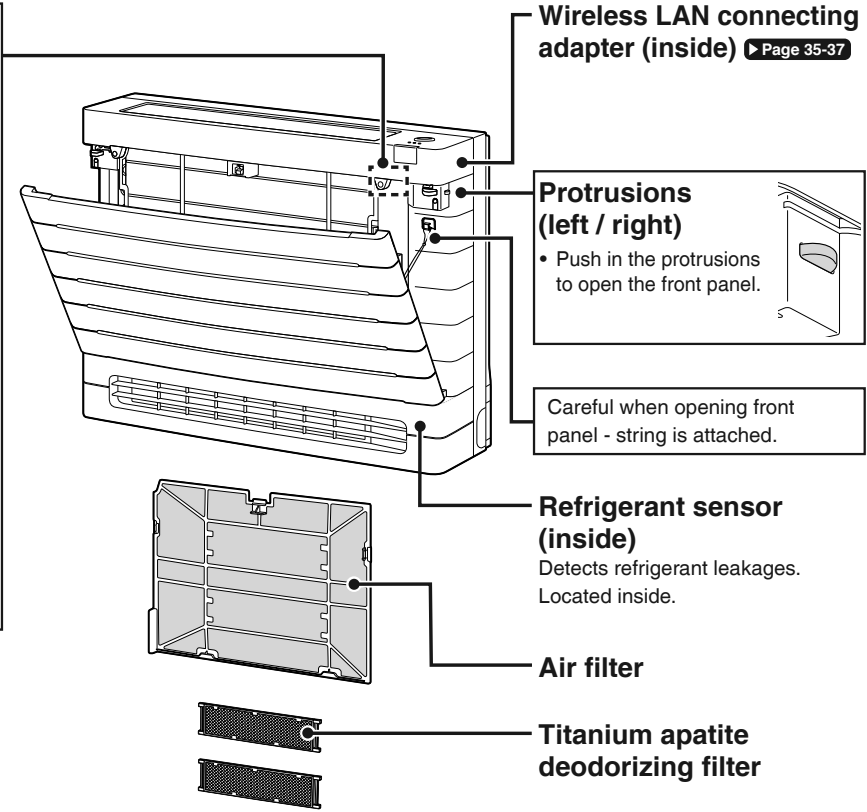

Wireless LAN connecting adapter (inside) ▶ Page 35-37

Protrusions (left / right)

- Push in the protrusions to open the front panel.

Careful when opening front panel - string is attached.


Refrigerant sensor (inside)
Detects refrigerant leakages. Located inside.

Air filter

Titanium apatite deodorizing filter

Outdoor Unit

- The appearance of the outdoor unit may differ between different models.

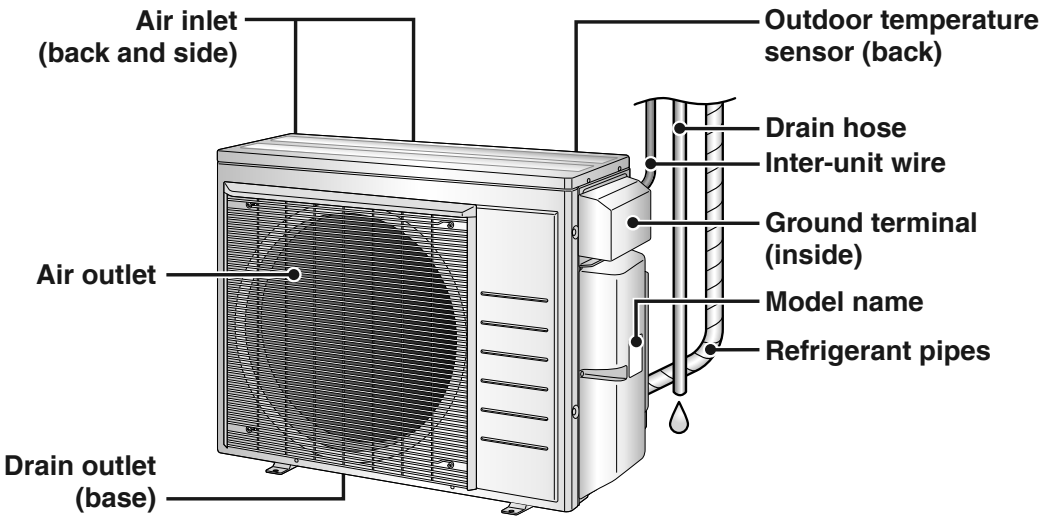

Air inlet (back and side)

Air outlet

Drain outlet (base)

Outdoor temperature sensor (back)

Drain hose

Inter-unit wire

Ground terminal (inside)

Model name


Refrigerant pipes

Read Before Operation

Names of Parts

Remote Controller

Signal transmitter

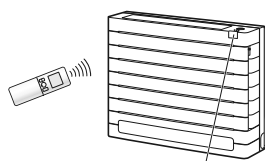

Receiver

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything blocking the signals between the unit and the remote controller, such as a curtain, the unit may not operate.
- The maximum transmission distance is about 23 ft (7 m).

POWERFUL button / HEAT PLUS button / Wireless LAN button

POWERFUL button

- POWERFUL operation. ▶ Page 21

HEAT PLUS button

- HEAT PLUS operation. ▶ Page 21, 22

Wireless LAN button (push 5 seconds)

- Wireless LAN connection. ▶ Page 36, 37

FAN setting button

- Selects the airflow rate setting. ▶ Page 14

Display (LCD)

- Displays the current settings. (In this illustration, each section is shown with all its displays on for the purpose of explanation.)

TEMPERATURE adjustment button

- Changes the temperature setting. ▶ Page 13

ON/OFF button

- Press this button once to start operation. Press once again to stop it. ▶ Page 13


Front cover

- Open the front cover. ▶ Page 8

Model name ARC466A89

Read Before Operation

■ Open the front cover

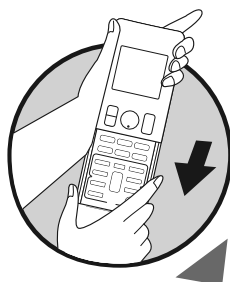**MODE selector button**

- Selects the operation mode.
(AUTO/DRY/COOL/HEAT/FAN)

▶ Page 13

HOME LEAVE button

- HOME LEAVE operation.

▶ Page 19

**MENU button
(push 2 seconds)**

- Adjusting the brightness of indoor unit LED lamps. ▶ Page 38
- Setting airflow when indoor unit reaches setpoint. ▶ Page 39
- Setting the air outlet. ▶ Page 12
- CLEAN operation. ▶ Page 17, 18

**OFF TIMER button
(NIGHT SET mode)**

▶ Page 25

TIMER CANCEL button


- Cancels the timer setting. ▶ Page 24, 25
- Cannot be used for the WEEKLY TIMER operation.

ECONO / QUIET button

- ECONO / QUIET OUTDOOR UNIT operation. ▶ Page 23

SWING button

- Adjusts the airflow direction. ▶ Page 15

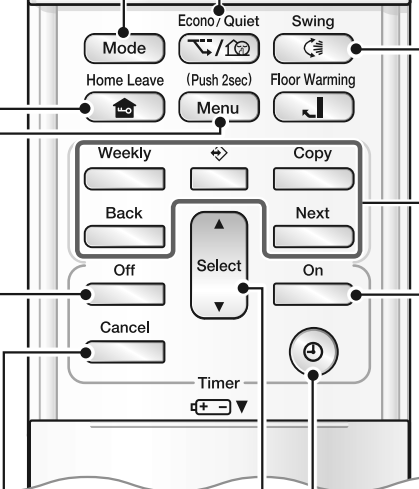Weekly : **WEEKLY button**◊ : **PROGRAM button**Copy : **COPY button**Back : **BACK button**Next : **NEXT button**

- WEEKLY TIMER operation. ▶ Page 27

ON TIMER button

▶ Page 24

CLOCK button

▶ Page 11

SELECT button

- Changes the clock, ON/OFF TIMER and WEEKLY TIMER settings.

Read Before Operation

Names of Parts

Wireless LAN connection adapter

The Wireless LAN connection adapter function requires the Daikin One Home for connecting to the air conditioner and controlling it via your smartphone or tablet over your network.

Attention

- Wireless LAN sends and receives data using radio waves so there is a risk of transmitted data being subject to eavesdropping and illegal access. When using wireless LAN, manage the SSID/KEY of the wireless LAN connection adapter, the SSID/KEY of the wireless router, and the app login information so that they will not be known to others, and ensure that you have an adequate understanding of the risks involved. In the case that the product is accessed and operated illegally, turn off the wireless LAN connection adapter function. [▶ Page 37](#)
- Do not use this product near a microwave oven. (This can affect wireless LAN communications.)
- This product cannot be directly connected to the communication line of a telecommunications carrier (internet service provider, etc.). When connecting to the internet, be sure to connect via a device such as a router.

When the wireless LAN connection adapter function is turned on, the upper side of the air conditioner may become slightly warm, but this is not an abnormality.


WARNING

- While the Wireless LAN connection adapter operates, it may affect persons using cardiac pacemakers or defibrillators. This product may cause electromagnetic interference.
- While the Wireless LAN connection adapter operates, it may affect automatic doors or fire alarm equipment. This product may cause faulty behavior of the equipment.

Configuration

- The user is responsible for providing the following items before using this product:
 - Smartphone or tablet PC
 - Internet line and communicating device (Modem/router or similar device)
 - Wireless LAN access point
 - Application name: [Daikin One Home] (free)

For details on the installation method for the Daikin One Home, please see [▶ Page 35](#).

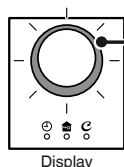

Operation lamp

- The Operation lamp lights when connecting to a router (Wireless LAN access point). Please see [▶ Page 36](#).
- For Wireless LAN connection adapter operation, please see [▶ Page 37](#).

WARNING

When operating an air conditioner from outside the home, it is not possible to check the air conditioner or the surroundings of the air conditioner, or the state of the people in the room. Therefore, make sure to adequately check for safety before use. In some cases, there is a risk of death, severe injury, or property damage.

- Check the following in advance (while at home)
 - Timer settings or reservations that other users may have made. (There is a risk of causing harm to the health of people, animals, or plants in the home if operation starts and stops unexpectedly)
 - There are no signs of abnormality in the air conditioning. Harm will not be caused to people or to the room if there is a change in airflow. (For example, that there are no objects nearby that might blow over) (There is a risk of objects falling due to airflow and causing fire, bodily injury, or staining of household items)
 - Check the following before/while operating a unit from outside the home
 - If you know that there is someone at home, inform the person when turning the air conditioner on or off from outside the home. (If someone at home is standing on something such as a stool, the air conditioner turning on or off unexpectedly could surprise them and cause them to fall or topple over. Additionally, a sudden change in the indoor/outdoor temperature could harm the health of people at home)
 - The air conditioner can be turned off and temperature adjustment can be made using a remote controller in the home.
 - Do not use the function if the only people at home are persons who are unable to make adjustments to temperature or other settings themselves, such as young children, disabled persons, or elderly persons.
 - Regularly check the settings and operating status of the air conditioner. (Sudden changes in indoor/outdoor temperature pose a health hazard. There is a risk of harm to animals and plants)
- If an error occurs during operation, immediately turn off the air conditioner and contact your dealer.
Double check the display to confirm that the power is off.

Read Before Operation


English

Preparation Before Operation

⚠ CAUTION

Incorrect handling of batteries can result in injury from battery leakage, rupturing or heating, or lead to equipment failure. Please observe the following precautions and use safely.

- If the alkaline solution from the batteries should get in the eyes, do not rub the eyes. Instead, immediately flush the eyes with tap water and seek the attention of a medical professional.
- Keep batteries out of reach of children. In the event that batteries are swallowed, seek the immediate attention of a medical professional.
- Do not expose batteries to heat or fire. Do not disassemble or modify batteries. The insulation or gas release vent inside the battery may be damaged, resulting in battery leakage, rupturing, or heating.
- Do not damage or peel off labels on the batteries.

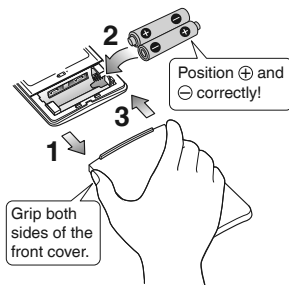


To insert the batteries

1. Slide the front cover to take it off.
2. Insert 2 dry batteries AAA.LR03 (alkaline).
3. Replace the front cover.

To attach the remote controller holder to a wall


1. Choose a place where the signals reach the unit.
2. Attach the holder to a wall, a pillar, or similar location with the screws supplied with the holder.
3. Place the remote controller in the remote controller holder.

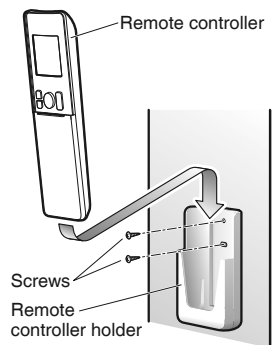

Fahrenheit / Celsius display switch

► Press  and  (TIMER button) simultaneously for about 5 seconds.

- The temperature will be displayed in Celsius when it is presently displayed in Fahrenheit, and vice versa.
- The switch operation is only possible when the temperature is being displayed.
- A reception sound will go off for the transmission of set temperature to the indoor unit at the time of setting the Fahrenheit / Celsius display change function.

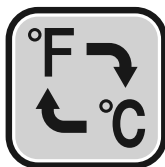

NOTE

Notes on batteries


- To avoid possible injury or damage from battery leakage or rupturing, remove the batteries when not using the product for long periods of time.
- The standard replacement time is about 1 year. Both batteries should be replaced at the same time. Be sure to replace them with new dry batteries AAA.LR03 (alkaline).
- When battery power has run out, "battery mark" will begin blinking on the LCD as an alert that the batteries need replacing. In some cases, when battery consumption is accelerated due to usage conditions, signal reception may decline before the LCD begins blinking.
- The batteries supplied with the remote controller are for initial operation. The batteries may run out in less than 1 year.

Notes on remote controller

- Do not drop the remote controller. Do not get it wet.
- If dirt becomes an issue, wipe with a soft dry cloth.

Read Before Operation

Preparation Before Operation

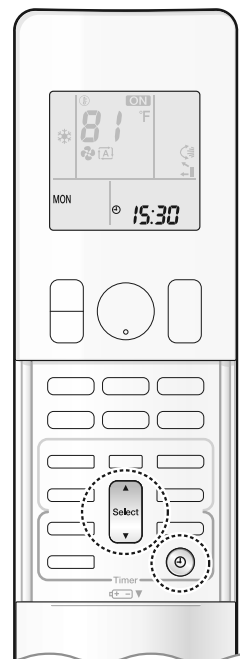

Turn on the circuit breaker

- After the power is turned on, the flap of the indoor unit may move in order to set the reference position.

To set the clock

1. Press .

"0:00" is displayed on the LCD.
"MON" and "☀" blink.

2. Press to set the current day of the week.3. Press .

"☀" blinks.

4. Press to set the clock to the present time.

- Holding down  or  increases or decreases the displayed time.

5. Press .

- Point the remote controller at the indoor unit when pressing the buttons.



"." blinks.

To set the brightness of the indoor unit lamps


Turn OFF or adjust the brightness of the indoor unit LED lamps as desired. [▶ Page 38](#)

NOTE

Note on setting the clock

- If the indoor unit's internal clock is not set to the correct time, the ON/OFF TIMER and WEEKLY TIMER will not operate punctually.

Read Before Operation

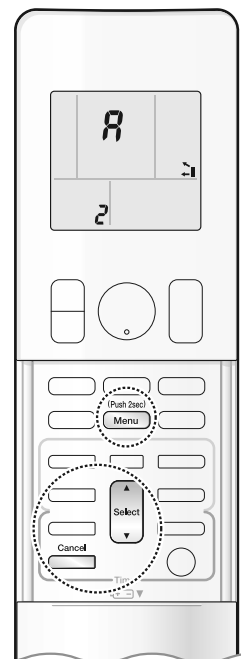

To set the air outlet selection

Set so that the unit determines automatically which air outlet to use or select the upper air outlet only.

 
1. Press (Push 2sec) and hold the button for 2 seconds.

- “” appears on the LCD.
- “” (menu number) blinks.



2. Press or and select menu number .

- “” appears on the LCD.
- “” (menu number) blinks.



Displays the current setting (A or 1)

3. Press (Push 2sec) to confirm the selected setting.

4. Press or and select the air outlet direction as follows:

Setting	Selection	LCD	Air outlet selection
Automatic air outlet selection (factory default setting)			 Upper and lower air outlets: The unit determines automatically the best air outlet depending on the operation mode or room conditions.
Upper air outlet only			 Upper air outlet only: Air is only emitted from the upper air outlet regardless of the operation mode or room conditions.

Setting	Operation	Situation	Air outlet selection
	DRY	Any situation	
	COOL	Upper air outlet: When the room temperature reaches the set point or the total operation time at high humidity reaches 60 minutes. Upper and lower air outlets: When the set point temperature is not reached yet, or the total operation time at high humidity is less than 60 minutes.	
	HEAT / FAN	Any situation	
	DRY / COOL / HEAT / FAN	Any situation	

- During drying operation air is emitted from the upper air outlet only. Refer to “**Operation mode**” and “**To change the temperature setting**” for setting. [▶ Page 13](#)
- During FLOOR WARMING operation, air is emitted from the lower air outlet only. [▶ Page 16](#)

5. Press (Push 2sec) again.

- This sets the selected air outlet for the indoor unit.

6. Press to return to the default screen.

NOTE

Notes on setting the selected air outlet


- The display automatically returns to the default screen after 60 seconds. To return to the default screen sooner, press  twice.
- If you change the setting from automatic air outlet selection to upper air outlet only in during HEAT operation, heating is temporarily stopped to protect the unit.
- When the setting is changed to “Upper air outlet only”, cooling/heating capacity will be reduced and operating sounds will increase. Additionally, hot or cold spots may form more easily. Use when you do not want air to flow from the lower air outlet (e.g., during sleep hours).
- During COOL operation, there are cases where air flows from the upper outlet only even when set to Automatic air outlet selection. In such cases, if operating sound becomes an issue, lowering the airflow rate or setting it to AUTO may provide improvement.
- During FLOOR WARMING operation, air is emitted only from the lower air outlet. [▶ Page 16](#)
- When airflow direction changes, sounds may be heard from inside the lower air outlet as it opens/closes.

Basic Operation



AUTO · DRY · COOL · HEAT · FAN

Operation

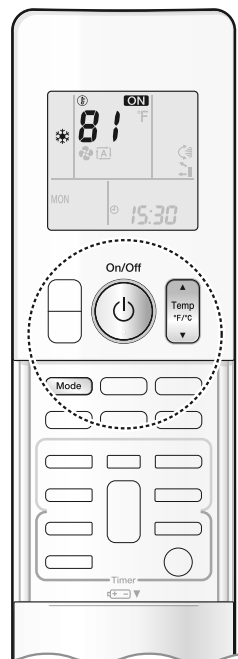


The air conditioner operates with the operation mode of your choice. From the next time on, the air conditioner will operate with the same operation mode.

To start operation


1. Press **Mode** and select an operation mode.

- Each pressing of the button changes the mode setting in sequence.

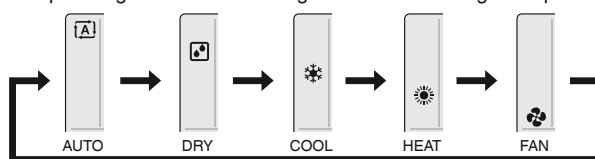

2. Press **On/Off**.

- "ON" is displayed on the LCD.
- The operation lamp lights up. The color of the lamp varies depending on the operation mode.

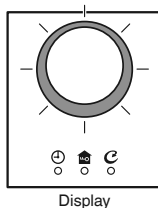

Display

Operation	Operation lamp
AUTO	Red / Blue
DRY	Green
COOL	Blue
HEAT	Red
FAN	White

To stop operation

Press **On/Off** again.

- "ON" disappears from the LCD.
- The OPERATION lamp goes off.

To change the temperature setting

Press **Temp**.

- Press **Temp** to raise the temperature and press **Temp** to lower the temperature.

COOL operation	HEAT operation	AUTO operation	DRY or FAN operation
64-90 °F (18.0-32.0 °C)	50-86 °F (10.0-30.0 °C)	64-86 °F (18.0-30.0 °C)	The temperature setting cannot be changed.

NOTE

Notes on AUTO operation

- In AUTO operation, the system selects an appropriate operation mode (COOL or HEAT) based on the indoor temperature and starts the operation.
- The system automatically reselects setting at a regular interval to bring the indoor temperature to the user-setting level.

Note on DRY operation


- Eliminates humidity while maintaining the indoor temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.

Basic Operation

English



Adjusting the Airflow Rate

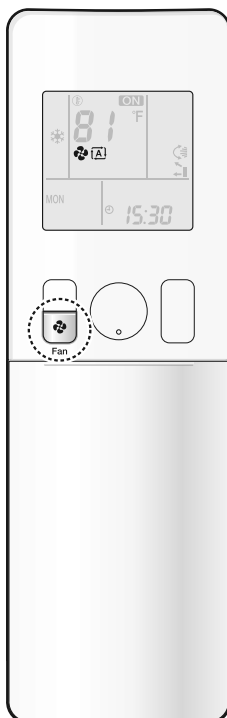


You can adjust the airflow rate to increase your comfort.

To adjust the airflow rate setting

Press .

 - Each pressing of changes the airflow rate setting in sequence.



- When the airflow is set to “”, quiet operation starts and noise from the indoor unit will become quieter.
- In the quiet operation mode, the airflow rate is set to a weak level.

AUTO, COOL, HEAT and FAN operation				DRY operation
				The airflow rate setting cannot be changed.

NOTE

Note on airflow rate setting

- At smaller airflow rates, the cooling (heating) effect is also smaller.

Tips for saving energy

Keeping the temperature setting at a moderate level helps save energy.

- Recommended temperature setting
 - For cooling: 79-82 °F (26.0-28.0 °C)
 - For heating: 68-75 °F (20.0-24.0 °C)

Cover windows with a blind or a curtain.

- Blocking sunlight and air from outdoors increases the cooling (heating) effect.

Keep the air filter clean.


- A clogged air filter causes inefficient operation and wastes energy. Clean it once every 2 weeks.



Basic Operation



Adjusting the Airflow Direction

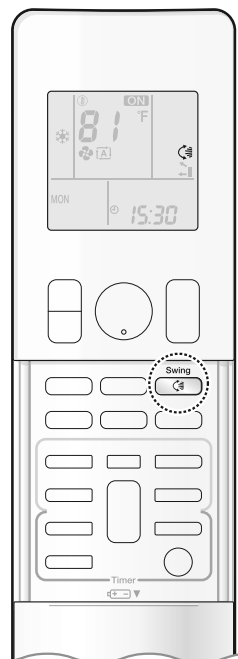

You can adjust the airflow direction to increase your comfort.

Attention


- Always use a remote controller to adjust the angles of the flap.
 - If you attempt to move the flap and louvers forcibly by hand when they are swinging, the mechanism may be damaged.
- Be careful when adjusting the louvers.
 - Inside the air outlet, a fan is rotating at a high speed.

To start auto swing

Up and down airflow direction

Press  .

- “” appears on the LCD.
- The flap (horizontal blade) will begin to swing.
 - The flap will always swing back to its default position each time an adjustment is made. It moves at high speed when performing initial processing.
 - If you want to stop the movement of the flap, press  again when the flap reaches the desired position.
 - Depending on installation conditions, the flap will be fixed near the lowest position.
 - Even if  is pressed, “” will blink and airflow direction cannot be adjusted.
 - For details, contact your dealer.

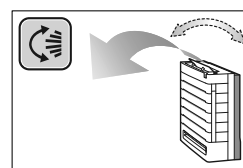

CAUTION


- Only use the remote controller for adjusting up/down airflow direction. (Forcibly moving the flap by hand may cause it to move incorrectly or result in dew dripping from the air outlet.)
- Do not adjust the left/right airflow direction during HEAT PLUS operation as the emission of hot air poses a safety hazard. (Risk of burns.)

To adjust the louvers to the desired position

Right and left airflow direction

Hold the knobs and move the louvers (vertical blades) to the desired position.

- There are knobs in 2 places in the upper outlet and the lower outlet.

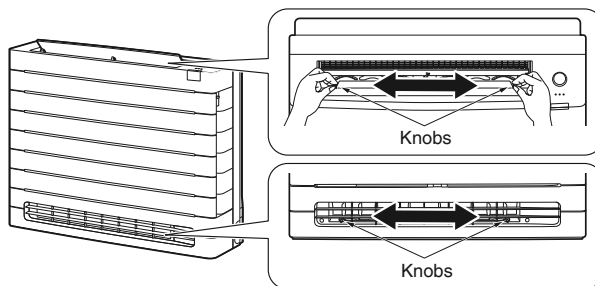


NOTE

Notes on airflow direction setting

- The movable range of the flap varies according to the operation mode.
- When the unit is installed near a wall or installed in a corner of a room, the louvers should be directed away from the wall. Efficiency will drop if a wall blocks airflow and room temperature detection will be compromised.

Movable range of the flap

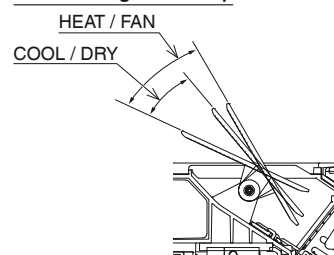


Useful Functions

English




FLOOR WARMING Operation

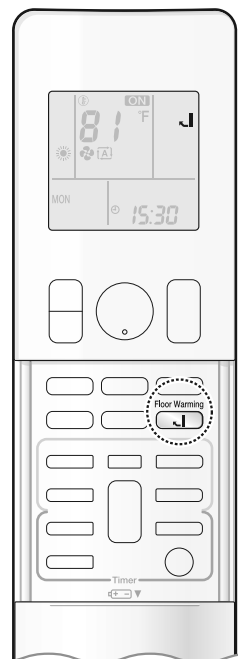

FLOOR WARMING operation can effectively warm large floor areas by closing the upper air outlet and increasing the air velocity to reach distant floor areas.

Airflow in FLOOR WARMING operation:
Air is emitted from the lower air outlet

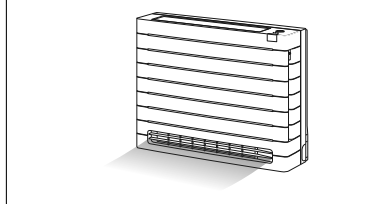

HEAT operation

Attention

- Although the flap will be closed, air will still be emitted from around the flap.
- Operating sounds will be louder than when air is emitted from both the upper and lower air outlets.
- Only the automatic air outlet selection setting can be used during FLOOR WARMING operation. Air is emitted from the lower air outlet only.
- FLOOR WARMING operation can only be used in HEAT operation mode and with the automatic air outlet selection setting.
- If the room temperature is low, the room may not get warm enough.

To start

- Check that the unit is operating, "ON" appears on the LCD.

Press .

- "⌵" appears on the LCD.
- FLOOR WARMING operation is not available in AUTO / DRY / COOL / FAN mode.

To cancel


Press  again.

- "⌵" disappears from the LCD.

Useful Functions



CLEAN Operation

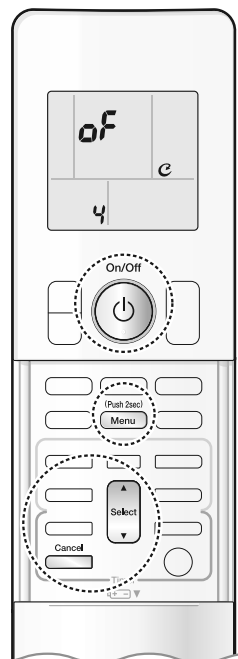

The CLEAN function dries the interior of the indoor unit to reduce the amount of condensation present. When COOL or DRY operation is performed, condensation may occur inside the air conditioner. It is recommended to dry the inside of the air conditioner using CLEAN operation.

[To operate automatically]

To set


1. Press (Push 2sec) and hold the button for 2 seconds.

- "LEd" appears on the LCD.
- "4" (menu number) blinks.



2. Press or and select menu number 4.


- "e" appears on the LCD.
- "4" (menu number) blinks.

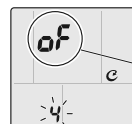

Displays the current setting (on or oF)


3. Press (Push 2sec) to confirm the selected setting.

4. Press or to change the setting as follows:

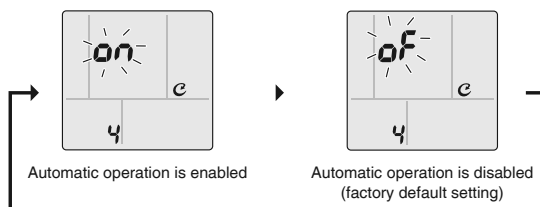


5. Press (Push 2sec) again.

- Automatic CLEAN operation will be enabled or disabled according to the chosen setting.
- If automatic CLEAN operation is enabled, "e" appears on the LCD and the CLEAN lamp lights green when CLEAN operation is in progress.

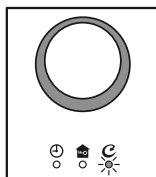

Display

6. Press to return to the default screen.

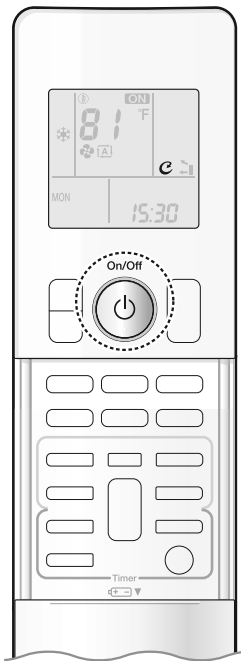

To stop CLEAN operation

▶ Press  twice when you want to stop CLEAN operation midway.

NOTE

 
 
Note on CLEAN setting

- The display automatically returns to the default screen after 60 seconds. To return to the default screen sooner, press  twice.

Notes on CLEAN operation

- After DRY or COOL operation stops, the air conditioner starts CLEAN operation automatically, and FAN operation will operate for approximately 120 minutes and then stops automatically.
- This operation dries the inside of the air conditioner using FAN operation. The indoor temperature and humidity may not suit your preferences.
- The CLEAN operation dries the interior of the indoor unit to reduce the amount of condensation present.
- CLEAN operation is not available when the unit is turned off using the OFF TIMER or turned off using a smartphone.
- CLEAN operation may not be performed if the COOL or DRY operation time is short.
- If CLEAN operation does not suit your preference, set operation to “oF” (Automatic operation is disabled). ▶ [Page 17](#)
- When multiple indoor units are connected, if another indoor unit is in HEAT operation, CLEAN operation will not start or will be interrupted.


Relation between CLEAN operation and indoor unit lamps

Air conditioner	CLEAN setting	CLEAN lamp	Operation lamp
 Air conditioner operating (Operation lamp lights up)	CLEAN is “ON”	Lights up (green)	Lights up (color depends on mode setting)
	CLEAN is “OFF”	Goes off	
 Air conditioner stopped (Operation lamp goes off)	CLEAN is “ON”	Lights up (green)	Goes off

Useful Functions



HOME LEAVE Operation

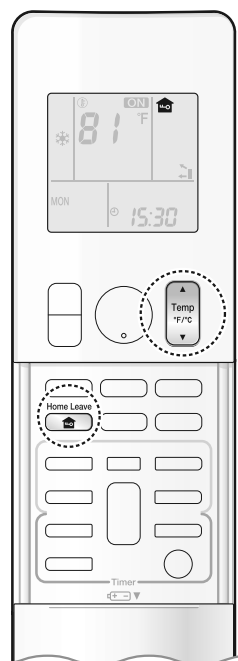


HOME LEAVE operation is a function that allows you to record your preferred temperature and airflow rate settings.

To start

- Check that the unit is operating, “ON” appears on the LCD.

Press  .

- “” appears on the LCD.
- The HOME LEAVE lamp lights green.

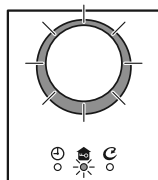

Display

To cancel

Press  again.

- “” disappears from the LCD.
- The HOME LEAVE lamp goes off.

NOTE

Notes on HOME LEAVE Operation

- HOME LEAVE operation can be used in HEAT and COOL operation modes.

To set the temperature and airflow rate for HOME LEAVE operation

When using HOME LEAVE operation for the first time, set the temperature and airflow rate for HOME LEAVE operation.

Record your preferred temperature and airflow rate.

	Initial setting		Selectable range	
	Temperature	Airflow rate	Temperature	Airflow rate
COOL operation	90 °F (32.0 °C)	“  ”	64-90 °F (18.0-32.0 °C)	5 levels, “  ” and “  ”
HEAT operation	50 °F (10.0 °C)		50-86 °F (10.0-30.0 °C)	

1. Press the “HOME LEAVE” button. Make sure that “” is displayed on the remote controller display.

2. Adjust the set temperature with  or  according to preference.

3. Adjust the airflow rate with the “FAN” setting button according to preference.

HOME LEAVE operation will run with these settings the next time you use the unit.

To change the recorded information, repeat steps 1 - 3.

Useful Functions

English

What is HOME LEAVE operation?

Is there a temperature or airflow rate that is most comfortable? or a temperature or airflow rate setting you use the most? HOME LEAVE operation is a function that allows you to record your favorite temperature or airflow rate. You can start your favorite operation mode simply by pressing the "HOME LEAVE" button on the remote controller. This function is convenient in the following situations.

Useful in these cases

1. Use as an energy-saving mode.

Sets the temperature 4-6 °F (2-3 °C) higher (cooling) or lower (heating) than normal. Also convenient for use while you are out or sleeping.

• Every day before you leave the house...



When you go out, push the "HOME LEAVE" button, and the air conditioner will adjust capacity to reach the preset temperature for HOME LEAVE operation.




When you return, you will be welcomed by a comfortably air conditioned room.



Push the "HOME LEAVE" button again, and the air conditioner will adjust capacity to the set temperature for normal operation.


• Before bed...

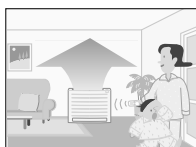

Set the unit to HOME LEAVE operation before leaving the living room when going to bed.



The unit will maintain the temperature in the room at a comfortable level while you sleep.

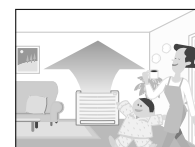

When you enter the living room in the morning, the temperature will be just right. If you turn off HOME LEAVE operation, the set temperature will return to that for normal operation. Even the coldest winters will pose no problem!

2. Use as a favorite mode.

Once you record the temperature and airflow rate settings you most often use, you can retrieve them by pressing "HOME LEAVE" button. You do not have to go through troublesome remote controller operations.

NOTE


Notes on HOME LEAVE setting

- Once the temperature and airflow rate for HOME LEAVE operation are set, those settings will be used whenever HOME LEAVE operation is used in the future. To change the settings, please refer to the "Notes on HOME LEAVE Operation" section above.
- HOME LEAVE operation is only available in COOL operation and HEAT operation. It cannot be used in AUTO, DRY, or FAN operation.
- HOME LEAVE operation runs with the settings of the operation mode (COOL or HEAT) that last in use before HOME LEAVE operation was enabled.
- HOME LEAVE operation and POWERFUL operation cannot be used at the same time. The last button that was pressed will be given precedence.
- The operation mode cannot be changed while HOME LEAVE operation is in use.

Useful Functions



POWERFUL / HEAT PLUS Operation

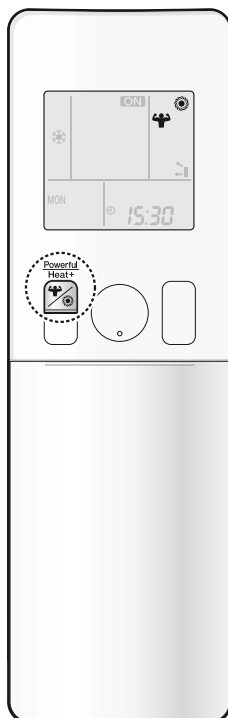

POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. In this mode, the air conditioner operates at maximum capacity.

In **HEAT PLUS operation** the emission of high-temperature air remains constant. During the normal HEAT operation, airflow temperature drops as the set temperature is approached, but in HEAT PLUS operation, high-temperature airflow is maintained.

 
Use this mode when you want to make the area around you warmer.

To start

- Check that the unit is operating, "ON" appears on the LCD.

Press  during operation and select the desired mode.

- Each time  is pressed, a different setting option is displayed on the LCD.



- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- HEAT PLUS operation automatically ends after about 30 minutes, after which HEAT operation resumes.

To cancel

Press  until no icon is displayed.

NOTE

Notes on POWERFUL operation

- Pressing  causes the settings to be canceled, and "ON" disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
 - In COOL, HEAT and AUTO operation**
To maximize the cooling (heating) effect, the capacity of outdoor unit increases and the airflow rate becomes fixed at the maximum setting. The temperature and airflow settings cannot be changed in COOL and HEAT operation. Airflow settings cannot be changed in AUTO operation.
 - In DRY operation**
The temperature setting is lowered by 5 °F (2.5 °C) and the airflow rate is slightly increased.
 - In FAN operation**
The airflow rate is fixed at the maximum setting.
 - When using priority room setting**
Refer to "Note for Multi System". [▶Page 33](#)

Regarding the combination of POWERFUL and other operations

POWERFUL + HEAT PLUS	Not available*
POWERFUL + FLOOR WARMING	
POWERFUL + ECONO	
POWERFUL + QUIET OUTDOOR UNIT	

*Priority is given to the function of whichever button is pressed last.

NOTE

Notes on HEAT PLUS operation

 CAUTION

- Do not adjust the left/right airflow direction during HEAT PLUS operation as the emission of hot air poses a safety hazard. (Risk of burns.)
- Make sure to always maintain distance from the air outlets and keep children and pets away. (Risk of burns.)

- Pressing  causes the setting to be canceled, and “” disappears from the LCD.
- In some cases, if the temperature of the room is very low, the entire room may not warm up completely.
- Do not remain near the air outlet and in the direct path of emitted air for a long time.
- After HEAT PLUS operation (about 30 minutes) ends, room temperature will be high. Depending on the temperature set for HEAT operation prior to activating HEAT PLUS operation, power may be reduced.
- While HEAT PLUS operation is active, the airflow rate setting cannot be changed.

Regarding the combination of HEAT PLUS and other operations

HEAT PLUS + POWERFUL	Not available*
HEAT PLUS + FLOOR WARMING	
HEAT PLUS + ECONO	
HEAT PLUS + QUIET OUTDOOR UNIT	

*Priority is given to the function of whichever button is pressed last.


Possible combinations of POWERFUL / HEAT PLUS operation and basic operations

	Operation mode				
	AUTO	DRY	COOL	HEAT	FAN
POWERFUL	✓	✓	✓	✓	✓
HEAT PLUS	—	—	—	✓	—

Useful Functions



ECONO / QUIET OUTDOOR UNIT Operation

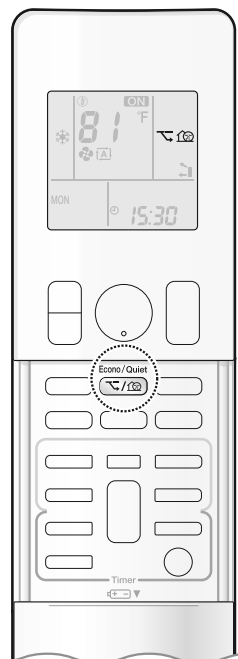


ECONO operation enables efficient operation by limiting the maximum power consumption. This function is useful to prevent the circuit breaker from tripping when the unit operates alongside other appliances on the same circuit.

QUIET OUTDOOR UNIT operation lowers the noise level of the outdoor unit by changing the frequency and fan speed of the outdoor unit. This function is convenient during night-time operation.

To start

Press  and select the desired mode.

 - Each time  is pressed, a different setting option appears on the LCD.



To cancel

Press  until no icon is displayed.

NOTE

Notes on ECONO operation

- This operation is performed with lower power and therefore may not provide a sufficient cooling (heating) effect.
- Pressing  causes the settings to be canceled, and "  " disappears from the LCD.
- If the power consumption level is already low, switching to ECONO operation will not reduce the power consumption.

Notes on QUIET OUTDOOR UNIT operation

- If using a multi system, the QUIET OUTDOOR UNIT operation will work only when this function is set on all operated indoor units. However, if using priority room setting, refer to "Note for Multi System". ▶ Page 33
- Even if the operation is stopped by using the remote controller or the indoor unit ON/OFF switch when using QUIET OUTDOOR UNIT operation, "  " will remain displayed on the remote controller.
- QUIET OUTDOOR UNIT operation will not reduce the frequency nor fan speed if they already are operating at reduced levels.
- This operation is performed with lower power and therefore may not provide a sufficient cooling (heating) effect.

Possible combinations of ECONO / QUIET OUTDOOR UNIT operation and basic operations


	Operation mode				
	AUTO	DRY	COOL	HEAT	FAN
ECONO	✓	✓	✓	✓	—
QUIET OUTDOOR UNIT	✓	—	✓	✓	—

TIMER Operation

English



ON/OFF TIMER Operation

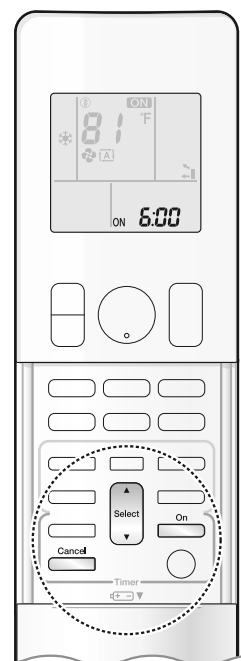


Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use the ON TIMER and OFF TIMER together.

To use ON TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time. ► Page 11

 1. Press .



"6:00" is displayed on the LCD.
"ON" blinks.


- "⊙" and day of the week disappear from the LCD.

2. Press until the time setting reaches the point you like.

- Each pressing of either button increases or decreases the time setting by 10 minutes.
Holding down or increases or decreases the displayed time.

3. Press again.

- "ON" and setting time are displayed on the LCD.
- The TIMER lamp lights orange.

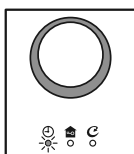

Display

To cancel ON TIMER operation

Press .

- "ON" and setting time disappear from the LCD.
- "⊙" and day of the week are displayed on the LCD.
- The TIMER lamp goes off.

NOTE

Notes on TIMER operation

- When TIMER is set, the present time is not displayed.
- When using the ON/OFF TIMER to start/stop operation, the actual operation start/stop time may differ from the time set. (Maximum of about 10 minutes)


In the following cases, set the timer again.

- After the circuit breaker has turned off.
- After a power failure.
- After replacing the batteries in the remote controller.

TIMER Operation




ON/OFF TIMER Operation

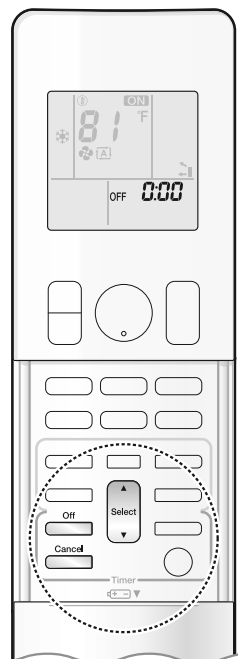

To use OFF TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time. ▶ Page 11

 1. Press .



"0:00" is displayed on the LCD.
"OFF" blinks.


- "⌚" and day of the week disappear from the LCD.

2. Press until the time setting reaches the point you like.

- Each pressing of either button increases or decreases the time setting by 10 minutes.
Holding down or increases or decreases the displayed time.

3. Press again.

- "OFF" and setting time are displayed on the LCD.
- The TIMER lamp lights orange.

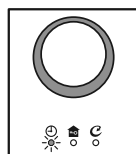


To cancel OFF TIMER operation

Press .

- "OFF" and setting time disappear from the LCD.
- "⌚" and day of the week are displayed on the LCD.
- The TIMER lamp goes off.

To combine ON TIMER and OFF TIMER operation

 - A sample setting for combining the 2 timers is shown below.




NOTE

NIGHT SET mode

- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.9 °F (0.5 °C) up in COOL, 3.6 °F (2.0 °C) down in HEAT) to prevent excessive cooling (heating) during sleeping hours.

TIMER Operation


English

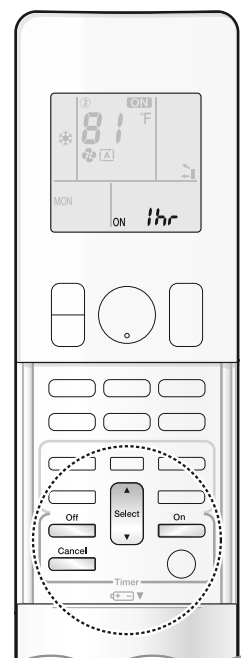

To use the ON/OFF TIMER with an hours remaining display (COUNT UP-DOWN ON/OFF TIMER)


- Check that the clock is correct. If not, set the clock to the present time. ▶ Page 11

 1. Press and hold or for about 5 seconds, when the signal indicator (▲) blinks, release your finger from the button.



For ON TIMER

 "1hr" appears on the LCD.
"ON" blinks.



For OFF TIMER

"1hr" appears on the LCD.
"OFF" blinks.


- "▲" and day of the week disappear from the LCD.

2. Press until the time setting reaches the point you like.

- Each pressing of the button increases or decreases the time setting by 1 hour.
- The time can be set between 1 and 12 hours.

3. Press or again.

- "ON" and "OFF", and setting time appear on the LCD.
- The TIMER lamp lights orange.
- To change the display mode from COUNT UP-DOWN ON/OFF TIMER to 24 HOUR ON/OFF TIMER, repeat **STEP 1**, and continue from **STEP 2** of "24 HOUR ON/OFF TIMER". ▶ Page 24, 25
- Timer display mode cannot be changed while "ON" or "OFF" are blinking.
Press  or  to stop the blinking.

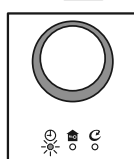

Display

Combining display modes

- Different display modes (24 HOUR ON/OFF TIMER and COUNT UP-DOWN ON/OFF TIMER) can be used for the ON TIMER and OFF TIMER simultaneously.



NOTE

Note on COUNT UP-DOWN ON/OFF TIMER

- After setting, the time displayed on the LCD will automatically count down by 1 hour for every 1 hour that passes.
For example, if the OFF TIMER is set to 3 hours, the display will change as follows: 3hr → 2hr → 1hr → blank (OFF)

Switching between ON/OFF TIMER display modes (24 hour clock and hours remaining display)

- When changing timer display modes (from 24 HOUR ON/OFF TIMER to COUNT UP-DOWN ON/OFF TIMER or vice versa), the timer cancels.
The timer must be set again to activate it.

TIMER Operation



WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week. This is convenient to adapt the WEEKLY TIMER to your family's life style.

Setting example of the WEEKLY TIMER


The same timer settings are used from Monday through Friday, while different timer settings are used for the weekend.

[Monday]	Make timer settings for programs 1-4. ▶Page 28 program 1 ON 77 °F (25.0 °C) 6:00 program 2 OFF 8:30 program 3 ON 81 °F (27.0 °C) 17:30 program 4 OFF 22:00
[Tuesday] to [Friday]	Use the copy mode to make settings for Tuesday to Friday, because these settings are the same as those for Monday. ▶Page 30 program 1 ON 77 °F (25.0 °C) 6:00 program 2 OFF 8:30 program 3 ON 81 °F (27.0 °C) 17:30 program 4 OFF 22:00
[Saturday]	No timer settings
[Sunday]	Make timer settings for programs 1-4. ▶Page 28 program 1 ON 77 °F (25.0 °C) 8:00 program 2 OFF 10:00 program 3 OFF 19:00 program 4 ON 81 °F (27.0 °C) 21:00

- Up to 4 reservations per day and 28 reservations per week can be set using the WEEKLY TIMER. The effective use of the copy mode simplifies timer programming.
- The use of ON-ON-ON-ON settings, for example, makes it possible to schedule operating mode and set temperature changes. Furthermore, by using OFF-OFF-OFF-OFF settings, only the turn off time of each day can be set. This will turn off the air conditioner automatically if you forget to turn it off.

TIMER Operation


English

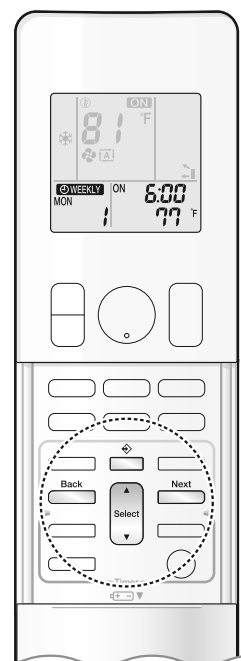


To use WEEKLY TIMER operation

Setting mode

- Make sure the day of the week and time are set.
If not, set the day of the week and time. ▶ [Page 11](#)

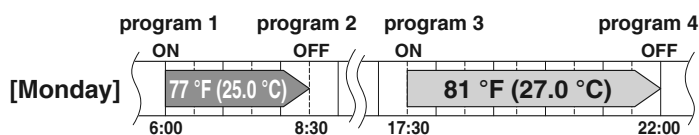

Setting Displays

 1. Press .

- The day of the week and the reservation number of the current day will be displayed.
- 1 to 4 settings can be made per day.

2. Press to select the desired day of the week and reservation number.

- Pressing  changes the reservation number and the day of the week.

3. Press .

- The day of the week and reservation number will be set.
- "WEEKLY" and "ON" blink.

4. Press to select the desired mode.

- Pressing  changes the "ON" or "OFF" setting in sequence.



- In case the reservation has already been set, selecting "blank" deletes the reservation.
- Proceed to **STEP 9** if "blank" is selected.
- To return to the day of the week and reservation number setting, press .


5. Press .

- The ON/OFF TIMER mode will be set.
- "WEEKLY" and the time blink.

TIMER Operation



WEEKLY TIMER Operation

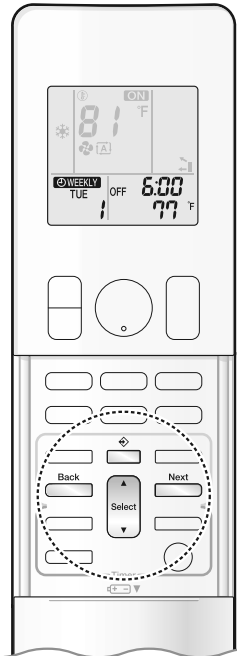6. Press to select the desired time.

- The time can be set between 0:00 and 23:50 in 10-minute intervals.
- To return to the ON/OFF TIMER mode setting, press .
- Proceed to **STEP 9** when setting the OFF TIMER.

7. Press .

- The time will be set.
- “ WEEKLY” and the temperature blink.

8. Press to select the desired temperature.


- The temperature can be set between 50 °F (10.0 °C) and 90 °F (32.0 °C).
COOL or AUTO: The unit operates at 64 °F (18.0 °C) even if it is set at 50 °F (10.0 °C) to 63 °F (17.0 °C).  **Page 13**
HEAT or AUTO: The unit operates at 86 °F (30.0 °C) even if it is set at 87 °F (30.5 °C) to 90 °F (32.0 °C).  **Page 13**
- To return to the time setting, press .
- The set temperature is only displayed when the mode setting is on.

9. Press .

- The temperature will be set and go to the next reservation setting.
- The temperature is set while in ON TIMER operation, and the time is set while in OFF TIMER operation.
- The next reservation screen will appear.
- To continue further settings, repeat the procedure from **STEP 4**.

10. Press to complete the setting.

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and blinking of the OPERATION lamp.
- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- The TIMER lamp lights orange.

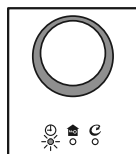

- A reservation made once can be easily copied and the same settings used for another day of the week. Refer to **Copy mode**.  **Page 30**


NOTE

Notes on WEEKLY TIMER operation

- Do not forget to set the clock on the remote controller first.  **Page 11**
- The day of the week, ON/OFF TIMER mode, time and set temperature (only for ON TIMER mode) can be set with the WEEKLY TIMER. Other settings for the ON TIMER are based on the settings just before the operation.
- WEEKLY TIMER and ON/OFF TIMER operation cannot be used at the same time. The ON/OFF TIMER operation has priority if it is set while WEEKLY TIMER is still active. The WEEKLY TIMER will enter the standby state, and “ WEEKLY” will disappear from the LCD. When the ON/OFF TIMER is up, the WEEKLY TIMER will automatically become active.
- Only the time and set temperature with the WEEKLY TIMER are sent with the . Set the WEEKLY TIMER only after setting the operation mode, the airflow rate and the airflow direction ahead of time.
- Turning off the circuit breaker, power failure, and other similar events will render operation of the indoor unit's internal clock inaccurate. Reset the clock.  **Page 11**
-  can be used only for the time and temperature settings. It cannot be used to go back to the reservation number.


TIMER Operation

English

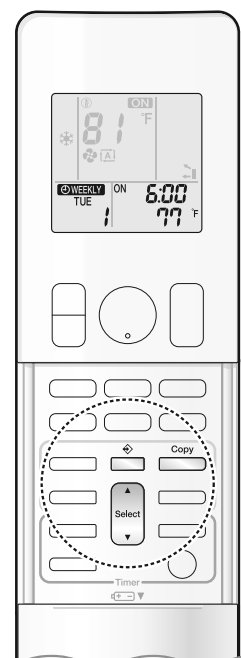


Copy mode

- A reservation made once can be copied to another day of the week. The whole reservation of the selected day of the week will be copied.

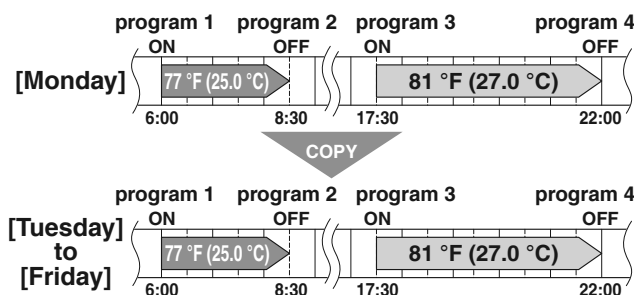

Setting Displays

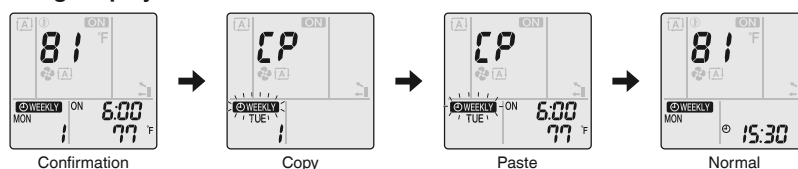

1. Press .

2. Press to confirm the day of the week to be copied.

3. Press .

- The whole reservation of the selected day of the week will be copied.

4. Press to select the destination day of the week.

5. Press .

- The reservation will be copied to the selected day of the week. The whole reservation of the selected day of the week will be copied.
- To continue copying the settings to other days of the week, repeat **STEP 4** and **STEP 5**.

6. Press to complete the setting.

- "WEEKLY" is displayed on the LCD and WEEKLY TIMER operation is activated.

NOTE


Note on COPY MODE

- The entire reservation of the source day of the week is copied in the copy mode.
In the case of making a reservation change for any day of the week individually after copying the content of weekly reservations, press and change the settings in the steps of **Setting mode**. ▶ **Page 28**

TIMER Operation




WEEKLY TIMER Operation

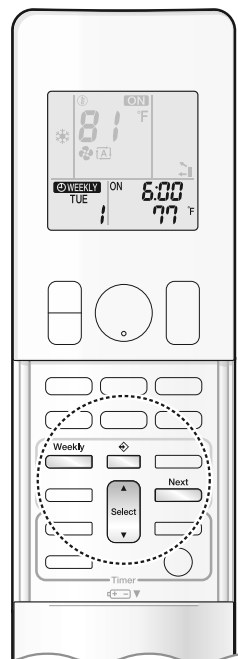

Confirming a reservation

- The reservation can be confirmed.

 Setting Displays



1. Press .


- The day of the week and the reservation number of the current day will be displayed.

2. Press to select the day of the week and the reservation number to be confirmed.

- Pressing displays the reservation details.
- To change the confirmed reserved settings, select the reservation number and press . The mode is switched to setting mode. Proceed to **Setting mode** STEP 4. [▶Page 28](#)

3. Press to exit the confirmation mode.

- " WEEKLY" is displayed on the LCD and WEEKLY TIMER operation is activated.
- The TIMER lamp lights orange.

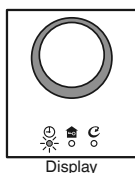

To deactivate WEEKLY TIMER operation

Press while " WEEKLY" is displayed on the LCD.


- " WEEKLY" disappears from the LCD.
- The TIMER lamp goes off.
- To reactivate the WEEKLY TIMER operation, press again.
- If a reservation deactivated with is activated once again, the last reservation mode will be used.

NOTE

- If not all the reservation settings are reflected, deactivate the WEEKLY TIMER operation once. Then press again to reactivate the WEEKLY TIMER operation.

TIMER Operation

English

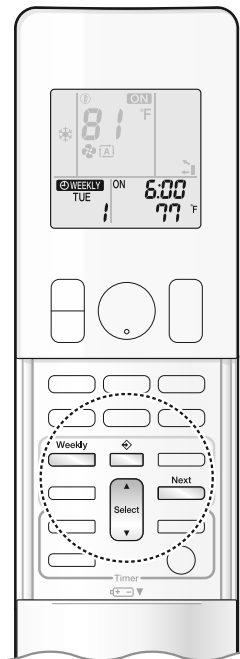

To delete reservations

An individual reservation

1. Press .

- The day of the week and the reservation number will be displayed.

2. Press to select the day of the week and the reservation number to be deleted.3. Press .

- "WEEKLY" and "ON" or "OFF" blink.

4. Press until no icon is displayed.

- Pressing  changes the ON/OFF TIMER mode in sequence.
- Selecting "blank" will cancel any reservation you may have.

Pressing  puts the sequence in reverse.5. Press .

- The selected reservation will be deleted.

6. Press .

- If there are still other reservations, WEEKLY TIMER operation will be activated.

Reservations for each day of the week

- This function can be used for deleting reservations for each day of the week.
- It can be used while confirming or setting reservations.

1. Press .

- The day of the week and the reservation number will be displayed.

2. Press to select the day of the week to be deleted.3. Hold for about 5 seconds.

- The reservation of the selected day of the week will be deleted.

4. Press .

- If there are still other reservations, WEEKLY TIMER operation will be activated.

All reservations

Hold for about 5 seconds with the normal display.

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone.
- This operation cannot be used for the WEEKLY TIMER setting display.
- All reservations will be deleted.

Multi Connection

Note for Multi System

A multi system has one outdoor unit connected to multiple indoor units.


Selecting the operation mode

When the priority room setting is active but the set unit is not operating or when the priority room setting is inactive

When more than one indoor unit is operating, priority is given to the first unit that was turned on.

In this case, set the units that are turned on later to the same operation mode as the first unit.

Otherwise, they will enter the standby state, and the OPERATION lamp will blink; this does not indicate malfunction.

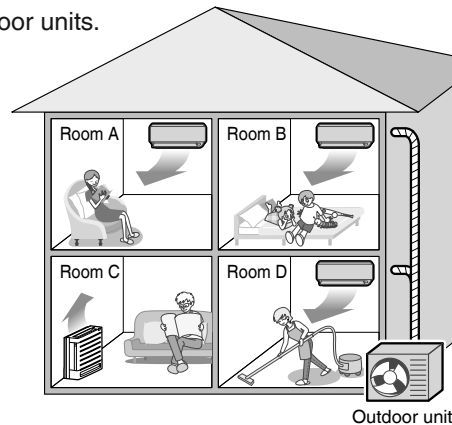

NOTE

Notes on operation mode for a multi system

- COOL, DRY and FAN operation may be used at the same time.
- AUTO operation automatically selects COOL operation or HEAT operation based on the indoor temperature. Therefore, AUTO operation is available when selecting the same operation mode as that of the first unit to be turned on.

CAUTION

- Normally, the operation mode of the first unit that was turned on is given priority, but the following situations are exceptions to this rule. If the operation mode of the first room is FAN operation, using HEAT operation in any room after this will give priority to HEAT operation. In this situation, the indoor unit operating in FAN mode will switch to standby, and the OPERATION lamp will blink.

When the priority room setting is active

Refer to "Priority room setting" on the next page.

NIGHT QUIET operation (Available only for COOL operation)

NIGHT QUIET operation requires initial programming during installation. Please consult your retailer or dealer for assistance.

NIGHT QUIET operation reduces the operation noise of the outdoor unit during the night-time hours to prevent annoyance to neighbors.

- NIGHT QUIET operation is activated when the temperature drops 10.8 °F (6 °C) or more below the highest temperature recorded that day. When the temperature difference between the current outdoor temperature and the maximum outdoor temperature becomes less than 7.2 °F (4 °C), this function will be canceled.
- NIGHT QUIET operation slightly reduces the cooling efficiency of the unit.

QUIET OUTDOOR UNIT operation

Refer to "QUIET OUTDOOR UNIT Operation". ▶ Page 23

When the priority room setting is active but the set unit is not operating or when the priority room setting is inactive

When using the QUIET OUTDOOR UNIT operation feature with a multi system, set all indoor units to QUIET OUTDOOR UNIT operation using their remote controllers.

When canceling QUIET OUTDOOR UNIT operation, simply cancel the mode on one of the operating indoor units using their remote controller.

However QUIET OUTDOOR UNIT operation will remain displayed on the remote controllers for the other rooms.

We recommend you cancel operation in all rooms using their remote controllers.

When the priority room setting is active

Refer to "Priority room setting" on the next page.

COOL/HEAT mode lock

The COOL/HEAT mode lock requires initial programming during installation. Please consult your authorized dealer for assistance. The COOL/HEAT mode lock sets the unit forcibly to either COOL or HEAT operation. This function is convenient when you wish to set all indoor units connected to the multi system to the same operation mode.

NOTE

- The COOL/HEAT mode lock cannot be activated together with the priority room setting.

Priority room setting

The priority room setting requires initial programming during installation. Please consult your authorized dealer for assistance. The room designated as the priority room takes priority in the following situations.

Operation mode priority

- As the operation mode of the priority room takes precedence, you can select a different operation mode from other rooms.

[Example]

- Room A is the priority room in this examples.
When COOL operation is selected in room A while operating the following modes in room B, C and D:

Operation mode in room B, C and D	Status of room B, C and D when the unit in room A is in COOL operation
COOL or DRY or FAN	The current operation mode is maintained.
HEAT	The unit enters the standby mode. Operation resumes when the room A unit stops operating.
AUTO	If the unit is set to COOL operation, it continues. If the unit is set to HEAT operation, it enters the standby mode. Operation resumes when the room A unit stops operating.

Priority when POWERFUL operation is used

[Example]

- Room A is the priority room in this examples.
The indoor units in rooms A, B, C and D are all operating. If the unit in room A enters POWERFUL operation, operation capacity will be concentrated in room A. In such a case, the cooling (heating) efficiency of the units in room B, C and D may be slightly reduced.

Priority when QUIET OUTDOOR UNIT operation is used

[Example]

- Room A is the priority room in this examples.
Just by setting the unit in room A to QUIET operation, the air conditioner starts QUIET OUTDOOR UNIT operation. You do not have to set all the indoor units in operation to QUIET OUTDOOR UNIT operation.

Mobile Controller



Wireless LAN connection

Wireless LAN connection



Web site: <https://daikinone.com/ductless>

For instructions on how to connect your unit to wireless LAN and to your Daikin One Home application, please see the website above.

Contains FCC ID: VPYLB1YA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Contains IC: 772C-LB1YA

This device complies with Industry Canada's applicable licence-exempt RSSs.

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 7-7 / 8 inches (20 cm) or more away from person's body. The FCC responsible party is Daikin Comfort Technologies Manufacturing, L.P., and may be contacted by calling (713)-861-2500, or at 19001 Kermier Rd., Waller, TX 77484.

(<https://www.northamerica-daikin.com>)

This device, which was assembled by Daikin Comfort Technologies Manufacturing, L.P., contains a component that is classified as an intentional radiator.

This intentional radiator has been certified by the FCC: FCC ID VPYLB1YA.

And this intentional radiator has an industry Canada ID: IC 772C-LB1YA.

The manufacturer of the intentional radiator (model no. Type1YA) is Murata Manufacturing co., Ltd (www.murata.com).

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 7-7 / 8 inches (20 cm) or more away from person's body.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Application software installation

■ For Android Phones

- 1) Open [Google Play].
- 2) Search using the application name:
[Daikin One Home].
- 3) Follow the directions on the screen to install.

■ For iOS Phones

- 1) Open the [App Store].
- 2) Search using the application name:
[Daikin One Home].
- 3) Follow the directions on the screen to install.

Attention

- The actual application screen layout and content may differ from what is shown. The layout and content of the application screen is subject to change without notice.

Mobile Controller

English

Connect the air conditioner to your home network.


1. While operation is stopped, press  and hold the button for 5 seconds.

2. Press  or  and select menu number 3.

- “SP” appears on the LCD.
- “3” blinks.



3. Press  to connect to the access point.

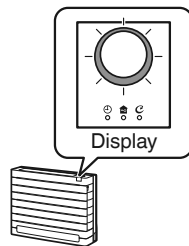


Operation lamp blinks for 1 second

4. Press  to return to the default screen.


No more settings need to be carried out from the remote controller.

5. Open Daikin One Home App and follow the instructions to set up the wireless LAN.

6. When the operation lamp switches from blinking to lit, the connection is complete.

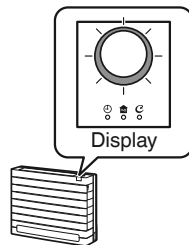

Operation lamp lights up

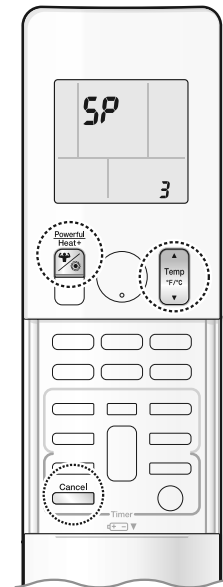
**NOTE**

- While “SP” is displayed, the options that can be selected using  or  are 1, 3, A, and OFF.
- Perform wireless LAN connection one indoor unit at a time.
- If you are unable to establish a network connection, refer the troubleshooting provided by the Daikin One Home App.
- When the lamp blinks slowly, the connection is not ready. Perform the connection procedure while it blinks quickly.

Mobile Controller



Wireless LAN connection

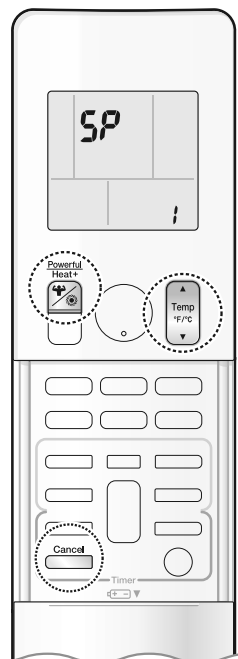

To confirm the wireless LAN connection adapter connection

■ To confirm

1. While operation is stopped, press  and hold the button for 5 seconds.
2. Press  to confirm the selected setting.

- "SP" appears on the LCD.
- "i" blinks.



Check the indoor unit LED.

Operation lamp	Status
Blinking for 1 second	Communication is not ready
Blinking for 3 seconds	Please initialize the wireless LAN connection adapter
Does not blink or light	Communication is abnormal There is a possibility of equipment failure Please request repair

To turn off the wireless connection

■ To use the remote controller

1. While operation is stopped, press  and hold the button for 5 seconds.
2. Press  or  and select menu **OFF**.

- "SP" appears on the LCD.
- "OFF" blinks, and communication is OFF.



3. Press  and hold the button for 2 seconds to confirm selected setting.
4. Press  to return to the default screen.

- The operation lamp will turn off.

To reset the connection setting to the factory default

- If you want to reset the connection settings, it is possible to initialize the wireless LAN connection adapter to its factory default state. If initialized, data including the network settings and power consumption history will be erased.
- When discarding or transferring to another user, initialize the connection adapter to erase the internal data.

■ To reset

1. While operation is stopped, press  and hold the button for 5 seconds.
2. Press  or  and select menu **R**.

- "SP" appears on the LCD.
- "R" blinks.



3. Press  and hold the button for 2 seconds to confirm selected setting.
4. Press  to return to the default screen.

- The operation lamp blinks for 1 second.

NOTE


Note on wireless LAN operation

- If the LED display is distracting, change the brightness setting. [▶ Page 38](#)

Making Changes to Default Settings

English


Brightness of Indoor Unit LED Lamps

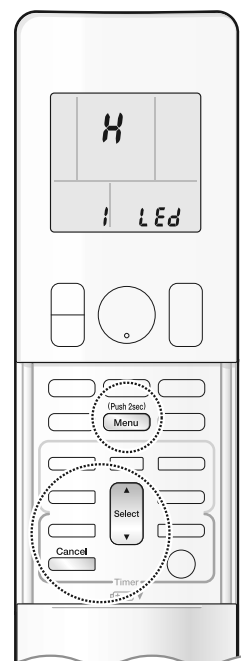

Changes can be made to the setting for the brightness of the LED lamps, to suit your preferences.

1. Press (Push 2sec) and hold the button for 2 seconds.

- “LED” appears on the LCD.
- “1” (menu number) blinks.

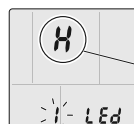


Displays the current setting (H, L or oF)

2. Press or and select menu number 1.

3. Press (Push 2sec) to confirm the selected setting.

4. Press or to change the setting as follows:

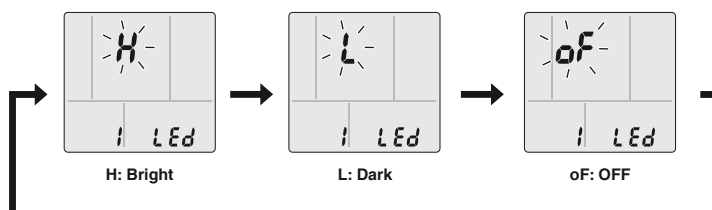

Pressing  puts the sequence in reverse.

5. Press (Push 2sec) again.

- Brightness will be set to the chosen value.


6. Press to return to the default screen.

NOTE

- The display automatically returns to the default screen after 60 seconds. To return to the default screen sooner, press  twice.
- Indoor unit default setting: H (Bright)

Making Changes to Default Settings

Airflow Setting When Indoor Unit Reaches Setpoint

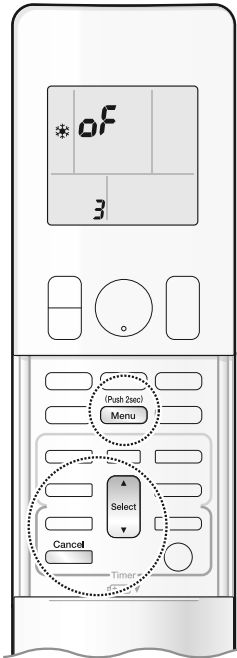

Changes can be made to the setting for airflow rate when unit reaches desired temperature (setpoint), to suit your preferences.
This function is effective when COOL operation is selected.

 
1. While operation is stopped, press (Push 2sec) and hold the button for 2 seconds.

- “LED” appears on the LCD.
- “3” (menu number) blinks.



2. Press or and select menu number 3.

- “” appears on the LCD.
- “3” blinks.




Displays the current setting (on or oF)

3. Press (Push 2sec) to confirm the selected setting.

4. Press or and select setting option.

- The setting option will blink.

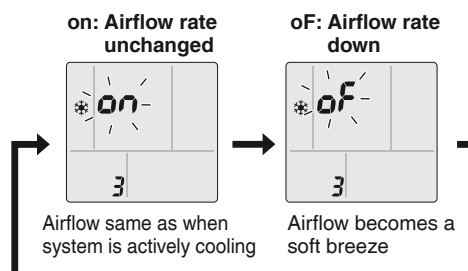

5. Press (Push 2sec) again.

6. Press to return to the default screen.

NOTE

- The display automatically returns to the default screen after 60 seconds. To return to the default screen sooner, press  twice.
- Indoor unit default setting: oF (Airflow rate down)

Care and Cleaning

⚠ CAUTION

- Before cleaning, be sure to stop unit operation and turn off the circuit breaker. Otherwise, an electric shock and injury may result.
If the refrigerant sensor detects a refrigerant leakage, the fan may suddenly start rotating even though operation is stopped.
- Do not touch the aluminum fins of the indoor unit. If you touch those parts, this may cause an injury.
- After cleaning, be sure to turn on the circuit breaker so that the refrigerant sensor can start operating.

■ Quick reference

Cleaning parts

Air filter

- Vacuum dust or wash the filter.

Once every 2 weeks

▶ Page 42

Indoor unit and Remote controller

- Wipe them with a soft cloth.

If dirty

Front panel

- Wipe it with a soft damp cloth. Only neutral detergent may be used.

If dirty

▶ Page 41

Titanium apatite deodorizing filter

- Vacuum dust or replace the filter.

[Cleaning]

Once every 6 months

▶ Page 43

[Replacement]

Once every 3 years

▶ Page 43

Notes on cleaning

For cleaning, do not use any of the following:

- Water hotter than 104 °F (40 °C)
- Volatile liquid such as benzine, gasoline and thinner
- Polishing compounds
- Rough materials such as a scrubbing brush
- Sprays such as deodorizers



Care

Care and Cleaning

⚠ CAUTION


- When removing or attaching the front panel, stand on solid ground and use caution.
- When removing or attaching the front panel, support the panel securely with your hand to prevent it from falling.

■ Front panel

1. Open the front panel.


- Push in the protrusions on the unit (the left and right sides).

Careful when opening front panel - string is attached.

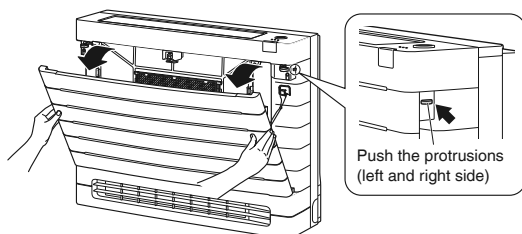


2. Remove the front panel.

- Unhook the string.
- Allow the front panel to tilt toward you and then remove it.

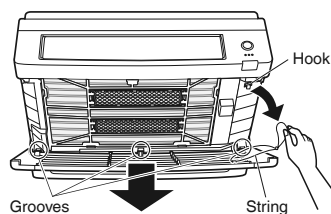


3. Clean the front panel.

- Wipe it with a soft damp cloth.
- Only neutral detergent may be used.
- Wash the panel with water, wipe it with a dry soft cloth, and let it dry in the shade after washing.

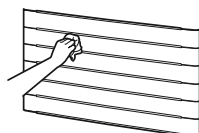


4. Reattach the front panel.

- Insert the front panel into the grooves of the unit (3 locations)
- Hook the string.

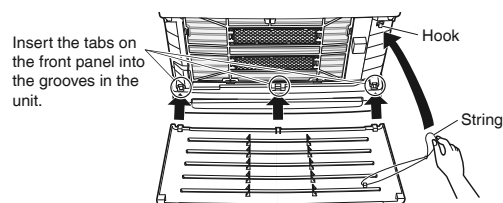

5. Close the front panel slowly.

- Slowly close the front panel until the left and right protrusions click into place.

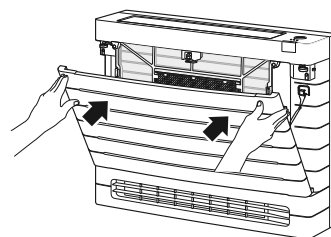


- Make sure that the front panel is securely fixed.

■ Air filter

1. Open the front panel. ▶ Page 41


2. Pull out the air filter.

- Release from the catches on the left and right. After releasing the air filter from the catch above, the filter will bend which may cause dust to rise into the air.

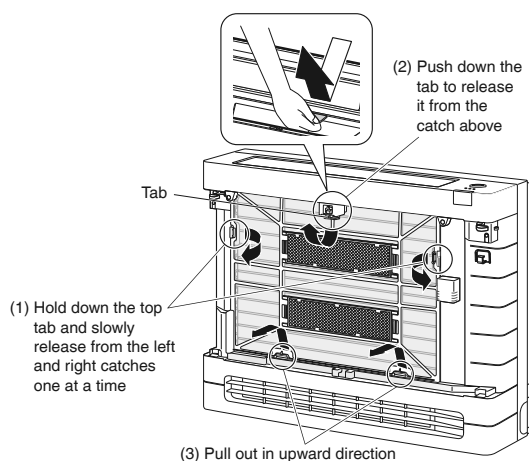

3. Take off the titanium apatite deodorizing filters.


- These are attached to the reverse side of the air filter.
- Hold the recessed parts of the frame and unhook the 4 claws.
- Remove the filters from the tab.

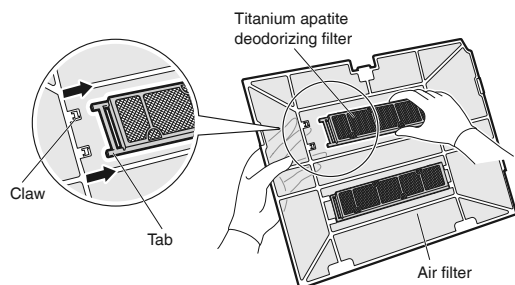

Wear gloves when working.
(Dust from the filter may make your hands dirty.)


4. Wash the air filter with water or clean it with a vacuum cleaner.

- It is recommended to clean the air filter every 2 weeks.

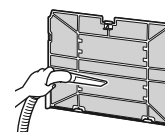

If the dust does not come off easily


- Wash the air filter with neutral detergent thinned with lukewarm water, then let it dry in the shade.
- Be sure to remove the titanium apatite deodorizing filters.

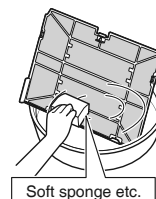

5. Insert the titanium apatite deodorizing filters as they were.

6. Reattach the filter.

- Insert the air filter with the "FRONT" mark facing you.
- Insert the tabs (2 at the bottom, and 1 at the left, right and top) using the △ mark as a guide.

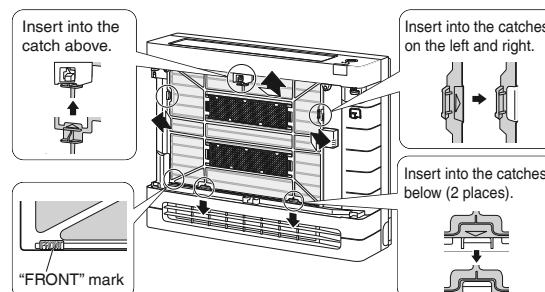

7. Close the front panel slowly.

▶ Page 41

Care


Care and Cleaning

■ Titanium apatite deodorizing filter

1. Open the front panel and pull out the air filter. ▶Page 41, 42

2. Take off the filters.

- Hold the recessed parts of the frame and unhook the 4 claws.
- Remove the filters from the tabs.

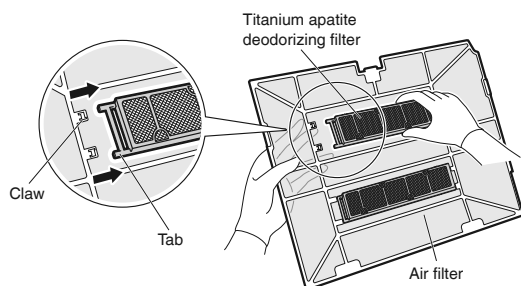

Wear gloves when working.
(Dust from the filter may make your hands dirty.)

3. Clean or replace.

[Cleaning]

3-1 Vacuum dust, and soak in lukewarm water or water for about 10 to 15 minutes if very dirty.

- Do not remove the filter from the frame when washing with water.




3-2 After washing, shake off remaining water and let them dry in the shade.

- This filter can be renewed by washing it with water once **every 6 months** and we recommend replacing it once **every 3 years**.
- Do not squeeze the filter to remove water from it.

[Replacement]


Remove the filter from the filter frame and prepare a new one.

- Do not throw away the filter frame.
- Reuse the filter frame when replacing the filter.

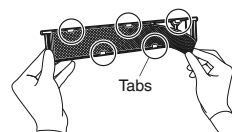

- When attaching the filter, check that the filter is properly set in the tabs.

4. Set the titanium apatite deodorizing filters as they were.

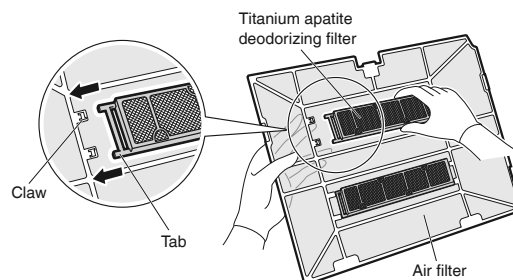

Wear gloves when working.
(Dust from the filter may make your hands dirty.)

5. Reattach the air filter. ▶Page 42

6. Close the front panel slowly.

▶Page 41

NOTE

- Operation with dirty filters:
 - cannot deodorize the air,
 - cannot clean the air,
 - results in poor heating or cooling,
 - may cause odor.
- Dispose of old filters as non-flammable waste.
- To order a titanium apatite deodorizing filter, contact the dealer where you bought the air conditioner.

Item	Titanium apatite deodorizing filter (without frame) 1 set (2 pieces)
Part No.	KAF970A46

■ Prior to a long period of non-use

1. Operate the CLEAN. ▶ Page 17

2. Clean the air filters and reattach them. ▶ Page 42

3. To prevent battery leakage, take out the batteries from the remote controller.

- When starting to use the air conditioner again, make sure that the drain hose outlet is not blocked. (Also, put the batteries into the remote controller.)

Do not turn off the circuit breaker to ensure that the refrigerant sensor can keep operating.

■ We recommend periodical maintenance

- In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a qualified contractor in addition to regular cleaning by the user.
- For qualified contractor maintenance, please contact the dealer where you bought the air conditioner.


When the Need Arises

FAQ

Indoor unit

The flap does not start swinging immediately.

- The air conditioner is adjusting the position of the flap. The flap will start moving soon.

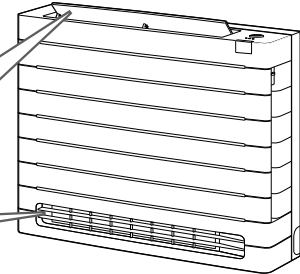

Different sounds are heard.

■ A sound like flowing water

- This sound is generated because the refrigerant in the air conditioner is flowing.
- This is a pumping sound of the water in the air conditioner and can be heard when the water is pumped out from the air conditioner during COOL or DRY operation.
- The refrigerant flows in the air conditioner even if the air conditioner is not working when the indoor units in other rooms are in operation.

■ Blowing sound

- This sound is generated when the flow of the refrigerant in the air conditioner is switched over.

■ Ticking sound

- This sound is generated when the cabinet and frame of the air conditioner slightly expand or shrink as a result of temperature changes.

■ Whistling sound

- This sound is generated when refrigerant flows during defrosting operation.

■ Clicking sound during operation or idle time

- This sound is generated when the refrigerant control valves or the electrical parts operate.

■ Clopping sound

- This sound is heard from the inside of the air conditioner when the exhaust fan is activated while the room doors are closed. Open the window or turn off the exhaust fan.

■ Rotating machinery causes sound

- Sound is heard when the horizontal swing flap moves.
- When the air conditioner is operating in a quiet environment and the airflow rate of the indoor unit is set to Quiet Mode or Low Mode, the motion of the swing flap may cause sound.

The air conditioner stops generating airflow during HEAT operation.

- Once the set temperature is reached, the airflow rate is reduced and operation stopped in order to avoid generating a cool airflow. Operation will resume automatically when the indoor temperature falls.

HEAT operation stops suddenly and a flowing sound is heard.

- The outdoor unit is defrosting. HEAT operation starts after the frost on the outdoor unit has been removed. This can take about 4 to 12 minutes.

Operation does not start soon.

- When  was pressed soon after operation was stopped.

■ When the mode was reselected.

- This is to protect the air conditioner. You should wait for about 3 minutes.

Outdoor unit

Operating sound is loud.

- When frost forms on the heat exchanger of the outdoor unit, the operating sound level increases slightly.


The outdoor unit emits water or steam.

■ In HEAT operation

- The frost on the outdoor unit melts into water or steam when the air conditioner is in defrosting operation.

■ In COOL or DRY operation

- Moisture in the air condenses into water on the cool surface of the outdoor unit piping and drips.

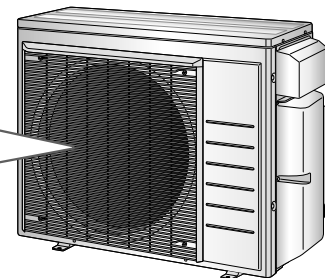

When the Need Arises

English

Troubleshooting

Before making an inquiry or a request for repair, please check the following.

If the problem persists, consult your dealer.



Not a problem

This case is not a problem.



Check

Please check again before requesting repairs.

Unit starts spontaneously

Case	Description / what to check
Fan starts rotating when the unit is off. (OPERATION lamp is blinking)	■ This occurs when the refrigerant sensor has been triggered. • If long beeps are heard. There is a possibility of refrigerant leakage. Ventilate the room, do not switch off the circuit breaker and contact your dealer. • If there are no beeps. Refrigerant leak detection is in progress. If it is determined that there is no refrigerant leakage, the fan will automatically stop after a few minutes. If the blinking does not stop after 10 minutes or more, there may be a refrigerant leak. Do not switch off the circuit breaker and contact your dealer. In addition to refrigerants, insecticides, hairspray etc., can also cause the refrigerant sensor to generate a false alarm.

The air conditioner does not operate

Case	Description / what to check
OPERATION lamp is off.	• Has the circuit breaker been tripped or the fuse blown? • Is there a power failure? • Are batteries set in the remote controller?
OPERATION lamp is blinking.	• Check the error code and consult your dealer. ▶Page 51, 52

The air conditioner suddenly stops operating

Case	Description / what to check
OPERATION lamp is on.	• To protect the system, the air conditioner may stop operating after sudden large voltage fluctuations. It automatically resumes operation in about 3 minutes.
OPERATION lamp is blinking.	• Are the air filters dirty? Clean the air filters. • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? Stop operation and after turning off the circuit breaker, remove the obstruction. Then restart operation with the remote controller. If the OPERATION lamp is still blinking, check the error code and consult your dealer. ▶Page 51, 52 • In the case of multi systems, are all indoor units that are connected to the same outdoor unit in the same operation mode? If not, set all indoor units to the same operation mode and confirm that the lamps. Moreover, when the operation mode is in AUTO, set all indoor unit operation modes to COOL or HEAT for a moment and check again that the lamps are normal. If the lamps stop blinking after the above steps, there is no malfunction. ▶Page 33

The air conditioner does not stop operating

Case	Description / what to check
The air conditioner continues operating even after operation is stopped.	■ Immediately after the air conditioner is stopped • The outdoor unit fan continues rotating for about another 1 minute to protect the system. ■ While the air conditioner is not in operation • When the outdoor temperature is high, the outdoor unit fan may start rotating to protect the system. • CLEAN operation is being performed. It is possible to stop CLEAN operation while it is in progress. (If this does not suit your preferences, set CLEAN to "oF" (Automatic operation is disabled).) ▶Page 17

When the Need Arises

Troubleshooting

The room does not cool down / warm up

Case	Description / what to check
Air does not come out.	✓ ■ In HEAT operation - To prevent the release of cold air, air does not come out directly after operation is started. Please wait 1 to 4 minutes. - During defrosting operation, hot air does not flow out of the indoor unit. ■ When the air conditioner operates immediately after the circuit breaker is turned on - The air conditioner is preparing to operate. Wait for about 3 to 20 minutes.
Air does not come out / Air comes out.	■ Is the airflow rate setting appropriate? - Is the airflow rate setting low, such as "Indoor unit quiet" or "Airflow rate 1"? Increase the airflow rate setting. ■ Is the set temperature appropriate? ■ Is the adjustment of the airflow direction appropriate? ■ Is the airflow rate set to AUTO in COOL operation? ■ Is the unit operating in DRY operation? - When the room temperature reaches the set temperature, the airflow rate will decrease to a gentle breeze in order to prevent over-cooling and overheating. When the room temperature deviates from the set temperature again, the gentle breeze will stop and the airflow will become stronger. Also, if the room temperature stabilizes near the set temperature, the airflow rate may repeatedly alter between strong and weak. (The unit may appear to be operating and stopping repeatedly, but this is not the case.)
Air comes out.	■ Is there any furniture directly under or beside the indoor unit? - Is the air conditioner in ECONO operation or QUIET OUTDOOR UNIT operation? ▶ Page 23 - Is the air filter dirty? - Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? - Is a window or door open? - Is an exhaust fan turning? - Depending on the room conditions, number of occupants, or outdoor temperature and humidity, the set temperature may not be reached.
The room temperature does not reach the set temperature.	✓ ■ If air emitted from the air conditioner is directed toward a wall, the set temperature may fail to be reached correctly.
Unit switches to FAN operation spontaneously. (OPERATION lamp is blinking)	■ This occurs when the refrigerant sensor has been triggered. - If long beeps are heard. There is a possibility of refrigerant leakage. Ventilate the room, do not switch off the circuit breaker and contact your dealer. - If there are no beeps. Refrigerant leak detection is in progress. If it is determined that there is no refrigerant leakage, the previous operation mode will resume after a few minutes. If the flashing does not stop after 10 minutes or more, there may be a refrigerant leak. Do not switch off the circuit breaker and contact your dealer. In addition to refrigerants, insecticides, hairspray etc., can also cause the refrigerant sensor to generate a false alarm.

A sound is heard

Case	Description / what to check
Continuous long beeps (OPERATION lamp is blinking)	■ This occurs when the refrigerant sensor has been triggered. There is a possibility of refrigerant leakage. Ventilate the room, do not switch off the circuit breaker and contact your dealer.

Display lamps

Case	Description / what to check
The operation lamp is off, but the air conditioner is operating.	■ Is the display brightness set to "Off"? ▶ Page 38 ✓ ■ CLEAN operation is being performed. It is possible to stop CLEAN operation while it is in progress. (If this does not suit your preferences, set CLEAN to "oF" (Automatic operation is disabled).) ▶ Page 17
The display lamps on the main unit are dark.	✓ ■ Is the display brightness set to "Low"? ▶ Page 38

When the Need Arises

English

Wireless LAN connection

Case	Description / what to check
The device (air conditioner) cannot be found on the device list screen.	✓ Carry out connection setting again. - Move the router (wireless LAN access point) close to the indoor unit. ▶Page 35-37 - There is a possibility that you are using an unsupported smartphone or router (wireless LAN access point). For details, refer to the web site. ▶Page 35-37
Even if the operation lamp is lit, operation from outside the home is not possible.	✓ Communication between the router and the internet connection may not be working. Please confirm.
The operation lamp does not blink or light up.	? The wireless LAN connecting adapter is disabled. - Malfunction in communication between the indoor unit and the wireless LAN connecting adapter. - There may be a problem with your device. Please contact the store where you bought the air conditioner to request a repair service.

Discharge air temperature is low

Case	Description / what to check
High-temperature air is not emitted during HEAT PLUS operation.	✓ When the outdoor temperature is low, and falls below freezing point, emitted air may fail reach a sufficient temperature.

Water or mist comes out

Case	Description / what to check
Mist comes out of the indoor unit.	✓ This happens when the air in the room is cooled into mist by the cold airflow during COOL or other operation.
Water is leaking from the indoor unit.	? If the drain hose is crushed or clogged, water from the indoor unit may be unable to drain and start leaking. Stop operation of the unit immediately and contact your dealer.

Remote controller

Case	Description / what to check
The unit does not receive signals from the remote controller or has a limited operating range.	✓ The batteries may be exhausted. Replace both batteries with new dry batteries AAA.LR03 (alkaline). For details, refer to "Preparation Before Operation". ▶Page 10 - Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult your dealer if that is the case. - The remote controller may not function correctly if the transmitter is exposed to direct sunlight. - Is there a device in the room that redirects remote controller signals? Some appliances such as TV speakers are equipped with these devices. If there is such a device in the room, the signals it emits may interfere with signals from the remote controller, preventing reception. - Infrared rays from smartphones and game consoles may interfere with signals from the remote controller, preventing reception.
LCD is faint, is not working, or the display is erratic.	✓ The batteries may be exhausted. Replace both batteries with new dry batteries AAA.LR03 (alkaline). For details, refer to "Preparation Before Operation". ▶Page 10
"  " on the LCD is blinking and the remote controller cannot be operated.	✓ Battery power has run out. Replace both batteries at the same time with new size AAA.LR03 (alkaline) batteries. Leaving exhausted batteries in the remote controller can result in injury due to battery leakage, rupturing or heating, or lead to equipment failure. (Even when the  is blinking, the OFF button remains functional.)
Other electric devices start operating.	✓ If the remote controller activates other electric devices, move them away or consult your dealer.

When the Need Arises

Troubleshooting

Air has an odor

Case	Description / what to check
The air conditioner gives off an odor.	☒ • The room odor absorbed in the unit is discharged with the airflow. We recommend you to have the indoor unit cleaned. Please consult your dealer.
	☒ • The indoor unit is blowing out room odor it has absorbed (the smell of walls or carpeting, furniture, clothes, and so on). If the air conditioner has been used for a long time, there is a chance that a dirty heat exchanger or fan are emitting an odor. We recommend you to have the indoor unit cleaned. Please consult your dealer. Do not spray the air conditioner unit with any deodorizers.

Others

Case	Description / what to check
Outdoor and indoor unit fans rotate even though the unit is off.	☐ ■ If the indoor unit fan is rotating and the OPERATION lamp is blinking, this indicates that the refrigerant sensor has been triggered. • If long beeps are heard. There is a possibility of refrigerant leakage. Ventilate the room, do not switch off the circuit breaker and contact your dealer. • If there are no beeps. Refrigerant leak detection is in progress. If it is determined that there is no refrigerant leakage, the fan will automatically stop after a few minutes. If the flashing does not stop after 10 minutes or more, there may be a refrigerant leak. Do not switch off the circuit breaker and contact your dealer. In addition to refrigerants, insecticides, hairspray etc., can also cause the refrigerant sensor to generate a false alarm.
The air conditioner suddenly starts behaving strangely during operation.	☐ • The air conditioner may malfunction due to lightning or radio. If the air conditioner malfunctions, turn off the power with the circuit breaker and restart the operation with the remote controller.
The WEEKLY TIMER does not operate according to the settings.	☒ • Check if the ON / OFF TIMER and the WEEKLY TIMER are set to the same time. Change or deactivate the settings in the ON / OFF TIMER. ►Page 24, 25
The ON/OFF TIMER does not operate according to the settings.	☒ • Check if the ON / OFF TIMER and the WEEKLY TIMER are set to the same time. Change or deactivate the settings in the WEEKLY TIMER. ►Page 27
The ceiling and walls around the indoor unit are black and dirty.	☒ • Due to the circulation pattern of the air and static electricity, the air conditioner is causing airborne dirt and dust to stick to walls and other surfaces. Depending on the wallpaper type, dirt may adhere more easily. A thorough cleaning of the area around the air conditioner is recommended.

Notes on the operating conditions

- If operation continues under any conditions other than those listed in the table,
 - A safety device may activate to stop the operation.
(With a multi connection in COOL operation, the safety device may work to stop the operation of the outdoor unit only.)
 - Dew may form on the indoor unit and drip from it when COOL or DRY operation is selected.
- *1 Cutting the jumper on the outdoor unit PCB will extend the cooling operation range to 14 °F (–10.0 °C).
Installing an air direction adjustment grille (sold separately) will further extend the operation range to –4 °F (–20.0 °C).
Please consult your dealer.
- *2 Installing a drain pan heater (sold separately) will further extend the heating operation range to –13 °F (–25.0 °C).
Please consult your dealer.

Mode	Operating conditions
COOL / DRY	Outdoor temperature
	[RXP models] : 50*1 - 115 °F(10*1 - 46 °C)
	[MXM, MXT, MXTH models]: 14 - 115 °F(–10 - 46 °C)
	*1 –4 °F (–20 °C) if an air direction adjustment grille (sold separately) is installed.
HEAT	Indoor temperature
	: 64 - 90 °F(18 - 32 °C)
	Indoor humidity
	: 80% max.
HEAT	Outdoor temperature
	[MXM models] : 5 - 75 °F(–15 - 24 °C)
	[RXP, MXT models] : 5*2 - 75 °F(–15*2 - 24 °C)
	[MXTH models] : –13 - 75 °F(–25 - 24 °C)
HEAT	*2 –13 °F (–25 °C) if a drain pan heater (sold separately) is installed.
	Indoor temperature : 50 - 86 °F(10 - 30 °C)

■ Call your dealer immediately

 WARNING

When an abnormality (such as a burning smell) occurs, stop operation and turn off the circuit breaker.

- Continued operation in an abnormal condition may result in problems, electric shock or fire.
- Consult the dealer where you bought the air conditioner.

Do not attempt to repair or modify the air conditioner by yourself.

- Incorrect work may result in electric shock or fire.
- Consult the dealer where you bought the air conditioner.

If one of the following symptoms takes place, call your dealer immediately.

- The power cord is abnormally hot or damaged.
- An abnormal sound is heard during operation.
- The circuit breaker, a fuse, or the ground fault circuit interrupter cuts off the operation frequently.
- A switch or a button often fails to work properly.
- There is a burning smell.
- Water leaks from the indoor unit.

Turn off the circuit breaker and call your dealer.



■ **After a power failure**

- The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

■ **Lightning**

- If there is a risk lightning could strike in the neighborhood, stop operation and turn off the circuit breaker to protect the system.



■ **Disposal requirements**

- Dismantling of the unit, handling of the refrigerant, oil and other parts, should be done in accordance with the relevant local and national regulations.

When the Need Arises

Troubleshooting

The OPERATION lamp blinks

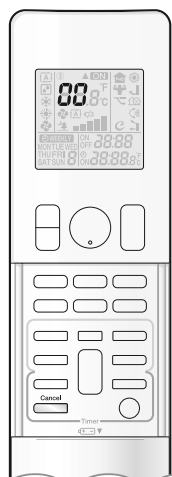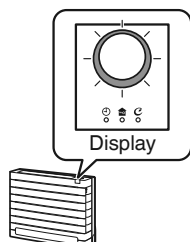

■ Check the interval time between blinks of the OPERATION lamp.

If connecting to multiple indoor units

[Blink interval of about 2 to 3 seconds]

Check the operation mode of any indoor units connected in other rooms.

Because this is a multi system air conditioner, it has one outdoor unit connected to multiple indoor units in different rooms.

If the operation mode is different from the operation mode of the indoor unit in another room, the OPERATION lamp may blink and operation may not be performed, or operation may stop while in progress. COOL, DRY and HEAT operation may not be used at the same time.

[Blink interval of about 0.5 seconds]

This is a notification of an abnormality.

Check the error code following the procedure below, and respond according to the instructions in the table.

■ Fault diagnosis by remote controller

1. When  is held down for about 5 seconds, "00" blinks in the temperature display section.

2. While pointing the remote controller at the indoor unit, press  repeatedly.

A beep indicates a non-corresponding error code

A long beep indicates a corresponding error code

3. When a long beep is produced, check the error code and respond according to the instructions in the table.

- To cancel the code display, hold down  for about 5 seconds (the code display also clears if no button is pressed for a while).

CODE	Cause	Description / what to check
A0	The refrigerant sensor has detected refrigerant or another gas. • Can long beeps be heard?	- If beeps are heard. There is a possibility of refrigerant leakage. Ventilate the room, do not switch off the circuit breaker and contact your dealer. - If there are no beeps. Refrigerant leak detection is in progress. This may take a few minutes. If the blinking does not stop after 10 minutes or more, there may be a refrigerant leak. Do not switch off the circuit breaker and contact your dealer. In addition to refrigerants, insecticides, hairspray etc., can also cause the refrigerant sensor to generate a false alarm.
E7	The fan of the outdoor unit is stopped. • Is there any foreign matter inside the outdoor unit?	After turning off the circuit breaker, remove the foreign matter, then turn the power on again and operate.
L3, L4, L5	The temperature inside the outdoor unit has become too high, so operation has stopped. • Is there anything blocking the air outlet of the outdoor unit?	After turning off the circuit breaker, remove the obstruction, then turn the power on again and operate.
Other error codes, or if the error code cannot be checked		An abnormality has occurred.


In the case of error code U0 or F3

When the Need Arises

English

	CODE	MEANING
SYSTEM	00	NORMAL
	UA	INDOOR-OUTDOOR UNIT COMBINATION FAULT
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A0	REFRIGERANT LEAK DETECTION IN PROGRESS
	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	CH	REFRIGERANT SENSOR ERROR
OUTDOOR UNIT	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	EA	COOLING-HEATING SWITCHING ERROR
	E1	CIRCUIT BOARD FAULT
	E3*	HIGH PRESSURE SWITCH (HPS) ACTIVATED
	E5	OL (COMPRESSOR OVERLOAD) STARTED / HIGH PRESSURE SWITCH (HPS) ACTIVATED*
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	F6	HIGH PRESSURE CONTROL (IN COOLING)
	H0	SENSOR FAULT
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	DC CURRENT SENSOR FAULT
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L3	ELECTRICAL PARTS HEAT FAULT
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

*The contents of the error differ depending on the connected outdoor unit.

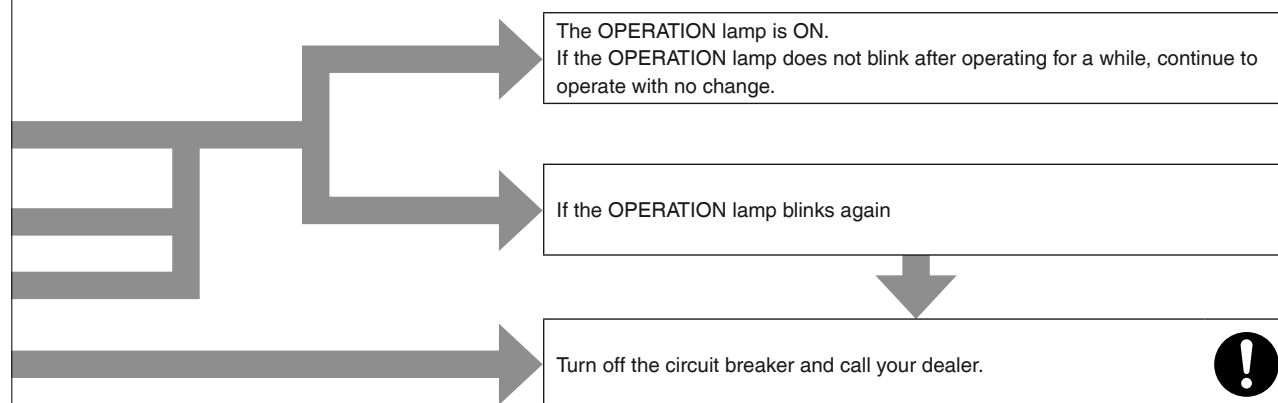

14. Options

14.1 Option List

14.1.1 Indoor Unit

FDMA Series

Option Name	Model Name
Wired remote controller	BRC1NRV71
Centralized management controller	DCS302C71
Schedule timer controller	DST301BA61
Remote sensor	KRCS01-6B
Wire renovated adopter	KRP1C76
Shield plate for side plate	KDBD63A160

FVXV Series

Option Name	Model Name
Wired remote controller ★1 ★5	BRC073A6
Wired remote controller cord (shielded wire)	Length 3 m BRCW901A03 Length 8 m BRCW901A08
Wiring adaptor for timer clock / remote controller ★1 ★3 ★4 (normal open pulse contact / normal open contact)	KRP413BB1S
Centralized management controller ★2	DCS302C71
Schedule timer controller ★2	DST301BA61
Interface adaptor for DIII-NET ★1 ★4 (residential air conditioner)	KRP928BB2S
Titanium apatite deodorizing filter (without frame)	KAF970A46
Remote controller loss prevention with chain	KKF910A4
S21 conversion connector	KER087A41

- Notes:**
- ★1. S21 conversion connector (KER087A41) is required.
 - ★2. An interface adaptor (KRP928BB2S) is also required for each indoor unit.
 - ★3. Timer clock and other devices ; obtained locally.
 - ★4. Wireless LAN adaptor (built-in) needs to be set 'OFF' when Wiring adaptor for timer clock/remote controller (KRP413BB1S) or Interface adaptor for DIII-NET (KRP928BB2S) is connected. If they are connected at the same time, the operation and display may not match.
 - ★5. Wired remote controller (BRC073A6) can be used together with wireless LAN adaptor (built-in).

14.1.2 Outdoor Unit

Option Name	Model	
	09/12 class	15/18/24 class
Air direction adjustment grille	KPW937F4	KPW063B4
Back protection wire net	KKG067A41	KKG063A44
Drain plug ★	KKP937A4	KKP937A4
Drain pan heater	KEH068A41	KEH064A41
Snow hood (intake side plate)	KPS067A41	KPS063A41
Snow hood (intake rear plate)	KPS067A42	KPS063A44
Snow hood (outlet)	KPS067A44	KPS063A47

★ Standard accessory

14.2 <BRC1NRV71> Wired Remote Controller (Installation)

1. Safety Considerations

The original instructions are written in English. All other languages are translations of the original instructions.

All phases of the field-installation, including, but not limited to, electrical, piping, safety, etc. must be in accordance with manufacturer's instructions and must comply with national, state, provincial and local codes.

Read these **SAFETY CONSIDERATIONS** carefully before installing the remote controller.

After completing the installation, ensure that the remote controller operates properly during the startup operation.

Train the customer to operate and maintain the remote controller. Inform customers that they should store this Installation Manual with the Operation Manual for future reference.

Always use a licensed installer or contractor to install this product. Improper installation can result in electrical shock, fire, or explosion.

Meanings of **WARNING**, **CAUTION**, and **NOTE** Symbols.

 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 NOTE	Indicates situations that may result in equipment or property-damage accidents only.

 WARNING	
Only qualified personnel must carry out the installation work.	
Consult your Daikin dealer regarding relocation and reinstallation of the remote controller. Improper installation work may result in electric shocks or fire.	
Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Improper installation may cause electrical shocks or fire.	
Use only specified accessories and parts for installation work. Failure to use specified parts may result in electric shocks, fire, or the unit falling.	
Do not disassemble, reconstruct, or repair. Electric shock or fire may occur.	
Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.	
Before touching electrical parts, confirm the power-off to the unit.	

CAUTION

Keep water out of the remote controller.

To avoid electric shock due to entry of water or insects, fill the wiring through-hole with putty.

Do not wash the remote controller with water as it may result in electrical shocks or fire.

Do not touch the remote controller buttons with wet fingers.

Touching the buttons with wet fingers can cause an electric shock.

Do not install the remote controller in the following locations:

- (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen.
Plastic parts may deteriorate.
- (b) Where corrosive gas, such as sulfurous acid gas, is produced.
- (c) Near machinery emitting electromagnetic waves.
Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
- (d) Where flammable gas may leak, where there is carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.
Operating the unit in such conditions can cause a fire.
- (e) High temperature area or direct flame.
Overheating and/or fire can occur.
- (f) Moist area, where there is exposure to water. If water enters the inside of the remote controller, it may cause electric shock and electrical components may fail.

NOTE

Install the control wires for the unit and the remote controller at least 3.5 feet (1 meter) away from televisions or radios to prevent image interference or noise. Depending on the radio waves, a distance of 3.5 feet (1 meter) may not be sufficient to eliminate the noise.

When remote controller's temperature sensor is used, select the installation location as per the following:

- A place where average temperature in the room can be detected.
- A place where it is not exposed to direct sunlight.
- A place where it is far away from any heat source.
- A place where it is not affected directly by outside air.

2. Accessories

The following accessories are included.


Drywall screw	Drywall anchor	Wire tie	Operation manual	Installation manual	Wiring retainer
					
(2 pcs.)	(2 pcs.)	(1 pc.)	(1 pc.)	(1 pc.)	(1 pc.)

3. Remote Controller Installation Procedure

3-1 Determine where to install the remote controller.

Make sure to follow the **Safety Considerations** when determining the location.

3-2 If the control wire for the remote controller is to be routed from the rear, consider the location of the access hole in the lower case for making a hole in the wall.

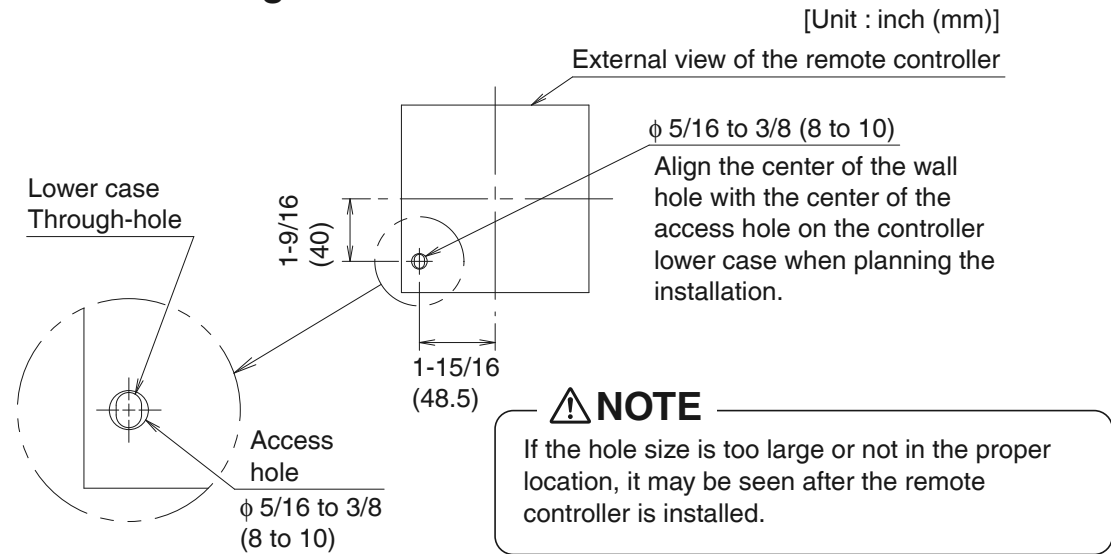


3-3 Remove upper case.

Insert a screwdriver in the recess of lower case to remove the upper case (2 points).


Remote controller printed-circuit board is installed on the upper case. Be careful not to damage the printed-circuit board with the screwdriver.

Be careful not to let dust or moisture touch the printed-circuit board.

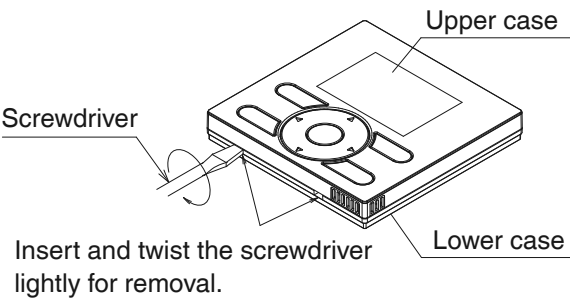


3-4 Determine the location where the wiring will enter the remote controller (back, left side, top left, top center).

3-4-1 Back outlet

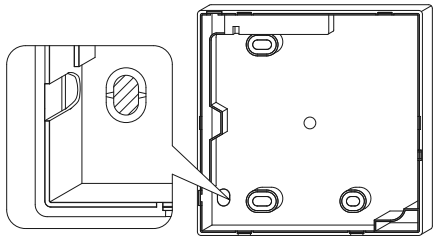


Cut off resin area (notched area).

3-4-2 Left outlet

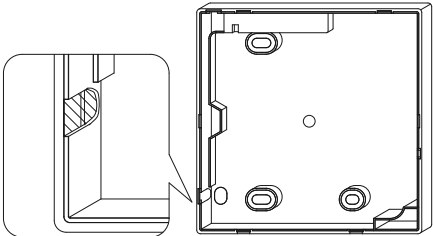


Cut the plastic at the notched area and remove any remaining burrs.

3-4-3 Top left outlet

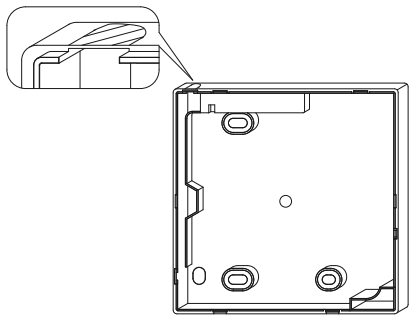

Cut the plastic at the notched area and remove any remaining burrs.

3-4-4 Top center outlet

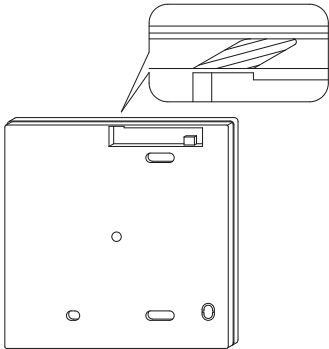

Cut the plastic at the notched area and remove any remaining burrs.

3-5 Install wiring.


NOTE

- 1. Switch box and control wiring are filed supplied.
- 2. Do not touch the remote controller printed-circuit board.

Wiring Specifications

Wiring Type	Non-shielded, 2-conductor, stranded copper wire
Wiring Size	AWG-18
Wiring Length	Maximum 1640 feet (500 m)

Prepare the wiring for connection to the remote controller following these instructions:

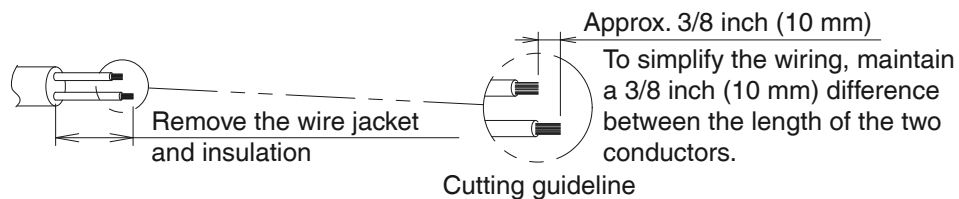


Length of jacket to be removed:


- Approx. 6 inch (150 mm) for top left outlet
- Approx. 8 inch (200 mm) for top center outlet

Connect the terminals (P/P1, N/P2) of the remote controller to the terminals (P1, P2) of the unit. (P1 and P2 are not polarity sensitive.)


3-5-1 Back outlet

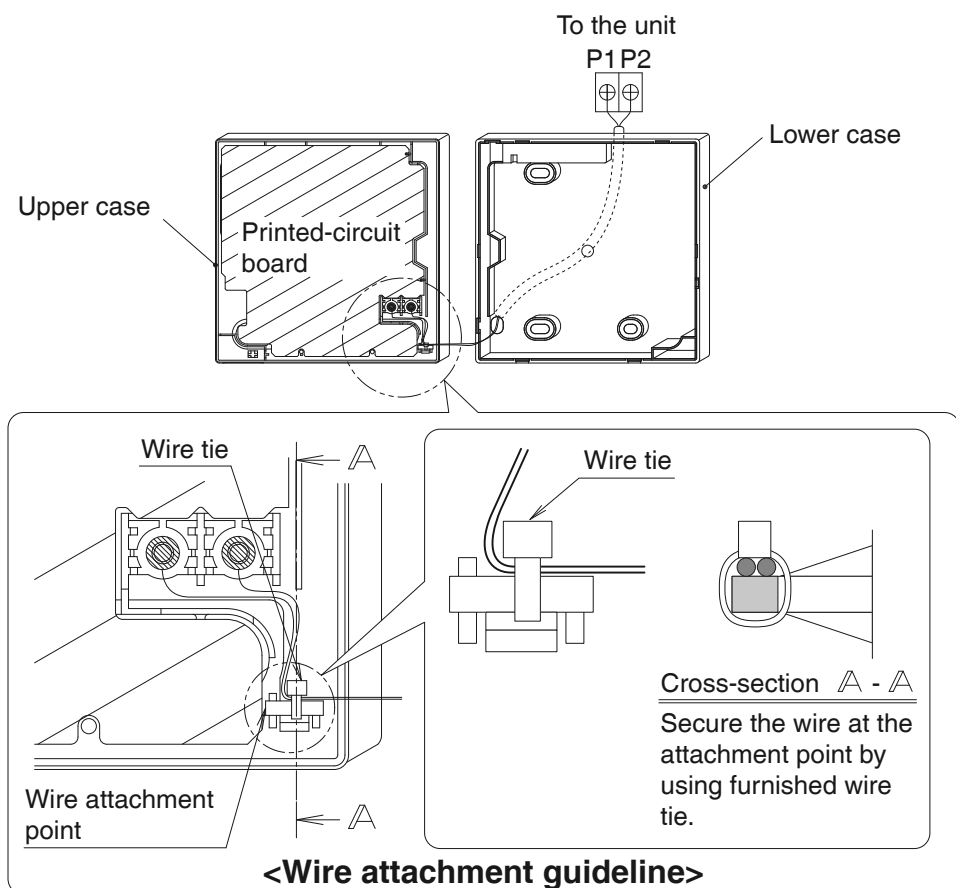


3-5-2 Left outlet

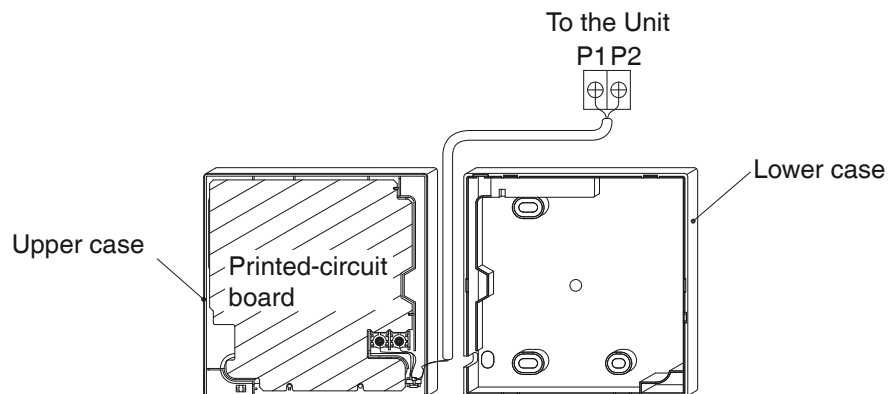

3-5-3 Top left outlet

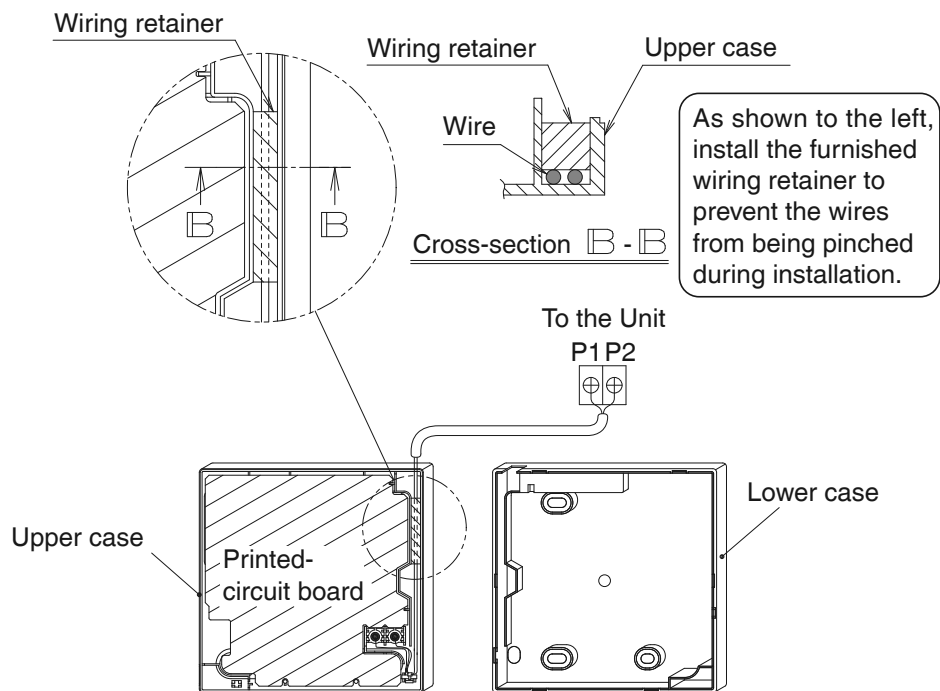

3-5-4 Top center outlet

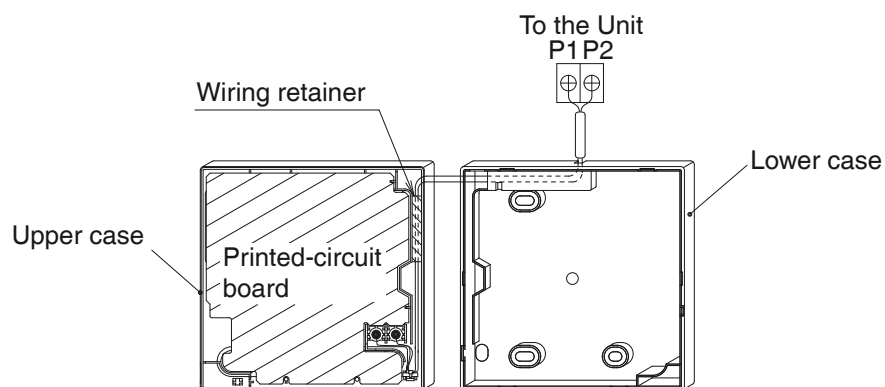

⚠ NOTE


- To prevent electrical noise and possible communication errors, avoid installing the remote controller wiring parallel to or in the vicinity of line voltage circuits.

3-6 Installation procedure for the lower case.

When wiring the remote controller through the top center or rear access points, attachment of the wire to the lower case is required before it is wall mounted. Closely follow the wiring procedures.


3-6-1 Wall installation

Secure by using furnished drywall anchors and screws (2 pcs.).

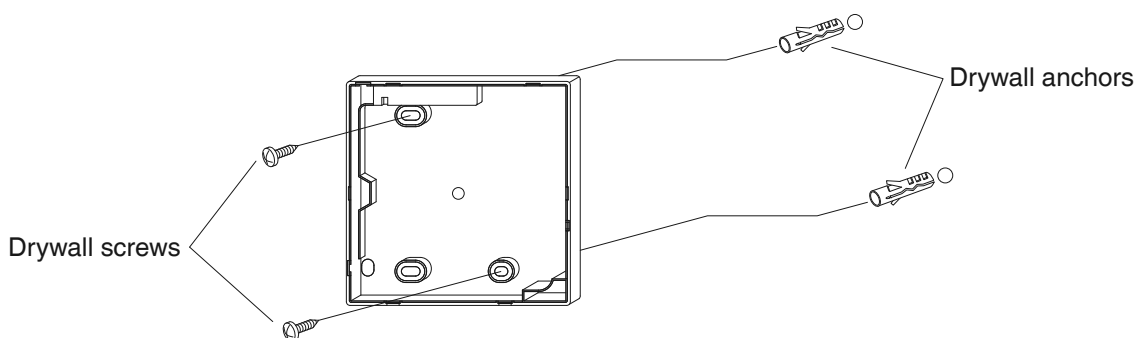

3-6-2 Switch box installation

Secure by using field supplied machine screws (2 pcs.).

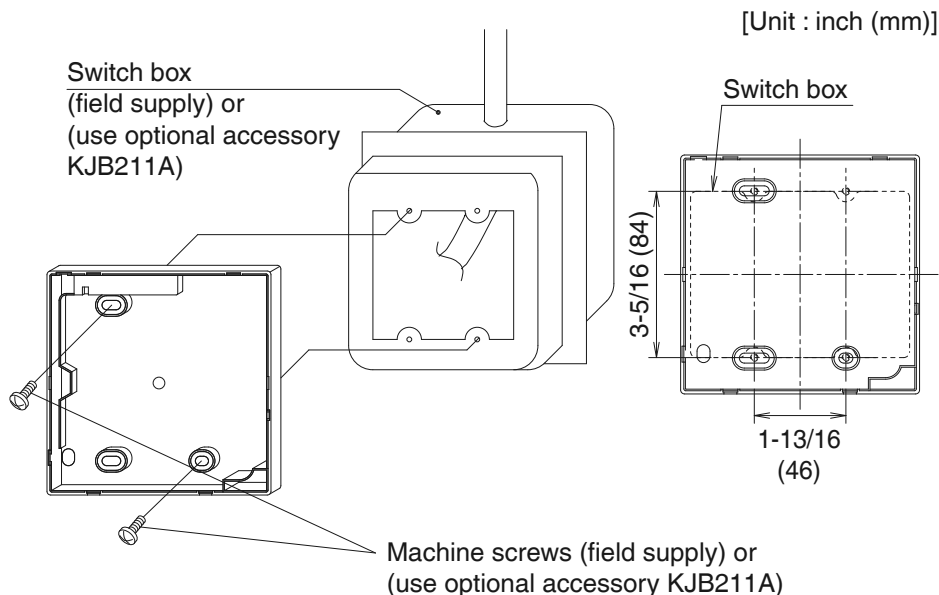


⚠ NOTE

- Install the control on a flat surface only.
- To prevent deformation of the lower case, avoid over-tightening the installation screws.


3-7 Install the upper case.

- Align the upper case with tabs of the lower case (6 points), insert and install the upper case.
- Install the wiring with care to prevent pinching.
- Peel off the protective membrane which overlays the upper case.

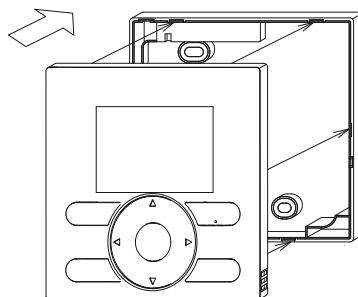

4. Functions and Menu Items of Remote Controller Buttons

4-1 Functions and menu items

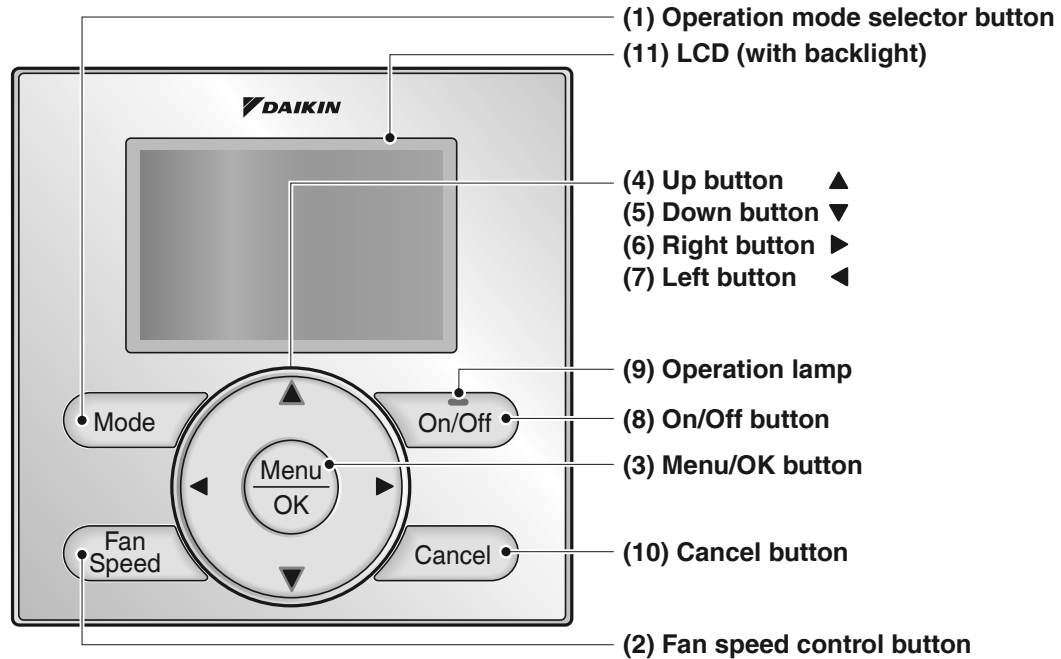

(1) Operation mode selector button

Used to change the mode.

(2) Fan speed control button

Used to change the fan control.

(3) Menu/OK button

- Used to access the main menu.
(For details of the main menu, see the operation manual.)
- Used to enter the item selected.

Main Menu

CO2 Monitoring
 *Humidity
 *Airflow Direction
 *Individual Airflow Direction
 *Ventilation
 Schedule
 Override
 *Optimum Start/Stop
 Celsius / Fahrenheit
 Filter Auto Clean
 Maintenance Information
 Configuration
 Current Settings
 Clock & Calendar
 Daylight Saving Time
 Language

*Depending on connected model

(4) Up button ▲

- Used to raise the setpoint temperature.
- The previous menu items will be highlighted.
(The highlighted items will be scrolled continuously when the button is pressed continuously.)
- Used to change the selected item.

(5) Down button ▼

- Used to lower the setpoint temperature.
- Items below the currently selected item will be highlighted.
(The highlighted items will be scrolled continuously when the button is pressed continuously.)
- Used to change the selected item.

(6) Right button ►

- Used to highlight items to the right of the currently selected item.
- Display contents are changed to next screen per page.

(7) Left button ◀

- Used to highlight items to the left of the currently selected item.
- Display contents are changed to previous screen per page.

(8) On/Off button

Press once to operate, and press once again to stop.

(9) Operation lamp

Green lamp lights up during operation. The lamp will flash if a malfunction occurs.

(10) Cancel button

- Used to return to the previous screen.
- Press and hold this button for 4 seconds or longer to display service settings menu.

(11) LCD (with backlight)

The backlight will illuminate for approximately 30 seconds by pressing any operation button.


Service Settings menu

Test Operation
Maintenance Contact
*Blower Speed
Field Settings
*Energy Saving Options
Prohibit Function
Min Setpoints Differential
*Outdoor unit AirNet Address
*Unit Operation Hours
Error History
*Indoor Unit Status
*Outdoor Unit Status
*Unit Status
Forced Fan ON
Switch Main Sub Controller
Filter Indicator
*Brush/Filter Ind.
*Disable Filter Auto Clean

*Depending on connected model

⚠ NOTE

- Operate the button while the backlight is illuminated.
- When one indoor unit or rooftop unit is controlled by two remote controllers (main / sub) only the first controller to be accessed by the user will illuminate its backlight.

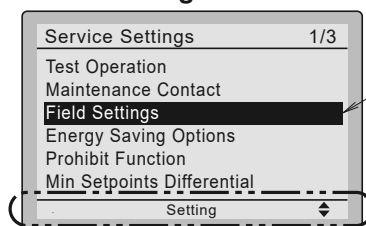4-2 Button menu display descriptions**<Service settings menu screen>**

Highlighted display (selected items)

In the highlighted display (selected items) setting screen, button operation descriptions are displayed.

5. Power-on

- Check for completion of indoor/outdoor unit wiring (SkyAir and VRV only).
- Ensure that covers have been replaced on electrical component boxes for all units prior to restoring power.

NOTE


If construction activities are planned within the space following the test operation procedure, recommend to the customer that the unit is not operated to prevent contamination from paints, drywall dust and other airborne materials.

- 5-1** The following message is displayed after power-on.
Checking the connection.
Please stand by.

When the above message is displayed, the backlight will not be ON.

In the case that 1 indoor unit or 1 rooftop unit is controlled by 2 remote controllers:

Make sure to set the sub remote controller when the above message is displayed. Hold **Mode** button for 4 seconds or longer to set.
 When the display is changed from "Main RC" to "Sub RC" the setting is completed.

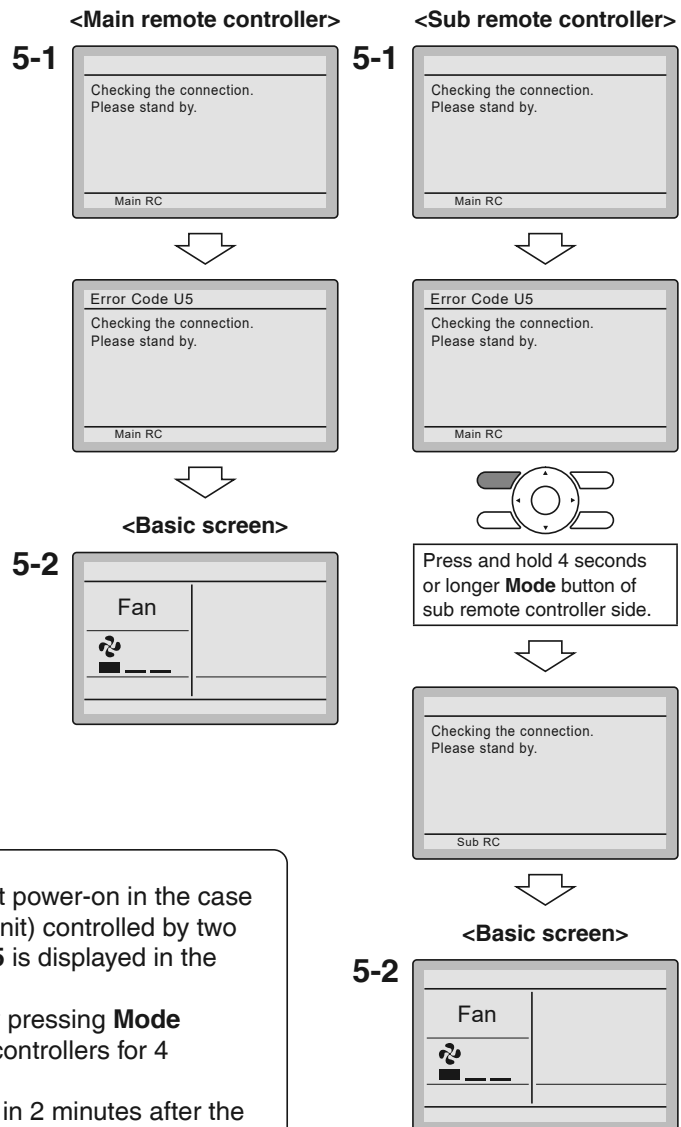

- 5-2** Basic screen is displayed.

NOTE

If sub remote controller is not set at power-on in the case of one indoor unit (or one rooftop unit) controlled by two remote controllers, **Error Code: U5** is displayed in the connection checking screen.
 Select the sub remote controller by pressing **Mode** button of either one of the remote controllers for 4 seconds or longer.
 If the basic screen is not displayed in 2 minutes after the "Sub RC" is displayed, shut off the power supply and check the wiring.

NOTE

When selecting a different language, refer to **Chapter 12. Language.**
 (See page 28.)

6. Field Settings

- There are 2 setting ways for field settings when the unit is group controlled. One is individual setting, and another is group setting.
- Group Control is only for VRV and SkyAir.

6-1 Press and hold **Cancel** button for 4 seconds or longer.
Service settings menu is displayed.

6-2 Select **Field Settings** in the Service settings menu, and press **Menu/OK** button.
Field settings screen is displayed.


6-3 Highlight the mode, and select desired "Mode No." by using ▲▼ (Up/Down) button.
* Depending on the mode number, sub mode number is displayed.
See the unit's manual for details.

6-4 In the case of setting per unit during group control (When Mode No. such as **20**, **21**, **22**, **23**, **25** are selected), highlight the unit No. and select "Unit No." to be set by using ▲▼ (Up/Down) button.
(In the case of group setting, this operation is not needed.)



[In the case of individual setting per unit, current settings are displayed. And, SECOND CODE NO. " - " means no function.]

6-5 Highlight SECOND CODE NO. of the FIRST CODE NO. to be changed, and select desired "SECOND CODE NO." by using ▲▼ (Up/Down) button. Multiple identical mode number settings are available.

[In the case of setting for all units in the remote control group, available SECOND CODE NO. is displayed as " * " which means it can be changed. When SECOND CODE NO. is displayed as " - ", there is no function.]

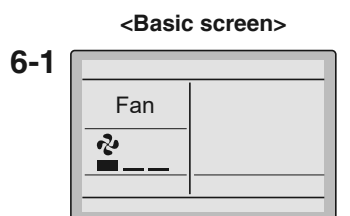

 Press and hold **Cancel** button for 4 seconds or longer during backlight lit.

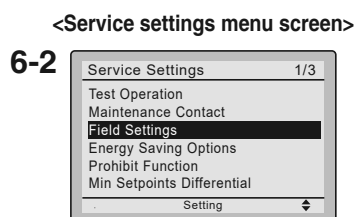


Press **Menu/OK** button.




<Service settings screen>

In the case of individual setting per unit

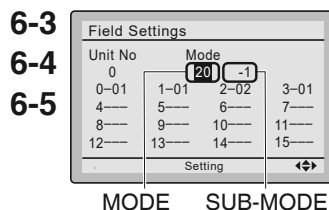

In the case of group total setting

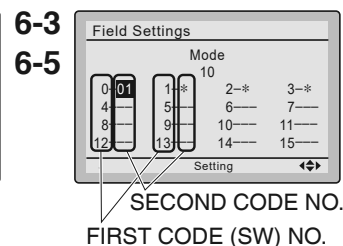

Press **Menu/OK** button.

6-6 Press **Menu/OK** button. Setting confirmation screen is displayed.


6-7 Select **Yes** and press **Menu/OK** button. Setting details are determined and field settings screen returns.

6-8 In the case of multiple setting changes, repeat “**6-3**” to “**6-7**”.

6-9 After all setting changes are completed, press **Cancel** button twice.

6-10 Backlight goes out, and **[Checking the connection. Please stand by.]** is displayed for initialization. After the initialization, the basic screen returns.

↓
<Setting confirmation screen>

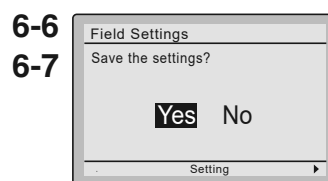

Press **Menu/OK** button.



Setting confirmation

NOTE

- Installation of optional accessories in the unit require changes to field settings. See the manual of the optional accessory.
- For field setting details related to the unit, see installation manual shipped with the unit.

Mode No. (Note 1)		First Code No.	Description	Second Code No. (Note 2) (Items in bold are factory default settings)												
				01	02	03	04	05	06	07	08	09	10	11	12	13
1b	7	Standby display for Defrost/ Hot start/Oil return	Displayed	Not Displayed	—	—	—	—	—	—	—	—	—	—	—	
	11	Clock display on detailed screen	Displayed	Not Displayed	—	—	—	—	—	—	—	—	—	—	—	
	12	Setting temperature display when stopped	Displayed	Not Displayed	—	—	—	—	—	—	—	—	—	—	—	
	13	Operation mode display when stopped	Displayed	Not Displayed	—	—	—	—	—	—	—	—	—	—	—	
	15	Air volume/FAN operation icon display	Displayed	Not Displayed	—	—	—	—	—	—	—	—	—	—	—	
1c	1	Thermistor sensor for auto changeover and setback control by the remote controller	Utilize the return air thermistor	Utilize the remote controller thermistor	—	—	—	—	—	—	—	—	—	—	—	
	3	Access permission level setting	Level 2	Level 3	—	—	—	—	—	—	—	—	—	—	—	
	10	Remote controller thermostat offset (Main RC, Auto mode) (Note 3)	-5.4F (-3.0C)	-4.5F (-2.5C)	-3.6F (-2.0C)	-2.7F (-1.5C)	-1.8F (-1.0C)	-0.9F (-0.5C)	±0.0F (±0.0C)	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	4.5F (2.5C)	5.4F (3.0C)	
	11	Remote controller thermostat offset (Sub RC, Auto mode) (Note 3)	-5.4F (-3.0C)	-4.5F (-2.5C)	-3.6F (-2.0C)	-2.7F (-1.5C)	-1.8F (-1.0C)	-0.9F (-0.5C)	±0.0F (±0.0C)	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	4.5F (2.5C)	5.4F (3.0C)	
	12	Remote controller thermostat offset (Main RC, Cool mode) (Note 3)	-5.4F (-3.0C)	-4.5F (-2.5C)	-3.6F (-2.0C)	-2.7F (-1.5C)	-1.8F (-1.0C)	-0.9F (-0.5C)	±0.0F (±0.0C)	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	4.5F (2.5C)	5.4F (3.0C)	
	13	Remote controller thermostat offset (Main RC, Heat mode) (Note 3)	-5.4F (-3.0C)	-4.5F (-2.5C)	-3.6F (-2.0C)	-2.7F (-1.5C)	-1.8F (-1.0C)	-0.9F (-0.5C)	±0.0F (±0.0C)	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	4.5F (2.5C)	5.4F (3.0C)	
	14	Remote controller thermostat offset (Sub RC, Cool mode) (Note 3)	-5.4F (-3.0C)	-4.5F (-2.5C)	-3.6F (-2.0C)	-2.7F (-1.5C)	-1.8F (-1.0C)	-0.9F (-0.5C)	±0.0F (±0.0C)	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	4.5F (2.5C)	5.4F (3.0C)	
	15	Remote controller thermostat offset (Sub RC, Heat mode) (Note 3)	-5.4F (-3.0C)	-4.5F (-2.5C)	-3.6F (-2.0C)	-2.7F (-1.5C)	-1.8F (-1.0C)	-0.9F (-0.5C)	±0.0F (±0.0C)	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	4.5F (2.5C)	5.4F (3.0C)	
	2	Setback availability	N/A	Heat only	Cool only	Cool/ Heat	—	—	—	—	—	—	—	—	—	
	1e	11	Cooling/Heating switching guard timer setting	15min	30min	60min	90min	—	—	—	—	—	—	—	—	—
12		Cooling/Heating auto switching temperature	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	—	—	—	—	—	—	—	—	—	
13		Cooling/Heating immediate switching temperature	0.9F (0.5C)	1.8F (1.0C)	2.7F (1.5C)	3.6F (2.0C)	—	—	—	—	—	—	—	—	—	

English

15

- Notes)
1. Field settings are normally applied to the entire remote control group, however if individual indoor units in the remote control group require specific settings or for confirmation that settings have been established, utilize the mode number in parenthesis.
 2. Any features not supported by the connected unit will not be displayed.
 3. If different offset values are set for cooling and heating modes, the following issues may occur in auto operation mode:
 - The indoor unit may switch more frequently between cooling/heating modes
 - The indoor unit may switch less frequently between cooling/heating modes
 - Setback on/off may happen more frequently
 - Setback on/off may happen less frequentlyTo avoid these issues, set the offset values for auto mode.


7. Setting Addresses

- This section describes how to set Group Address, Indoor unit Airnet Address, Outdoor unit Airnet Address, Indoor unit Label and Outdoor unit Label.

7-1 Group Address (Group) for VRV

This menu is displayed when multizone controller or BACnet MS/TP adaptor is connected.


1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
2. Select **Group Address** in the Service settings menu, and press **Menu/OK** button. Group Address screen is displayed.
3. Select **Group Address (Group)** and press **Menu/OK** button.
4. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.
5. Select the address you want to set by using **▲▼** buttons.
6. Press **Menu/OK** button. The indication changes from "Release" to "Set", then the group address is set.

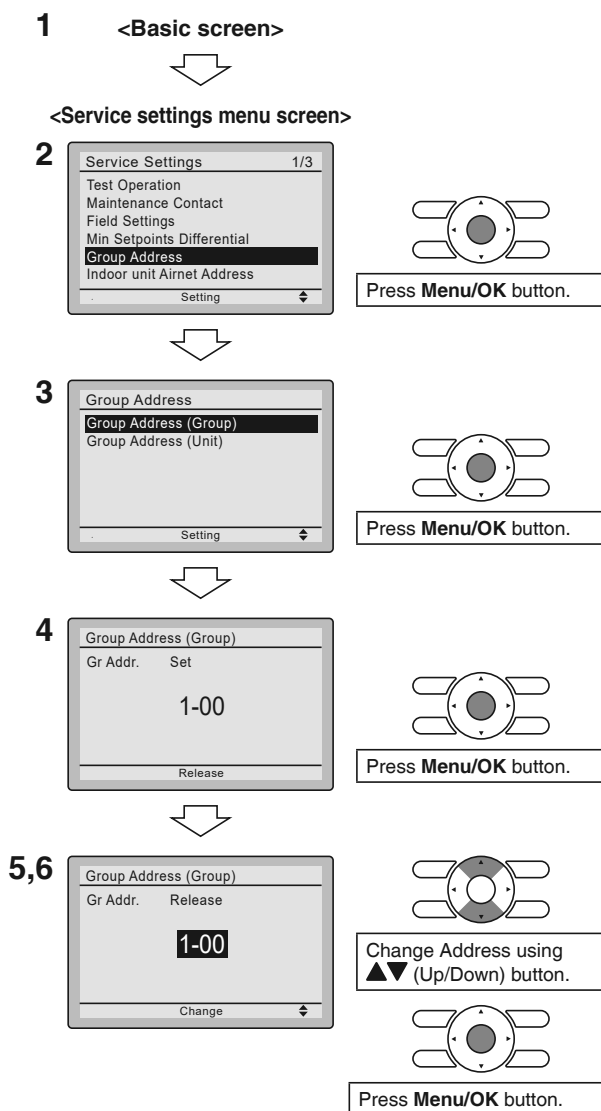

7-2 Group Address (Unit) (VRV only)


This menu is displayed when multizone controller or BACnet MS/TP adaptor is connected.

1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
2. Select **Group Address** in the Service settings menu, and press **Menu/OK** button. Group Address screen is displayed.
3. Select **Group Address (Unit)** and press **Menu/OK** button.
4. Select the Unit No. you want to set by using **▲▼** buttons.
5. Press **►** button to move to Gr. Addr.
6. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.
7. Select the address you want to set by using **▲▼** buttons.
8. Press **Menu/OK** button. The indication changes from "Release" to "Set", then the group address is set.

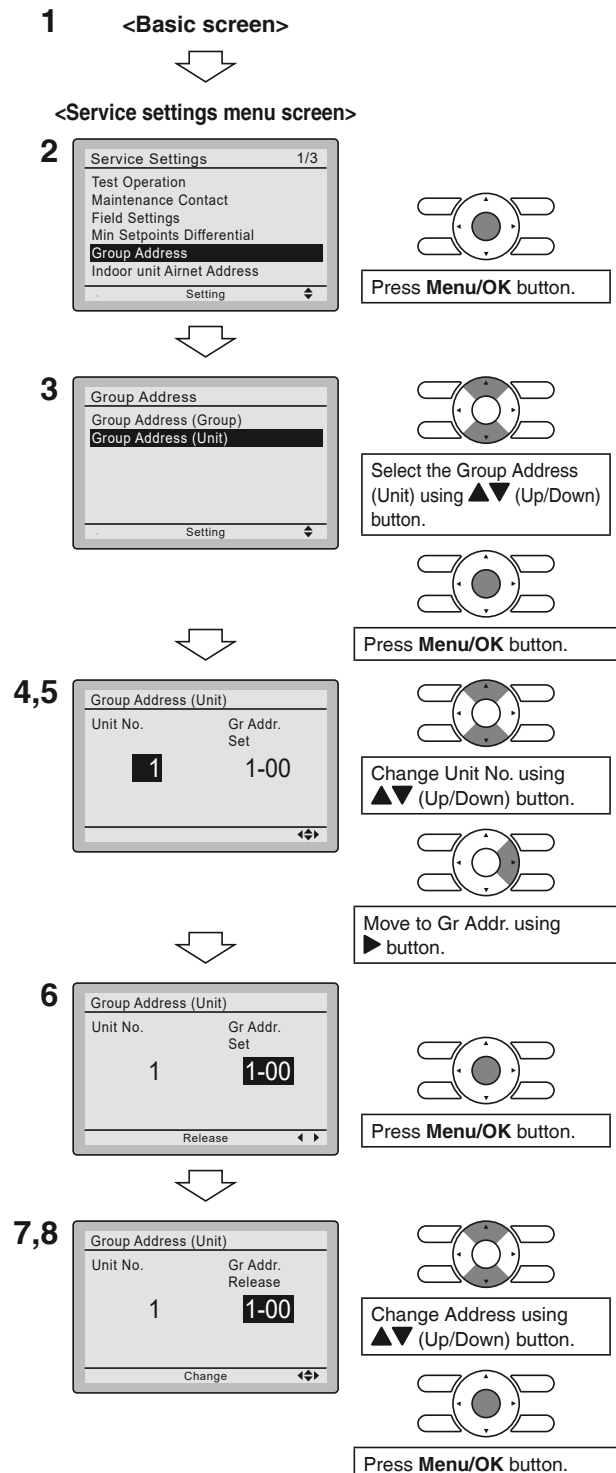

7-3 Indoor unit Airnet Address (VRV only)


1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
2. Select **Indoor unit Airnet Address** in the Service settings menu, and press **Menu/OK** button. Indoor unit Airnet Address screen is displayed.
3. Select the Unit No. you want to set by using **▲▼** buttons.
4. Press **▶** button to move to Address.
5. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.
6. Select the address you want to set by using **▲▼** buttons.
7. Press **Menu/OK** button. The indication changes from "Release" to "Set", then the Indoor unit Airnet Address is set.

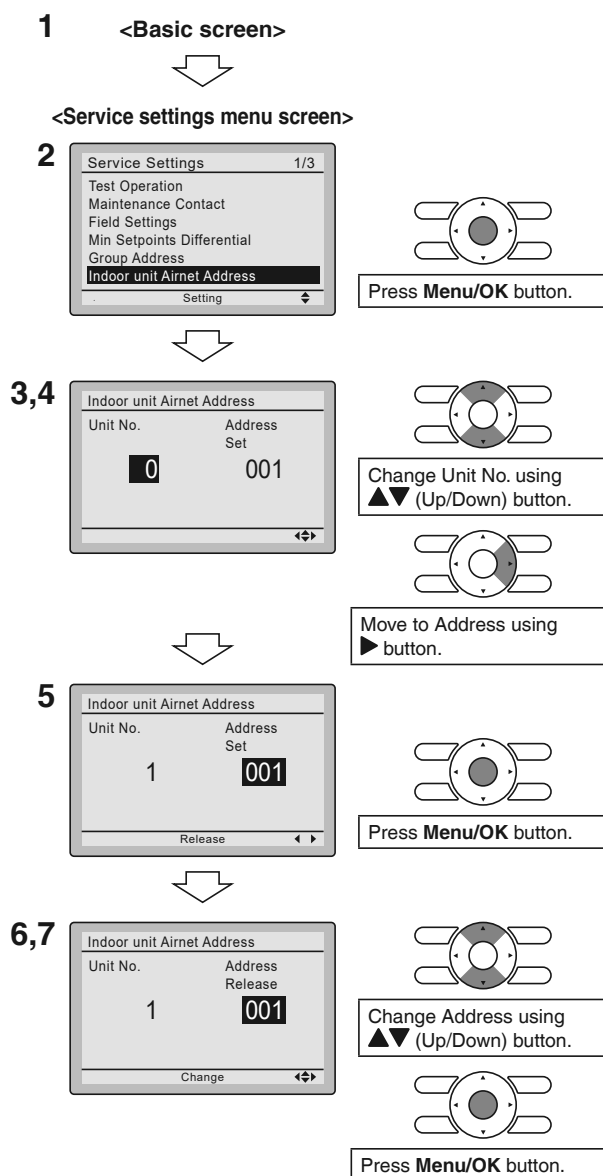

7-4 Outdoor unit Airnet Address (VRV only)

This address menu is displayed when the Outdoor unit is recognized from the indoor unit.

1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
2. Select **Outdoor unit Airnet Address** in the Service settings menu, and press **Menu/OK** button. Outdoor unit Airnet Address screen is displayed.
3. Press **▶** button to move to Address.
4. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.
5. Select the address you want to set by using **▲▼** buttons.
6. Press **Menu/OK** button. The indication changes from "Release" to "Set", then the Outdoor unit Airnet Address is set.

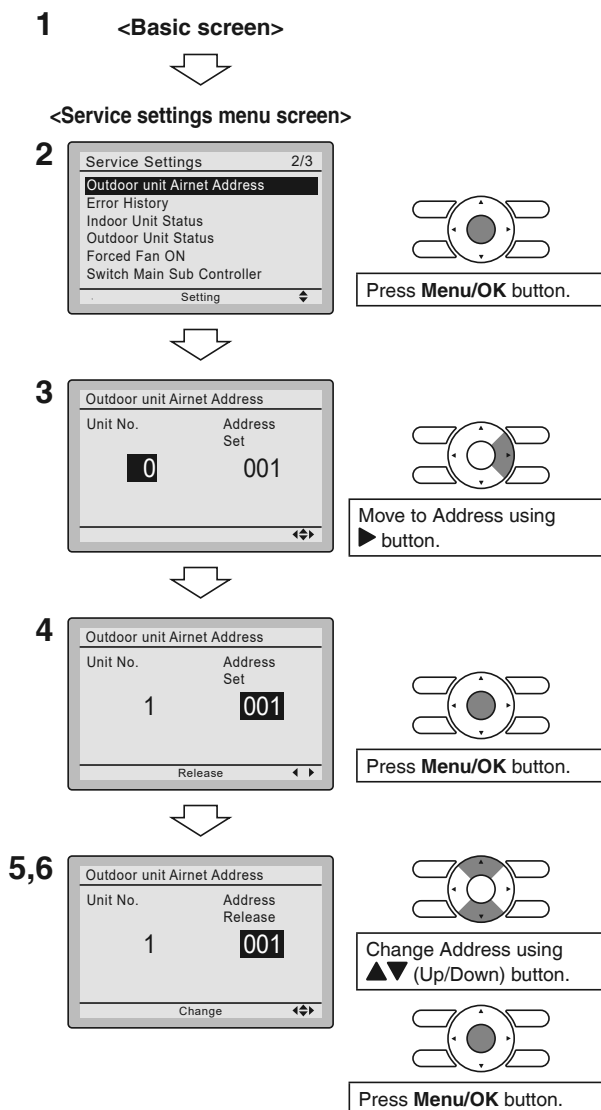

7-5 Group Address/Airnet Address (Rooftop unit only)

1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

2. Select **Group Address/Airnet Address** in the Service settings menu, and press **Menu/OK** button. Group Address/Airnet Address screen is displayed.

3. If there are only rooftop units connected in D3 system, select **Yes**. If no, Select **No**.

If the rooftop unit has just been turned on and is preparing for communication, Step 3 will not appear. And goes to Step 4 directly.

4. Individual addresses can be set via No.4 screen on this page. Details of the setting procedures refer to 7-1 to 7-4. (See page 17-20.)

5. Press **▶** button to move to Group Address.

 

6. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.

1 <Basic screen>



<Service settings menu screen>



2

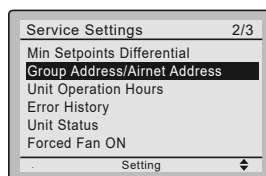

Press **Menu/OK** button.



 3

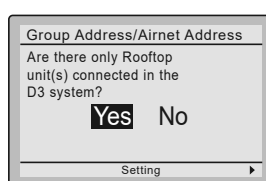


Change Yes or No using **◀▶** (Left/Right) button.



Press **Menu/OK** button.


No

4

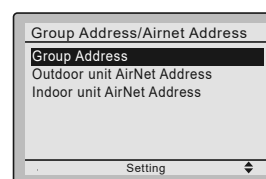

Yes


5

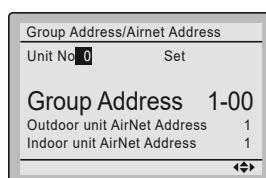

Move to Group Address using **▶** button.



 6





Press **Menu/OK** button.




- 7. Select the address you want to set by using ▲▼ buttons.
- 8. Press **Menu/OK** button.
The indication changes from “Release” to “Set”, then addresses are set.

7,8

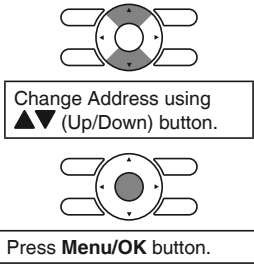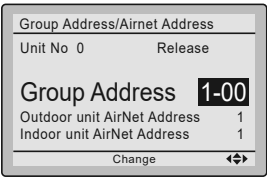

7-6 Indoor unit Label (VRV only)


1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
2. Select **Indoor unit Label** in the Service settings menu, and press **Menu/OK** button. Indoor unit Label screen is displayed.
3. Select the Unit No. you want to set by using **▲▼** buttons.
4. Press **►** button to move to Address.
5. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.
6. Select the address you want to set by using **▲▼** buttons.
7. Press **Menu/OK** button. The indication changes from "Release" to "Set", then the Indoor unit Label is set.

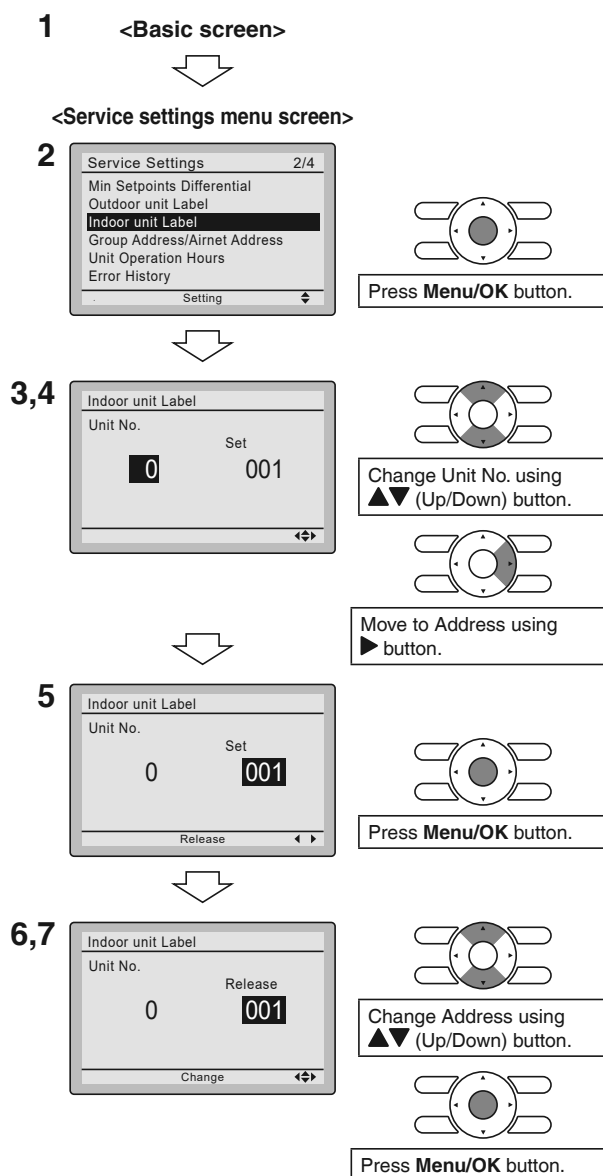

7-7 Outdoor unit Label (VRV only)

This address menu is displayed when the Outdoor unit is recognized from the indoor unit.

1. Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
2. Select **Outdoor unit Label** in the Service settings menu, and press **Menu/OK** button. Outdoor unit Label screen is displayed.
3. Press **►** button to move to Address.
4. If an address is already "Set", press **Menu/OK** button to release the current address setting. The mode indication changes from "Set" to "Release", and you are now ready to change the address.
5. Select the address you want to set by using **▲▼** buttons.
6. Press **Menu/OK** button. The indication changes from "Release" to "Set", then the Outdoor unit Label is set.

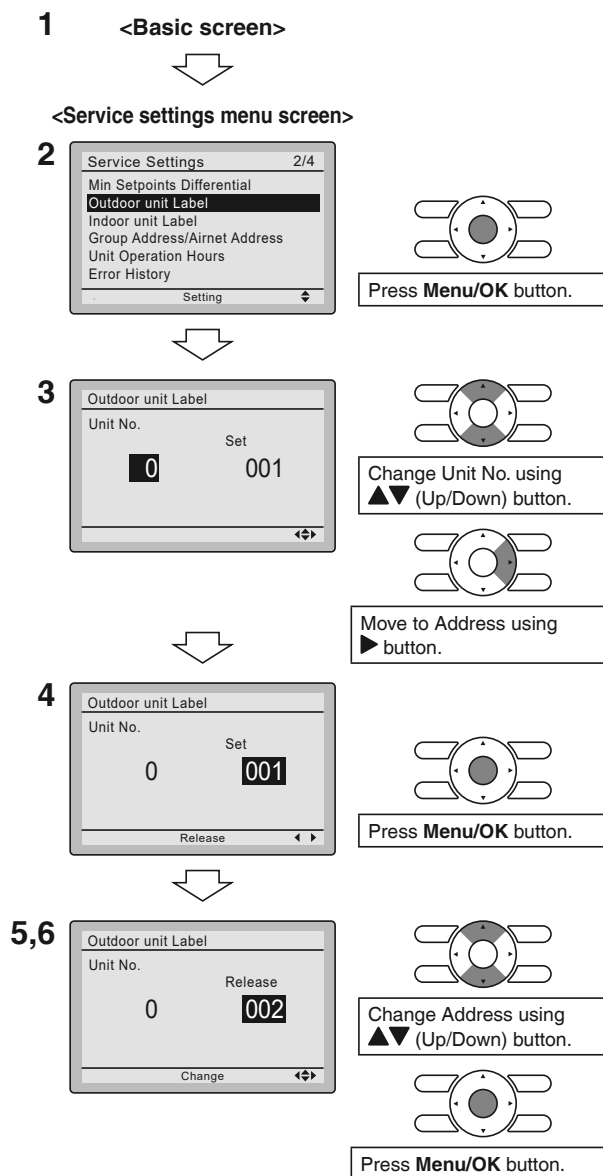

8. Procedure for Checking Error History

8-1 Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

8-2 Select **Error History** in the service settings menu, and press **Menu/OK** button. The error history menu screen is displayed.

8-3 Select **RC Error History** in the error history menu, and press **Menu/OK** button.
Error codes and unit No. can be confirmed in the RC error history screen.

8-4 In the error history, the 10 most recent items are displayed in order of occurrence.

 

8-5 Press **Cancel** button in the RC error history screen 3 times.
The basic screen returns.

8-1 <Basic screen>



<Service settings menu screen>



8-2

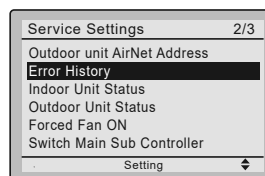

Press **Menu/OK** button.



 8-3

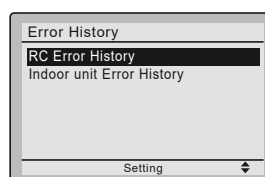

Press **Menu/OK** button.

8-4

8-5

Unit Error	Date	Time
01	--/--/--	--:--
02	--/--/--	--:--
03	--/--/--	--:--
04	--/--/--	--:--

Unit No.

Latest record

9. Adding Maintenance Contact Information

- Registration of the maintenance contact.

9-1 Press and hold **Cancel** button for 4 seconds or longer in the basic screen.
Service settings menu is displayed.

9-2 Select **Maintenance Contact** in the service settings menu, and press **Menu/OK** button. Maintenance contact menu screen is displayed.

9-3 Select **Maintenance Contact**, and press **Menu/OK** button.

9-4 Enter the telephone number.
Scroll through the numbers by using **▲▼** (Up/Down) buttons. Start from the left side. Blank digits should remain as " _".

9-5 Press **Menu/OK** button.
Setting confirmation screen is displayed.

9-6 Select **Yes** and press **Menu/OK** button.
Setting details are saved and service settings menu screen returns.

 

9-7 Press **Cancel** button once.
The basic screen returns.

9-1 <Basic screen>



<Service settings menu screen>


9-2

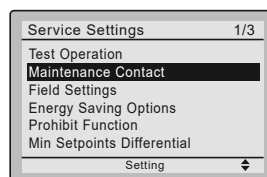

Press **Menu/OK** button.




9-3

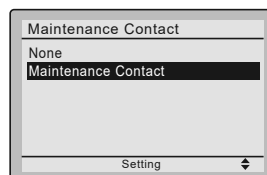


Press **Menu/OK** button.



9-4

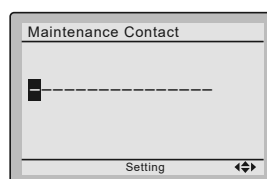

9-5


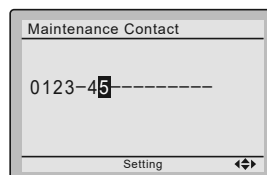


Press **Menu/OK** button.



<Setting confirmation screen>

 9-6

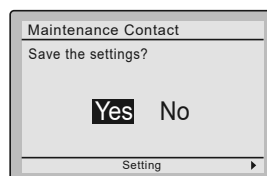

Press **Menu/OK** button.




<Service settings menu screen>

10. Confirming Registered Details

- 10-1** Press **Menu/OK** button in the basic screen.
Main menu is displayed.
Select **Maintenance Information** in the main menu, and press **Menu/OK** button.


- 10-2** Press **Cancel** button twice.
The basic screen returns.

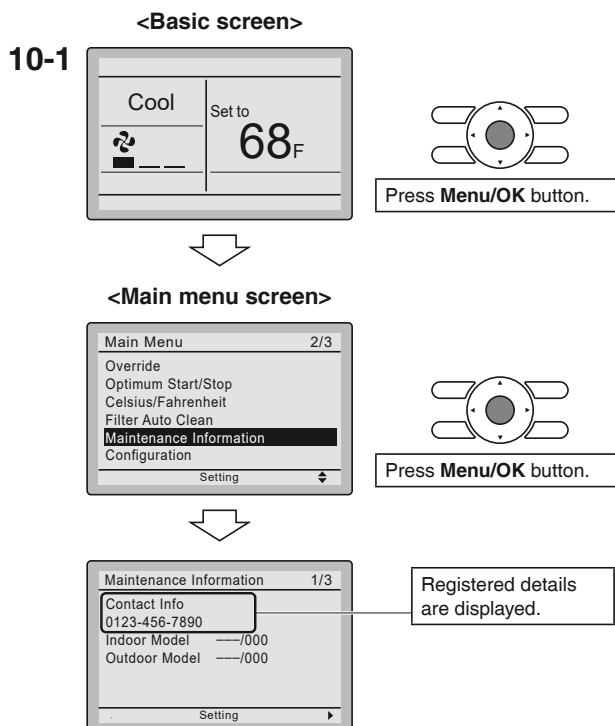

11. Clock & Calendar

- 11-1** Press **Menu/OK** button in the basic screen.
Main menu is displayed.
Select **Clock & Calendar** in the main menu, press **Menu/OK** button.

- 11-2** Press **▲▼** buttons to select **Date & Time** on the clock & calendar screen.
* The date & time screen will appear when **Menu/OK** button is pressed.

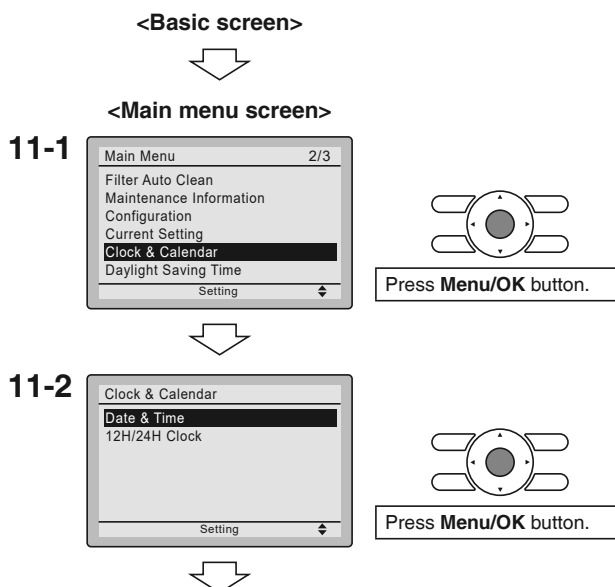

11-3 Select **year, month, day** and **time** by using ◀▶ (Left/Right) button and set by using ▲▼ (Up/Down) button in the date & time screen. Press and hold the button for continuous change of the numeric value.

 

* Day of the week is set automatically.

11-4 Press **Menu/OK** button.
Setting confirmation screen is displayed.

11-5 Select **Yes** and press **Menu/OK** button.
Setting details are saved and basic screen returns.

* If power outage exceeds 48 hours, reset is needed.



11-3
11-4

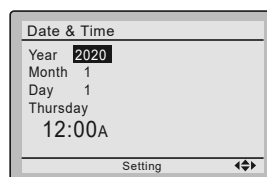

Press **Menu/OK** button.



 11-5

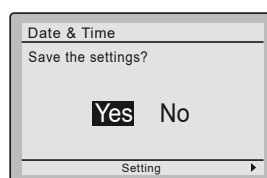

Press **Menu/OK** button.



<Basic screen>

12. Language

12-1 Press **Menu/OK** button in the basic screen.
Main menu is displayed.
Select **Language** in the main menu, press **Menu/OK** button.

 

12-2 Press ▲▼ (Up/Down) buttons to select **Language** on the language screen.
English/Français/Español
Press **Menu/OK** button.

<Basic screen>



<Main menu screen>

12-1

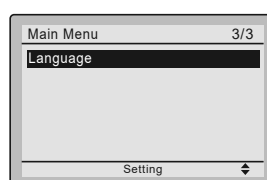

Press **Menu/OK** button.



12-2



13. Unit Status (Rooftop unit only)

13-1 Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

13-2 Select **Unit Status** in the service settings menu, and press **Menu/OK** button. Unit Status menu screen is displayed.

13-3 Unit Status have 4 pages. Display contents are changed to use ◀▶ buttons per pages.

Unit Status menu

 

- Page 1
 - Room Temp
 - Remote Ctrl Temp
 - Return Air Temp
 - Return Air Humidity
 - Return Air Enthalpy
- Page 2
 - Supply Air Temp
 - Supply Air Temp Mode
 - O/D Temp
 - O/D Humidity
 - O/D Enthalpy
- Page 3
 - Economizer
 - Demand Ctrl Vent
 - Free Cooling
 - Mix-air low lim cycl
 - Compressor
- Page 4
 - Heating
 - Liquid Temp
 - Gas Temp
 - Evaporated Temp
 - Condensed Temp

13-1 <Basic screen>



<Service settings menu screen>


13-2

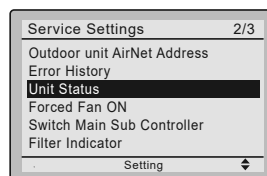

Press **Menu/OK** button.



13-3

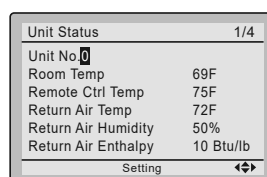

14. Blower Speed (Rooftop unit only)

- The appropriate setting is shown on the manual of the unit.

14-1 Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

14-2 Select **Blower Speed** in the service settings menu, and press **Menu/OK** button. Blower Speed menu screen is displayed.

14-3 Select Unit Number or % of blower speed using ◀▶ buttons. Use ▲▼ buttons to change number, and press **Menu/OK** button. Setting confirmation screen is displayed.

14-4 Select **Yes** and press **Menu/OK** button. Setting details are saved and service settings menu screen returns.


14-5 Press **Cancel** button once. The basic screen returns.

14-1 <Basic screen>



<Service settings menu screen>


14-2

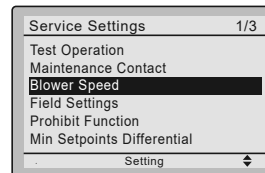

Press **Menu/OK** button.




14-3

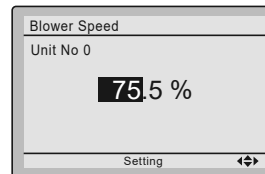

Press **Menu/OK** button.



14-4

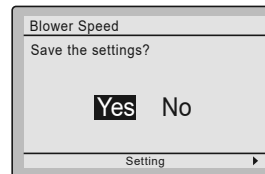

Press **Menu/OK** button.



<Service settings menu screen>

15. Unit Operation Hours (Rooftop unit only)

- Runtime is displayed and some of them are resettable.

15-1 Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

15-2 Select **Unit Operation Hours** in the service settings menu, and press **Menu/OK** button. Unit Operation Hours menu screen is displayed.

15-3 If Display Hours is selected, runtimes are displayed.

15-4 If Reset is selected, it will display the title of runtimes that is resettable.


Total System Hrs
Total Fan Hrs (Resettable)
Comp Heat Mode (Resettable)
Aux Heat Hrs (Resettable)
Cool Mode Hrs (Resettable)
Econ Mode Hrs (Resettable)
Vent Mode Hrs (Resettable)

15-1 <Basic screen>



<Service settings menu screen>



15-2

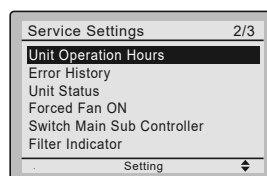

Press **Menu/OK** button.



 15-3

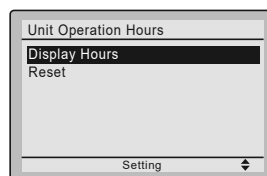

Press **Menu/OK** button.

15-4

16. Prohibit Function

16-1 Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

16-2 Select **Prohibit Function** in the service settings menu, and press **Menu/OK** button. Prohibit Function menu screen is displayed.

16-3 Prohibit Buttons is for prohibiting each button input like Fan Speed button. Prohibit Mode is for prohibiting mode like “Cool” or “Heat”.

16-4 To enable the Prohibit Buttons function in the basic screen, proceed as follows.

 

1. Keep **►** button pressed.
2. Press **Cancel**, **Mode**, **Fan speed** buttons simultaneously while keeping **►** button pressed.

16-1 <Basic screen>



<Service settings menu screen>


16-2

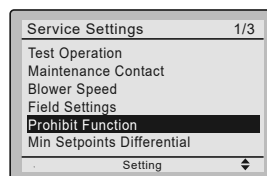

Press **Menu/OK** button.




16-3

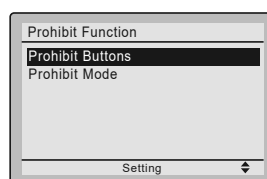

Press **Menu/OK** button.

16-4

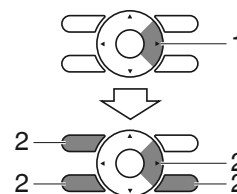

17. Certification

COMPLIANCE WITH FCC RULES AND REGULATIONS

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced remote control/ TV technician for help.

FCC Authorization Label

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

14.3 <BRC1NRV71> Wired Remote Controller (Operation)

Safety Considerations

The original instructions are written in English. All other languages are translation of the original instructions.

Read these **SAFETY CONSIDERATIONS** carefully before operating the remote controller.

Train the customer to operate and maintain the remote controller.

Inform customers that they should store this Operations Manual with the Installation Manual for future reference.

Meanings of **WARNING** and **CAUTION** Symbols:

 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 NOTE	Indicates situations that may result in equipment or property-damage accidents only.

- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Keep water and moisture away.		Keep wet hands away.


 WARNING	
	Do not modify or repair the remote controller. Consult your Daikin dealer for any modification or for repairs.
	Do not relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer to relocate or for any reinstallation.
	Do not use flammable materials (e.g., hairspray or insecticide) near the remote controller. Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause cracking, damaging the product, causing electric shocks, or fire.
	Consult the dealer if the remote controller was submerged under water due to a natural disaster, such as a flood or hurricane. Do not operate the remote controller at this time or a malfunction, electric shock, or fire can occur.

——Items to be Strictly Observed——

 CAUTION	
	• Do not allow children to play with the remote controller to avoid causing damage to the product.
	• Never disassemble the remote controller. Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer for internal inspections and adjustments.
	• Do not touch the remote controller buttons with wet fingers. Touching the buttons with wet fingers can cause an electric shock.
	• Do not wash the remote controller. Doing so may cause electric leakage and result in electric shocks or fire.
	• Never let the remote controller to get wet. Water can cause damage to the remote controller, and may cause an electric shock or fire.

 NOTE	
	• Never press the button of the remote controller with a hard and pointed object. The remote controller may be damaged.
	• Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
	• Do not wipe the remote controller with benzine, thinner, chemical dustcloth, etc. The remote controller may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the remote controller clean. And wipe it with another dry cloth.

Button Locations and Descriptions

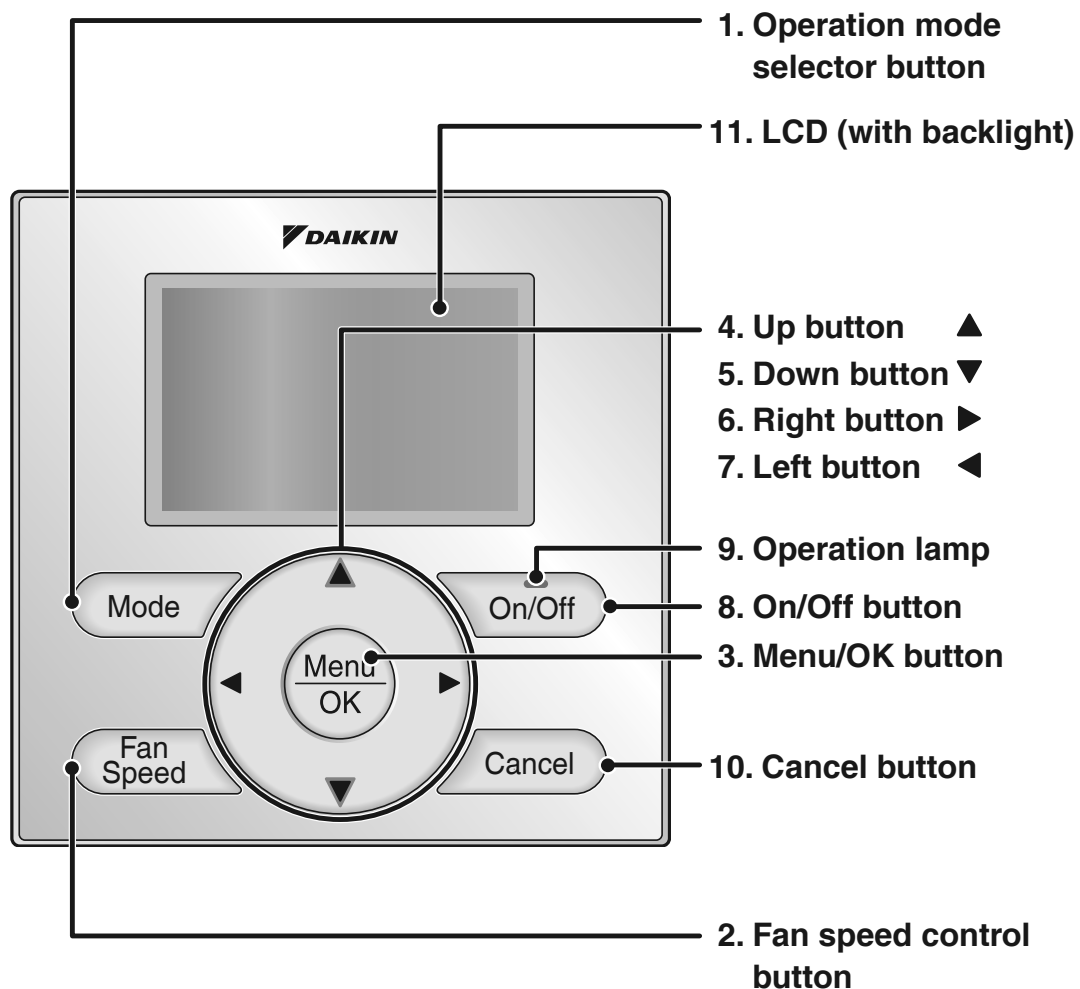

Functions other than basic operation items (i.e., On/Off, Operation Mode, Fan Speed, and Setpoint) are set from the menu screen.

NOTE

- Do not install the remote controller in places exposed to direct sunlight, the LCD will be damaged.
- Do not pull or twist the remote controller cord, the remote controller may be damaged.
- Do not use objects with sharp ends to press the buttons on the remote controller, damage may result.

1. Operation mode selector button

- Press this button to select the operation mode of your preference. **(See page 10.)**
* Available modes vary with the model of unit.

2. Fan speed control button

- Press this button to select the fan speed of your preference. **(See page 11.)**
* Available fan speeds vary with the model of unit.

3. Menu/OK button

- Used to enter the main menu.
(See page 20 for the menu items.)
- Used to enter the selected item.

4. Up button ▲

- Used to raise the setpoint.
- The item above the current selection will be highlighted.
(The highlighted items will be scrolled continuously when the button is continuously pressed.)
- Used to change the selected item.

5. Down button ▼

- Used to lower the setpoint.
- The item below the current selection will be highlighted.
(The highlighted items will be scrolled continuously when the button is continuously pressed.)
- Used to change the selected item.

6. Right button ►

- Used to highlight the next items on the right-hand side.
- Each screen is scrolled in the right-hand direction.

7. Left button ◀

- Used to highlight the next items on the left-hand side.
- Each screen is scrolled in the left-hand direction.

8. On/Off button

- Press this button and system will start.
- Press this button again to stop the system.

9. Operation lamp

- This lamp illuminates solid green during normal operation.
- This lamp flashes if an error occurs.

10. Cancel button

- Used to return to the previous screen.

11. LCD (with backlight)

- The backlight will be illuminated for approximately 30 seconds by pressing any button.
- If two remote controllers are used to control a single unit, only the controller accessed first will have backlight functionality.

Names and Functions

Liquid Crystal Display

- Three types of display mode (Standard, Detailed and Simple) are available.
- Standard display is set by default.
- Detailed and Simple displays can be selected in the main menu. (See page 44.)

Standard display

10. Changeover controlled by the master indoor unit

9. Under centralized control

1. Operation mode

2. Fan Speed

6. Ventilation

11. Setback

8. (⊕) Scheduled or Override


7. (🔑) Key Lock

3. Setpoint

4. Stand by for Defrost/ Hot start/Oil return

17. Lockout

5. Message

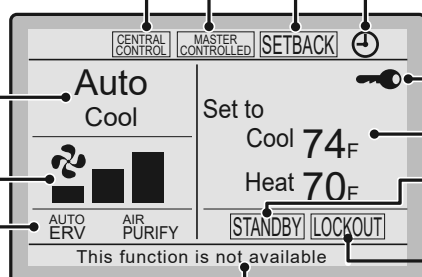

<Standard display example>


Detailed display

- The airflow direction, clock, and selectable item appear on Detailed display screen in addition to the items appearing on Standard display.

12. Airflow Direction

(Displayed only when the indoor unit is turned on.)

13. Current Day/Time (12/24 hour time display)

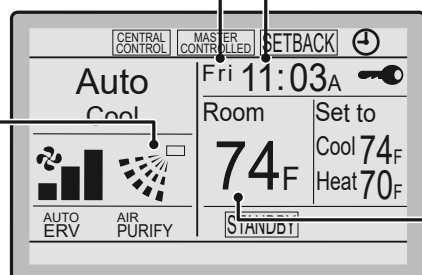

<Detailed display example 1>

No Fan speed display (with no fan speed control function)


No Airflow Direction display (with no airflow direction settings)

16. Optimum Start/Stop

No Clock display (when the clock has not been set yet)


15. (X) Unable to schedule

No Selectable Display Item (with no selectable display item selected)

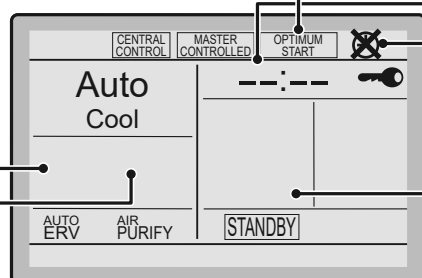

<Detailed display example 2>

Simple display

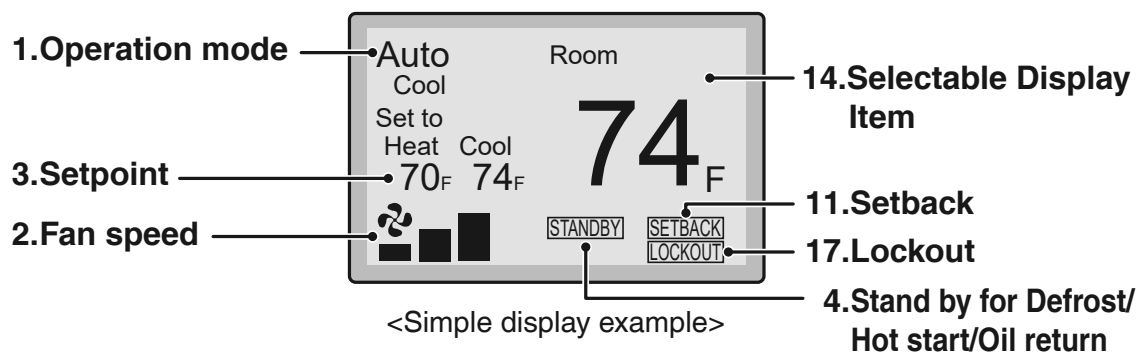

Note for all display modes

- Depending on the field settings, while the unit is stopped, OFF may be displayed instead of the operation mode and/or the setpoint may not be displayed.

Names and Functions

1. Operation mode

- Used to display the current operation mode: Cool, Heat, Vent, Fan, Dry or Auto.
- In Auto mode, the actual operation mode (Cool or Heat) will be also displayed.
- Operation mode cannot be changed when OFF is displayed.
Operation mode can be changed after starting operation.

2. Fan Speed

- Used to display the fan speed that is set for the unit.
- The fan speed will not be displayed if the connected model does not have fan speed control functionality.

3. Setpoint

- Used to display the setpoint for the unit.
- Use the Celsius/Fahrenheit item in the main menu to select the temperature unit (Celsius or Fahrenheit).

4. Stand by for Defrost/Hot start/ Oil return “” (See page 12.)

If ventilation icon is displayed in this field:

- Indicates that an energy recovery ventilator (ERV) is connected.
For details, refer to the Operation Manual of the ERV.

5. Message

The following messages may be displayed.

“This function is not available”

- Displayed for a few seconds when an Operation button is pressed and the unit does not provide the corresponding function.
- In a remote control group, the message will not appear if at least one of the units provides the corresponding function.

“Error: Push Menu button”

“Warning: Push Menu button”

- Displayed if an error or warning is detected (see page 54).

“Time to clean filter”

“Time to clean element”

“Time to clean filter & element”

- Displayed as a reminder when it is time to clean the filter and/or element (see page 52).

6. Ventilation

- Displayed when an energy recovery ventilator is connected.
- **Ventilation Mode icon.** “ ERV BYPASS ”
These icons indicate the current ventilation mode (ERV only) (AUTO, ERV, BYPASS).
- **Air Purify ICON** “ ”
This icon indicates that the air purifying unit (Optional) is in operation.

7. Key Lock (See page 19.)

- Displayed when the key lock is set.

8. Scheduled or Override (See page 33, 38.)

- Displayed if the Schedule or Override is enabled.
- For Schedule, see page 33, for override, see page 38.
- When the Override is active, the icon will flash. “ ”

9. Under Centralized control “ ”

- Displayed if the system is under the management of a multi-zone controller (Optional) and the operation of the system through the remote controller is limited.

10. Changeover controlled by the master indoor unit “ ” (VRV only)

- Displayed when another indoor unit on the system has the authority to change the operation mode between cool and heat.

11. Setback “” (See page 14.)

- The setback icon flashes when the unit is turned on by the setback control.

12. Airflow Direction “”

- Displayed when the airflow direction and swing are set (see page 26).
- If the connected model does not include oscillating louvers this item will not be displayed.

13. Current Day/Time (12/24 hour time display)

- Displayed if the clock is set (see page 46).
- If the clock is not set, “-- : --” will be displayed.
- 12 hour time format is displayed by default.
- Select 12/24 hour time display option in the main menu under “Clock & Calendar”.

14. Selectable Display Item

- Room temperature is selected by default.
- For other choices see page 45.

15. Unable to schedule

- Displayed when the clock needs to be set.
- The schedule function will not work unless the clock is set.

16. Optimum Start/Stop

“” “” (See page 40.)

- Displayed when the Optimum start or Optimum stop is enabled.
- “” or “” is flashing when the Optimum start or Optimum stop is active.

17. Lockout “”

(Rooftop unit only)

- “” is flashing when the lockout is active.

Basic Operation

Cool/Heat/Auto/Fan Operation (SkyAir, VRV and Rooftop)

How to follow the operation manual

Operation procedure

Operation button display

Operation screen display

Operation

Explains the sequence of operation for the remote controller. Operate the buttons according to the procedure.

Displays the location of buttons to be operated.

Describes screens that will be displayed on the remote controller in operation.

 
 
1

Main Menu 1/3
CO2 Monitoring
Humidity
Airflow Direction
Individual Airflow Direction
Ventilation
Schedule
Setting

Schedule
Clock has not been set.
Would you like to set it now?
Yes No
Setting

Date & Time
Year 2020
Month 1
Day 1
Thursday
12:00A
Setting

- Display the main menu screen. (See page 23.)
- Press ▼▲ buttons to select **Schedule**. Press **Menu/OK** button to display the schedule screen.
- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press ◀▶ buttons to select **Yes** and press **Menu/OK** button.
- The date & time screen will appear.
- Set the current year, month, day, and time. (See clock settings on page 46.)


Preparation

- For mechanical protection purposes, apply power to the outdoor units (rooftop units) at least six hours before starting the operation of the system.

Operation

1

Cool Set to 74°F

Cool Set to 74°F

Press Mode button several times until the desired mode Cool, Heat, Fan, or Auto mode is selected.



* Unavailable operation modes are not displayed.

Note

- Both heat and cool mode may not be selected if the unit is master controlled. See page 16 if MASTER CONTROLLED icon flashes.


2



- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



3

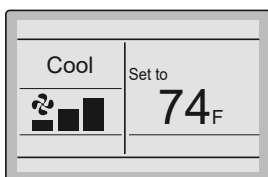


- The setpoint will increase by 1°F (or 1°C) when ▲ button is pressed and decrease by 1°F (or 1°C) when ▼ button is pressed.




* Setpoint is not available in fan or dry mode.



4

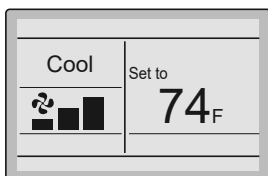

 - To change the fan speed, press **Fan Speed** button and select the fan speed from;



- Low/High/Auto for two-speed
- Low/Medium/High/Auto for three-speed
- Low/Med Low/Medium/Med High/High/Auto for five-speed depending on the model.

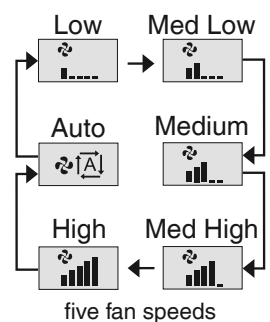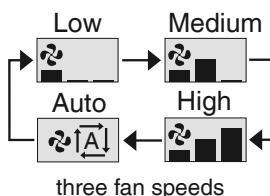

- * Auto cannot be selected if the unit does not have Auto Fan speed function.
- * The system may change the fan speed automatically for equipment protection purposes.
- * The system may turn off the fan when the room temperature is satisfied.
- * It is normal for a delay to occur when changing the fan speed.
- * If the Auto is selected for the fan speed, the fan speed varies automatically based on the difference between setpoint and room temperature.


Basic Operation

5

- Adjust Airflow Direction from the main menu (see page 26).

* If the connected unit does not have oscillating louvers, this function will not be available.

6

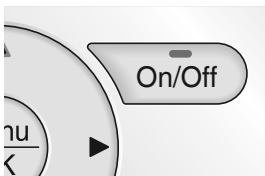

- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.



* When the system is stopped while in the heating mode, the fan will continue to operate for a few minutes to remove residual heat from the unit.

Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the unit.

Characteristics of Defrost, Hot start, Oil return Mode

The system automatically controls the following operating modes to prevent the reduction of heating capacity and space comfort.

Defrost operation

- The system will automatically go into defrost operation to prevent frost accumulation at the outdoor unit (rooftop unit) and subsequent loss of heating capacity.
- The fan will stop, and “**STANDBY**” will be displayed on the remote controller.
- The system will finish the Defrost operation and return to normal usually within six to eight minutes. It won't last for more than ten minutes.

Hot start

- When the system starts heating operation, the fan will operate with a delay in order to prevent a cold draft.
(In that case, “**STANDBY**” will be displayed on the remote controller.)

Oil return

(Rooftop unit only)

- At the cooling mode, the space may be cooled more than necessary in order to prevent a shortage of oil in the compressor.
(In that case, “**STANDBY**” will be displayed on the remote controller.)


Dry Mode

Preparation


- For equipment protection purposes, apply power to the outdoor units (rooftop units) at least six hours before starting the operation of the system.
- The dry mode may not be selected if the remote controller is master controlled and the system is not already in the cooling mode of operation. (see page 18 for details)

Operation

1

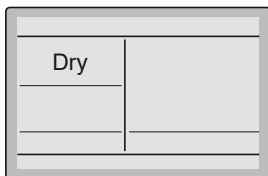


 - Press **Mode** button several times until the Dry mode is selected.



* The dry mode may not be available depending on the model of unit.

2

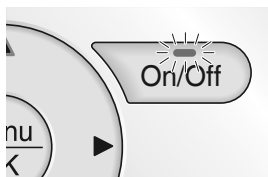

- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



* In Dry mode, the system maintains automatic temperature and fan speed control. Therefore, temperature setpoint or fan speed settings are not available while the unit is in the Dry mode.

3

- Adjust Airflow Direction from the main menu (see page 26).

 
* If the connected unit does not have oscillating louvers, this function will not be available.

Basic Operation

4



- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.




Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the unit.

Characteristic of Dry mode

The Dry mode dehumidifies the space at reduced cooling capacity to prevent the room temperature from dropping to an uncomfortable level.

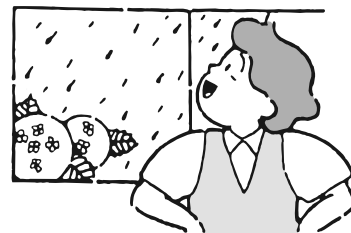

Setback



The Setback function can be used to maintain the space temperature in an assigned range for an unoccupied period.

Note

- When enabled, the Setback mode becomes active when the unit is turned off by either the user, a schedule event or an Override.
- This function is not available by default. It can be enabled by the system installer.

Operation

1

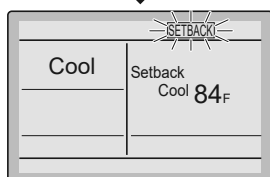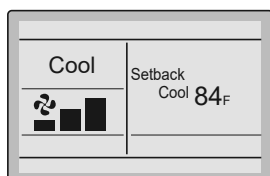

- The setback icon flashes when the unit is turned on by the setback control.


Ventilation Mode When the Indoor Unit (VRV/SkyAir) is Interlocked with Energy Recovery Ventilator

Preparation


- For equipment protection purposes, apply power to the outdoor units at least six hours before starting the operation of the system.

Operation

1

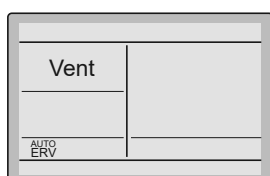

 - When operating the energy recovery ventilator (ERV) between seasons without the indoor unit, set the control to ventilation mode.



2

- Changes to the ventilation mode are made from the main menu.

* Ventilation Mode: Auto, ERV, and Bypass

3

- Changes to the ventilation rate are made from the main menu.

 
* Ventilation Rate: Low or High

Basic Operation

4



- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



5



- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.





Setting the Cool / Heat Changeover Master

(VRV only)

Setting Changes See page 18 for an explanation of the cool/heat changeover master indoor unit.

1

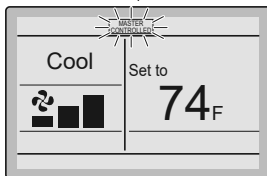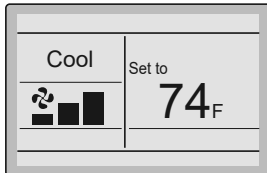

- Press **Mode** button on the remote controller of the changeover master indoor unit for at least four seconds while the backlight is illuminated.
- The “**MASTER CONTROLLED**” icon on each remote controller for the indoor units connected to the same outdoor unit or Branch Selector unit will start flashing.





* Vent mode setting changes are possible regardless of the cool/heat changeover master indoor unit.
* If the outdoor unit is configured as cool/heat changeover master, all remote controllers serving the associated indoor units will display its “**MASTER CONTROLLED**” icon.

- Set the cool/heat changeover master indoor unit as outlined below.


Selection Settings

The icon "MASTER CONTROLLED" will flash on all remote controllers when the power is turned ON for the first time.

2

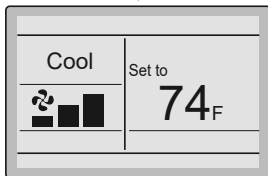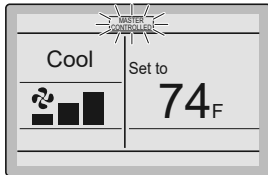

 
- Press **Mode** button on the remote controller of the indoor unit which is to serve as the cool/heat changeover master.



The remote controller for the changeover master indoor unit is established and the **MASTER CONTROLLED** icon is no longer displayed.

Other remote controllers in the system (indoor units served by the same outdoor unit or indoor units served by the same branch selector unit) will now display the **MASTER CONTROLLED** icon.

3

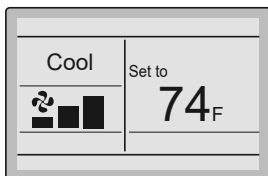

- Press **Mode** button on the remote controller of the indoor unit designated as the cool/heat changeover master (the remote controller not displaying the **MASTER CONTROLLED** icon) repeatedly until the desired mode is selected. The display will change to **Fan, Dry, Auto, Cool, Heat** each time the button is pressed.
- Simultaneously, the other indoor units on the system will follow suit and change modes to reflect the new mode selected at the changeover master remote controller.



Basic Operation

Cool / Heat Mode Selection Availability (VRV only)


- “Cool”, “Heat”, and “Auto” are all only available for selection on the cool/heat changeover master indoor unit. The following table indicates the available operating modes of the other indoor units on the system based upon the selected mode of the master indoor unit.

When the master indoor unit is set to	The other indoor units in the system can be set to			
	Cool	Dry	Heat	Fan
Cool mode	✓	✓		✓
Dry mode	✓	✓		✓
Heat mode			✓	✓
Fan mode				✓
Auto mode (Cooling operation)	✓	✓		✓
Auto mode (Heating operation)			✓	✓


Precautions for Selecting the Cool / Heat Changeover Master Indoor Unit (VRV only)

- The cool/heat changeover master must be set for a single indoor unit in the following applications

(2-Pipe Heat Pump System)

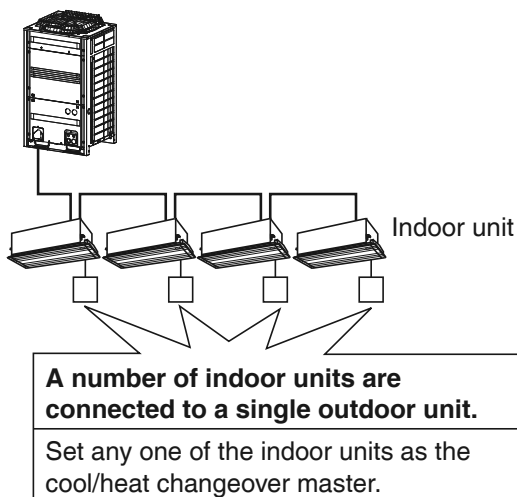


(3-Pipe Heat Recovery System)

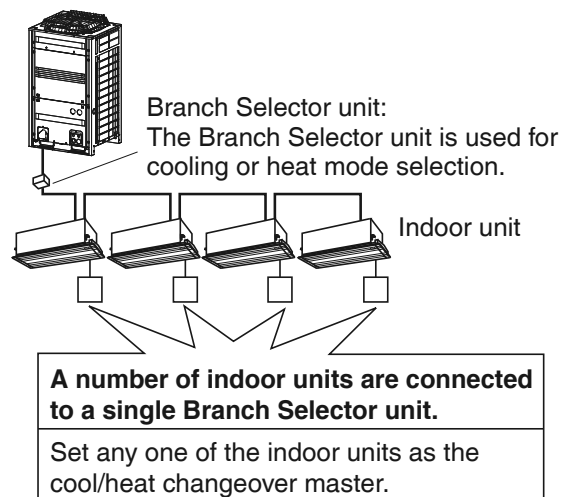

Key Lock


Operation Confirm and cancel Key Lock settings in the basic display screen.

1

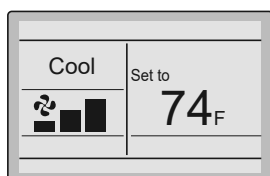


Basic screen

 - Press **Menu/OK** button for at least four seconds while the backlight is illuminated.



2

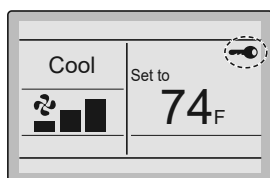

- “” is displayed.
All buttons are disabled when the keys are locked.
- To cancel the key lock mode, continue pressing **Menu/OK** button for at least four seconds while the backlight is illuminated.

Quick Reference


■ The main menu has the following items.

Menu item		Description	Reference page
CO2 Monitoring		Display CO2 history plot and current CO2. (If the unit has a CO2 sensor.)	24
Humidity		Display the current room humidity and set the humidity setpoint.	25
Airflow Direction		Used to configure airflow direction settings. - The airflow direction louver is automatically operated up and down (left and right). - The fixed airflow directions are configurable for five positions. * Only for indoor unit that supports Airflow Direction setting.	26
Individual Airflow Direction (Depends on the model of unit)	Louver Setting	Set the airflow direction individually for each of the 4 louvers. • Maximum 16 units (unit 0 till 15).	28
	Louver Setting List	Setting table for louver.	29
	Reset All Louvers Position	Reset all louvers to factory default setting.	30
Ventilation (Ventilation operation settings for energy recovery ventilator)	Ventilation Rate	Used to set "Low" or "High"	31
	Ventilation Mode	Used to set Auto, ERV, or Bypass.	32
Schedule	Daily Patterns	• Day settings are selected from four patterns, i.e., "7Days", "Weekday/Sat/Sun", "Weekday/Weekend", and "Everyday".	34
	Settings	• Set the startup time and operation stop time. ON: Startup time, cooling and heating temperature setpoints can be configured. OFF: Operation stop time, cooling and heating setback temperature setpoints can be configured. (--: Indicates that the setback function is disabled for this time period.) __: Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized. • Up to five actions can be set for each day.	35

Menu item		Description	Reference page
Override		Used to set the run time for the indoor unit and rooftop unit using this controller. Possible to set in 10 minute increments from 10 minutes to 10 hours.	38
Optimum Start/Stop		Optimum start and stop can be enabled or disabled by each. - Optimum start is used to ensure comfortable space temp prior to occupancy. - Optimum stop is used to ensure energy savings prior to unoccupancy without compromising on comfort.	40
Celsius / Fahrenheit		Used to select whether temperature values will be displayed in Celsius or Fahrenheit.	—
Filter Auto Clean		Set the time when the filter needs to be automatically cleaned. For the detailed operation refer to the Operation Manual of the self cleaning decoration panel.	—
Maintenance Information		Used to display the maintenance information.	41
Configuration	Draft Prevention (Only available with Occ. sensor installed model of the unit)	The draft prevention function can be enabled or disabled . When enabled, the Occ. sensor will adjust the louver's position to prevent air blowing directly on occupant.	42
	Contrast Adjustment	Used to make LCD contrast adjustment.	43
	Display	Used to set the display mode. - Display mode Standard, Detailed, or Simple display - Detailed and Simple displays provide the selectable display item among Room Temp, System, None or Outside Air Temp.	44
Current Settings		Used to display a list of current settings for available items.	46
Clock & Calendar	Date & Time	Used to configure date and time settings and corrections. - The default time display is 12H. - The clock will maintain accuracy to within ± 30 seconds per month. - If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.	46
	12H/24H Clock	The time can be displayed in either a 12 hour or a 24 hour time format.	49
Daylight Saving Time		Used to adjust the clock in observance of daylight saving time.	49
Language		The display language can be selected between English , Francais , or Espanol .	52

Quick Reference

Note: Available setting items vary with the model of unit.

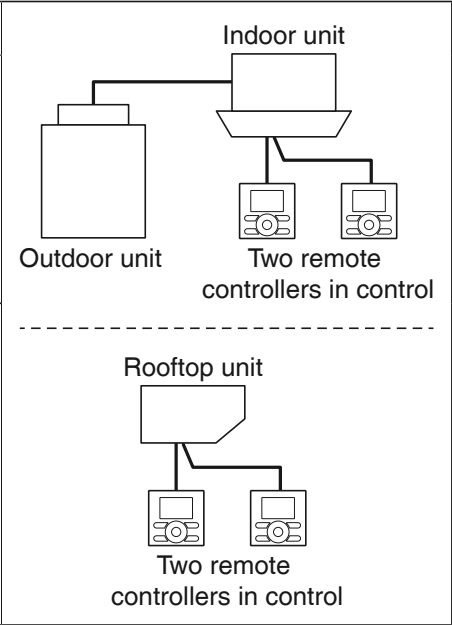Sub Remote Controller Menu Items	
If two remote controllers are connected to a single indoor unit or rooftop unit, the following menu items are not set in the sub remote controller. In this case, the following items should be configured in the main remote controller. • Individual Airflow Direction • Schedule • Override • Humidity • Setback • Draft Prevention • CO2 Monitoring • Optimum Start/Stop	


Menu Options

Navigating the Main Menu Screen

■ Display Method for Main Menu

Operation

1

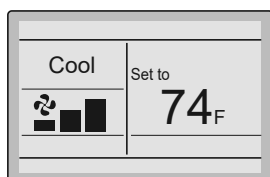


Basic screen

- Press **Menu/OK** button.



2

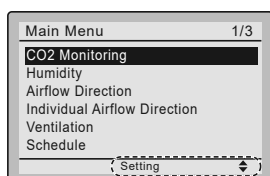


Main menu screen

- The main menu screen is displayed.

← Instructions for navigating the main menu will appear.

3

 - Selecting items from the main menu.
 1. Press ▼▲ buttons to select the desired item to be set.
 2. Press **Menu/OK** button to display the details for the selected item.



4

- To go back to the basic screen from the main menu, press **Cancel** button.



Note

- If a button is not pressed for 5 minutes during configuration, the controller will automatically revert to the basic screen.


Menu Options

CO2 Monitoring


If the unit has CO2 sensor, CO2 history plot and current CO2 are displayed.

Operation


1

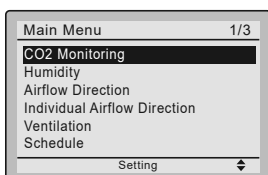

- Display the main menu screen. (See page 23.)
- Press ▼▲ buttons to select **CO2 Monitoring** and press **Menu/OK** button.

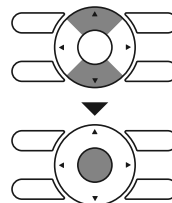


2

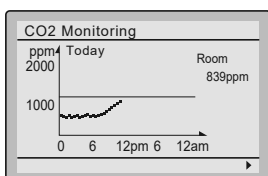


- Today's CO2 history plot and current CO2 are displayed.

3

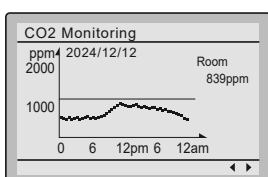

 - The date of the history plot can be changed using the ◀▶ buttons up to a week in the past.



Note


- If the unit is powered off, history data only remains the latest 2 days.
- If the clock has not been set, the history plot is not displayed.

Humidity


Display the current room humidity and set the humidity.

Operation


1

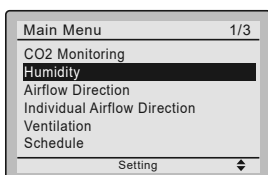


- Display the main menu screen. (See page 23.)
- Press ▼▲ buttons to select **Humidity** and press **Menu/OK** button.

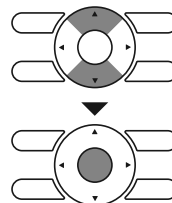

2

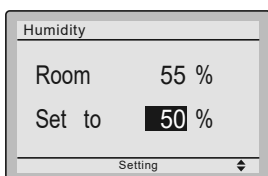


- Room Humidity is displayed.
- To set the humidity, use ▼▲ buttons for adjustment and press **Menu/OK** button. Then, the confirmation screen is displayed.

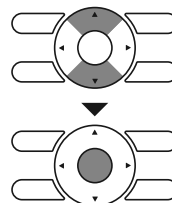


Note

- The menu appears when the connected unit has a humidity sensor.
- The humidity setting appears when the connected unit supports the humidity setting.

3

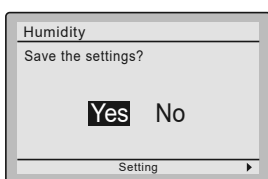

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the humidity and takes you back to the basic screen.

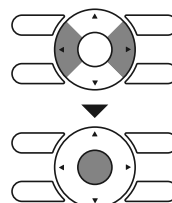


Menu Options

Airflow Direction


■ Configuring Airflow direction

Operation


1

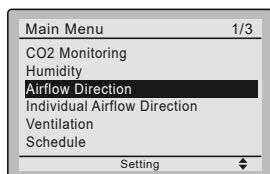

- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select **Airflow Direction** and press **Menu/OK** button.


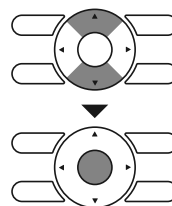


2

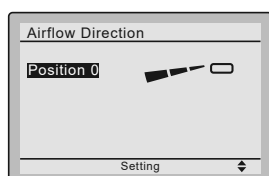


- (1) Adjusting method when there is single airflow direction.

- Select the desired airflow direction from **Position 0**, **Position 1**, **Position 2**, **Position 3**, **Position 4**, **Swing** or **Auto** using ▼▲ buttons.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

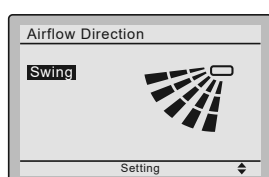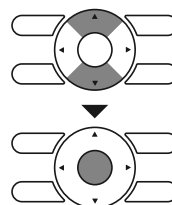

Airflow direction setting (up/down)

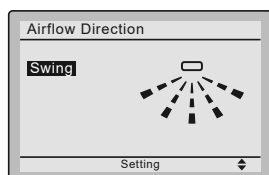

Airflow direction setting (left/right)

Note

- The airflow directions appear on the screen as follows:




Up/down direction

Left/right direction


Notice

These operation and screen are example of single airflow direction type indoor unit.
It is different from Single flow cassette model.

3

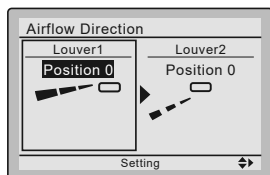

When front/back
direction is selected

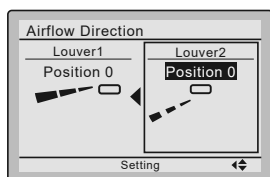

When left/right
direction is selected

(2) Adjusting method for selecting dual
airflow directions.




- Press ◀▶ buttons, to select front/back or left/right direction setting.



Notice

These operation and screen are example of dual airflow directions type directions indoor unit (Single flow cassette model).


4

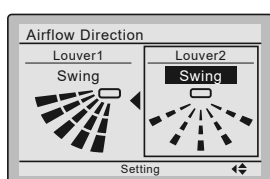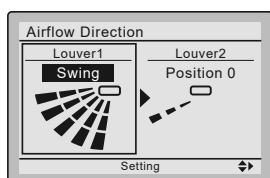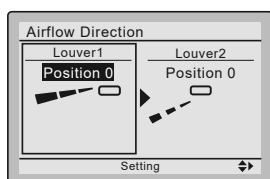


- Select the desired airflow direction from **Position 0** , **Position 1** , **Position 2** , **Position 3** , **Position 4** , **Swing** or **Auto** using ▼▲ buttons.

- Selecting **Swing** will cause the airflow direction louver to swing position 0 to 4.
- Setting **Auto** is not available when left/right direction is selected.

 - Press **Menu/OK** button to confirm the settings and return to the basic screen.



5

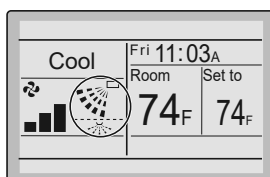

Basic screen
(Detailed display)

- If dual airflow directions are set, then the dual airflow direction icons are displayed in the basic screen.


Menu Options

Individual Airflow Direction


■ Louver Setting

Operation


1

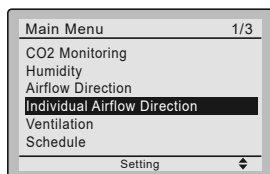


- Display the main menu screen.
(See page 23.)
- Select **Individual Airflow Direction** and press **Menu/OK** button.

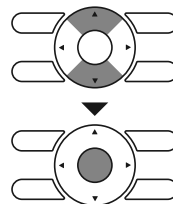


2

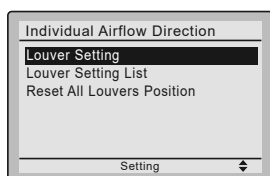


- Select **Louver Setting** and press **Menu/OK** button.

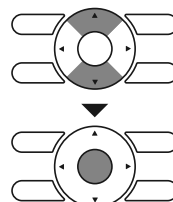

3

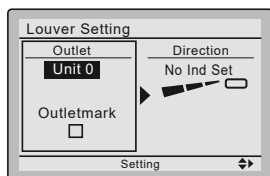


- Use ▼▲ buttons to select the unit and outlet mark.
- Maximum 16 units for each group (unit 0 till 15) can be selected.

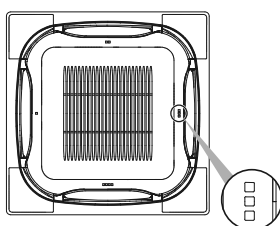


Note

In case of four outlets (cassette type), you can control each one of the four louvers individually (the following marks are beside each air outlet: □, □□, □□□, □□□□).


4

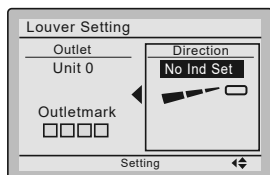

- Press ◀▶ button to select the airflow direction.
- Use ▼▲ buttons to change the airflow direction to the following:
No Ind Set , **Position 0** , **Position 1** ,
Position 2 , **Position 3** , **Position 4** ,
Swing or **Blocked** .
No Ind Set : No Individual Louver Setting.
Blocked : Individual airflow is blocked.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

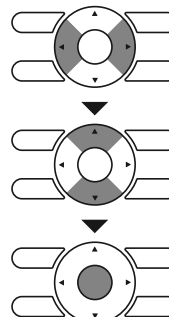

5

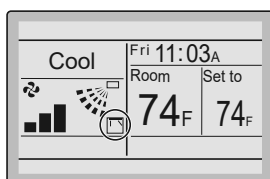


Basic screen
(Detailed display)

- If individual airflow direction is set, then the individual airflow direction icon is displayed in the basic screen.


■ Louver Setting List

Operation

1

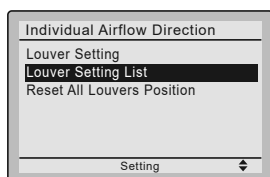


- Display the individual airflow direction screen. (See page 28.)
- Press ▼▲ buttons to select **Louver Setting List** and press **Menu/OK** button.

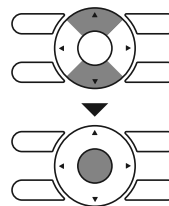

2

Louver Setting List		
Unit 0		
Outletmark	Direction	Indiv.
□	Position 0	OFF
□□	Position 0	OFF
□□□	Position 0	OFF
□□□□	Position 0	OFF

- A table shows the current settings. Press ▼▲ buttons to go to the next unit.
- Press **Cancel** button to return to the previous menu.

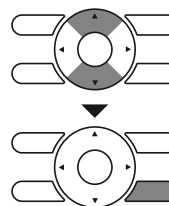


Menu Options


■ Reset All Louvers Position

Operation


1

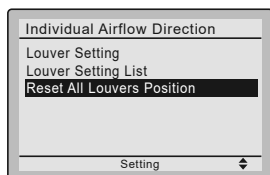


- Display the individual airflow direction screen.
(See page 28.)
- Press ▼▲ buttons to select **Reset All Louvers Position** and press **Menu/OK** button.

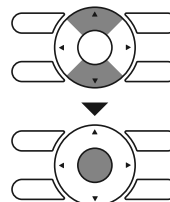

2

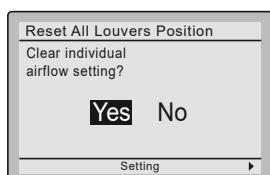

- Press ◀▶ buttons to select **Yes**.
- Press **Menu/OK** button to confirm the reset and to return to the basic screen.

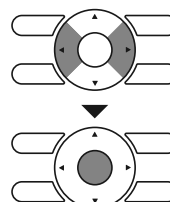


Operational Details and Functions

There are two types of airflow direction settings.

Airflow direction swing

The louvers automatically oscillate up and down.

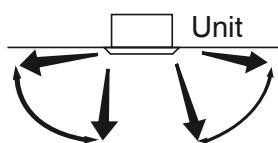


(Automatic swing)

(Automatic swing)

Airflow direction

You can select from one of five fixed directions. (This has no relation to the angle of the louvers.)

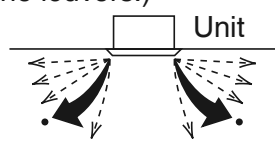

(Desired position)

(Desired position)

Movement of airflow direction louver

Under the operating conditions shown next, airflow direction is controlled automatically. Actual operation may be different than what is displayed on the remote controller.

Operating condition


- Room temperature is higher than the remote controller's setpoint (in heating operation).
- When defrosting (in heating operation).
(The airflow discharges horizontally to avoid creating a draft for the room occupants.)
- Under continuous operation with the airflow discharging horizontally.

Ventilation


■ Ventilation screen display properties

Operation

1

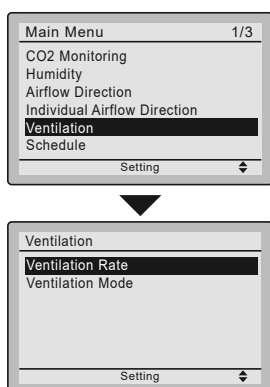


- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select **Ventilation** on the main menu screen.
(For models with no ventilation function, **Ventilation** will not be displayed on the main menu screen.)
Press **Menu/OK** button to display the ventilation screen.

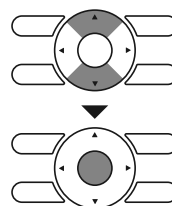


■ Changing the ventilation rate

Operation

1

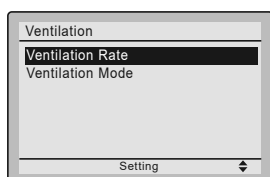

- Navigate to the ventilation screen
(see above).
- Press ▼▲ buttons to select **Ventilation Rate** on the ventilation screen.
Press **Menu/OK** button to display the ventilation rate screen.

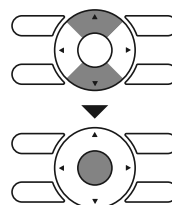

Menu Options

2



- Press ▼▲ buttons to toggle between the **Low** and **High** settings.

 
* Only modes that can be set are displayed.



3

- Selecting and confirming the desired ventilation rate will take you back to the basic screen.


(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation rate.)




■ Changing the ventilation mode

Operation


1

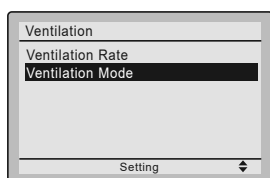

- Display the ventilation screen. (See page 31.)
- Press ▼▲ buttons to select **Ventilation Mode** on the ventilation screen. Press **Menu/OK** button to display the ventilation mode screen.

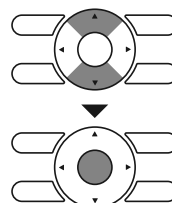


2

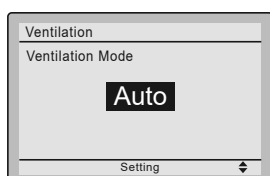


- Pressing ▼▲ buttons cycles through the settings in the order shown below.



 
* Only modes that can be set are displayed.



3

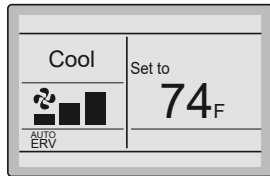

 - Selecting and confirming the desired ventilation mode will take you back to the basic screen.
(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation mode.)



Ventilation Mode

Auto mode

Using information from the indoor unit (cool, heat, fan, and setpoint) and the energy recovery ventilator unit (indoor and outdoor temperatures), the ventilation mode is automatically changed between ERV and Bypass.

ERV mode

Outside air is passed through the ERV core and is supplied to the conditioned space.

Bypass mode

Outside air is supplied to the conditioned space without passing through the ERV core.


Schedule

■ Setting the schedule


The schedule will disappear when a multizone controller is connected, but can be re-enabled by the system installer.

Operation The schedule will disappear when a BACnet is connected, but can be re-enabled from BACnet. (Rooftop unit only)



1

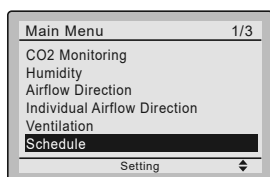


- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select **Schedule**.
Press **Menu/OK** button to display the schedule screen.

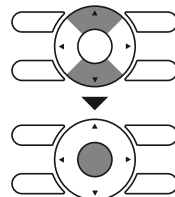


Menu Options

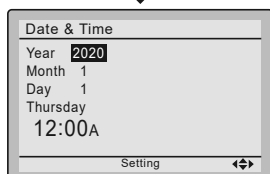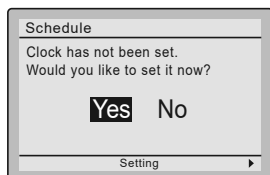


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press ◀▶ buttons to select **Yes** and press **Menu/OK** button.
- The date & time screen will appear.
- Set the current year, month, day, and time. (See clock settings on page 46.)

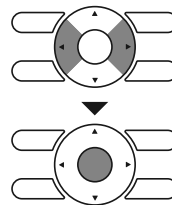

2

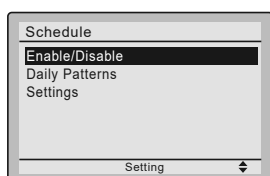


- Press ▼▲ buttons to select the desired function on the schedule screen and press **Menu/OK** button.

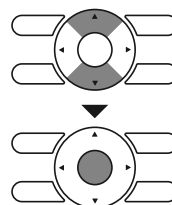


■ Daily Patterns

Operation


1

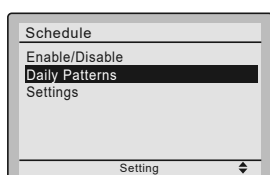


- The schedule screen will appear.
- Press ▼▲ buttons to select **Daily Patterns** on the schedule screen. The daily patterns screen will appear when **Menu/OK** button is pressed.

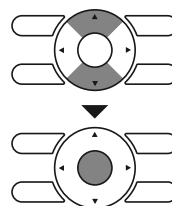


2

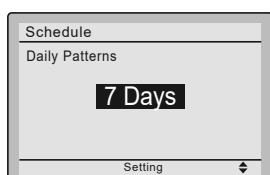


- Press ▼▲ buttons to select **7 Days**, **Weekday/Sat/Sun**, **Weekday/Weekend** or **Everyday** on the daily patterns screen. The confirmation screen will appear when **Menu/OK** button is pressed.

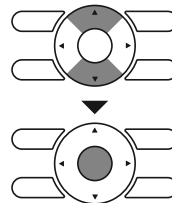

3

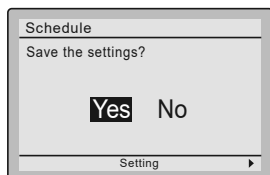


- Press ◀▶ buttons to select **Yes** on the confirmation screen.
- Pressing **Menu/OK** button enters the daily patterns in the schedule and takes you back to the main menu screen.

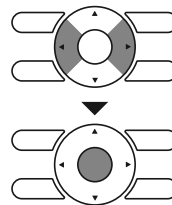


■ Settings

Operation


1

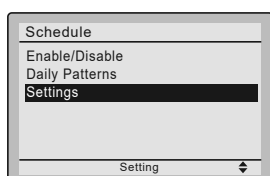

- The schedule screen will appear.
 - Press ▼▲ buttons to select **Settings** on the schedule screen.
- The settings screen will appear when **Menu/OK** button is pressed.

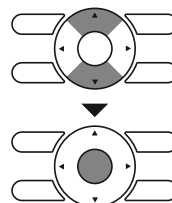

2

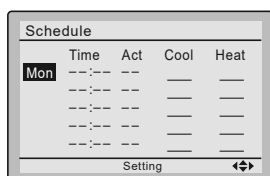


- Press ▼▲ buttons to select the day to be set.



* It cannot be selected in the case of **EVDY**.



3

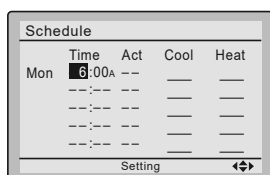

- Input the time for the selected day.
- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to input the desired operation start time. Each press of ▼▲ buttons moves the numbers by 1 hour or 1 minute.

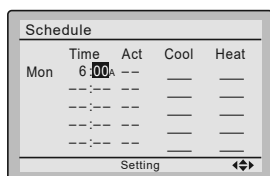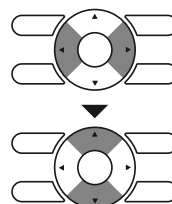

Menu Options


4

Schedule				
	Time	Act	Cool	Heat
Mon	6:00A			
	--:--			
	--:--			
	--:--			
	--:--			
Setting				



Schedule				
	Time	Act	Cool	Heat
Mon	6:00A	ON	90F	60F
	--:--			
	--:--			
	--:--			
	--:--			
Setting				

- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to configure ON/OFF/-- settings. --, ON, or OFF changes in sequence when ▼▲ buttons are pressed.

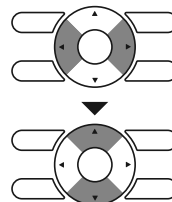

ON: The temperature setpoints can be configured.
 OFF: The setback temperature setpoints can be configured.
 --: The temperature setpoints and setback temperature setpoints become disabled.

Schedule				
	Time	Act	Cool	Heat
Mon	6:00A	ON	75F	70F
	8:00A	OFF		
	--:--			
	--:--			
	--:--			
Setting				

- The cooling and heating temperature setpoints for both ON and OFF (Setback) are configured.

—: Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.
 --: Indicates that the setback function is disabled for this time period.

5

Schedule				
	Time	Act	Cool	Heat
Mon	6:00A	ON	75F	70F
	8:00A	OFF	85F	50F
	5:30P	ON	75F	70F
	10:00P	--		
	--:--			
	--:--			
Setting				




Schedule				
	Time	Act	Cool	Heat
Mon	6:00A	ON	75F	70F
	8:00A	OFF	85F	50F
	5:30P	ON	75F	70F
	10:00P	OFF	82F	62F
	--:--			
	--:--			
Setting				



Schedule				
	Time	Act	Cool	Heat
Tue	6:00A	ON	75F	70F
	8:00A	OFF	85F	50F
	5:30P	ON	75F	70F
	10:00P	OFF	82F	62F
	--:--			
	--:--			
Setting				

A maximum of five actions per day can be set.

- Press **Menu/OK** button when settings for each day are completed. The confirmation screen will appear.

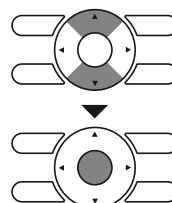


To copy the settings for the previous day, press **Mode** button so that the existing settings will be copied.


Example: The contents for Monday are copied by pressing **Mode** button after selecting Tuesday.



6

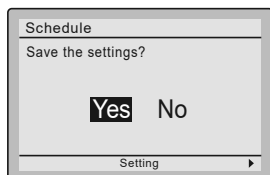


- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the settings for each day and takes you back to the basic screen.

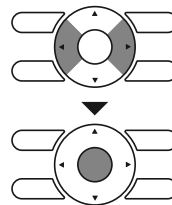


Enabling or disabling the schedule

Operation


1

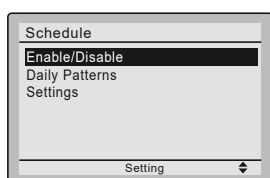


- Display the schedule screen. (See page 33.)
- Press ▼▲ buttons to select **Enable / Disable** on the schedule screen. Press **Menu/OK** button to display the enable/disable screen.

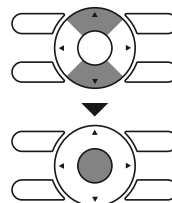


2

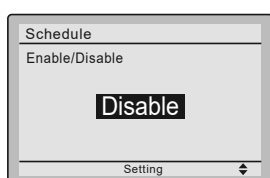


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen. Press **Menu/OK** button after selecting the item. The confirmation screen is displayed.

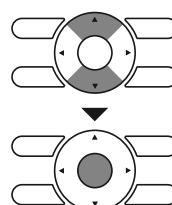

3

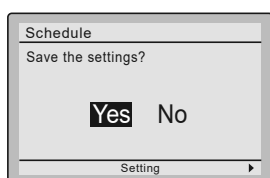

- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the enable/disable setting for the schedule and takes you back to the basic screen.

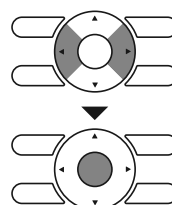

Menu Options


Override

When the unit is turned on by the On/Off button during except for the occupied period, it will automatically turn off after a time set by the timer to prevent forgetting to turn it off.


■ Configuring and Confirming the Override settings

Operation


1

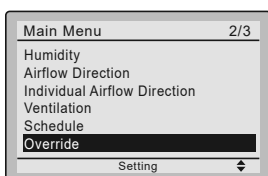


- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select the **Override** on the main menu screen. Press **Menu/OK** button to display the override screen.

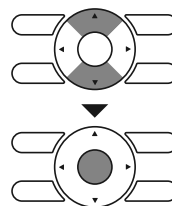


2

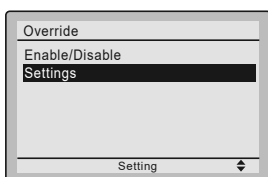


- Press ▼▲ buttons to select **Settings** on the override screen. Press **Menu/OK** button to display the configuration screen.

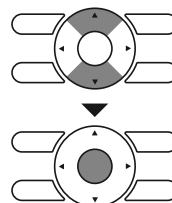


3

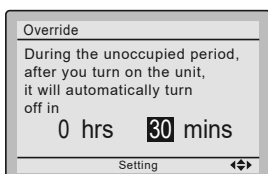


- Use ▼▲ buttons to set the time from operation start until the unit automatically stops.
- Use ◀▶ buttons to select the items of hours and minutes.
- Selections can be made in increments of 10 minutes from 10 minutes to 10 hours.
- Select the desired time and press **Menu/OK** button. The confirmation screen will appear.

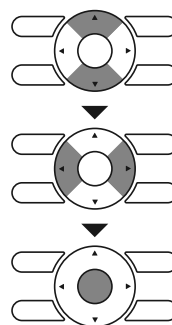

4

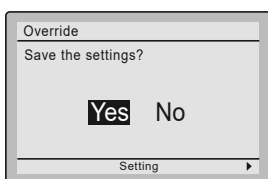

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the override and takes you back to the basic screen.

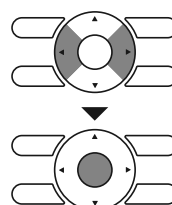





Enabling or disabling the override

Operation


1

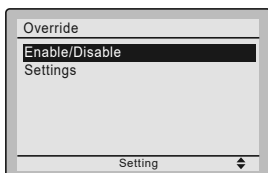


- Navigate to the override screen.
(See page 38.)
- Press ▼▲ buttons to select **Enable/Disable** on the override screen. Press **Menu/OK** button to display the enable/disable screen.

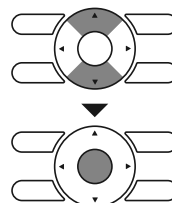


2

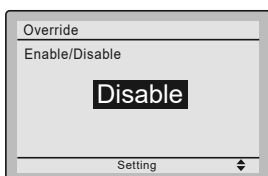


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen. Press **Menu/OK** button after selecting the item. Then the confirmation screen is displayed.

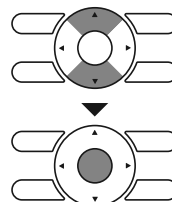

3

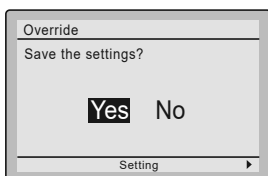

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the enable/disable for the override and takes you back to the basic screen.

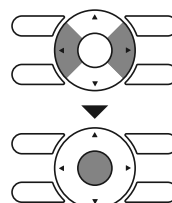

Menu Options

Optimum Start/Stop


Optimum Start: Unit operation automatically starts before the occupied period to bring the space to desired occupied temperature levels at the beginning of scheduled occupancy.

Optimum Stop: Unit operation automatically slows down before the unoccupied period to bring the space to unoccupied temperature levels at the end of scheduled occupancy.


■ Configuring and Confirming the Optimum Start/Stop settings

Operation

1

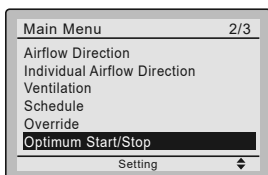

- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select the **Optimum Start/Stop** on the main menu screen.
Press **Menu/OK** button to display the optimum start/stop screen.

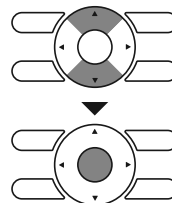


Note

The Optimum Start/Stop menu appears when the connected unit supports the Optimum Start/Stop.


2




- Press ▼▲ buttons to select from **Disable**, **Start and Stop**, **Start only**, or **Stop only**.
Press **Menu/OK** button to display the confirmation screen.

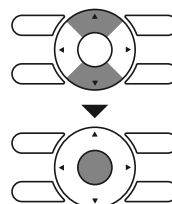

3

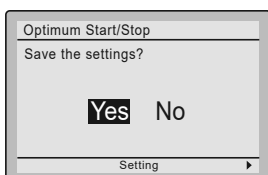

- Press ◀▶ button to select **Yes** on the confirmation screen.
Pressing **Menu/OK** button confirms the settings and takes you back to the basic screen.

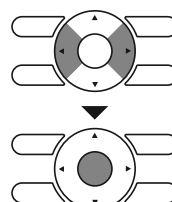


Maintenance Information


■ Displaying the service contact and model information

Operation


1

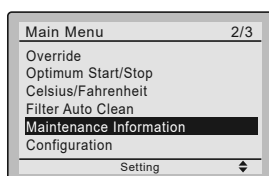

- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select **Maintenance Information** on the main menu screen and press **Menu/OK** button.

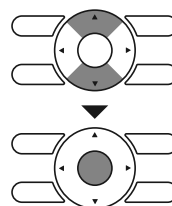

2

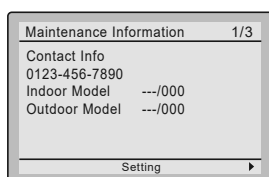

- The phone number for the contact is displayed at the top of the screen.
(If it has not yet been entered, it will not be displayed.)
- The model information of the indoor and outdoor units (or rooftop units) for your product will be displayed at the middle of the screen.
(For some models the product code may be displayed.)
- The serial number and detailed model name of the units are displayed on 2nd page and 3rd page.

* If the rooftop unit is connected, only one model name is displayed as a model name, and it does not display on 3rd page.

* The model name will not be displayed if the unit PCB has been replaced.

* The error code history may also be displayed. If the Operation lamp is not flashing, the unit is working properly. The error code history is no longer displayed if you press **On/Off** button for more than 4 seconds.




Menu Options

Configuration


■ Draft Prevention

Operation


1

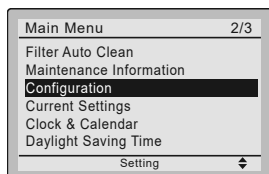


- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select **Configuration** and press **Menu/OK** button.

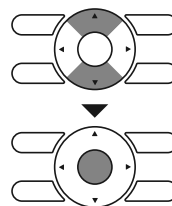


2

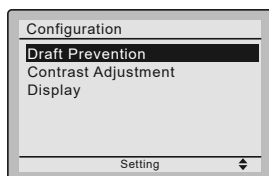


- Press ▼▲ buttons to select **Draft Prevention** and press **Menu/OK** button.

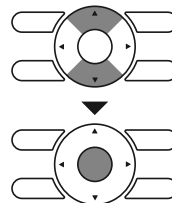


3

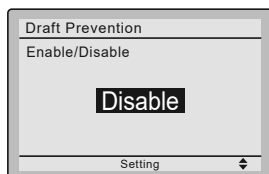


- Press ▼▲ buttons to select **Enable** or **Disable**.
- The confirmation screen will appear when **Menu/OK** button is pressed.

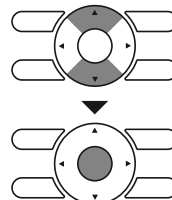

4

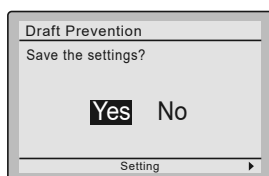


- Press ◀▶ buttons to select **Yes**.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

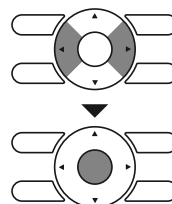

■ Contrast Adjustment


Operation

1

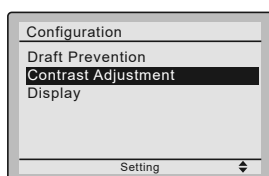


- Navigate to the configuration screen.
(See page 42.)


- Press ▼▲ buttons to select **Contrast Adjustment** on the configuration screen.
Press **Menu/OK** button to display the contrast adjustment screen.

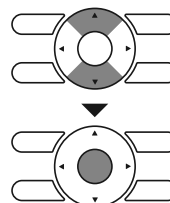

2

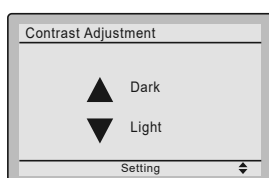

- On the contrast adjustment screen press ▼▲ buttons until you reach the desired contrast.
After setting, press **Menu/OK** button and return to the basic screen.

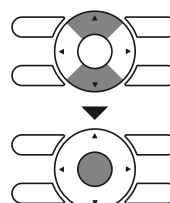


Menu Options

■ Display


Display Mode

Operation


1

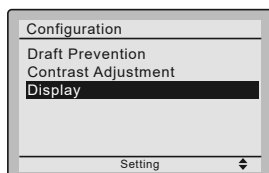


- Navigate to the configuration screen.
(See page 42.)
- Press ▼▲ buttons to select **Display** on the configuration screen. Press **Menu/OK** button to display the display screen.

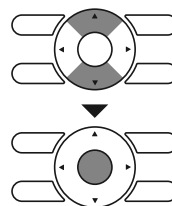


2

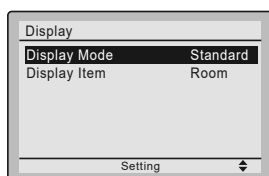


- Press ▼▲ buttons to select **Display Mode** on the display screen. Press **Menu/OK** button to display the display mode screen.

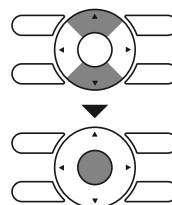

3

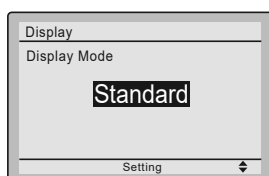

- Press ▼▲ buttons to select **Standard**, **Detailed** or **Simple** on the display screen.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.

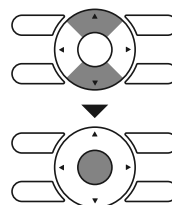


* Refer to **Display Item** to change the selectable display item for Detailed and Simple display modes. (See page 45.)


Display Item

Operation

1

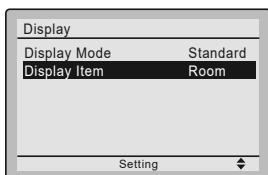

- Navigate to the display screen.
(See page 44.)
- Press ▼▲ buttons to select **Display Item** on the display screen. Press **Menu/OK** button to display the display item screen.

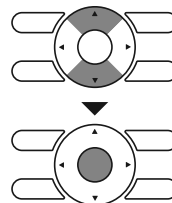

2



- Pressing ▼▲ buttons displays the following.



* Some models may not display these items even if they are selected.

- Be sure to read the following notes regarding display of room temperature and outside air temperature.

Room Temp

..... The temperature at the remote controller.
The temperature that is detected may be affected by the location of the remote controller.

Outside Air Temp

..... The temperature that is detected may be affected by factors such as the location of the unit (for example, if it is in direct sunlight) and unit operation during defrosting.

- After setting, press **Menu/OK** button to confirm settings and return to the basic screen.




Menu Options

Current Settings


■ Confirming the current settings

Operation


1

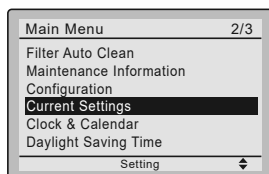


- Display the main menu screen.
(See page 23.)
- Press ▼▲ buttons to select **Current Settings** on the main menu screen and press **Menu/OK** button.

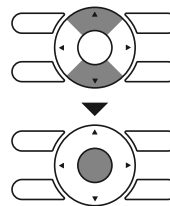

2

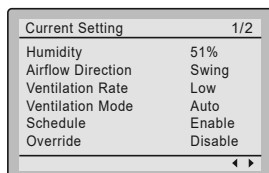

- A list showing the current setting status will appear.
Press ◀▶ buttons to go to the next item.
- Pressing **Cancel** button takes you back to the main menu screen.

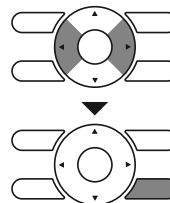

Display items

Humidity	Display Mode
Airflow Direction	Display Item
Ventilation Rate	Filter Auto Clean
Ventilation Mode	Optimum Start
Schedule	Optimum Stop
Override	


* Display items may differ depending on the model.
Only the items that can be set are displayed.

Clock & Calendar


■ Date & Time

Operation


1

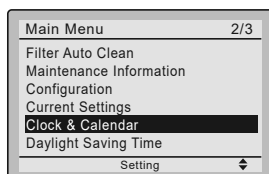


- Display the main menu screen. (See page 23.)
- Press ▼▲ buttons to select **Clock & Calendar** on the main menu screen.
Press **Menu/OK** button to display the clock & calendar screen.

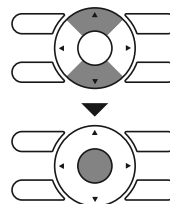


2

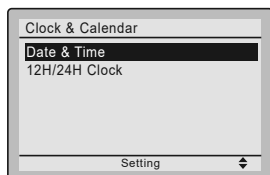


- Press ▼▲ buttons to select **Date & Time** on the clock & calendar screen. Press **Menu/OK** button to display the date & time screen.

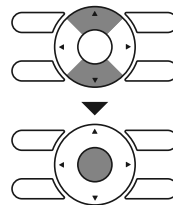


3

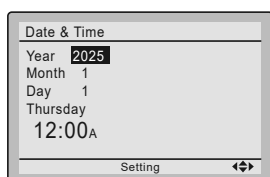


- Select **Year** with ◀▶ buttons. Change the year with ▼▲ buttons. Holding down the button causes the number to change continuously.

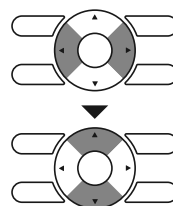


4

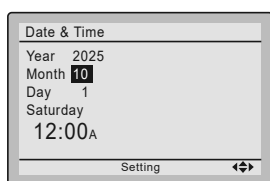


- Select **Month** with ◀▶ buttons. Change the month with ▼▲ buttons. Holding down the button causes the number to change continuously.

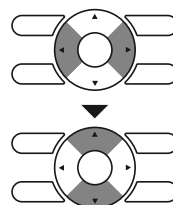


5

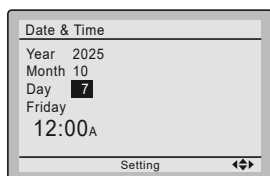


- Select **Day** with ◀▶ buttons. Change the day with ▼▲ buttons. Holding down the button causes the number to change continuously. Days of the week change automatically.

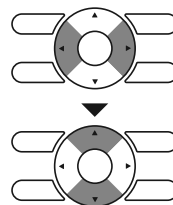

6

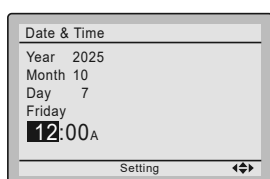


- Select **Hour** with ◀▶ buttons. Change the hour with ▼▲ buttons. Holding down the button causes the number to change continuously.

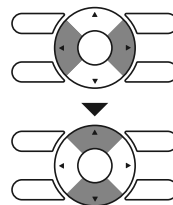

Menu Options


7

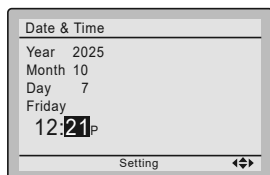


- Select **Minute** with ◀▶ buttons. Change the minute with ▼▲ buttons. Holding down the button causes the number to change continuously.
- Press **Menu/OK** button. The confirmation screen will appear.

Note: _____

The date can be set between January 1, 2020 and December 31, 2099.

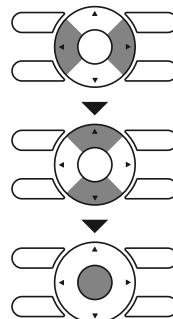


8

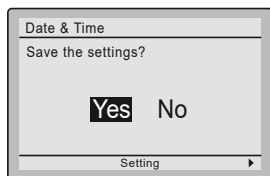

- Press ◀▶ button to select **Yes** on the confirmation screen. Press **Menu/OK** button to confirm the clock and return to the basic screen.


* When setting the schedule, the display returns to the settings screen.

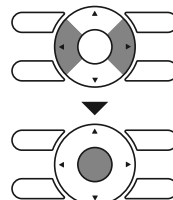


■ 12H/24H CLOCK

Operation


1

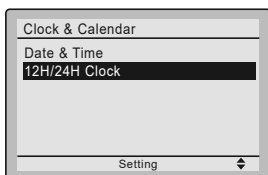


- Display the clock & calendar screen. (See page 46.)
- Press ▼▲ buttons to select **12H/24H Clock** on the clock & calendar screen. The 12H/24H clock screen will appear when **Menu/OK** button is pressed.

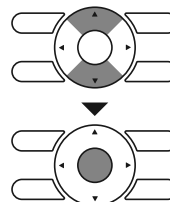


2

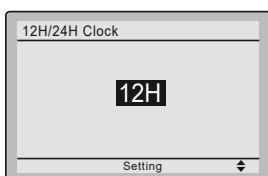


- By default, the time display is set to the 12H format.
- Press ▼▲ buttons to select **12H** **24H** on the 12H/24H clock screen.
- The confirmation screen will appear when **Menu/OK** button is pressed.

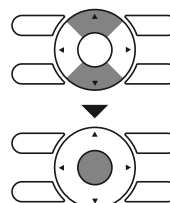

3

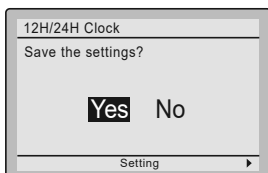

- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the 12H or 24H and takes you back to the basic screen.

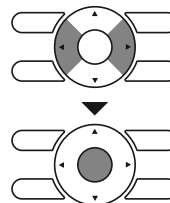


Daylight Saving Time


■ How to display Daylight Saving Time

Operation

1

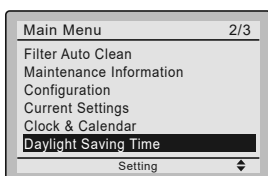

- Display the main menu screen. (See page 23.)
- Press ▼▲ buttons to select **Daylight Saving Time** on the main menu screen. Press **Menu/OK** button to display the daylight saving time screen.

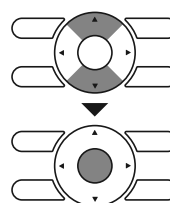


Menu Options


Enabling or disabling Daylight Saving Time

Operation


1

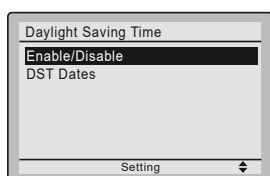


- Display the daylight saving time screen.
(See page 49.)
- Press ▼▲ buttons to select **Enable/Disable** on the daylight saving time screen. Press **Menu/OK** button to display the enable/disable screen.

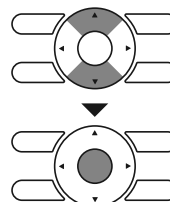


2

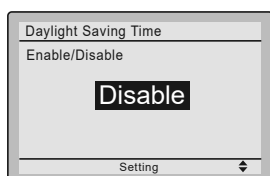


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen.
- Press **Menu/OK** button to display the setting confirmation screen.

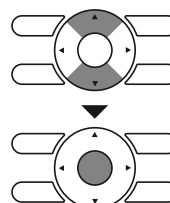

3

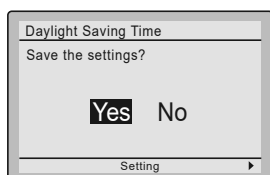


- Press ◀▶ buttons to select **Yes** on the setting confirmation screen. Pressing **Menu/OK** button confirms the daylight saving time enable/disable setting and takes you back to the basic screen.

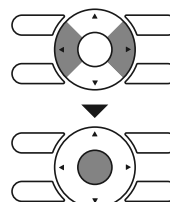


Setting the date

Operation



1

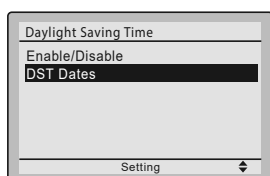




- Display the daylight saving time screen.
(See page 49.)
- Press ▼▲ buttons to select **DST Dates** on the daylight saving time screen. Press **Menu/OK** button to display the duration setting screen.

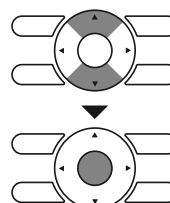


2

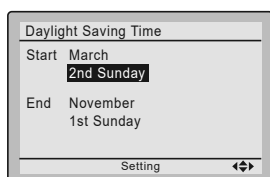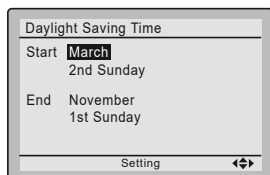

  
 
- Press ▼▲ buttons to select the start month and the end month.
- Press ◀▶ buttons to select a week. Press ▼▲ buttons to select the start week and the end week.
- After setting the Start and End dates, press **Menu/OK** button to display the setting confirmation screen.



3

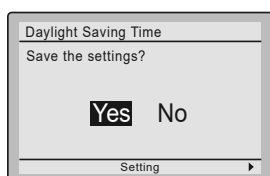

 - Press ◀▶ buttons to select **Yes** on the setting confirmation screen. Pressing **Menu/OK** button confirms the Daylight Saving Time settings and takes you back to the basic screen.

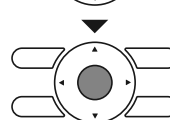

When Daylight Saving Time is enabled

When the time in the remote controller reaches 2:00 a.m. on the specified start date, the clock is automatically set forward by one hour. When the time in the remote controller reaches 2:00 a.m. on the end date, the clock is automatically set back by one hour.


Menu Options

Language


■ Selectable Languages

Operation

1

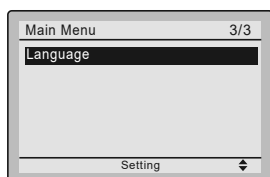


- Display the main menu screen. (See page 23.)
- Press ▼▲ buttons to select **Language** on the main menu screen and press **Menu/OK** button.

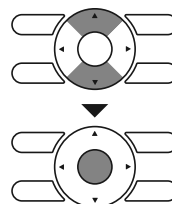

2



- Press ▼▲ buttons to select the preferred language on the language screen. **English/Français/Español** are available.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.

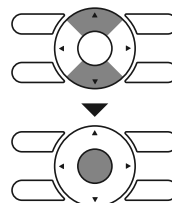


Maintenance

Reset Filter Indicator

Operation

1

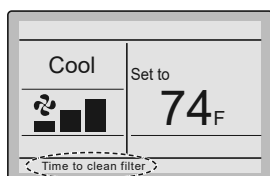

- When it is time to clean or replace the filter, one of the following messages will be displayed on the bottom of the basic screen.

Time to clean filter

Time to clean filter & element

 
Time to clean element

* This is not displayed when Simple display is set.


- Wash, clean, or replace the filter or element.
For details, refer to the operation manual supplied with the unit.

2



- Reset the filter indicator when the filter or element is cleaned or replaced.
- Press **Menu/OK** button.
The main menu screen will be displayed.



3

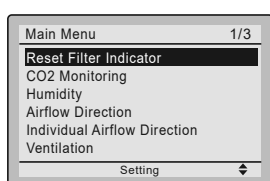

- Press ▼▲ buttons to select **Reset Filter Indicator** on the main menu screen and press **Menu/OK** button.

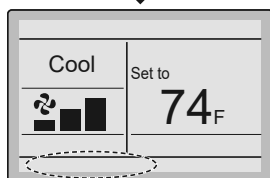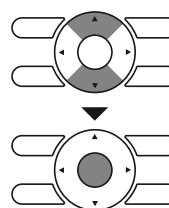

- The displayed message “Time to clean filter” is no longer displayed on the basic screen when the filter sign is reset.

Maintaining the Unit and LCD Display

- Wipe the LCD and surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth.

Note

- Do not use any paint thinner, organic solvent, or strong acid.


Reference Information

Error Code Display

■ Contact your Daikin dealer in the following cases

Operation

1

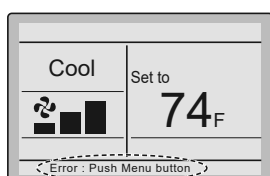


- If an error occurs, either one of the following items will flash in the basic screen.

Error: Push Menu button

- * The Operation lamp will flash.
- * For Simple display, the message is not displayed, and only the Operation lamp flashes.


Warning: Push Menu button

- * The Operation lamp will not flash.
- * For Simple display, the message is not displayed, and the Operation lamp does not flash, either.

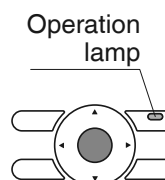

- Press **Menu/OK** button.
 - * If the refrigerant leaks, it will automatically transition to the below screen from the basic screen. However, if the basic screen is not displayed, the transition will not occur automatically.

2

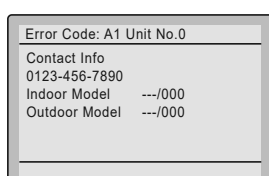

- The error code will flash on the screen for the corresponding unit number.
- The service contact and model name or code are displayed.
- If the refrigerant leaks, it shows "Refrigerant leak detected." with an error code.
- Notify your Daikin dealer with the Error code and model name or code.

After-sale Service



Warning

- **Do not relocate or reinstall the remote controller by yourself.**
Improper installation may result in electric shocks or fire.
Consult your Daikin dealer.



■ Advise your Daikin Dealer of the following items

- Model name
- Date of installation
- Failure conditions: As precise as possible.
- Your address, name, and telephone number

■ Repairs after Warranty Period

Consult your Daikin dealer.

■ Inquiry about After-sale Service

Contact your Daikin dealer.

14.4 <BRC073A6> Wired Remote Controller (Installation)

Safety Considerations

1. Safety Considerations

The original instructions are written in English. All other languages are translations of the original instructions.

■ Also see the installation manual attached to the indoor unit.

Please read these Safety Considerations carefully before installing the user interface.

- This manual classifies the precautions into WARNING and CAUTION. They both contain important information regarding safety. Be sure to follow all the precautions below.

 WARNING	Failure to follow these instructions properly may result in personal injury or loss of life.
 CAUTION	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- After completing the installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner with the aid of the User reference guide. Ask the customer to store the Installer reference guide along with the User reference guide for future reference.

Safety Considerations

** WARNING**

Ask your dealer or qualified personnel to carry out installation work.

Do not attempt to install the user interface yourself. Improper installation may result in water leakage, electric shocks or fire.

Consult your local dealer regarding relocation and reinstallation of the user interface. Improper installation work may result in leakage, electric shocks or fire hazards.

Install the user interface in accordance with the instructions in this Installer reference guide. Improper installation may result in water leakage, electric shocks or fire.

Be sure to use only the specified accessories and parts for installation work.

Failure to use the specified parts may result in the unit falling down, water leakage, electric shocks or fire.

Install the user interface on a foundation strong enough to withstand the weight of the user interface. Insufficient strength may result in the user interface falling down and causing injury.

Electrical work must be performed in accordance with the relevant local and national regulations and with the instructions in this Installer reference guide.

Be sure to use a dedicated power supply circuit only. Insufficient power circuit capacity and improper workmanship may result in electric shocks or fire.

Always perform installation work with the power turned off.

Touching electric parts may result in electric shock.

Do not disassemble, reconstruct or repair.

This may result in electric shock and/or fire.

Make sure that all wiring is secured, the specified wires are used and that there is no strain on the terminal connections or wires.

Improper connections or securing of wires may result in abnormal heat build-up or fire.

The choice of materials and installations must comply with the applicable national and international standards.

Safety Considerations

⚠ CAUTION

To avoid leakage and electric shock due to entry of water or insects, fill the wiring through hole with putty.

To avoid electric shocks, do not operate with wet hands.

Do not wash the user interface with water, as this may result in electric shocks or fire.

Install the indoor and outdoor units, power cord and connection wires at least 3.3ft (1m) away from televisions or radios to prevent interference and noise.

(Depending on the incoming signal strength, a distance of 3.3ft (1m) may not be sufficient to eliminate noise.)

Do not install the air conditioner in the following locations:

1. Where there is a high concentration of mineral oil spray or vapor (e.g. a kitchen).
Plastic parts may deteriorate and fall off which could result in water leakage.
2. Where corrosive gas, such as sulphurous acid gas, is produced.
Corroding of copper pipes or soldered parts may result in refrigerant leakage.
3. Near machinery emitting electromagnetic radiation.
Electromagnetic radiation may disturb the operation of the control system and result in malfunctioning of the unit.
4. Where flammable gas may leak, where there is carbon fiber or ignitable dust suspensions in the air or where volatile flammables such as paint thinner or gasoline are handled.
Operating the unit in such conditions may result in fire.
5. High temperature areas or direct flames.
Overheating and/or fire may occur.
6. Moist areas or places which may be exposed to water.
If water enters the user interface, electric shock may be caused and the inner electronics may fail.

When the thermostat function of the user interface is used, select the installation location while considering it should be a place:

- Where the average temperature in the room can be detected.
- Which is not exposed to direct sunlight.
- Which is not near a heat source.
- Which is not affected by the outside air or air draught due to, for example, opening/closing of doors, the air outlet of the indoor unit or the like.
- Which is NOT located outdoors.

Accessories

2. Accessories

Not included but required: BRCW901A*.


Item No.	Length
BRCW901A03	10ft
BRCW901A08	26ft

3. User interface installation procedure

3-1 Determine where to install the user interface.

Make sure to follow "1. Safety Considerations" when determining the location.

3-2 Make a wiring through hole on the wall if the wires are coming out from the rear.

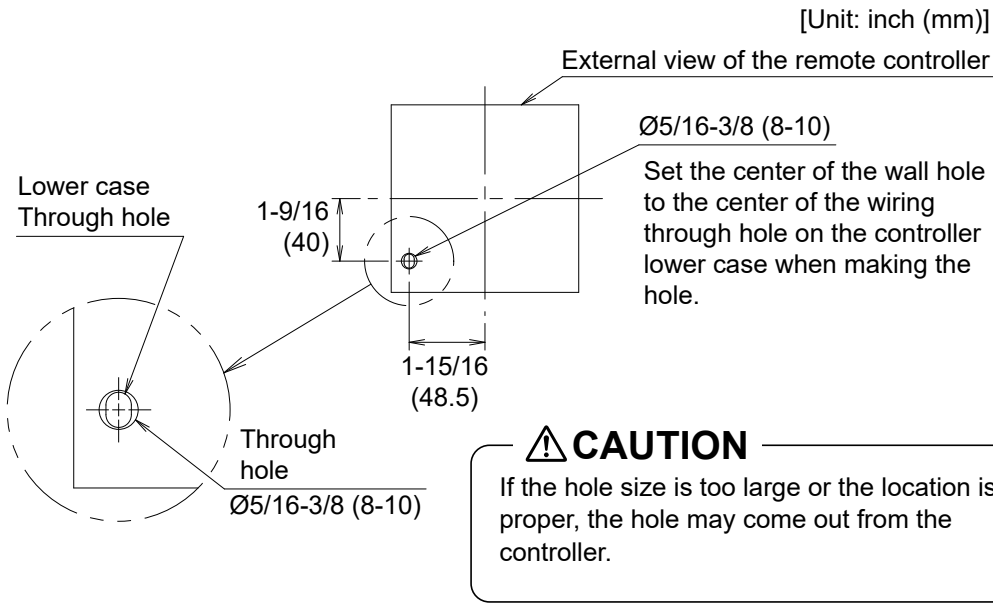


3-3 Remove upper case.

Insert a screwdriver in the recess of lower case to remove the upper case (2 points).


Remote controller printed-circuit board is installed on the upper case. Be careful not to damage the printed-circuit board with the screwdriver.

Be careful not to let dust or moisture touch the printed-circuit board.

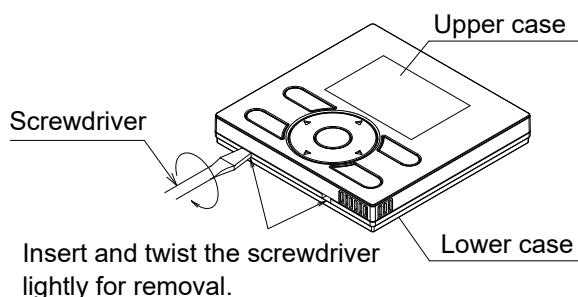


3-4 Determine the direction of the controller wiring outlet (rear outlet, left outlet, top left outlet).

3-4-1 Rear outlet

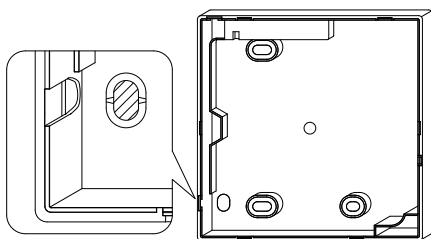


Cut off the resin area (hatched area).

3-4-2 Left outlet

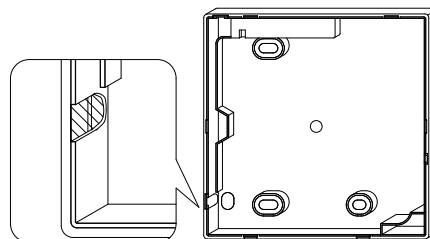

Cut off the thin area (hatched area) with nippers or the like and then remove the burrs with a file or the like.

3-4-3 Top left outlet

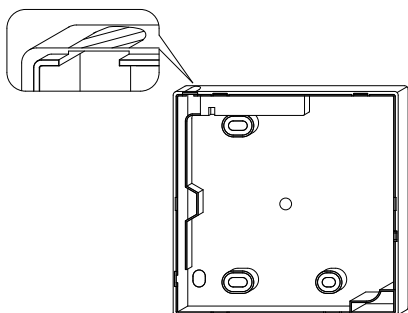


Cut off the thin area (hatched area) with nippers or the like and then remove the burrs with a file or the like.

User interface installation procedure

3-5 Securing the user interface adapter.


Remove the upper case of the user interface adapter and secure the lower case assembly.

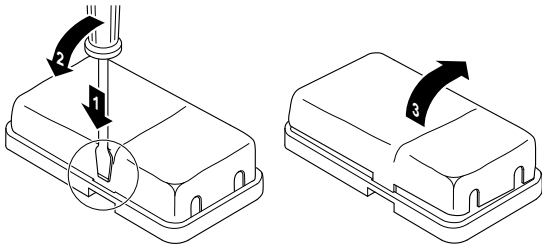


Mounting with supplied wood screws	Mounting with supplied double-face adhesive tape

3-6 Conduct wiring.


3-6-1 Connections overview

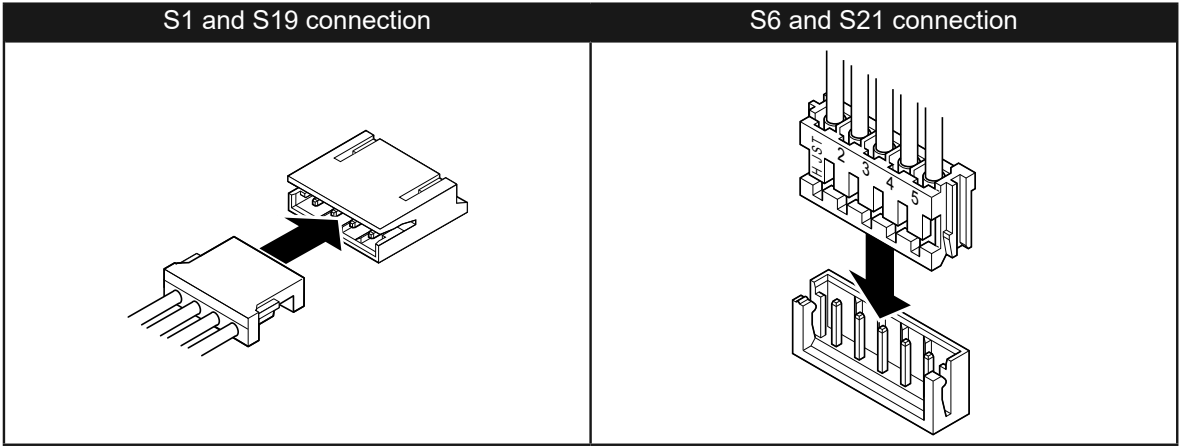


3-6-2 Rear outlet

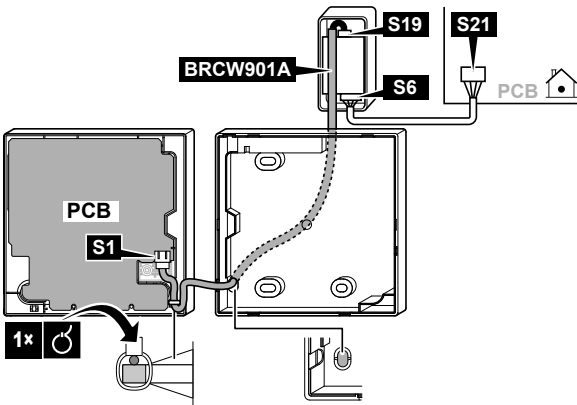

3-6-3 Left outlet

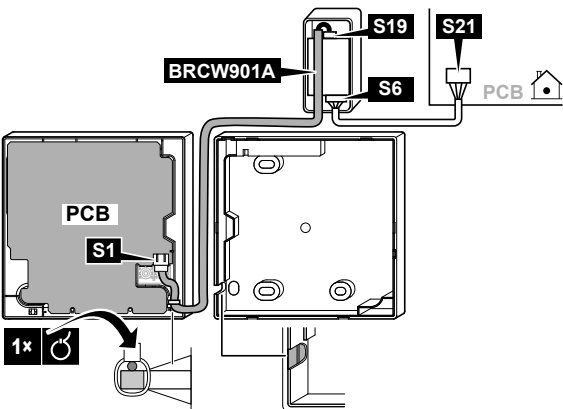

User interface installation procedure

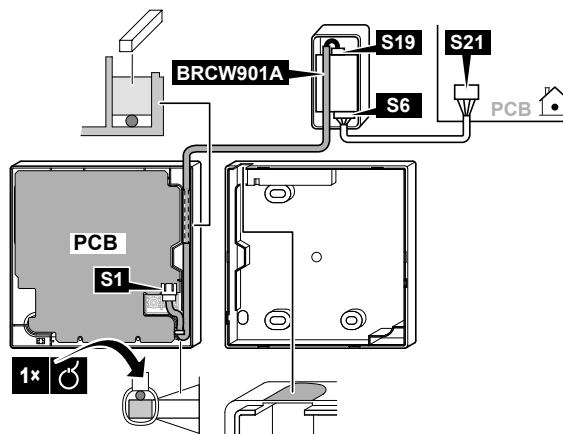3-6-4 Top left outlet**⚠ CAUTION**

- Do not perform wiring close to a power line in order to avoid electrical noise (external noise).
- Seal the wiring draw-in port securely with putty (field supply) to prevent the entry of insects or the like.

⚠ CAUTION

- The adapter does not provide any form of strain release. The installer must provide something to release the strain on the cables near the adapter.

ⓘ NOTICE


- Ground both ends of the BRCW901A* option cable.

3-7 Fixing procedure of the lower case.

In the case of wiring a user interface through the rear outlet, perform the wiring through the outlet hole in the lower case before it is installed on the wall.


3-7-1 Wall mounting

Secure by using furnished wood screws (2 pcs.).

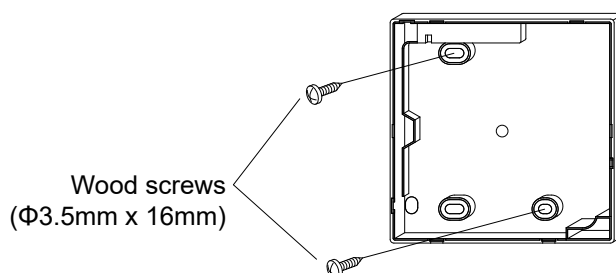

3-7-2 Switchbox mounting

Secure by using furnished small screws (2 pcs).

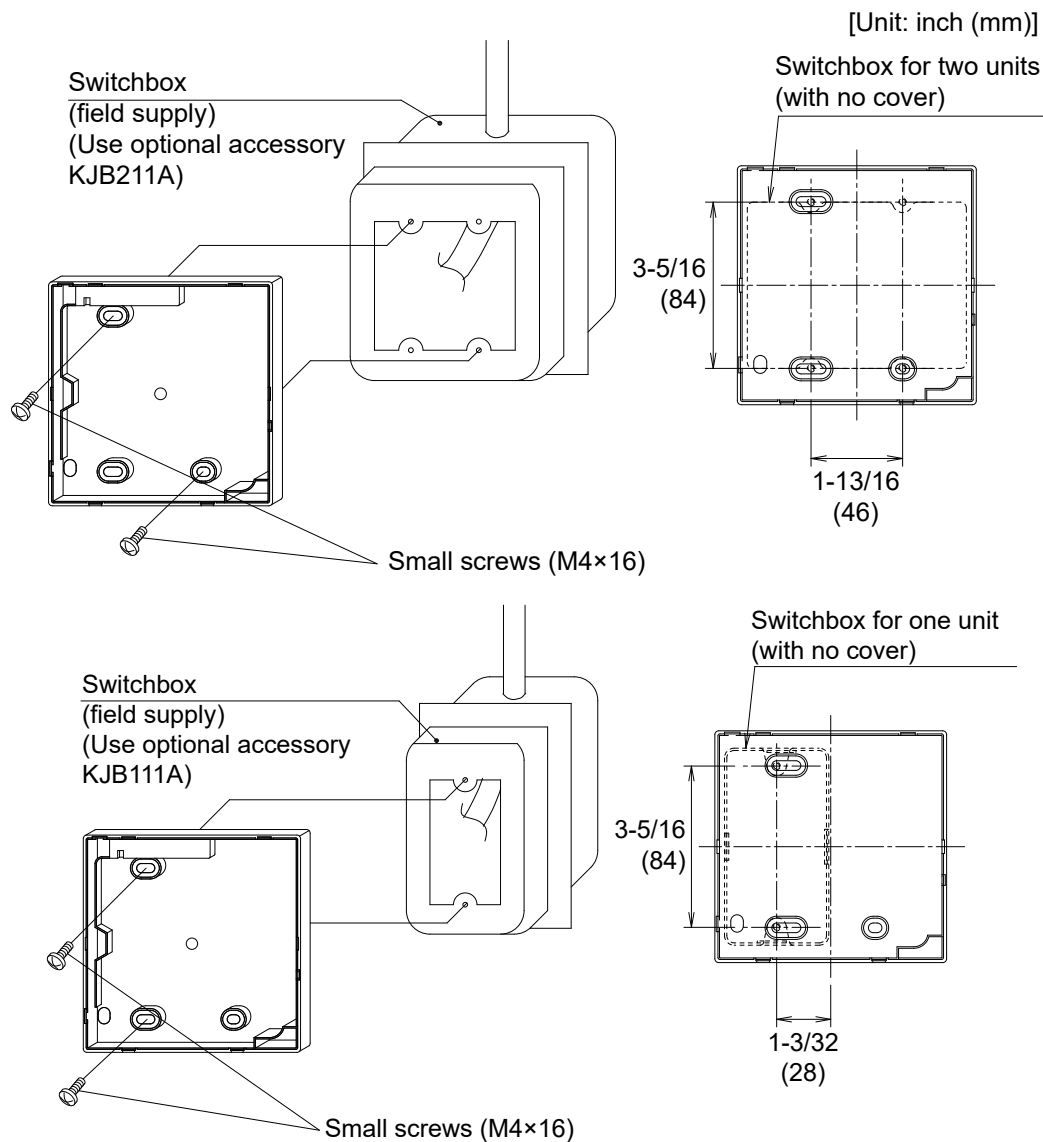


⚠ CAUTION

- Select a flat surface for installation if possible.
- Do not tighten the installation screws too much to avoid deforming the lower case.

User interface installation procedure


3-8 Attach the upper case.

- Align the upper case with the tabs of the lower case (6 points) and insert the upper case.
- Be careful not to pinch the wiring when attaching.
- Peel off the protective seal which is attached to the upper case.

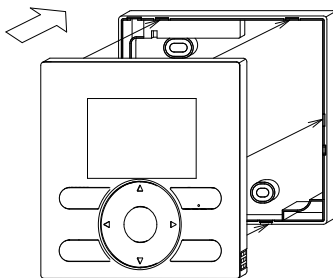

4. Functions and menu items of the user interface buttons

4-1 Functions and menu items

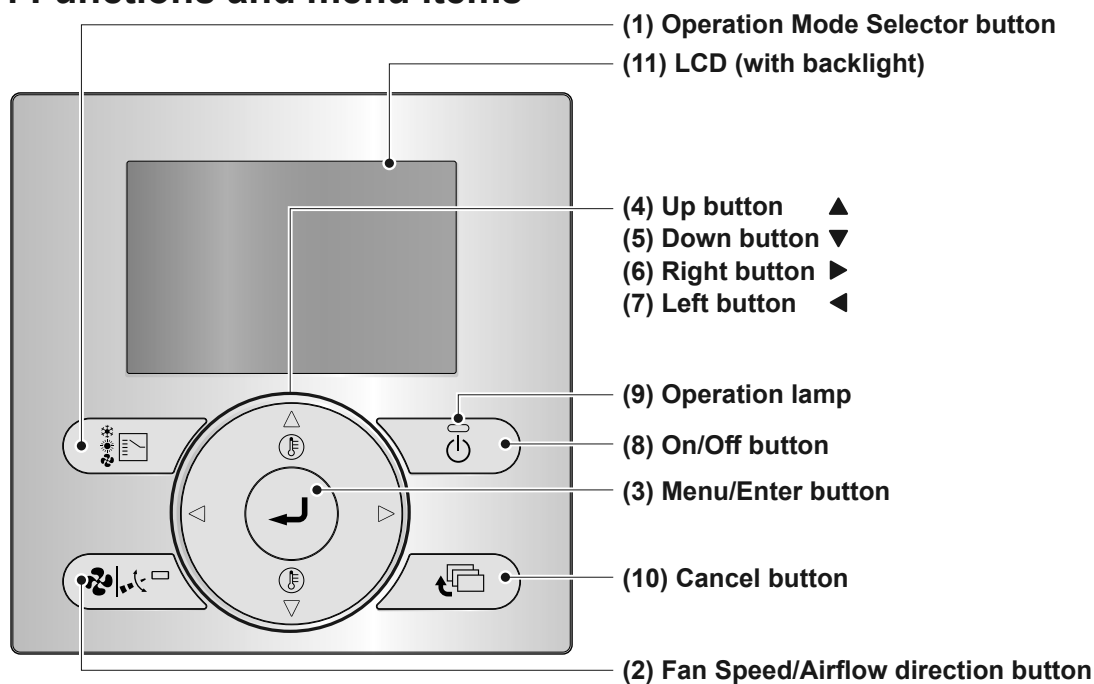

(1) Operation Mode Selector button

- This button is enabled by default. To disable, refer to "13. Prohibit Buttons" on page 27.
- Press this button to select the operation mode of your preference.
- Available modes may vary with the connected model.

(2) Fan Speed/Airflow direction button

- Used to change the fan speed and airflow direction.
- Available fan speeds and airflow directions may vary with the connected model.

(3) Menu/Enter button

- This button is enabled by default. To disable, refer to "4-2 Enable/disable the Menu/Enter and Cancel button" on page 14.
- Used to display the main menu or enter the selected item. (For details on the main menu, see the User reference guide.)

Main menu*

Airflow Direction
Energy Saving Options
Schedule
Maintenance Information
Configuration
Current Settings
Clock & Calendar
Language

(4) Up button ▲

- Used to raise the set temperature.
- The next item on the upper side will be highlighted. (Keep pressing the button to cycle through the values or items.)
- Used to change the selected item.

Functions and menu items of the user interface buttons

(5) Down button ▼

- Used to lower the set temperature.
- The next item on the lower side will be highlighted.
(Keep pressing the button to cycle through the values or items.)
- Used to change the selected item.

(6) Right button ►

- Used to highlight the next item on the right-hand side.
- The display contents are changed to the next screen.

(7) Left button ◀

- Used to highlight the next items on the left-hand side.
- The display contents are changed to the previous screen.

(8) On/Off button

- Press to start or stop the air conditioner.

(9) Operation lamp (Green)

- This lamp lights up during operation.
- This lamp will blink if an error or mode conflict occurs.
- This lamp is not lit when the unit operation is OFF.

(10) Cancel button

- Used to return to the previous screen.
- Press and hold this button for 4 seconds or longer to display the Service Settings menu.

(11) LCD (with backlight)

- The backlight will be lit for approximately 30 seconds when one of the buttons is pressed.
- The actions linked to the buttons, except for the On/Off button, are not carried out when the backlight is not lit.

Service Settings menu*


Test Operation**
Maintenance Contact
Field Settings
Error History

*Available menu items are depending on the connected model.

**Not displayed in case of multi-split setup.

⚠ CAUTION

- To operate the Up/Down/Left/Right button, always press ▲, ▼, ◀, or ►.

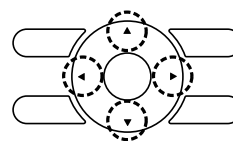


4-2 Enable/disable the Menu/Enter and Cancel button


To disable the Menu/Enter and Cancel button in the Basic screen, proceed as follow:

1. Keep the ► button pressed.
2. Push the 3 indicated keys simultaneously while keeping the ► button pressed.

To enable the Menu/Enter and Cancel button in the Basic screen, follow the same procedure.

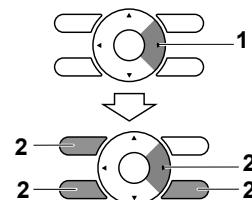

4-3 Description of button operation

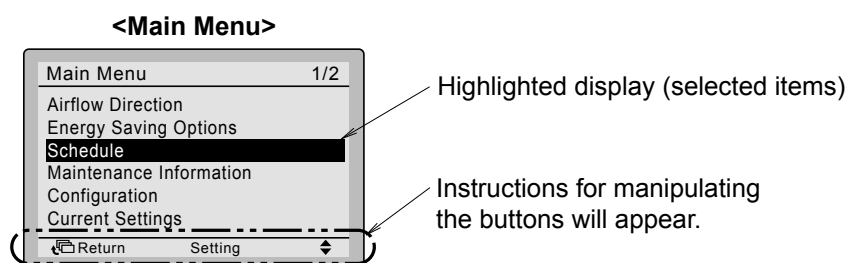

Power-on

5. Power-on


- Check that the indoor/outdoor unit wiring is completed.
- Check that the switchbox cover of the indoor and outdoor units are closed before powering on.

Split air conditioner is connected to a user interface

5-1 Turn on the power.

5-2 "Checking the connection.
Please stand by." is displayed.

5-2 <Main user interface>

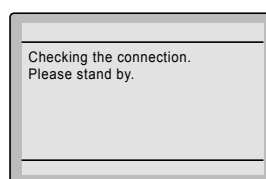

NOTE


When the text on the left is displayed, the backlight does not light up when one of the buttons is pressed.



<Basic screen>

5-3 The Basic screen is displayed.

5-3

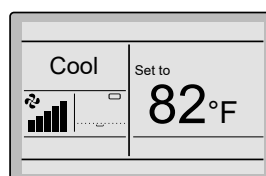

NOTE


- When selecting a different language, refer to "12. Language" on page 26.
- The displayed operation mode on the user interface at first startup depends on the operation mode of the indoor unit.

6. Field settings


- 6-1** Press and hold the Cancel button for 4 seconds or longer. The Service Settings menu is displayed.

6-1

<Basic screen>

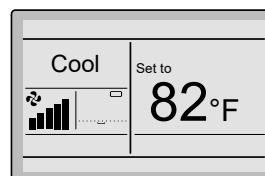


<Service Settings>

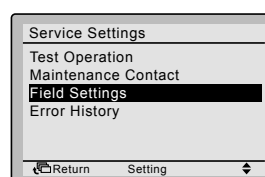

<Field settings>

- 6-3** Highlight the "Mode No.", and select the desired "Mode No." by using the ▲▼ (Up/Down) buttons. For the most commonly used field settings, refer to page 17.

6-3

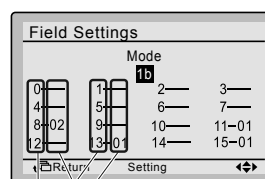

SECOND CODE NO.
FIRST CODE (SW) NO.

- The current settings are displayed.
- CODE NO. " -- " means that there is no function available.

 
- 6-4** Highlight the SECOND CODE. of the FIRST CODE NO. to be changed and select the desired SECOND CODE NO. by using the ▲▼ (Up/Down) buttons. Multiple identical mode number settings are available.

- 6-5** Press the Menu/Enter button. The confirmation screen is displayed.


6-5

- 6-6** Select **Yes** and press the Menu/Enter button. The settings are saved and the Field settings screen returns.

6-6



Press the Menu/Enter button.

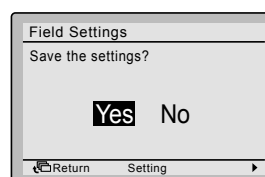

<Field Settings>

Field settings

- 6-7** After all changes are completed, press the Cancel button twice.
- 6-8** The backlight goes out and "Checking the connection. Please stand by" is displayed during initialization. After the initialization, the Basic screen returns.

Mode No.	First Code No.	Description of the setting	Second code No.			
			01	02	03	04
1b	8	Daylight Saving Time	Disable	Enable*	—	—
	11	(Private use)	NA*	NA	—	—
	13	Basic screen display	Icon+Text*	Icon	—	—
	15	(Private use)	NA*	NA	—	—
1c	0	(Private use)	NA	NA*	—	—
	2	(Private use)	NA	NA*	—	—
	4	(Private use)	NA	NA*	—	—
	5	(Private use)	NA*	—	—	—
	6	(Private use)	NA*	—	—	—
	14	(Private use)	NA*	NA	—	—
1e	1	(Private use)	NA	NA*	—	—
	2	Setback function	Do not use	Heat only	Cool only	Cool and Heat*
	5	(Private use)	NA	NA*	—	—
	6	(Private use)	NA	NA*	—	—
	8	(Private use)	NA*	—	—	—
	9	(Private use)	NA	NA*	—	—
	a	(Private use)	NA*	—	—	—

* Factory default setting

Test operation method (pair split only)

7. Test operation method (pair split only)

* In case of multi-split models, see the manual attached to the outdoor unit.

NOTE

- In case of multi-split setup, test operation cannot be used.

Also see the installation manuals attached to the indoor unit and the outdoor unit.

- Check that the wiring of the indoor unit and the outdoor unit is completed.
- Check that the switchbox cover of the indoor unit and the outdoor unit is closed.
- Perform the test operation according to the following procedure.

NOTE

- The backlight will be lit for approximately 30 seconds when pressing one of the operation buttons.
- Operate the buttons only when the backlight is lit. However, the On/Off button can be operated when the backlight is not lit.

- 7-1** Make sure the electric work is properly completed and proper voltage is available before turn on the power.


CAUTION

Make sure that the outer panel and piping cover are closed before operation (danger of electric shock).

- 7-2** Confirm that both the liquid and gas stop valves are opened.



- 7-3** Set the operation mode to cooling by using the Operation Mode Selector button.

- 7-4** Press and hold the Cancel button for 4 seconds or longer. The Service Settings menu is displayed.

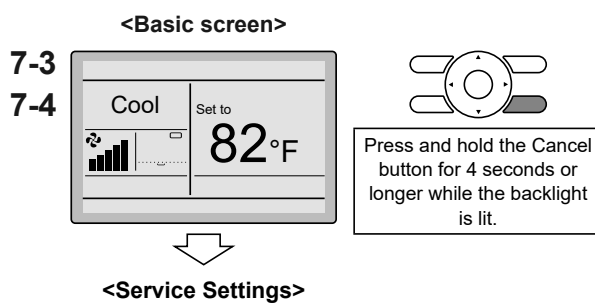


Test operation method (pair split only)

 - 7-5** Select **Test Operation** and press the Menu/Enter button. The Basic screen returns and "Test operation" is displayed.

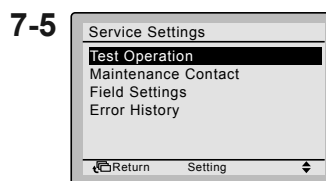

Press the Menu/Enter button.

- 7-6** Press the On/Off button within about 10 seconds. Test operation starts. Check the operation condition for 3 minutes.

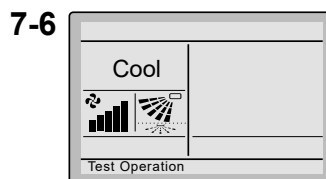



Press the On/Off button (within 10 seconds).

NOTE

Test operation can also be started by first performing 7-6, followed by 7-5.



- 7-7** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.
 
<Main menu>

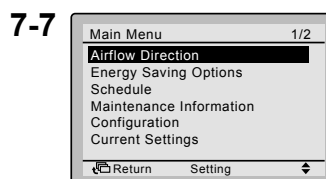


Press the Menu/Enter button.

 - 7-8** Select **Airflow Direction** and press the Menu/Enter button.

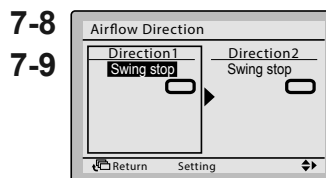


Change the airflow direction using the ▲▼ (Up/Down) buttons.

 - 7-9** Press the ▲▼ buttons to select the desired airflow direction and press the Menu/Enter button. The Basic screen returns.



Press the Menu/Enter button.

- 7-10** Press and hold the Cancel button for 4 seconds or longer in the Basic screen. The Service Settings menu is displayed.

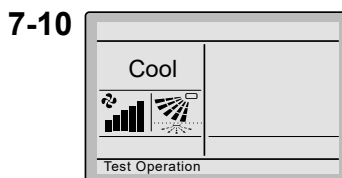



Press and hold the Cancel button for 4 seconds or longer while the backlight is lit.

<Service Settings menu>

Test operation method (pair split only)

- 7-11** Select **Test Operation** in the Service Settings menu and press the Menu/Enter button. The Basic screen returns and normal operation is possible.

 7-11

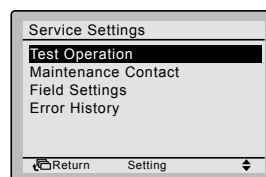

Press the Menu/Enter button.

<Basic screen>

- 7-12** Check the functions according to the User reference guide.

- 7-13** When the decoration panel is not installed, turn off the power after test operation finishes.

NOTE

Test operation will automatically finish after 30 minutes.

CAUTION

- If the interior work is not completed when the test operation is finished, explain to the customer that he should not operate the unit until the interior work is completed in order to protect the indoor unit.
- (If the indoor unit is operated, the indoor unit may be contaminated with the materials which arise from paints or adhesives during the interior work and water splash or water leak may occur.)

 

CAUTION

- If it is not possible to operate the unit due to any malfunction, refer to **Malfunction diagnosis method**.
- When the test operation finishes, check that the error code history is not displayed in the Maintenance Information screen according to the following procedure.

<Basic screen>

- 7-14** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

7-14


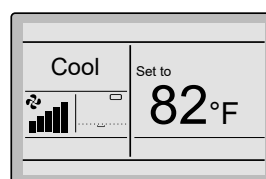


Press the Menu/Enter button.

<Main menu>

- 7-15** Select **Maintenance Information** and press the Menu/Enter button.

 7-15

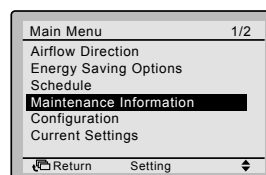



Press the Menu/Enter button.

Test operation method (pair split only)

7-16 The Maintenance Information screen is displayed. Check that the last error code is not displayed in the screen.

7-17 If the last error code is displayed, conduct the malfunction diagnosis referring to "Error code list" in the installation manual of the indoor unit. After the malfunction diagnosis finishes, press and hold the On/Off button for 4 seconds or longer in the "Maintenance Information" screen to erase the error code history.

 7-16
7-17

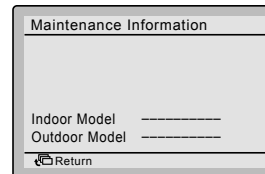



Press and hold the On/Off button for 4 seconds or longer.

NOTE

If no error code is displayed when this procedure is followed, the system has completed the test operation normally.

Malfunction diagnosis method

- When the user interface displays any item in the following table, inspect the details in the table.
- If an error occurs, "Error: Push Menu button" or "⚠" is displayed. Conduct the malfunction analysis referring to "Error code list" in the installation manual of the indoor unit. To see the RC Error History screen, refer to "8. Checking procedure of Error History".

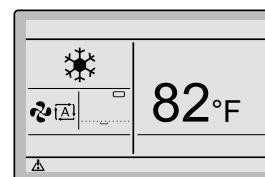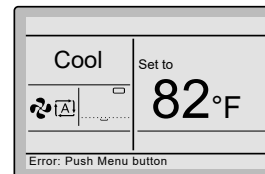

User interface display	Description
No display	• Power outage, power voltage failure or open-phase • Wrong wiring (between indoor and outdoor units) • Indoor PCB assembly failure • User interface wiring disconnection • User interface failure • Blown fuse (outdoor unit)
Display "Checking the connection Please stand by" is shown.*	• Indoor PCB assembly failure • Wrong wiring (between indoor and outdoor units)

* Though "Checking the connection Please stand by" is displayed for up to 180 seconds after powering on, this does not mean there is a failure. (Determine after 180 seconds if error code "U5" is displayed.)

 

Checking procedure of Error History

8. Checking procedure of Error History

- 8-1** Press and hold the Cancel button for 4 seconds or longer in the Basic screen. The Service Settings menu is displayed.

8-1

<Basic screen>


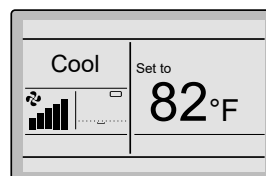


Press and hold the Cancel button for 4 seconds or longer while the backlight is lit.

- 8-2** Select **Error History** and press the Menu/Enter button. The Error History menu is displayed.



8-2
 
<Service Settings>

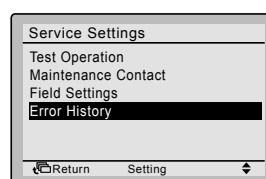

Press the Menu/Enter button.

 - 8-3** Select **RC Error History** and press the Menu/Enter button. The error codes can be confirmed in the RC Error History screen.

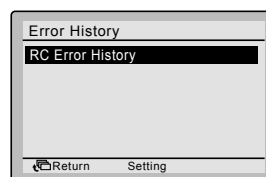
8-3

Press the Menu/Enter button.

- 8-4** In the RC Error History screen the last 10 items are displayed in order.

8-4

- 8-5** Press the Cancel button in the RC Error History screen 3 times. The Basic screen returns.

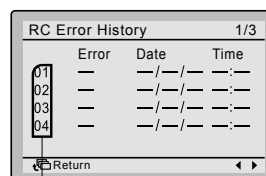
8-5

Latest record

Registration method of the Maintenance Contact information

9. Registration method of the Maintenance Contact information

- Registration of the service contact information.

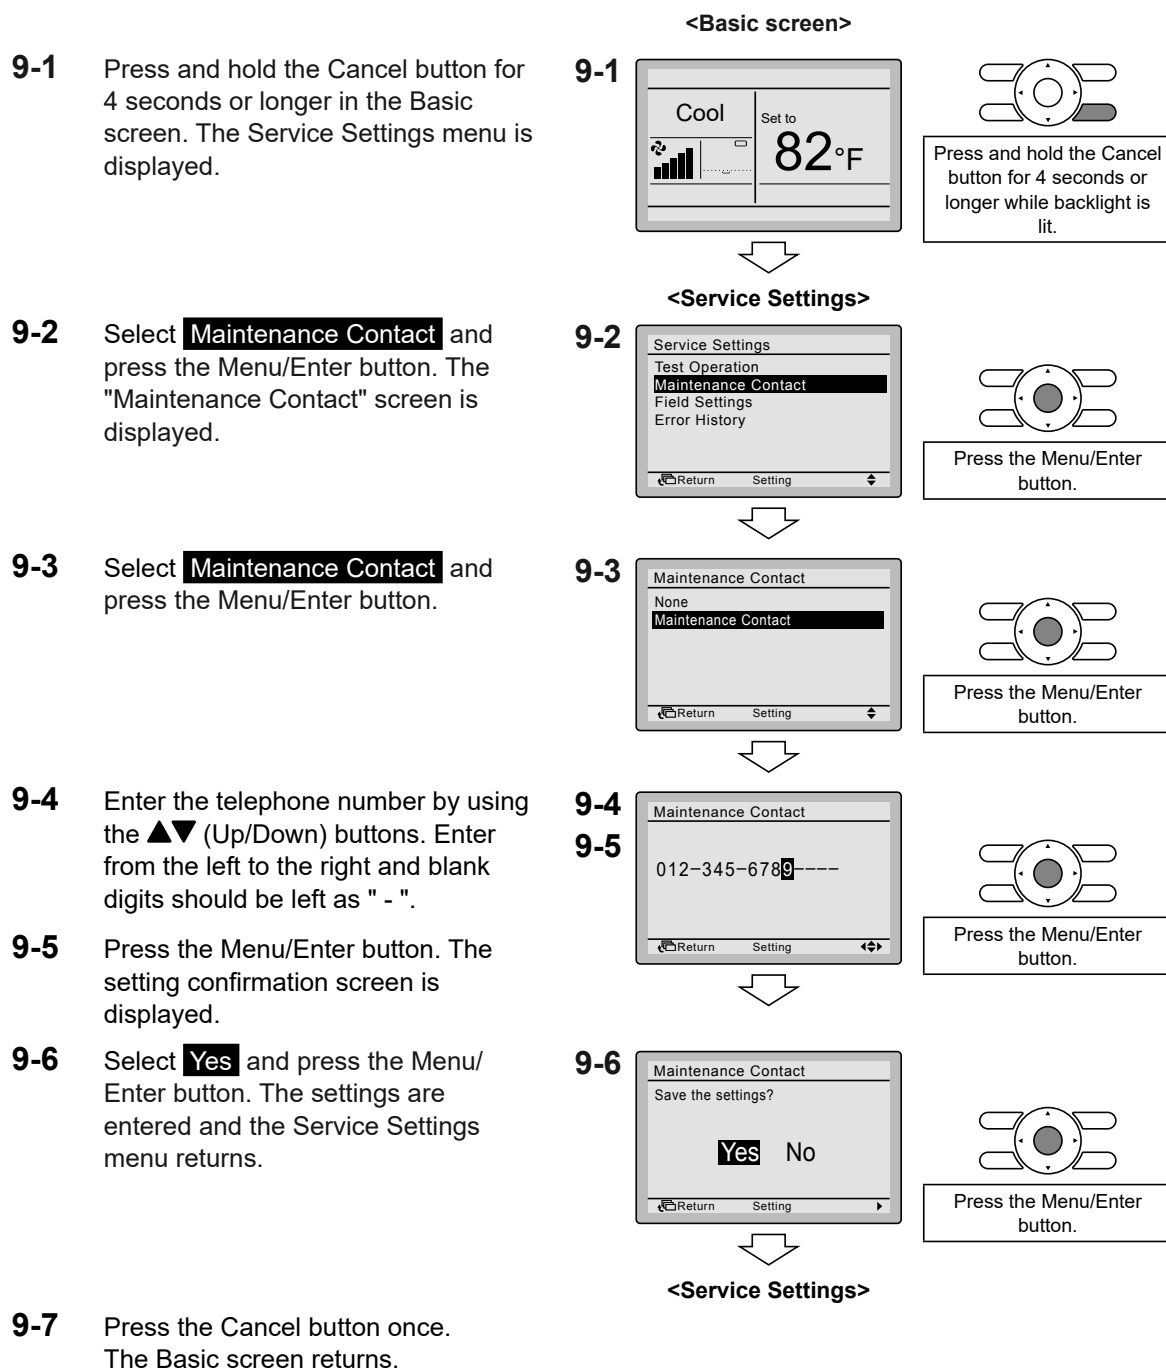


Confirmation of registered details

10. Confirmation of registered details

- 10-1** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

10-1

<Basic screen>

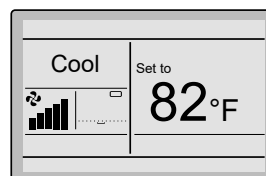


Press the Menu/Enter button.

- 10-2** Select **Maintenance Information** and press the Menu/Enter button. The "Maintenance Information" screen is displayed.

10-2


<Main menu>

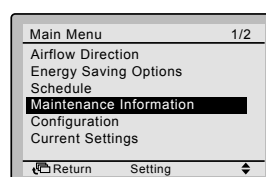

Press the Menu/Enter button.

- 10-3** Confirm that the contact information is entered correctly.

10-3

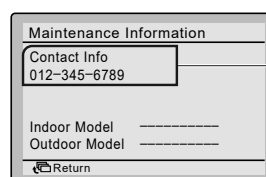

The registered details are displayed.

- 10-4** Press the Cancel button twice. The Basic screen returns.


Clock & Calendar

11. Clock & Calendar

- 11-1** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

11-1

<Basic screen>

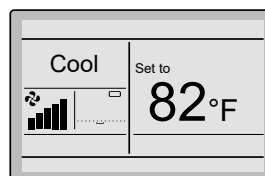


Press the Menu/Enter button.

- 11-2** Select **Clock & Calendar** and press the Menu/Enter button. The "Clock & Calendar" menu is displayed.

11-2


<Main menu>

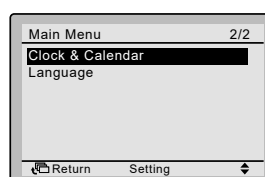

Press the Menu/Enter button.

- 11-3** Select **Date & Time** and press the Menu/Enter button. The "Date & Time" screen is displayed.

11-3

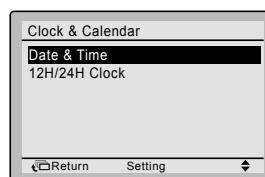


Press the Menu/Enter button.

- 11-4** Select the "Year", "Month", "Day" and time by using the ◀▶ (Left/Right) buttons and change the value by using the ▲▼ (Up/Down) buttons. When the buttons are pressed and held, the values change continuously.

11-4

11-5

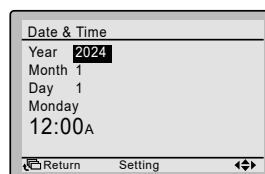

Press the Menu/Enter button.


- 11-5** Press the Menu/Enter button. The confirmation screen is displayed.

NOTE

The day of the week is set automatically.

- 11-6** Select **Yes** and press the Menu/Enter button. The settings are confirmed and the Basic screen returns.

11-6

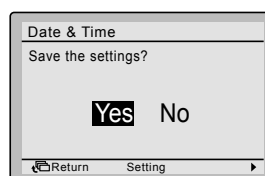

Press the Menu/Enter button.

<Basic screen>

NOTE

 

If a power outage lasts longer than 48 hours, the time is reset and needs to be set again.

12. Language

- 12-1** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

12-1

<Basic screen>


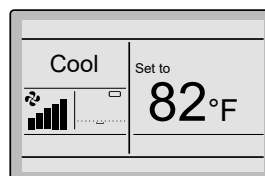


Press the Menu/Enter button.

- 12-2** Select **Language** and press the Menu/Enter button. The "Language" screen is displayed.

12-2

 
<Main menu>

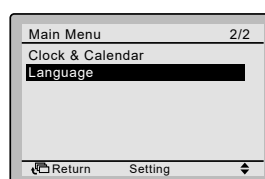

Press the Menu/Enter button.

- 12-3** Press the ▲▼ (Up/Down) buttons to select the preferred language (English, French or Spanish) and press the Menu/Enter button. The settings are confirmed and the Basic screen returns.

12-3

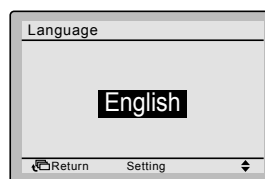

Press the Menu/Enter button.

<Basic screen>

 

Prohibit Buttons

13. Prohibit Buttons

- Restriction of the number of operable buttons.

- 13-1** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

<Basic screen>


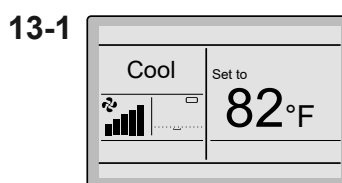


Press the Menu/Enter button.

- 13-2** **Lock Function** can be made visible by pressing the Menu/Enter button for 4 seconds.

13-2

 

<Main menu>

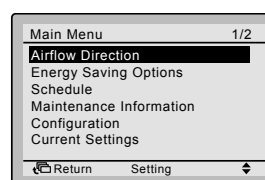

Press the Menu/Enter button for 4 seconds.

- 13-3** Select **Lock Function** and press the Menu/Enter button. The "Lock Function" menu is displayed.

 
13-3

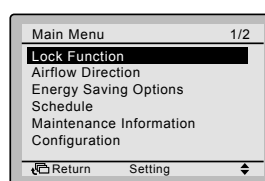

Press the Menu/Enter button.

- 13-4** Select **Prohibit Buttons** and press the Menu/Enter button. The "Prohibit Buttons" screen is displayed.



13-4

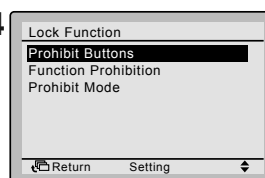

Press the Menu/Enter button.

- 13-5** Select "Up/Down/L/R", "On/Off", "Mode" or "Fan Speed" by using the ◀▶ (Left/Right) buttons and "Lock/Unlock" by using the ▲▼ (Up/Down) buttons.

 

13-5

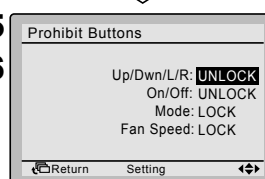

Press the Menu/Enter button.

- 13-6** Press the Menu/Enter button. The confirmation screen is displayed.

 13-7

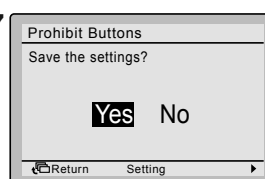


Press the Menu/Enter button.

<Basic screen>



14. Function Prohibition

- Restriction of the number of operable functions.

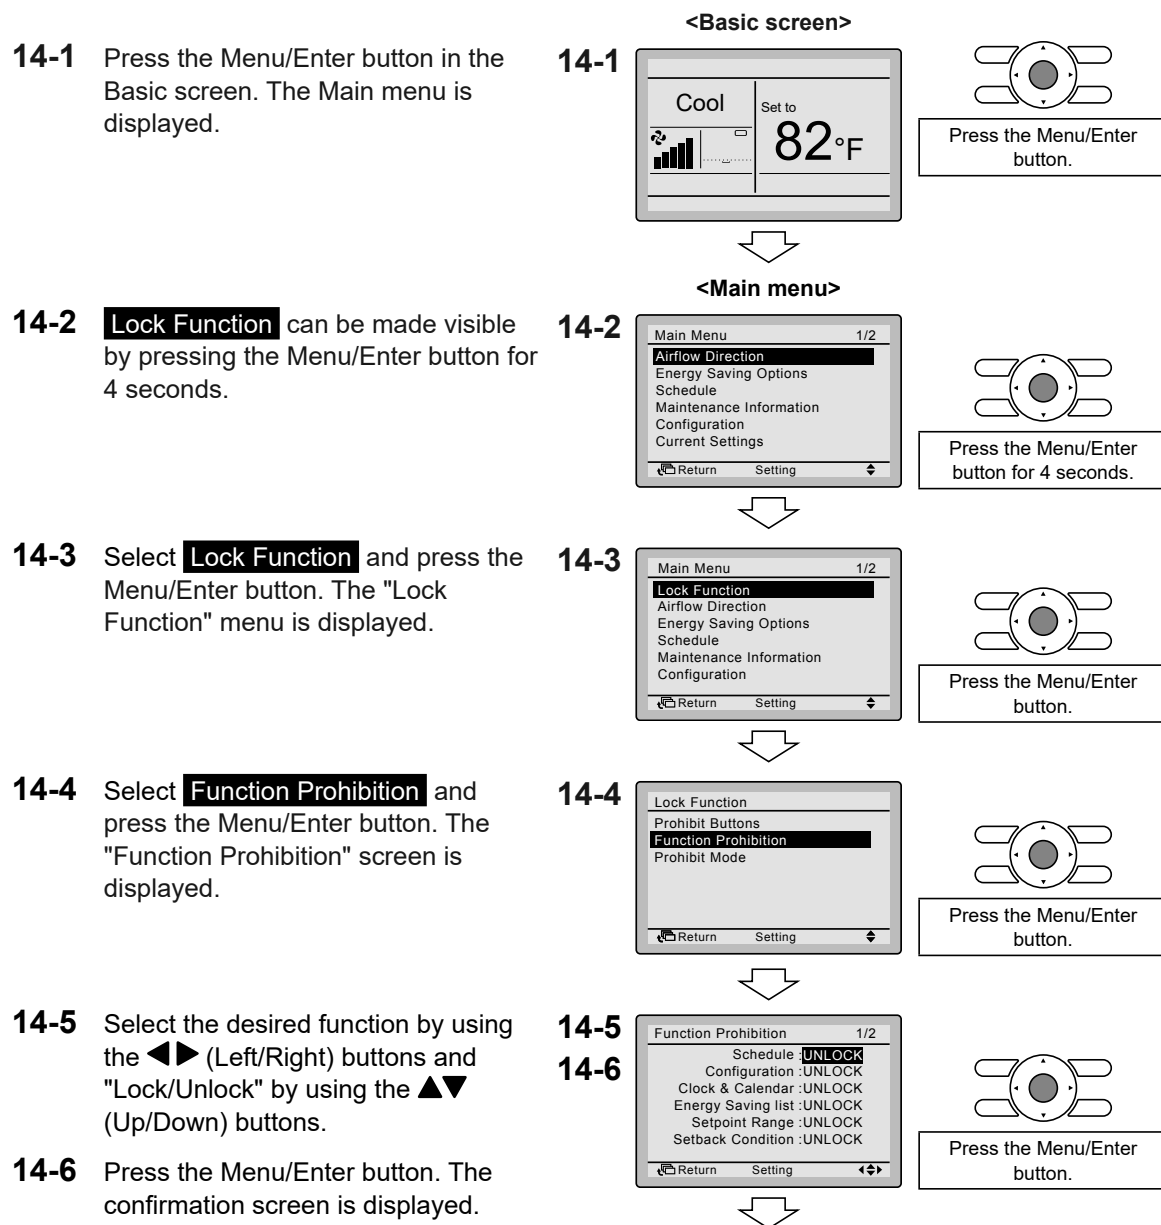

Prohibit Mode

 - 14-7** Select **Yes** and press the Menu/Enter button. The settings are entered and the Basic screen returns.

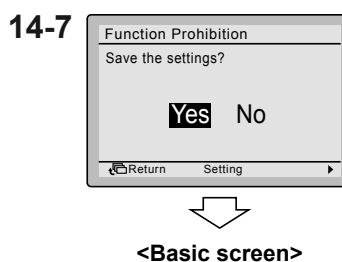

Press the Menu/Enter button.

 

NOTE

- When a function is prohibited, the  icon will be displayed next to the function.

15. Prohibit Mode



- Restriction of the number of operable modes.

- 15-1** Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

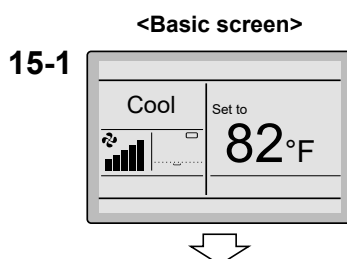



Press the Menu/Enter button.

 - 15-2** **Lock Function** can be made visible by pressing the Menu/Enter button for 4 seconds.

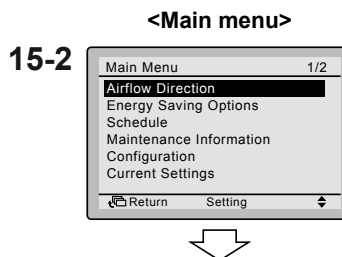

Press the Menu/Enter button for 4 seconds.

 
- 15-3** Select **Lock Function** and press the Menu/Enter button. The "Lock Function" menu is displayed.

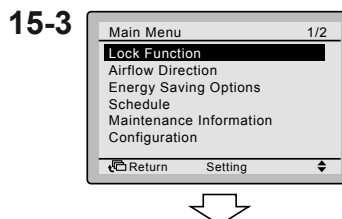

Press the Menu/Enter button.


Prohibit Mode

15-4 Select **Prohibit Mode** and press the Menu/Enter button. The "Prohibit Mode" screen is displayed.

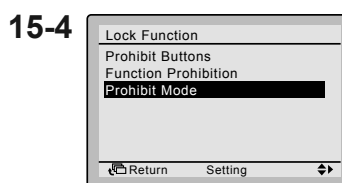

Press the Menu/Enter button.


15-5 Select "Fan", "Cool", "Heat", "Auto" or "Dry" using the ◀▶ (Left/Right) buttons and "Enable/Disable" the selected mode by using the ▲▼ (Up/Down) buttons.

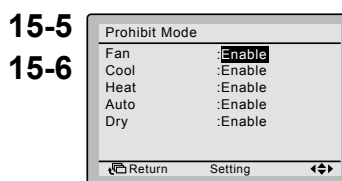

Press the Menu/Enter button.

15-6 Press the Menu/Enter button. The confirmation screen is displayed.

15-7 Select **Yes** and press the Menu/Enter button. The settings are confirmed and the Basic screen returns.

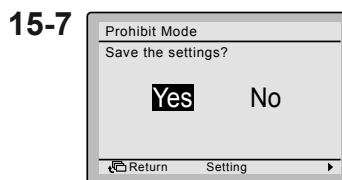

Press the Menu/Enter button.

<Basic screen>

NOTE

- When the currently active mode is locked, this mode will still be active upon returning to the Basic screen. Only when the mode is changed, the disabled mode will not be available anymore. When all modes are locked, it is not possible to change to another mode other than the currently active mode.

14.5 <BRC073A6> Wired Remote Controller (Operation)

Safety Considerations

The original instructions are written in English. All other languages are translations of the original instructions.

This appliance is not intended to be used by persons, including children, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instructions on how to use the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please read these Safety Considerations carefully before installing the remote controller.

- This manual classifies the precautions into WARNING and CAUTION. They both contain important information regarding safety. Be sure to follow all the precautions below.

 WARNING	Failure to follow these instructions properly may result in personal injury or loss of life.
 CAUTION	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Be sure to ground the unit.		Absolutely keep wet hands away.
	Absolutely keep water and moisture away.		

■ About Remote Controller

 WARNING	
	• Do not install the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer.
	• Do not modify or repair the remote controller. This may result in electric shocks or fire. Consult your Daikin dealer.
	• Do not relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer.
	• Do not use flammable materials (e.g., hair spray or insecticide) near the product. Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause crack damage to the product, electric shocks or fire.

Items to be Strictly Observed

 CAUTION	
	• Do not play with the unit or its remote controller. Accidental operation by a child may result in impairment of bodily functions and harm health.
	• Never disassemble the remote controller. Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer or authorized contractor for internal inspections and adjustments.
	• To avoid electric shocks, do not operate with wet hands.
	• Do not wash the remote controller. Doing so may cause electric leakage and result in electric shocks or fire.
	• Do not leave the remote controller wherever there is a risk of wetting. If water gets into the remote controller there is a risk of electrical leakage and damage to electronic components.

■ Indoor Unit and Outdoor Unit

 WARNING	
	• Be aware that prolonged, direct exposure to cool or warm air from the air conditioner or to air that is too cold or too warm can be harmful to your physical condition and health.
	• Do not place objects, including rods, your fingers, etc. in the air inlet or outlet. Injury may result due to contact with the air conditioner's high-speed fan blades.
	• Contact professional personnel about attachment of accessories and be sure to use only accessories specified by the manufacturer. If a defect results from your own workmanship, it may result in water leaks, electric shock or fire.
	• Do not use the product in atmospheres contaminated with oil vapor, such as cooking oil or machine oil vapor. Oil vapor may cause crack damage, electric shocks or fire.
	• Do not use the product in places with excessive oily smoke, such as cooking rooms or in places with flammable gas, corrosive gas or metal dust. Using the product in such places may cause fire or product failures.

Items to be Strictly Observed

 WARNING	
	• Beware of fire in case of refrigerant leakage. If the air conditioner is not operating correctly, i.e. not generating cool or warm air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.
	• In the case of using a load breaker provided with a fuse, make sure that the capacity of the fuse is correct. Use of an ordinary conductive wire may cause malfunctions or fire.
	• Do not use the power supply breaker to start or stop the air conditioner. Otherwise, fire or water leakage may result. Furthermore, the fan will rotate abruptly if power failure compensation is enabled, which may result in injury.
	• Be sure to ground the unit. Do not ground the unit to a utility pipe, lightning conductor or telephone ground lead. Imperfect grounding may result in electric shocks or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.
	• When the air conditioner is malfunctioning (giving off a burning odor, etc). turn off the power and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shocks or fire hazards.
	• Consult your local dealer regarding what to do in case of refrigerant leakage. When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the concentration limit in the event of a leakage. Otherwise, this may lead to an accident due to oxygen depletion.
	• Be sure to install a ground leakage breaker. Failure to install a ground leakage breaker may result in electric shocks or fire.
	• Consult the dealer if the air conditioner submerges owing to a natural disaster such as a flood or typhoon. Do not operate the air conditioner in that case or otherwise a malfunction, electric shock or fire may result.
	• Be sure to use a dedicated power supply for the air conditioner. The use of any other power supply may cause heat generation, fire or product failures.


Items to be Strictly Observed

 CAUTION	
	• After prolonged use, check the unit stand and its mounts for damage. If left in a damaged condition, the unit may fall and cause injury.
	• Do not allow a child to mount on the outdoor unit or avoid placing any object on it. Falling or tumbling may result in injury.
	• Do not block air inlets nor outlets. Impaired airflow may result in insufficient performance or trouble.
	• To avoid injury, do not touch the air inlet or aluminium fins of the unit.
	• Do not remove the outdoor unit's fan guard. The guard protects against the unit's high speed fan, which may cause injury.
	• Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
	• Do not place water containers (flower vases, etc). on the unit, as this may result in electric shocks or fire.
	• Do not use the air conditioner for purposes other than those for which it is intended. Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
	• Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion of the burner.
	• Do not place heaters directly below the unit as resulting heat can cause deformation.
	• Be sure that children, plants or animals are not exposed directly to airflow from the unit as adverse effects may ensue.
	• Do not put flammable containers, such as spray cans, within 1 m from the blow-off mouth. The containers may explode because the warm air output of the indoor or outdoor unit will affect them.
	• Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may result in fire hazards.

Items to be Strictly Observed

 CAUTION	
	• Do not sit or stand on any unstable base at the time of operating or maintaining the air conditioner. The base may topple down and injury may occur.
	• Do not touch the motor when replacing the filter. The motor can be very hot which may result in burns.
	• Do not wash the air conditioner with water as this may result in electric shocks or fire.
	• Perform ventilation from time to time. Be careful when using the air conditioner with other heating equipment. Insufficient ventilation may result in oxygen deficiency.
	• Always stop the operation of the air conditioner and turn OFF the power supply breaker when cleaning. Failure to do so may result in an electric shock or injury.
	• Do not wash the interior of the indoor and outdoor units by yourself. Always consult your Daikin dealer. The use of an incorrect washing method or incorrect detergent may damage the resin parts of the indoor unit or cause water leakage. Moreover, malfunctions, smoke generation or ignition may result if the electric parts or the motor in the indoor unit come in contact with a detergent or water.
	• Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.
	• Fix the units securely. If the units are not mounted securely, the units may fall or topple and result in personal injury.
	• Arrange the drain to ensure complete drainage. If proper drainage from the outdoor drain pipe does not occur during air conditioner operation, there could be a blockage due to dirt and debris build-up in the pipe. This may result in water leakage from the indoor unit. Under these circumstances, stop the air conditioner operation and consult your dealer for assistance.

Names and Functions

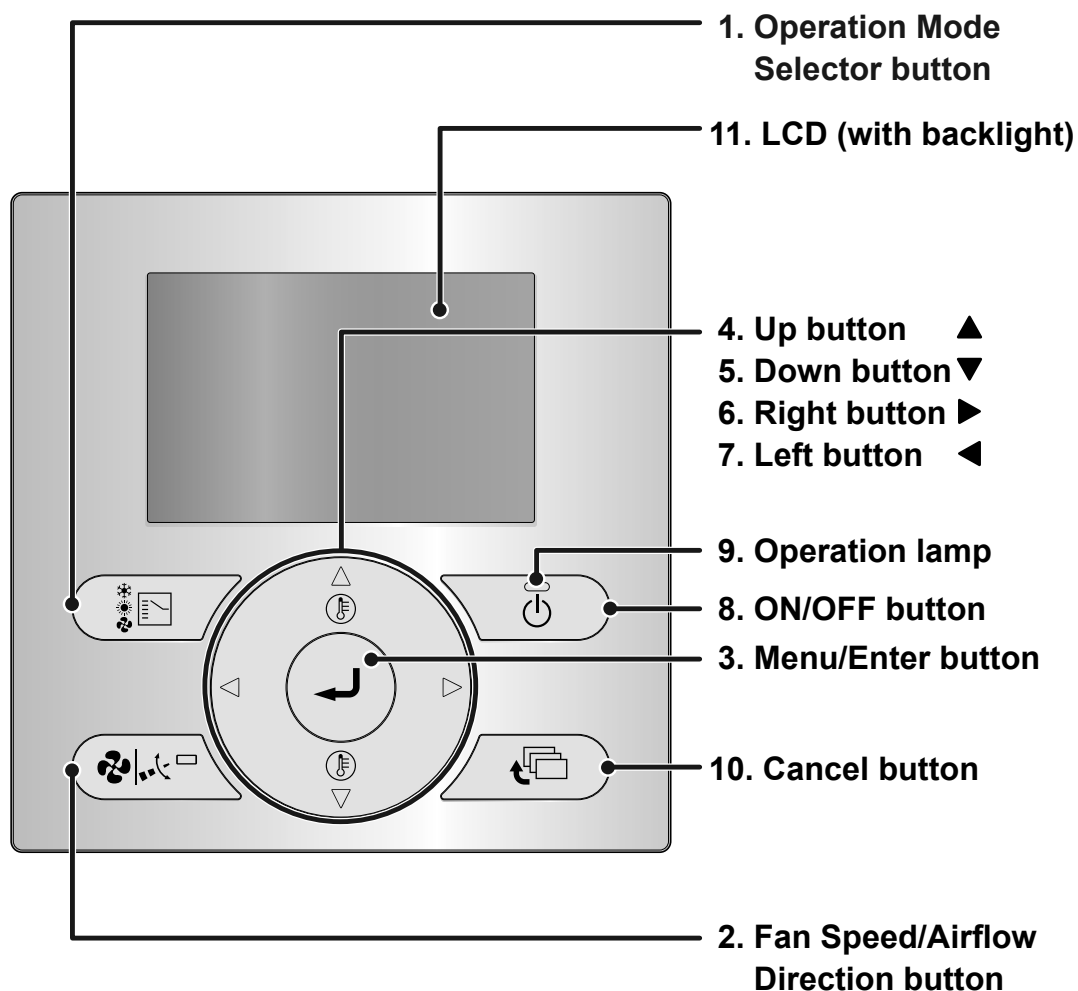

Functions other than the basic operation items (i.e., ON/OFF, operation mode selection, fan speed, up/down direction, and temperature setting) are set from the menu screen.

NOTE

- Do not install the remote controller in places exposed to direct sunlight. Otherwise, the LCD may become discolored and nothing may be displayed.
- Do not pull or twist the remote controller cord. Otherwise, the remote controller may malfunction.
- Do not press the buttons on the remote controller with objects with sharp ends. Otherwise, the remote controller may be damaged or malfunction.

1. Operation Mode Selector button

- Press this button to select the operation mode of your preference. (See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)
- Available modes may vary with the connected model.

2. Fan Speed/Airflow Direction button

- Used to change the fan speed and airflow direction. (See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)
- Available fan speeds and airflow directions may vary with the connected model.

3. Menu/Enter button

- This button is enabled by default. To disable, refer to "Enable/disable the Menu/Enter and Cancel button" on page 11.
- Used to display the Main Menu or enter the selected item (See "Main Menu Items Overview" on page 19).

4. Up button ▲

- Used to raise the set temperature.
- The next item on the upper side will be highlighted.
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

5. Down button ▼

- Used to lower the set temperature.
- The next item on the lower side will be highlighted.
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

6. Right button ►

- Used to highlight the next items on the right-hand side.
- The display contents are changed to the next screen.

7. Left button ◀

- Used to highlight the next items on the left-hand side.
- The display contents are changed to the previous screen.

8. ON/OFF button

- Press to start or stop the air conditioner.

9. Operation lamp (Green)

- This lamp lights up during operation.
- This lamp is not lit when the unit operation is OFF.
- This lamp blinks if an error or mode conflict occurs.

10. Cancel button

- This button is enabled by default. To disable, refer to "Enable/disable the Menu/Enter and Cancel button" on page 11.
- Used to return to the previous screen.

11. LCD (with backlight)


- The backlight will be lit for approximately 30 seconds when one of the buttons is pressed.
- The actions linked to the buttons, except for the ON/OFF button, are not carried out when the backlight is not lit.

Names and Functions

Liquid Crystal Display


- There are four display methods for the liquid crystal display (LCD) available. The Standard display, which is used by default, and the Detailed display. There is also the possibility to use only Icon or Icon and Text mode (see the Installation manual).
- To change the active display method, select the desired display method in the Display Method screen (See "Display" on page 34).
- The displayed contents on the screen may vary with the operation mode of the connected models. (E.g.: The following display will appear when the air conditioner is in heating operation).

Standard display

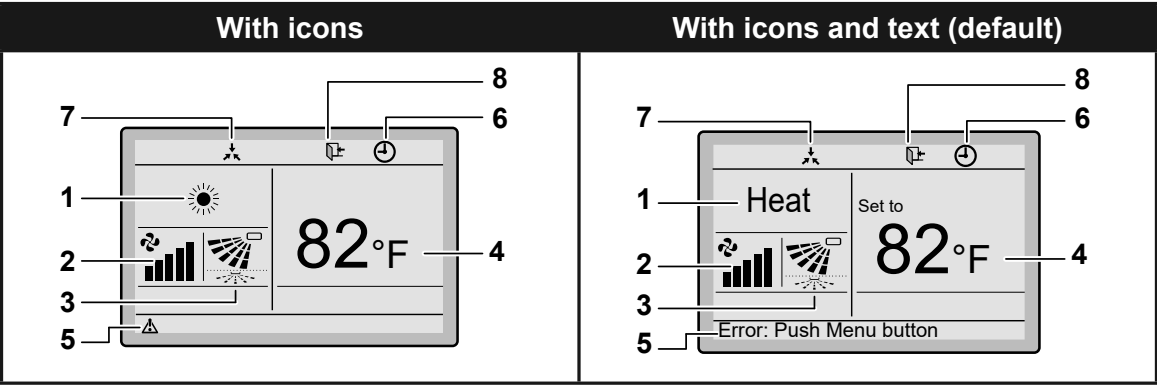

Detailed display

- The clock and Detailed selection items appear on the Detailed display in addition to the items appearing on the Standard display.

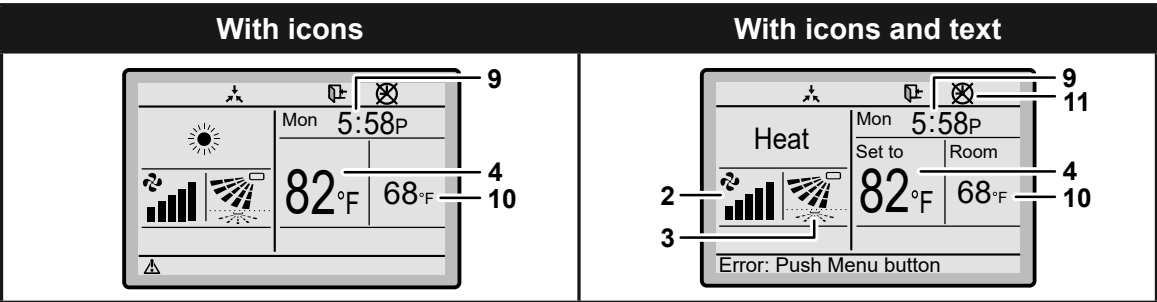

Names and Functions

1. Operation mode

- Indicates the current operation mode.

Operation Mode		
Cool	Heat	Auto (Heat)
		
Fan	Dry	Auto (Cool)
		

2. Fan speed

(See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)

- Indicates the fan speed that is set for the air conditioner.
- The fan speed will not be displayed if the air conditioner does not have the fan speed control function.

3. Airflow direction

- Displayed only when the air conditioner is in operation.
- Indicates the airflow direction that is set for the air conditioner.
- The possible directions depend on the indoor unit.

4. Set/Setback temperature display

(See "Setback" on page 17)

- When the unit is turned ON, the temperature that is set for the air conditioner is displayed.
- When the unit is turned OFF and Setback is disabled, the temperature that is set for the air conditioner is displayed.
- When the unit is turned OFF and Setback is enabled, the temperature that is set for the setback function is displayed in smaller digits.

5. Error "△"

(See "Error Code Display" on page 42)

- Indicates a unit error.

6. Timer enabled "⌚"

(See "OFF Timer" on page 27 and "Schedule" on page 28)

- Indicates that the schedule timer or the OFF timer is enabled.

7. Under Centralised control "✎"

- Indicates that the air conditioner is under the management of central control equipment (optional accessories) and the operation of the system through the remote controller is prohibited.

8. Setback "⏮"

(See "Setback" on page 17)

- The setback icon flashes when the unit is turned on under the setback control.

9. Clock (12/24 hours real time clock)

(See "Clock & Calendar" on page 38)

- Indicates that the clock is set.
- If the clock is not set, "-- : --" will be displayed.

10. Detailed selection

(See "Display Mode" on page 34)

- Displayed when the detailed display mode is selected.
- No detailed items are selected by default.

11. Timer problem "⌚✎"

- Indicates that the clock needs to be set again.
- The schedule timer function will not work unless the clock is set again.

Basic Operation Method

Remote Controller Functions

Operation procedure

Button display

Operation Method

Screen display

Screens that will be displayed on the remote controller.

1

Main Menu

Airflow Direction

Energy Saving Options

Schedule

Maintenance Information

Configuration

Current Settings

Return Setting

• Display the Main Menu. (See "Manipulating the Main Menu" on page 21).

• Press the ▼▲ (Up/Down) buttons to select **Schedule** and press the Menu/Enter button.

2

Schedule

Clock has not been set

Would you like to set it now?

Yes No

Return Setting

Date & Time

Year 2023

Month 1

Day 1

Monday

12:00A

Return Setting

• Press the ◀▶ (Left/Right) buttons to select **Yes** and press the Menu/Enter button.

• The Date & Time screen will appear.

• Set the current year, month, day, and time. (See "Clock & Calendar" on page 38).

Note

• Before setting the schedule, the clock must be set.

• If the clock has not been set, a screen like the one on the left will appear.

Button display

Displays the positions of the buttons to be operated.

1

2

Enable/disable the Menu/Enter and Cancel button

Operation Method

By default, the Menu/Enter and Cancel button are enabled.

1

1

• To enable/disable the Menu/Enter and Cancel button, keep the ► (Right) button pressed in the Basic Screen.

2

2 2 2 2

• Press the 3 keys simultaneously while keeping the ► (Right) button pressed.

11

English


3P754594-1

325


Cool/Heat/Fan/Dry/Auto Operation

Operation Method

1

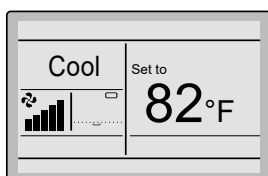

 
- Press the Operation Mode Selector button several times until the desired mode (Cooling, Heating, Fan Only, Dry or Auto) is selected.




Note

- Unavailable operation modes are not displayed.
- Only Cooling, Dry or Fan Only mode can be selected if the air conditioner is a cooling-only model.


2

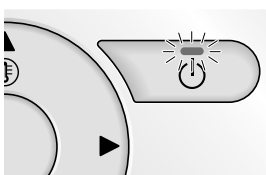

 
- Press the ON/OFF button. The Operation lamp (green) will be lit and the air conditioner will start operating.



3

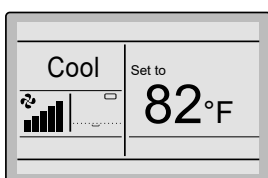

 
- The set temperature will increase by 1°F when the ▲ (Up) button is pressed and decrease by 1°F when the ▼ (Down) button is pressed.





Note

Temperature settings are not possible while in Dry or Fan Only mode.



4

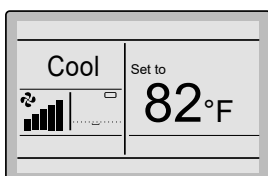

 
- To change the fan speed or airflow direction, press the Fan Speed/Airflow Direction button.

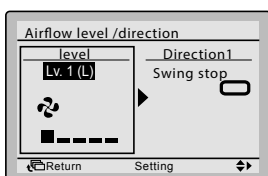

  
- To select air volume or airflow direction setting, press the ◀▶ buttons.
- Press the ▲▼ (Up/Down) buttons to select the desired level or position.




Basic Operation Method

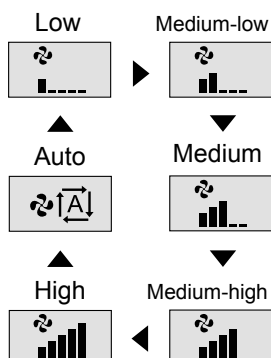**Note**

- The air conditioner may be in automatic fan speed control for mechanical protection purposes.
- The air conditioner may be in automatic fan speed control according to the room temperature.
- The fan may stop operating, which is not a failure.
- It may take time until fan speed changes are actually carried out.
- In Auto fan speed, the fan speed is adjusted automatically according to the setpoint and indoor temperature.

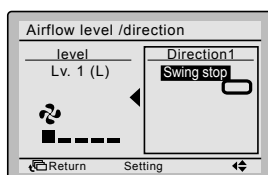

- With airflow direction selected, select the desired airflow direction from **Swing** or **Swing stop** using the ▲▼ (Up/Down) buttons.

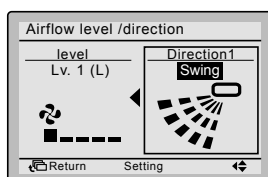

Airflow direction
setting (up/down)

Note

- The airflow directions appear on the screen as follows:



Up/down direction



Left/right direction

- Selecting **Swing** will cause the airflow direction blades to swing back and forth.
- When you select **Swing stop**, the airflow direction blades stay in the position of when you press the Menu/Enter button.

Note

- To change the left/right airflow direction, refer to "Change the Airflow direction" on page 22.

Basic Operation Method

5



- When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn OFF.

**Note**

- When the system is stopped while in heating operation, the fan will continue to operate for approximately 1 minute in order to eliminate the residual heat in the indoor unit.

Basic Operation Method

Characteristics of Cooling Operation

- When the outdoor air temperature is high, it takes some time until the room temperature reaches the set temperature.

Characteristics of Heating Operation

Starting operation

- Heating operation generally requires a longer time to attain the set temperature compared with cooling operation.
It is recommended to start operating the air conditioner in advance by using the timer.

Perform the following operation in order to prevent the degradation of the heating capability or cold drafts.

Defrost operation

- The air conditioner will automatically go into defrost operation to prevent frost accumulation at the outdoor unit which results in loss of the heating capacity.
- The air conditioner will return to normal operation after approximately 4 to 12 minutes.
- During defrost mode the temperature near the indoor room temp is displayed. This may be affected by the location of the unit.

Outdoor temperature and heating capability

- The heating capacity of the air conditioner will drop when the outdoor temperature decreases.
If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner. (When a combustion appliance is used, ventilate the room regularly).
Do not use the heating appliance in places where the heating appliance is exposed to the airflow of the air conditioner.
- The air conditioner is a hot air circulation type. Therefore, it takes some time to warm up the room after the air conditioner starts operating.
The indoor fan will automatically operate until the indoor temperature of the system rises to a certain level.
- If hot air stays around the ceiling and your feet feel cold, a circulator is recommended.
For details, consult your Daikin dealer.


Program Dry Operation

Preparation


- The dry mode may not be selected if the remote controller has no eligibility to select cooling/heating mode.

Operation Method

1

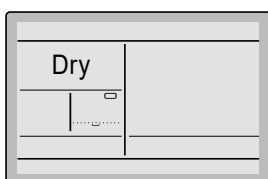

 
- Press the Operation Mode Selector button several times until Dry mode is selected.



Note

Dry mode may not be available depending on the type of indoor unit.

2

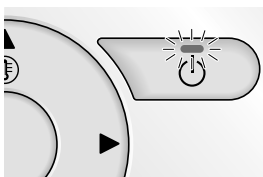

- Press the ON/OFF button.
The Operation lamp will be lit and the air conditioner will start operating.




Note

The air conditioner is in automatic temperature and fan speed control. Therefore, the temperature or fan speed cannot be changed while the air conditioner is in operation.


3

- To set the airflow direction, see "Airflow Direction" on page 22.

4

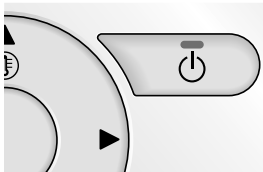

 - When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn OFF.



Note

To prevent water leakage or system failure, do not turn OFF the power soon after the air conditioner stops operating. Be sure to wait at least 5 minutes so that the drain pump finishes discharging the residual water from the indoor unit.


Basic Operation Method

Characteristics of Dry Operation

In Dry operation, the air humidity will be lowered by intermittently turning the air conditioner ON in cooling and OFF again to minimize the temperature decrease.


Note

- The temperature and fan speed are controlled automatically and cannot be controlled by the remote controller.
- Dry operation will not function if the room temperature is too low.

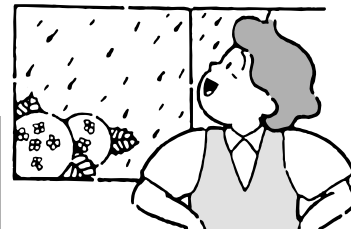

Setback

The Setback function will maintain the room temperature in a specific range when the remote controller is turned OFF. This is done by temporarily starting the air conditioner that was previously turned OFF by the user, the schedule function or the OFF timer.

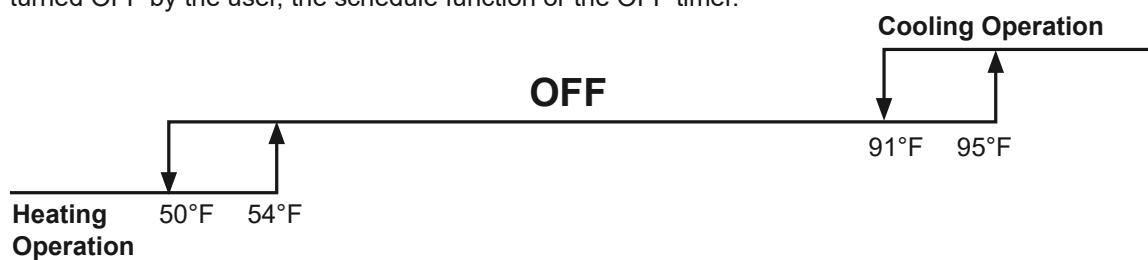

For example:

[Setback setpoint temperature: cool 95°F, heat 50°F]

[Recovery differential: cool -4°F, heat +4°F]

- If the room temperature drops below 50°F, heating is started automatically. If after half an hour the temperature increases to 54°F or above, the controller returns to its original state.
- If the room temperature goes above 95°F, cooling is started automatically. If after half an hour the temperature drops to 91°F or below, the controller returns to its original state.

Note


- This function is disabled by default. This function can only be enabled/disabled in the Energy Saving List (See "Energy Saving Options" on page 23).
- The differential can be adjusted in the Setback Condition menu (See "Setback Condition" on page 25).
- The setback temperature can be set while the unit is turned off on the Basic Screen or set in the schedule.
- Setback will turn the unit ON for at least 30 minutes unless the setback temperature setpoint is changed or the unit is turned ON with the ON/OFF button.
- When setback turns the air conditioner ON while in Auto mode, the remote controller switches to Cooling or Heating only, depending on what is appropriate, and only the respective setback temperature setpoint is shown.
- The temperature is measured inside the air conditioner unit (when the unit is switched OFF). As there is no actual air flow, the measured temperature inside the air conditioner unit can deviate (up to 6°F) from the actual room temperature.

Basic Operation Method

Operation Method

Setback should not be enabled when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

1

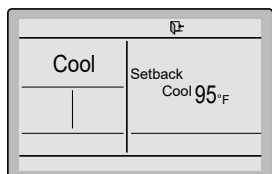

The setback icon "⏏" flashes when the unit is turned ON under the setback control.


The fan speed cannot be changed when setback is active and, as a result, the fan speed is not visible.

The airflow direction can only be changed through the menu when setback is active.


Key Lock**Operation Method**

Disable the use of all buttons.


1

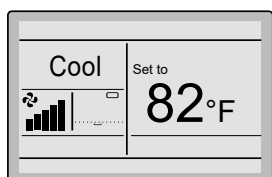

 - Press the Menu/Enter button for at least 4 seconds. (During backlight lit)




2

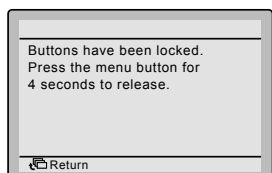

- All buttons are disabled when the keys are locked.
- When one of the buttons is pressed, the message on the left is displayed.

3

 - To cancel the key lock, continue pressing the Menu/Enter button for at least 4 seconds. (During backlight lit)



Quick Reference of Main Menu Items

■ Main Menu Items Overview

Note

- The available items may vary with the connected model.
- Only the available items will appear in the menu.

Setting and display items		Description	Reference page
Airflow Direction		Change the airflow direction. • The airflow direction blades can be automatically operated up and down and left and right. • There are swing or swing stop directions. • This function is not available on all models.	22
Energy Saving Options⁽¹⁾	Energy Saving List	Enable or disable the "Energy Saving Options".	23
	Setpoint Range Setting	The setpoint temperature range can be restricted for the Cooling, Heating and Auto Mode.	24
	Setback Condition	Set the setback differential temperature after which the unit will turn back OFF.	25
	Setpoint Auto Reset	Change the temperature setpoint to a preset temperature setpoint after running for a set period of time, even if the temperature setpoint has been changed. • Possible to set from 30 to 120 minutes in 30 minute increments.	26
	Off Timer	The system is turned off automatically after the selected time each time the system is activated. • Possible to set in 10 minute increments from 30 to 180 minutes.	27
Schedule⁽²⁾	Enable/Disable	Enable or disable schedule function.	28
	Select Schedule	Select the active schedule number (schedule nr 1, 2 or 3).	29
	Holidays	Select the days of the week for which the schedule will be disabled. This function is used for when the schedule doesn't need to be active, e.g. like when you are on holiday.	30
	Schedule Settings	Select when the operation modes start and/or stop for each day of the week. Up to 5 actions can be set for each day.	31

1) Setback, Setpoint Range, Setback Condition and Setpoint Auto Reset should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

2) The schedule can be restricted when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Quick Reference of Main Menu Items

Setting and display items		Description	Reference page
Maintenance Information		Display the service contact.	33
Configuration	Display	• Display: Switch between Standard or Detailed display. • Detailed display settings: Select if room temperature (near the indoor unit), outdoor temperature, or nothing is displayed.	34
	Celsius / Fahrenheit	Choose the temperature values from Celsius or Fahrenheit.	36
	Contrast Adjustment	Adjust the LCD contrast.	36
Current Settings		Display a list of the current settings of the available items.	37
Clock & Calendar	Date & Time	Configure the date and time settings. • The default time display is 12H. • The clock will maintain accurate within ± 30 seconds per month. • If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.	38
	12H/24H Clock	The time can be displayed in either a 12 hour or 24 hour time format.	39
	Daylight Saving Time	Enable or Disable the Daylight Saving Time.	39
Language		Choose the language from English, French or Spanish.	40


Menu Manipulation

Main Menu

■ Manipulating the Main Menu


Operation Method

1

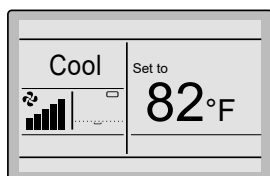


Basic Screen

 - Press the Menu/Enter button.



2

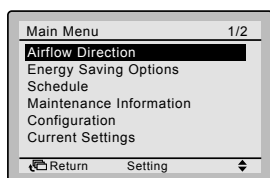


Main Menu

- The Main Menu will appear.

← Instructions for operating the buttons will appear.


3

- Selecting items from the Main Menu.
 1. Press the ▼▲ (Up/Down) buttons to select the desired item.
 2. Press the Menu/Enter button to display the selected settings screen.

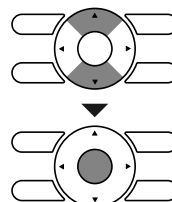

4

 - To go back to the Basic Screen from the Main Menu, press the Cancel button.




Caution

- When the Main Menu is visible and a button is not pressed for 5 minutes, the screen will automatically go back to the Basic Screen.



Airflow Direction

Change the Airflow direction



Operation Method

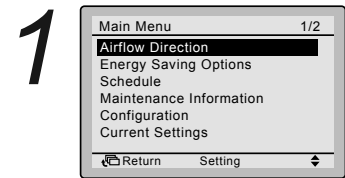


- Display the Main Menu (See "Manipulating the Main Menu" on page 21)
- Press the ▲▼ (Up/Down) buttons to select **Airflow Direction** and press the Menu/Enter button.

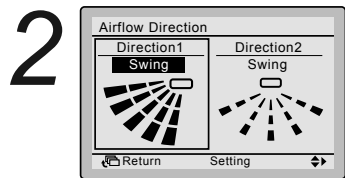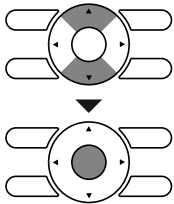

- Select the desired airflow direction from **Swing** or **Swing stop** using the ▲▼ (Up/Down) buttons.
- Select Up/down direction or Left/right direction using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

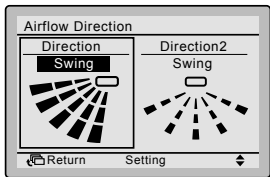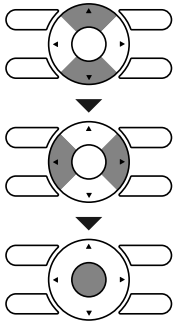

Airflow direction
setting (up/down)

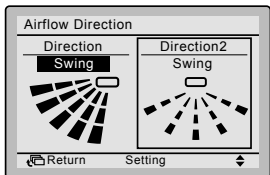

Airflow direction
setting (left/right)

Remark: Only visible if
available.

Note

- The airflow directions appear on the screen as follows:



Up/down direction



Left/right direction

- Selecting **Swing** will cause the airflow direction blades to swing back and forth. When **Swing** is selected, all airflow directions will be visible at the same time.
- When you select **Swing stop**, the airflow direction blades stay in the position that you press the Menu/Enter button.

Menu Manipulation


Energy Saving Options

■ Energy Saving List


Some functions should not be enabled when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Operation Method


1

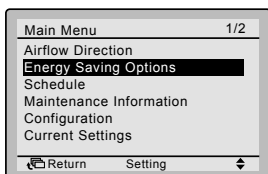


- Display the Main Menu.
(See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Energy Saving Options** and press the Menu/Enter button.

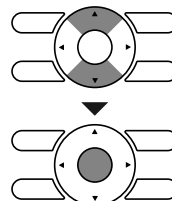


2

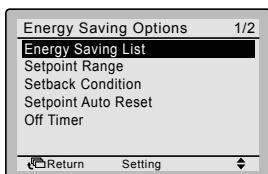


- Press the ▼▲ (Up/Down) buttons to select **Energy Saving List** and press the Menu/Enter button.

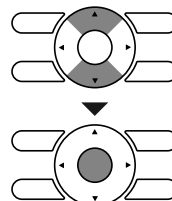


3

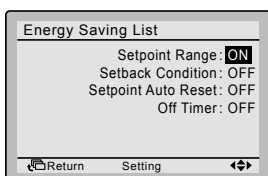


- Press the ▼▲ (Up/Down) buttons to change the setting to **ON** or **OFF**.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

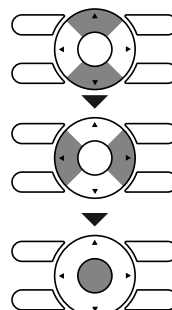

4

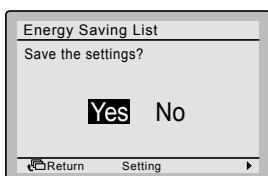

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

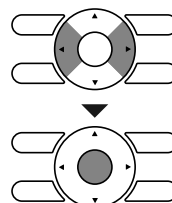


■ Setpoint Range Setting


Operation Method

This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

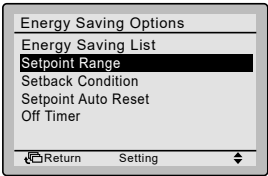


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setpoint Range** and press the Menu/Enter button.

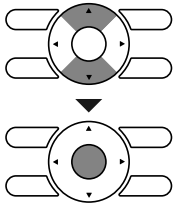

2

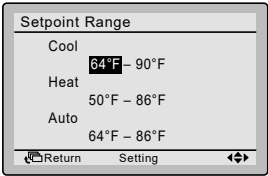


- Press the ▼▲ (Up/Down) buttons to change the cooling or heating temperature setpoint range.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

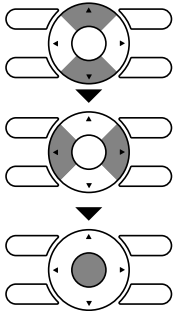


Note

- The default setpoint range restriction is [64°F→90°F] for cooling, [50°F→86°F] for heating, and [64°F→86°F] for auto. This setpoint range is the general setpoint range and is as a result always active regardless of whether Setpoint Range is enabled or disabled.
- The default setpoint range for setback operation is [92°F→99°F] for cooling and [50°F→59°F] for heating. This setpoint range cannot be changed.

3

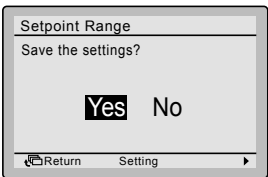

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

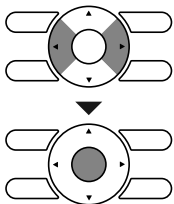


Menu Manipulation

■Setback Condition


This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Operation Method


1

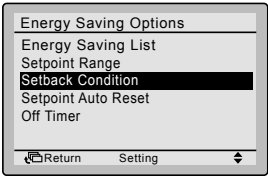


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setback Condition** and press the Menu/Enter button.

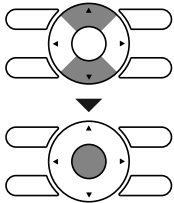


2

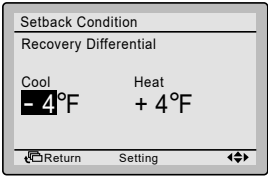


- Press the ▼▲ (Up/Down) buttons to change the differential for setback operation.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

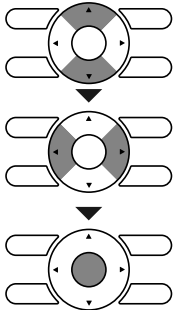

3

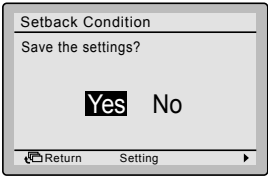

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

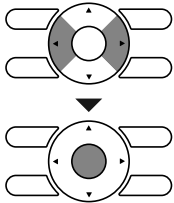


■ Setpoint Auto Reset


This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Operation Method


1

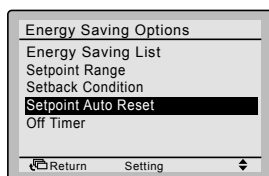


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setpoint Auto Reset** and press the Menu/Enter button.

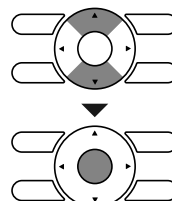


2

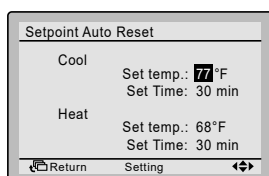


- Press the ▼▲ (Up/Down) buttons to set the preset temperature and timing for the auto reset of the setpoint.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all the changes are made. The confirmation screen will appear.

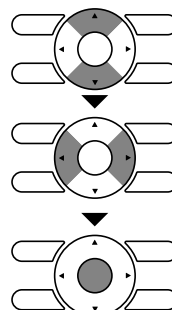

3

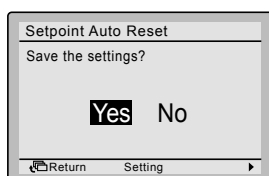

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

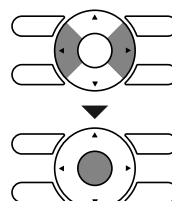


Menu Manipulation


■ OFF Timer

Operation Method


1

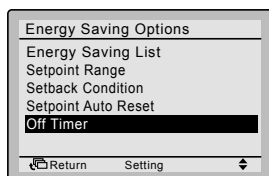


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Off Timer** and press the Menu/Enter button.

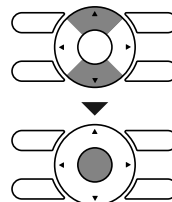


2

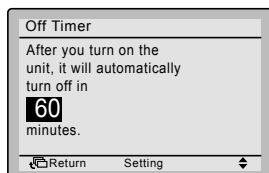


- Use the ▼▲ (Up/Down) buttons to set the time after which the unit automatically turns off again. Selections can be made in increments of 10 minutes from 30 to 180 minutes. Holding down the button causes the number to change continuously. The settings confirmation screen will appear when the Menu/Enter button is pressed.

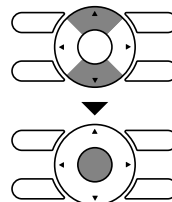

3

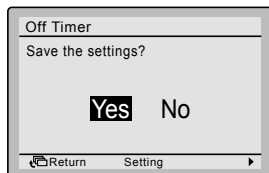

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

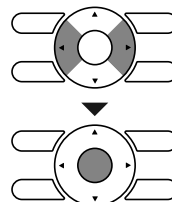


Schedule

■ Enable/Disable


The schedule can be restricted when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Operation Method


1

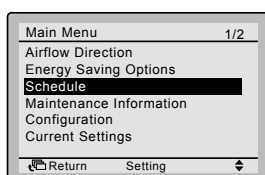

- Display the Main Menu.
(See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Schedule** and press the Menu/Enter button.

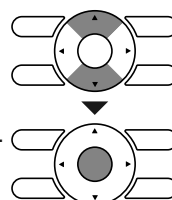


2

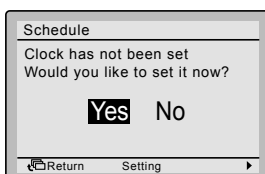


Note


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear.

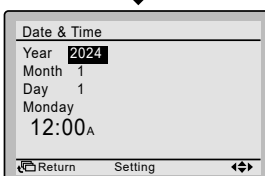


- Press the ◀▶ (Left/Right) buttons to select **Yes** and press the Menu/Enter button.
- The Date & Time screen will appear.
- Set the current year, month, day and time. (See "Clock & Calendar" on page 38).

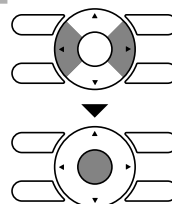


3

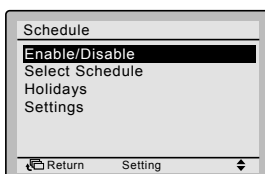


- Press the ▼▲ (Up/Down) buttons to select **Enable/Disable** and press the Menu/Enter button.

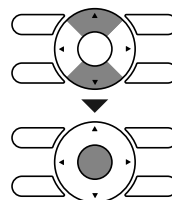

4

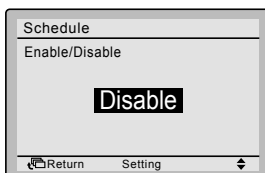

- Press the ▼▲ (Up/Down) buttons to select **Enable** or **Disable**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

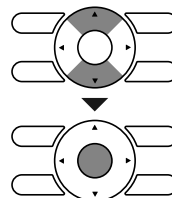


Note


The Schedule is enabled. To modify the Selected schedule number see "Select Schedule" on page 29.

Menu Manipulation

5

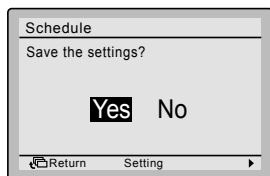

 - Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.




■ Select Schedule


Operation Method

It is possible to program up to three different schedules.


1

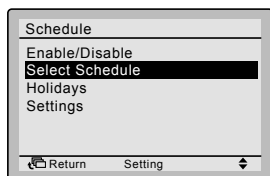


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Select Schedule** and press the Menu/Enter button.

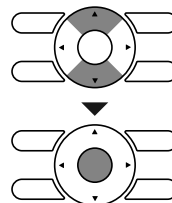


2

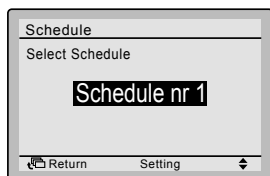


- Press the ▼▲ (Up/Down) buttons to select **Schedule nr 1**, **Schedule nr 2** or **Schedule nr 3**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

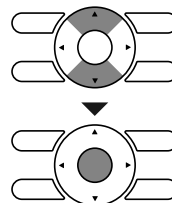

3

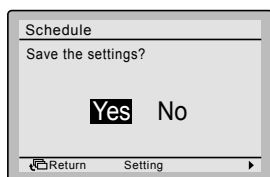


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

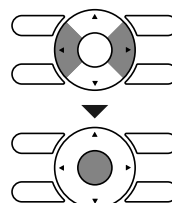


■Holidays

Operation Method The schedule timer will be disabled for days that have been set as a holiday.


1

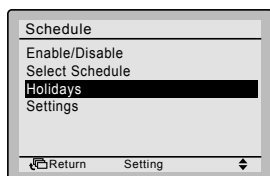


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Holidays** and press the Menu/Enter button.

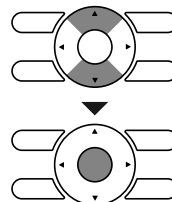

2

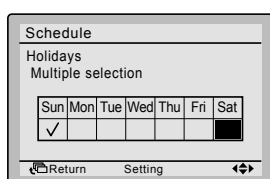


- Press the ◀▶ (Left/Right) buttons to select the desired day.
- Press the ▼▲ (Up/Down) buttons to display "✓" to set this day as a holiday.

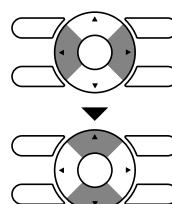


Note

- Multiple days can be selected as holidays.
- To re-enable the schedule timer for the day selected as a holiday, the holiday setting must be released.


3

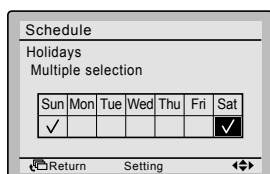


 
- Press the Menu/Enter button when all changes are made. The settings confirmation screen will appear.



4

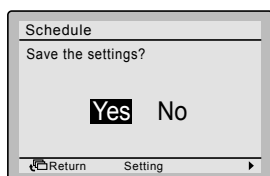

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

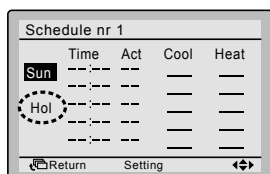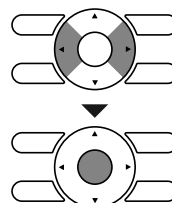

Note


"Hol" will be displayed on the schedule settings screen for days that have been set as a holiday.

Menu Manipulation


■Schedule Settings

Operation Method After saving a schedule, the schedule is automatically enabled.

1

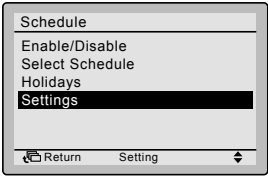


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Settings** and press the Menu/Enter button.

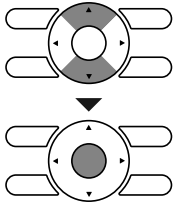


Note

The Schedule Settings of the selected schedule can be modified. To modify the selected schedule see "Select Schedule" on page 29.


2

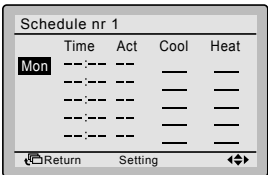

 
- Press the ▼▲ (Up/Down) buttons to select the day to be set.



3

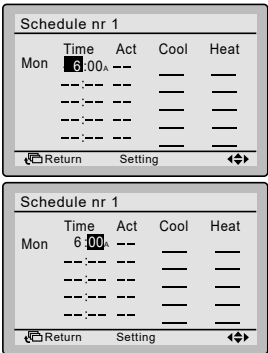

- Set the time for the selected day.
- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to input the desired operation start time. Each press of the ▼▲ (Up/Down) buttons moves the numbers by 1 hour or 1 minute.

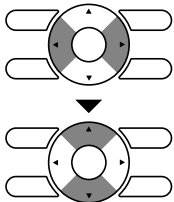

Menu Manipulation

4

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	---	---	---	
---	---	---	---	
---	---	---	---	
---	---	---	---	
---	---	---	---	
Return Setting				

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	74°F	69°F	
---	---	---	---	
---	---	---	---	
---	---	---	---	
---	---	---	---	
Return Setting				

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	74°F	69°F	
8:00	OFF	95°F	52°F	
---	---	---	---	
---	---	---	---	
---	---	---	---	
Return Setting				

- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to configure ON/OFF/-- settings.

"Act"-column:

ON : The temperature setpoints can be configured.

OFF : The setback temperature setpoints can be configured.



-- : The temperature and setback temperature setpoints will be disabled.

- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to input the cooling and heating temperature setpoints for ON or OFF (Setback) operation.

"Cool" and "Heat" column:

" _ " : Indicates that the temperature and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.

"- -" : Indicates that the setback function is disabled for this time period.

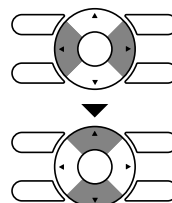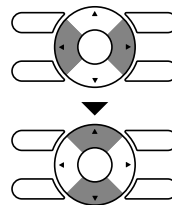

5

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	74°F	69°F	
8:00	OFF	95°F	52°F	
5:30	ON	74°F	69°F	
10:00	---	---	---	
---	---	---	---	
---	---	---	---	
Return Setting				

Schedule nr 1				
Time	Act	Cool	Heat	
Mon 6:00	ON	74°F	69°F	
8:00	OFF	95°F	52°F	
5:30	ON	74°F	69°F	
10:00	OFF	95°F	52°F	
---	---	---	---	
---	---	---	---	
Return Setting				

Schedule nr 1				
Time	Act	Cool	Heat	
Tue 6:00	ON	74°F	69°F	
8:00	OFF	95°F	52°F	
5:30	ON	74°F	69°F	
10:00	OFF	95°F	52°F	
---	---	---	---	
---	---	---	---	
Return Setting				

Note


A maximum of 5 actions per day can be set.

- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

Note


To copy the settings from the previous day, press the Operation Mode Selector button.

Example: To copy the contents of Monday to Tuesday, select Tuesday and press the Operation Mode Selector button.

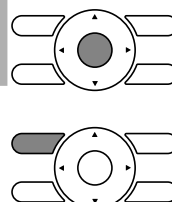


Menu Manipulation

6

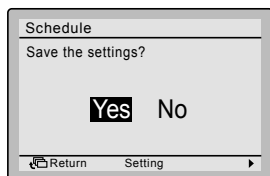

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

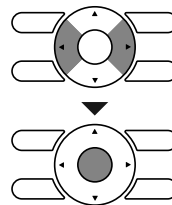


Maintenance Information


■ Display the Maintenance Information

Operation Method


1

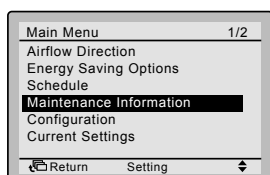

- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Maintenance Information** and press the Menu/Enter button.

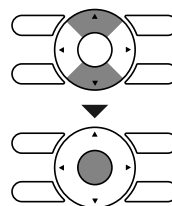

2

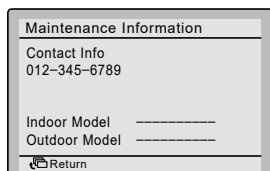

- The phone number for the contact address will appear at the top of the screen. (If you have not yet registered your product, it will not appear).
- The model information of the indoor and outdoor units of your product will always show -----.
- Press the Cancel button to return to the previous screen.



Note

- The error code may also appear. If the operation lamp is not blinking, the unit is working properly.
- The error code record will disappear if you press the ON/OFF button for more than 4 seconds.




Configuration

■ Display

Display Mode


Operation Method


- 1

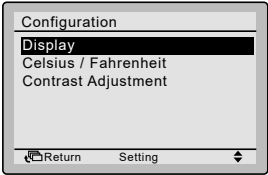

Configuration
Display
Celsius / Fahrenheit
Contrast Adjustment
Return Setting


- Display the Configuration menu.
 - Press the ▼▲ (Up/Down) buttons to select **Display** and press the Menu/Enter button.

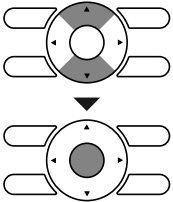

- 2

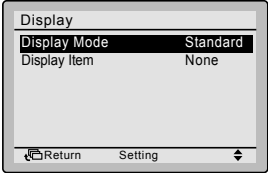

Display
Display Mode Standard
Display Item None
Return Setting


- Press the ▼▲ (Up/Down) buttons to select **Display Mode** and press the Menu/Enter button.

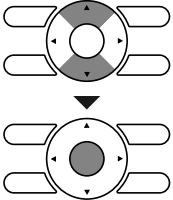
- 3

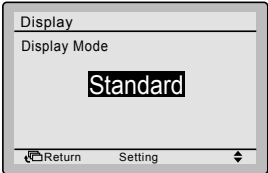

Display
Display Mode
Standard
Return Setting

- Press the ▼▲ (Up/Down) buttons to select **Standard** or **Detailed**.
 - Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

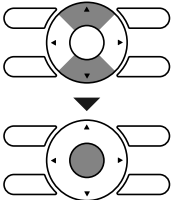


Note
To select which item is displayed in the detailed display selection area, refer to "Detailed Item" on page 35.

Menu Manipulation


Detailed Item

Operation Method


1

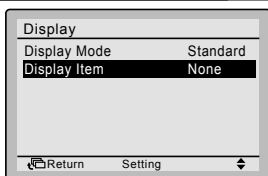



- Display the Display menu. (See "Display Mode" on page 34).
- Press the ▼▲ (Up/Down) buttons to select **Display Item** and press the Menu/Enter button.

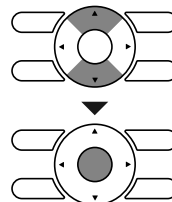

2

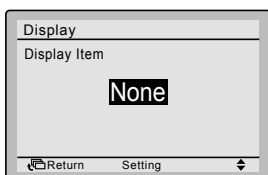

  - Press the ▼▲ (Up/Down) buttons to display the following.



* Some models may not display these items even if they are selected.

- Be sure to read the following regarding the display of the room and outdoor temperature.

Room Temp

- The temperature near the indoor unit.
- The temperature that is detected may be affected by the location of the unit.

Outside Air Temp


- The temperature detected near the outdoor unit.
- The temperature that is detected may be affected by factors such as the location of the unit (e.g. if it is in direct sunlight) and unit operation during defrosting.
- "Outside Air Temp" will not display after stopping or immediately after starting.

- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.





■ Celsius / Fahrenheit


Operation Method

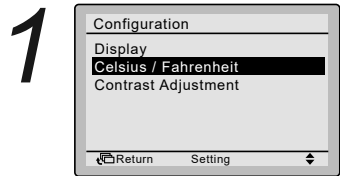

- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select **Celsius / Fahrenheit** and press the Menu/Enter button.

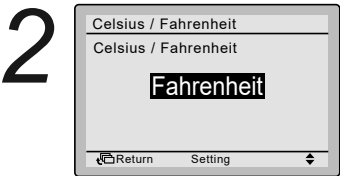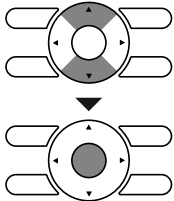


- Press the ▼▲ (Up/Down) buttons to select **Fahrenheit** or **Celsius**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.


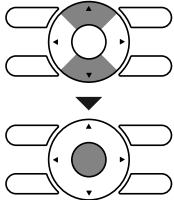


■ Contrast Adjustment


Operation Method

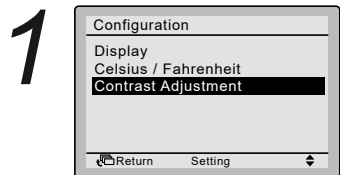

- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select **Contrast adjustment** and press the Menu/Enter button.

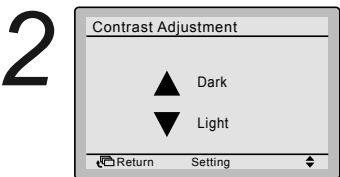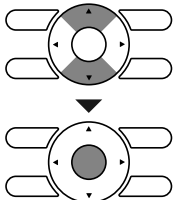

- Press the ▼▲ (Up/Down) buttons until you reach the desired contrast.
- Press the Menu/Enter button to confirm the setting and to return to the Basic Screen.

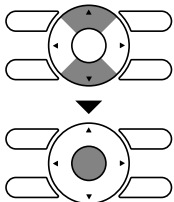

Menu Manipulation

Current Settings

Overview of the Current Settings

Operation Method

1

Main Menu1/2

Airflow Direction

Energy Saving Options

Schedule


Maintenance Information

Configuration

Current Settings

ReturnSetting

- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Current Settings** and press the Menu/Enter button.

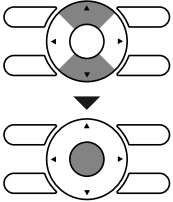

2

Current Settings

Schedule

Display Mode

Display Item

Disable

Standard

None

Return

- A list showing the status of the current settings will appear.
- Press the Cancel button to return to the Main Menu.



Display items		
Schedule	Display Mode	Display Item


* Display items may differ depending on the model. Only the items that can be set are displayed.

Clock & Calendar


■ Date & Time

Operation Method


1

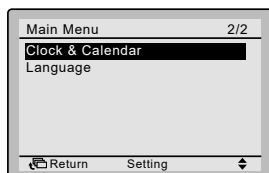


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Clock & Calendar** and press the Menu/Enter button.

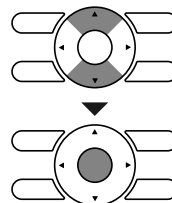


2

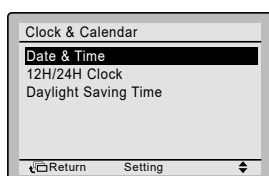


- Press the ▼▲ (Up/Down) buttons to select **Date & Time** and press the Menu/Enter button.

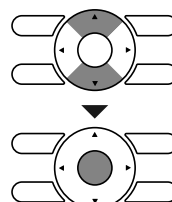

3

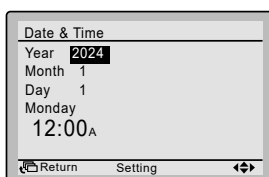

- Use the ▼▲ (Up/Down) buttons to change the date and time.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

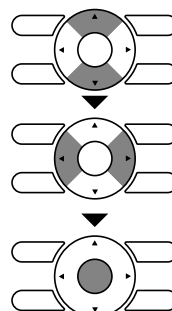


Caution

- By default, Daylight Saving Time (DST) is active. The following rules apply:
 - Start: Second Sunday of March 2:00 am
 - End: First Sunday of November 2:00 am
- Please consult your Daikin dealer if the DST settings need to be changed.


Note

The day of the week is set automatically.

4

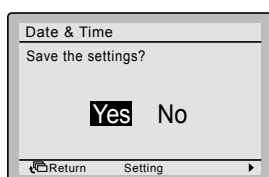

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

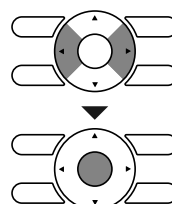


Menu Manipulation


■ 12H/24H CLOCK

Operation Method


1

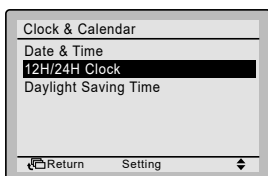


- Display the Clock & Calendar menu. (See "Date & Time" on page 38).
- Press the ▼▲ (Up/Down) buttons to select **12H/24H Clock** and press the Menu/Enter button.

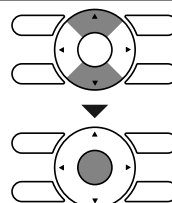

2

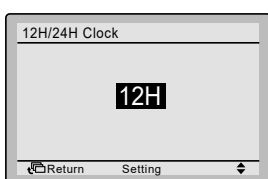


- Press the ▼▲ (Up/Down) buttons to select **12H** or **24H**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

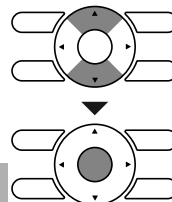


Note

By default, the time display is set to the 12H format.

3

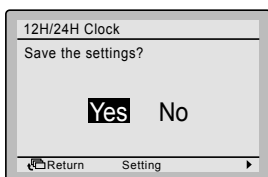


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the setting and to return to the Main Menu.

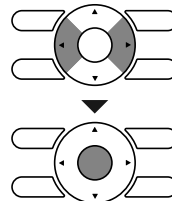


■ Daylight Saving Time

Operation Method

1

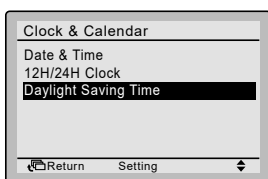


- Display the Clock & Calendar menu. (See "Date & Time" on page 38).
- Press the ▼▲ (Up/Down) buttons to select **Daylight Saving Time** and press the Menu/Enter button.

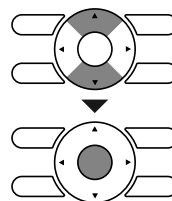


2




- Press ▼▲ (Up/Down) buttons to select **Enable** or **Disable**.
- Press Menu/Enter button to display the setting confirmation screen.

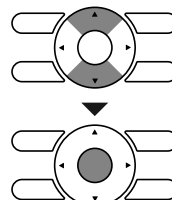

3

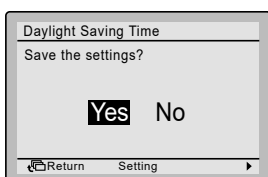

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the setting and to return to the Main Menu.

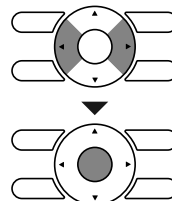


Language

■ Select the Language


Operation Method

1

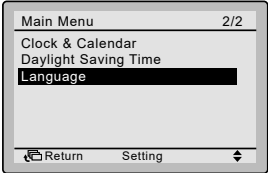


Main Menu 2/2
Clock & Calendar
Daylight Saving Time
Language
Return Setting

- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Language** and press the Menu/Enter button.

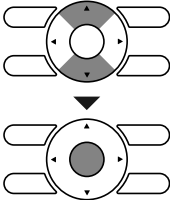


2

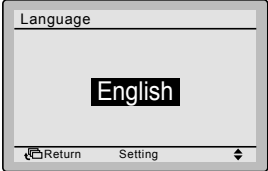

Language
English
Return Setting

- Press the ▼▲ (Up/Down) buttons to select the preferred language (English, French or Spanish).
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

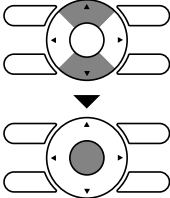

Maintenance



Caution

- **Do not wash the remote controller.**

Doing so may cause electric leakage and result in electric shocks or fire.



- **Be sure to stop the operation of the air conditioner and turn off the power supply breaker when performing maintenance activities.**

Failure to do so may result in electric shocks or injury.



Maintenance of Unit and the LCD display

Note:

- Wipe the LCD display and the rest of the surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth afterwards.
- Do not use any paint thinner, organic solvent or strong acid.



Warning

Do not use flammable materials (e.g., hair spray or insecticide) near the air conditioner.

Do not clean the product with organic solvents such as benzine or paint thinner.

The use of organic solvents may cause crack damage to the product, electric shocks or fire.



Reference Information

Error Code Display

■ Contact your Daikin dealer in the following cases

Warning


When the air conditioner is malfunctioning (e.g., giving off a burning odor), stop the air conditioner and turn off the power.

Continued operation under such circumstances may result in failure, electric shocks or fire. Contact your Daikin dealer.




Operation Method


1

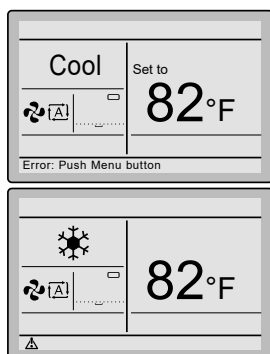

- If an error occurs, the error message or error icon and the operation lamp will blink.
- To display the error code and contact information, the Menu/Enter button needs to be enabled (See "Manipulating the Main Menu" on page 21).
- Press the Menu/Enter button.

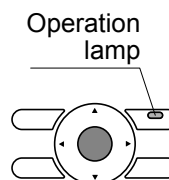


2

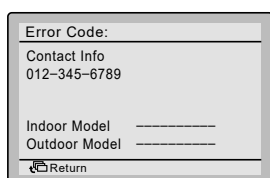

- The error code blinks and the contact address will appear.
- Notify your Daikin dealer of the Error code and Model name.

Reference Information

"Mode Conflict" message

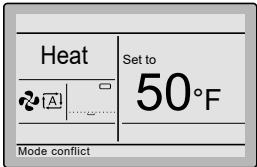

Only applicable in the case of multi systems (multiple indoor units connected to the outdoor unit) and for connected indoor units that support this functionality. When multiple indoor units are instructed to operate simultaneously, but in different operation modes, an operation mode conflict occurs:

- The operation lamp flashes
- **Mode conflict** appears on the user interface

• The units that do not have priority enter standby mode
This is not a malfunction. To solve the conflict, make the units that do not have priority run in the same operation mode as that of the unit that has priority. Which unit has priority depends on whether the Priority Room setting is present and/or active:

If...	Then...
The Priority Room setting is present and active.	The operation mode of the indoor unit to which the Priority Room setting is applied takes priority. In case of an operation mode conflict, the other units will enter standby mode.

! NOTICE

- COOL, DRY and FAN operation can be used simultaneously.
- If the conflict is not solved manually, non-priority units will automatically resume operation as soon as the priority unit stops operating.

If...	Then...
The Priority Room setting is not present OR present but not active.	The operation mode of the indoor unit that was turned on first takes priority. In case of an operation mode conflict, the units that were turned on later will enter standby mode.

! NOTICE

- COOL, DRY and FAN operation can be used simultaneously.
- Units running in HEAT operation mode always have priority over units running in FAN operation mode, even if they were not turned on first.
- When solving the conflict, it is possible to make the non-priority units run in AUTO operation mode: they will automatically start operation in the same operation mode as that of the priority unit.

Caution

The **MODE CONFLICT** can also happen to units that are turned on by the **setback** function. This means that due to priority, they will not run and consequently will not be able to maintain the temperature in the room. Please consider the use of the **setback** feature in a multi system carefully to avoid situations like these.



Caution

When a KRP928 Interface adapter for Room Air Conditioner is connected, the mode conflict message will not be shown on the user interface, but the indoor unit will go into standby mode.



Combined use of the wired and wireless user interface

Avoid using the wired remote controller and the wireless remote controller at the same time.

- The wireless user interface does not receive feedback from the unit. When a setting is changed on the wired remote controller, the change is not communicated to the wireless remote controller.
- Since some functions of both controllers are not supported by each other, the displays will not match.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-003(B)/NMB-003(B)

The FCC responsible party is Daikin Comfort Technologies Manufacturing, L.P., and may be contacted by calling (713)-861-2500, or at 19001 Kermier Rd., Waller, TX 77484.
(<https://www.northamerica-daikin.com>)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

14.6 <BRCW901A03/08> Wired Remote Controller Cord

Safety Precautions


- Turn OFF the controlled equipment when connecting the equipment.
- Hold the plug of the connector when connecting or disconnecting the connector.

Precautions for Use

- This remote controller cable is of thin-profile BRC944-series remote controller units.
- Be sure to ground both ends of the shield wire.
- Install the controlled equipment after reading through the installation manual of the equipment.


Complete Parts

• Remote Controller Cable

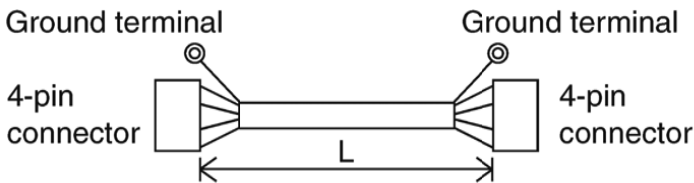


Parts number	L
BRCW901A03	Approx. 3m
BRCW901A08	Approx. 8m

• Installation Manual

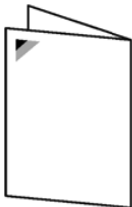

• Packing Case

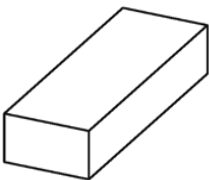

14.7 <KRP413BB1S> Wiring Adaptor

Safety Precautions

- Read these safety precautions carefully before installing the unit, and be sure to install the unit properly.
- This manual classifies precautions to the user into the following two categories. These warnings and cautions are for your safety. Follow them.

⚠ WARNING	Faulty installation can result in death or serious injury.
⚠ CAUTION	Faulty installation can result in serious injury, damage to property, or other serious consequences.

- After installation is complete, test the unit to confirm that it is working properly, and instruct the owner its proper use.

⚠ WARNING

- Installation should be left to the dealer from whom you purchased the unit, or another qualified professionals.
- Install the unit securely according to the installation manual. Faulty installation may lead to electric shock or fire.
- Be sure to use the supplied or specified parts. Using other parts may lead to electric shock or fire.
- Install the unit securely in a location that will support its weight. If installed in a poor location or improperly installed, the unit may not work as intended.
- For electrical work, follow local electric standards and the installation manual. Faulty installation may lead to fire or electric shock.
- Do not bundle the power cord, or attempt to extend it by splicing it with another cord or by using an extension cord. Do not place any other load on the power circuit used for the unit. Improper wiring may lead to electric shock, heat generation or fire.
- Use dedicated wiring for all electrical connections, and be sure to arrange the wiring so that force applied to the wiring will not damage the terminals. Poor wiring or installation may cause electric shock, heat generation or fire.

⚠ CAUTION

- Before installation, unplug the air conditioner to ensure safety. Failure to do so may cause electric shock.
- Static electricity may damage electric components. Before connecting cables and communication lines, and operating the switches, be sure to discharge any electrical charge from your body (by, for example, touching the earth line)
- Do not install the unit in a location where it may be exposed to flammable gases. If gas leaks and build up around the unit, it may catch fire.
- Do not place the wiring close to the power cord, inter-unit cable, or pipes which generate noise. Treat the wiring with care.

1. Functions and Features

- On/Off setting
- Switching between Instantaneous Contact/Normal Contact
- Connection with fan coil remote controller
- Automatic reset after power failure
- Output of normal operation signals/malfunction signals

2. Field Wiring

For interconnecting wiring, use Daikin KDC100A12 cable (not supplied) or other similar cable. Use a vinyl-covered wire or cable with four conductors each with a thickness of 0.2 to 1.25 mm².


■ Optional cable KDC100A12 (without connectors)

Specifications: 0.2 mm² × 4 core (sheathed)
 Outer diameter: φ5.3
 Length: 100 m
 Colour: Grey



Note : Keep any wiring for the control unit away from the power cord to prevent electrical noise.

Installation ①

1 Installation diagram

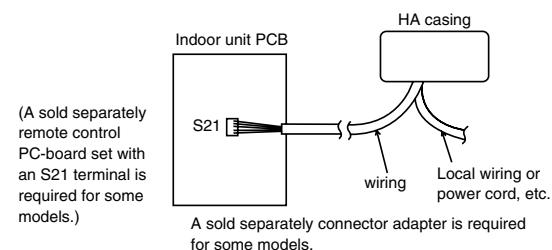


2 Components

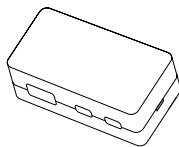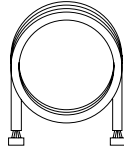① HA casing ASSY (Remote Control PCB is attached in the HA casing.) 	② Wiring (approx. 0.8 m) (Cannot be made longer.) 
③ Accessories Binding band (6 pcs.) • Screws for attaching to the wall (3 pcs.)	
④ Installation manual	

Installation ②

Attaching HA Case ASSY

 
- Use the 3 supplied screws to attach the HA casing ASSY.



Install the HA casing ASSY as close to the indoor unit as possible.


① Removal of upper HA casing

- (1) Insert a flat-blade screwdriver into the groove between the upper and lower HA casings.

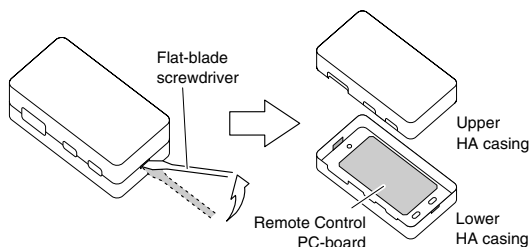


- (2) Lift the handle of the screwdriver upward.

- ② Mount and secure the lower HA casing directly on the wall with the provided screws inserted into the screw holes (a round hole and two ellipse holes) of the casing.

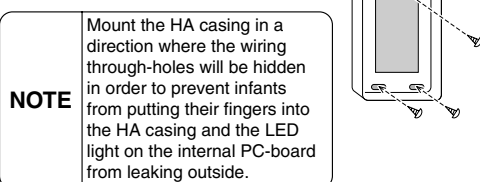

- ③ After connecting the cables (refer to the following sections), replace the case front. Be careful not to damage the wiring in the case.

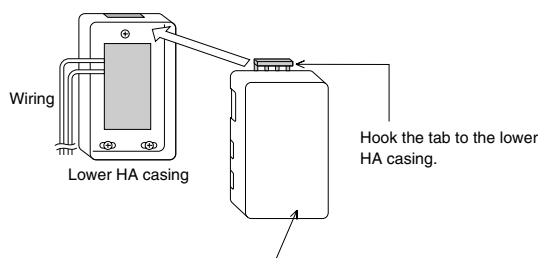

Press the lower part of the upper HA casing and press fit it onto the lower HA casing.
Press the upper HA casing precisely until a clicking sound is heard.

Wiring ①


1. Wiring

- ① Connect one end of the wiring to connector S21 of the PCB in the indoor unit.
- ② Connect the other end of the wiring to connector S6 of the Remote Control PCB.
- ③ Connect field wiring according to the functions assigned to each connection terminal of the Remote Control PCB.
- ④ Secure all wires.

1 Securing wires in the HA casing ASSY


① Connection of wiring

Connect the wiring to the connector terminals.

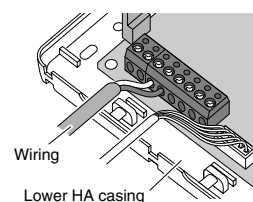


② Fixation of wiring

- (1) Insert the provided binding band under the pillar of the HA casing and secure the covers of the wiring with the binding band.

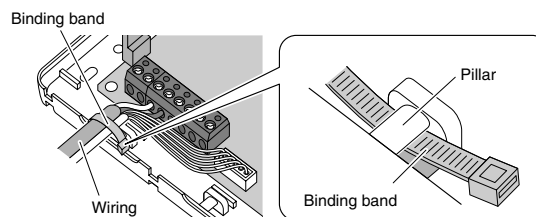


- (2) Insert the second binding band into the groove on the side of the HA casing and fix the wiring securely so that the wiring will not be disconnected.

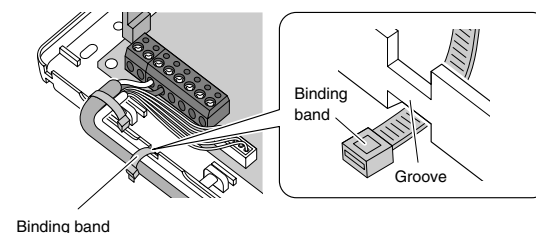

A large number of wires

Make a slit with an appropriate tool, such as a cutter knife, on the thin part of the upper HA casing along the frame. Then cut the part with an appropriate tool, such as a pair of nippers.

(NOTE) Cut off only the thin part required for wiring.

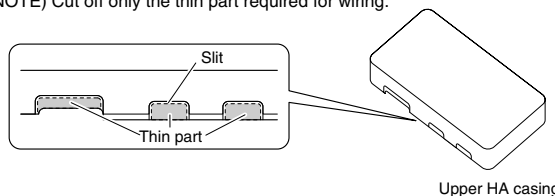

2 Securing wires in the indoor unit

- The method for securing wire varies depending on the model of the air conditioner. See your air conditioner installation manual for details.

Wiring ②

2. Automatic Reset After Power Failure

- This PCB stores the following data in the event of a power failure (the storage period is limitless).
 - ① On/Off (see Note 1)
 - ② Operation modes (see Note 2)
 - ③ Temperature setting
 - ④ Air flow rate
 - ⑤ On/Off status of remote controller
- (Note 1 When SW1-2 is in Off mode, the unit will not be activated.)
 (Note 2 The following settings apply to the models below.)


Mode before the power outage	COOLING	HEATING
Room air conditioner		
Models with Humid heating and Reheating dehumidifying functions.	DRY COOLING	HUMID HEATING
Models with Reheating dehumidifying function.		HEATING

(Note 3 Not all settings will be saved (e.g., humidity or swing settings will not be saved)).

3. Monitor Signal Output (normal operation and malfunction)

- Maximum length of the wiring is 100 m. No external power supply is required.


1 Monitor signal output for LED

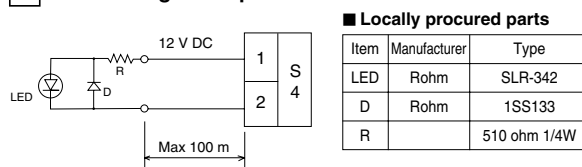

Locally procured parts

Item	Manufacturer	Type
LED	Rohm	SLR-342
D	Rohm	1SS133
R		510 ohm 1/4W

2 Monitor signal output (normal operation and malfunction) using external relay contacts

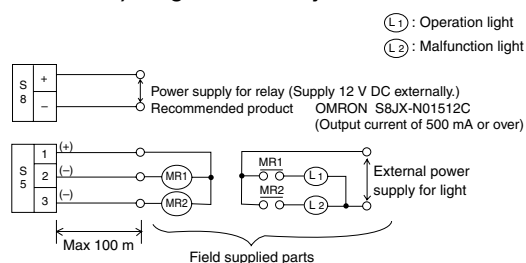

Field procured parts (Recommended external relay contacts)

Manufacturer	Type	Coil rated voltage	Coil resistance
Omron	MY relay	12 V DC	160 ohm ± 10%

4. Connection with Remote Controller


Example connections with three kinds of remote controllers are shown below.
 Note: These connections cannot be used in combination.

1 Remote control with switch (field supply)

- Set SW1-1 to Off and select Operation Mode 1.




<Instantaneous Contact>

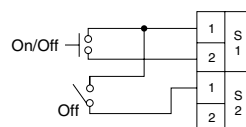

- The remote controller most recently used (local or air conditioner) takes precedence.
- Use a remote controller with a pulse width of 100 msec or more.


<Normal Contact>

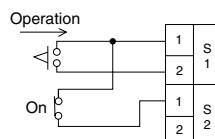

- Power On/Off cannot be controlled from the unit's remote controller. (Three beeps for signal reception will be heard continuously when the wireless remote controller is operated.)
- When power is restored after a power failure in this mode, On or Off is determined according to the current settings of the remote controller.

2 Fan coil remote controller

- Set SW1-1 to On and select Operation Mode 2.
- Most settings (power On/Off, air flow rate, mode change) cannot be made using the air conditioner's remote controller.
- When power is restored after a power failure in this mode, On or Off is determined according to the current settings of the remote controller.
- When the Cooling/Heating mode is changed, use the air conditioner's remote controller to adjust the temperature.

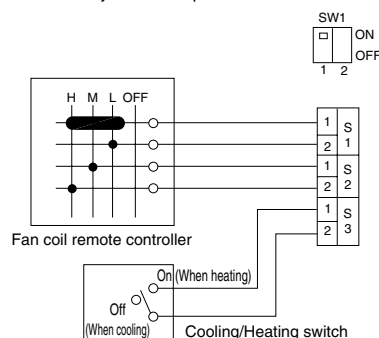


Test Operation and Confirmation


1. When the System is Not Working

- ☐ Is the air conditioner working properly?
- ☐ Are the connectors of the wiring properly connected?
- ☐ Are the remote controller and field wiring properly connected?
- ☐ Are all switch settings correct?
- ☐ If there is nothing apparently wrong, conduct a diagnostic check using the following procedure.

■ Diagnostic check

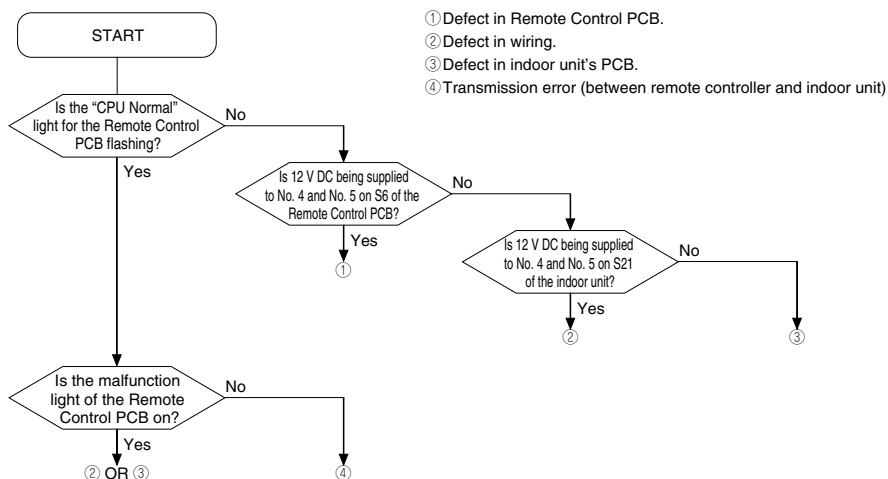

2. Switch Settings and Connection Terminals

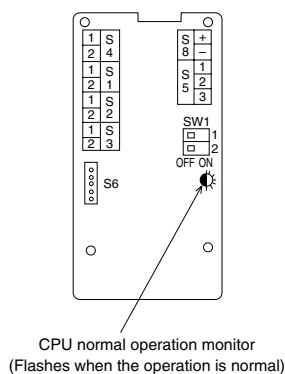

SW1-1	Selecting the operation mode	OFF	Operation mode 1 (Used with the exception of fan coil remote controller settings)	
		ON	Operation mode 2 (Used with fan coil remote controller settings)	
SW1-2	Selecting On/Off when power is restored after a power failure	OFF	Always Off	
		ON	Off if operation was in Off mode before power failure; On if operation was in On mode before power failure	
S1 S2 S3	SW1-1: OFF (Operation mode 1)	S1 (1) - S2 (1)		Instantaneous contact OPEN
		S1 (1) - S1 (2)		Pulse input On/Off switching OPEN, Not activated
		S2 (2), S3		Not used
		S2 (2), S3		Not used
	SW1-1: ON (Operation mode 2)	S1 (1) - S1 (2) CLOSE		On, airflow: L tap
		S1 (1) - S2 (1) CLOSE		On, airflow: M tap
		S1 (1) - S2 (2) CLOSE		On, airflow: H tap
		S3 (With the remote controller only)		OPEN Cooling
		S3 (With the remote controller only)		CLOSE Heating
		S3 (With the remote controller only)		Not used
S4	(1) - (2)	Voltage on (12 V DC), normal operation light output		
S5	(1) - (2)	Normal operation light output (power for light required)		
	(1) - (3)	Malfunction light output (power for light required)		
S6 connector		Connect with connector S21 on the PCB of the indoor unit		
S8	(+) - (-)	Relay 12 V DC power supply terminal (Field supplied parts)		

14.8 <DCS302C71> Central Remote Controller (Installation)

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained. Also, inform customers that they should store this installation manual along with the operation manual for future reference. This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

- ⚠ **WARNING** Indication a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 ⚠ **CAUTION** Indication a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 ⚠ **NOTE** Indication situation that may result in equipment or property-damage-only accidents.

⚠ WARNING

Ask your dealer or qualified personnel to carry out installation work. Do not try to install the machine by yourself.
 Improper installation may result in water leakage, electric shocks or fire.

Perform installation work in accordance with this installation manual.
 Improper installation may result in water leakage, electric shocks or fire.

Be sure to use only the specified accessories and parts for installation work.
 Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.

Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.
 Improper installation work may result in the equipment falling and causing accidents.

Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual.
 An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.

Make sure that all wiring is secured, the specified wires are used, and no external forces act on the terminal connections or wires.
 Improper connections or installation may result in fire.

When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the electric parts box lid can be securely fastened.
 Improper positioning of the electric parts box lid may result in electric shocks, fire or the terminals overheating.

Before touching electrical parts, turn off the unit.

Ground the air conditioner. Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire.
 Incomplete grounding may result in electric shocks.

When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air.

Do not reconstruct or change the settings of the protection devices.
 If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may result.

Do not touch the switch with wet fingers.
 Touching a switch with wet fingers can cause electric shock.

Install an leak circuit breaker, as required.
 If an leak circuit breaker is not installed, electric shock may result.

Do not install the air conditioner or the remote controller in the following locations:

- (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen
 Plastic parts may deteriorate and fall off or result in water leakage.
- (b) where corrosive gas, such as sulfurous acid gas, is produced
 Corroding copper pipes or soldered parts may result in refrigerant leakage.
- (c) near machinery emitting electromagnetic waves
 Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the equipment.
- (d) where flammable gases may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.
 Operating the unit in such conditions may result in fire.

⚠ CAUTION

Be very careful about product transportation.

Safely dispose of the packing materials.
 Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries. Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

Do not turn off the power immediately after stopping operation.
 Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

⚠ NOTE

Install the indoor and outdoor units, power supply wiring and connecting wires at least 3.5ft. away from televisions or radios in order to prevent image interference or noise.
 (Depending on the radio waves, a distance of 3.5ft. may not be sufficient enough to eliminate the noise.)

Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps.(inverter or rapid start types)
 Install the indoor unit as far away from fluorescent lamps as possible.

This unit is a class A product.
 In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.


Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.

1 COMPONENTS

Check the following components are included in this optional accessory before installation.

Installation screw (M4 x 16)	4
Operation manual	1
Installation manual	1
Installation table	1


Body

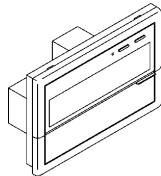

When using this optional accessory an electric parts box of KJB311A is required.
For installation, a steel electric parts box to be embedded is mandatory.

2 SYSTEM CONFIGURATION

With the central remote controller, unified operation/stop is possible with up to a maximum 64 groups of indoor units.
When using 2 central remote controllers, unified operation is possible with up to a maximum 128 groups.
With this optional accessory, setting of control modes including operation, stop, operation controlled by timer, and ON/OFF control possible/impossible by remote controller can be set individually by zones while it enables to control and display the operation state such as set temperature.
It can be connected with the external key system, host computer monitor panel, etc., through forced OFF input (no-voltage normally open contactor).
A zone is a one or more groups together. In general, the same settings are used throughout a zone.

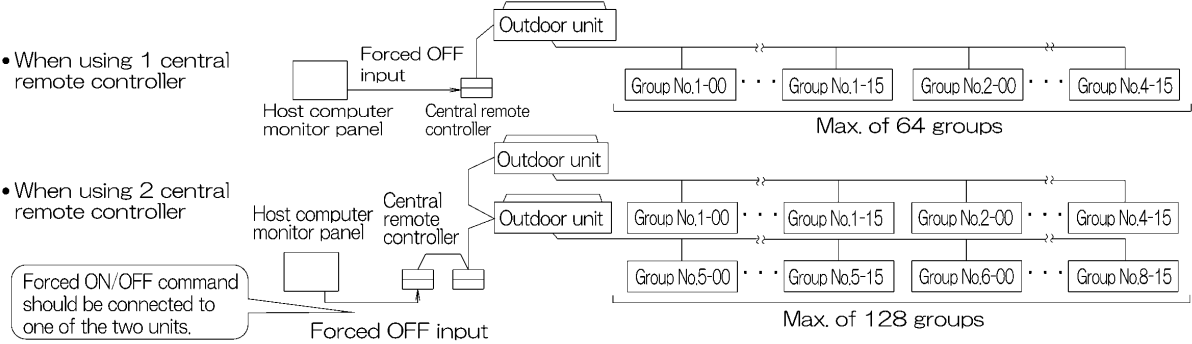


The central remote controller and the separately sold remote control adapter circuit board or group remote control adapter cannot be used together. See the D-BACS design guide for details.

3 INSTALLATION


- (1) Open the upper part of remote controller.
Insert a ⊖ screwdriver (2 locations) into the recess between the upper part and the lower part of remote controller and twist the screwdriver lightly.

PC board is attached with both the upper and lower part of remote controller. Do not damage the board with the screwdriver.

 - (2) Open the upper part of remote controller and install the Electric parts box with the attached installation screws (M4 x 16).



Installation screws (4)

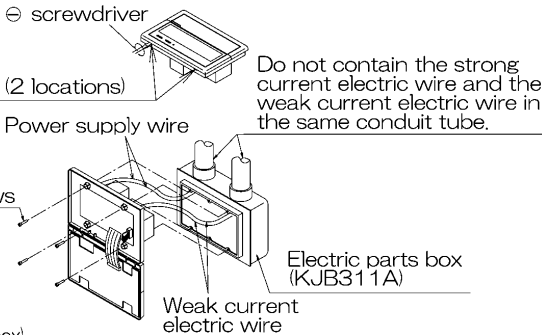

NOTE) Suitable length of the electric wire is about 160mm, (from electric parts box)
If it is difficult to contain a long wiring, strip the sheathed part of the wiring.

4 INITIAL SETTING

Setting (1) through (3) are initialized when power is turned ON, therefore complete settings BEFORE activating the power. (The positions of connectors and switches used for settings in this section are shown in Fig. 1.)

- (1) Connector for setting master controller (X1A) (Provided with connector at factory set)
- When using only 1 central remote controller, do not disconnect the connector for setting master controller. (Use the unit with the connector in the state in which it was delivered.)
 - When using multiple central remote controllers, or using the central remote controller in conjunction with the optional controllers for centralized control, makes settings as indicated in the below table.

Pattern of connection of optional controllers for centralized control			Connector for setting master controller (X1A) Setting, Removed		
Central remote controller	Unified ON/OFF controller	Schedule timer	Central remote controller	Unified ON/OFF controller	Schedule timer
1 to 4	1 to 16	1	Set one to "Used" and all the rest to "Not used"	Set all to "Not used"	"Not used"
		1			"Not used"

(Remove all the connectors for the central remote controller, the on/off controller, and the schedule timer when using the unit together with the Ve-UP controller, the master station II, the DMS interface, the payment management unit, or the parallel interface station.)


- (2) Address setting

Two central remote controllers can be used as shown in **2 SYSTEM CONFIGURATION**, to control anywhere up to a max. 128 groups of indoor units. In this case, group address must be set. This is done with the switch for setting each address (SS3).

SS3 setting	Indoor unit address	SS3 setting	Indoor unit address
SETTING EACH ADDRESS 5-00 ~ 8-15	To control indoor units from group Nos. 1-00 through 4-15	SETTING EACH ADDRESS 5-00 ~ 8-15	To control indoor units from group Nos. 5-00 through 8-15

- (3) MAIN/SUB changeover switch setting

 
With two central remote controllers, centralized control (indoor units) is possible from different locations. In this kind of set-up, it is necessary to set the MAIN/SUB changeover switch.



One of the two central remote controllers (1) - (2) is set to "MAIN" while the other is set to "SUB".

- (4) Setting of the sequential operation function

The central remote controller is equipped with a sequential operation function that sequentially turns indoor units on in 2-second intervals during unified operation. (Sequential operation is factory set to "ON.") To switch sequential operation ON or OFF, set as follows.

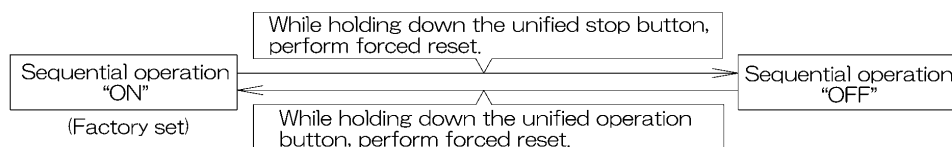

NOTE: The sequential operation function is designed to reduce the load on the power supply equipment, but does not guarantee that compressors will not be started simultaneously. You cannot therefore count on a capacity reduction effect by power supply equipment breaker selection.

- (5) Forced reset switch

When changing the setting of the connector for setting master controller, etc., you can reset simply by setting it to the reset side once and returning to the normal side, without turning the power OFF. (For normal operation, set the switch to the normal side.)


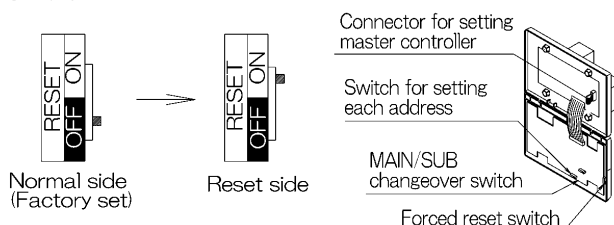



Fig. 1

5 ELECTRIC WIRING

WIRING OUTLINE

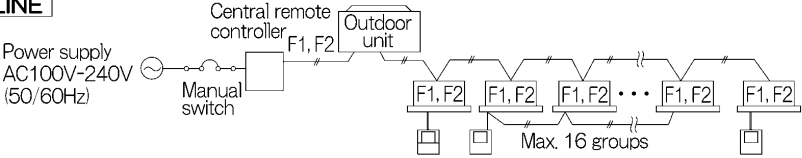

WIRING TO THE INDOOR UNIT AND OUTDOOR UNIT

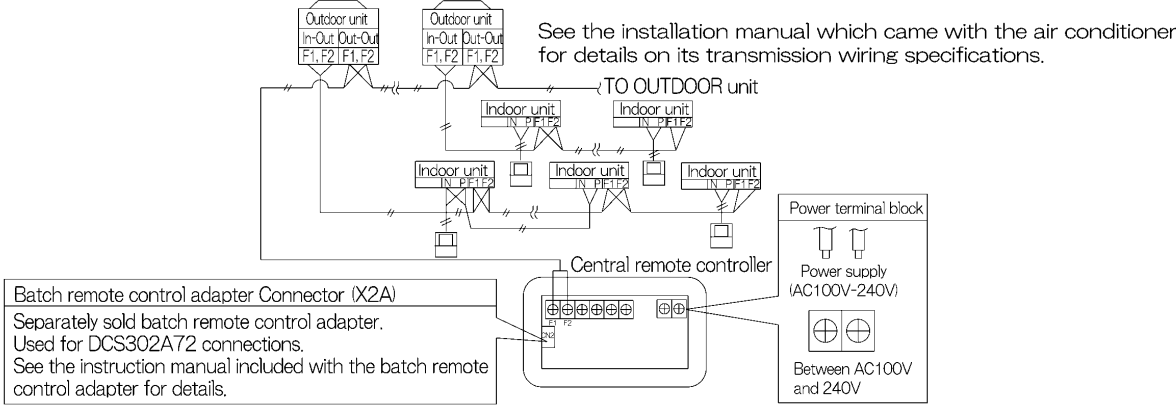

Wiring specifications

Power supply wiring	2mm ²
Transmission wiring for control	0.75 – 1.25 mm ² sheathed vinyl cord or cable (balanced type) – maximum length 1000 m (total overall wiring length 2000 m)
Manual switch	10A or 15A

Wire the indoor units to the outdoor units and between all power, indoor units, and remote controllers. See the instruction manual included with the indoor and outdoor units for details.

 
CONTROL TERMINAL STRIP

*1 For connecting Indoor unit (F1, F2)

*2 Forced OFF input (T1, T2)

None of the indoor units connected to the forced OFF input contact (non-voltage contact with minimal current) will operate when it is shut off.

Use only contactors which guarantee the minimum applicable load DC 16V, 10mA.




NOTE) Use instantaneous contactor of over 200m sec. energizing time, when necessary.

*3 For schedule timer (D1, D2)

Power can be supplied to the schedule timer (DST301B61) separately sold. For details, refer to the installation manual of the schedule timer.

 Wire *2 and *3 only when necessary.



(NOTE)

Do not connect the power supply wiring (100 to 240V) to the control terminal strip. If connected by mistake, it may damage or burn electrical parts of optional controllers for centralized control and indoor unit. It may result in serious danger. Be sure to check wirings before turning the power ON.

6 SETTING GROUP NO. FOR CENTRALIZED CONTROL

Set the group number of each group of the indoor unit from the remote controller. (In case of no remote controller, also connect the remote controller and set the group No. Then, remove the remote controller.)

(1) Turn ON the power of the indoor unit and central remote controller.

(Unless the power is ON, no setting can be made.)

Check that the installation and electrical wiring are correct before turning the power supply ON.

(When the power supply is turned ON, all LCD appear once and the unit may not accept the operation for about one minute with the display of "gg".)

(2) While in the normal mode, hold down the "TEST" button for a minimum of 4 seconds.


The remote controller will enter the FIELD SET MODE.

(3) Select the MODE No. "00" with the "MODE" button.

(4) Use the "GROUP" button to select the group No. for each group.
(Group numbers increase in the order of 1-00, 1-01, ..., 1-15, 2-00, ..., 8-15.)

(5) Press "ENTER" to set the selected group No.

(6) Press "RESET" to return to the NORMAL MODE.

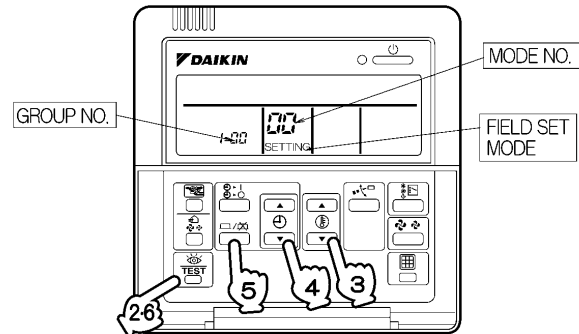

NOTES) • For simplified remote controller, see the installation table.

• See the instruction manuals which came with the Ventiair and adapters (i.e., multi-purpose adapters) for details on their Group No. settings.

NOTICE

Enter the group No. and installation place of the indoor unit into the installation table in the operation manual. Be sure to keep the operation manual for maintenance.

7 TEST OPERATION (Perform a test operation in the individual screen before registering zones.)

Before starting test operation, check that the power is supplied to the indoor and outdoor units, and central remote controller.

(1) Select the display "INDIVIDUALLY"

Press "INDIVIDUALLY" button to display "INDIVIDUALLY"

(2) Select the group to be tested.

Select the group No. with "←" "→" "↑" "↓" button.

(3) Press "TEST" button to select the test operation mode.

"TEST" is displayed.

"HOST A" is displayed on the remote controller.

(4) Press "ENTER" button within 10 seconds after entering into the test operation mode.


Operation the unit for 30 minutes.

When pressing the "TEST" button, the unit stops operating.

If the operation lamp flashes, it indicates a malfunction.

Call the group of flashing display, confirm malfunction code, and check the source of malfunction.

(The operation manual lists all error codes, so refer to it.)

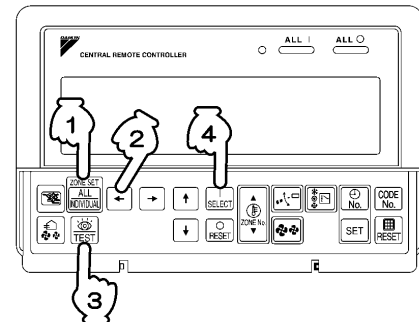

NOTES

• For test operation, refer to the installation manual of the outdoor unit.

• After turning the power supply ON, if the unit does not accept operation for two minutes or more with the display of "gg", check the following points.

- Check that setting of the connector for setting master controller is correct.
- Check that the group No. for centralized control has been set.

14.9 <DCS302C71> Central Remote Controller (Operation)

BEFORE USE

■ GENERAL DESCRIPTION OF SYSTEM


This central remote controller can monitor and control up to 64 indoor unit groups.

Using two central remote controllers allows monitoring and controlling of up to 128 indoor unit groups.


Main Functions

1. Batch starting and stopping of indoor units connected to the central remote controller.
2. Handling of operation settings such as start/stop, timer operation, remote controller prohibition/permission, etc., and operation status settings such as temperature.
3. Operation status monitoring of operation mode, set temperature, etc.
4. Can be connected to an external central monitor panel and key system using the forced stop input (non-voltage a connector).

- When using 1 central remote controller

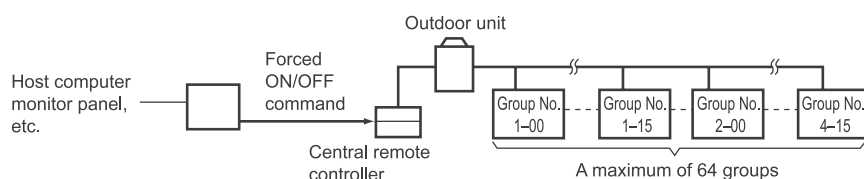

- When using 2 central remote controllers

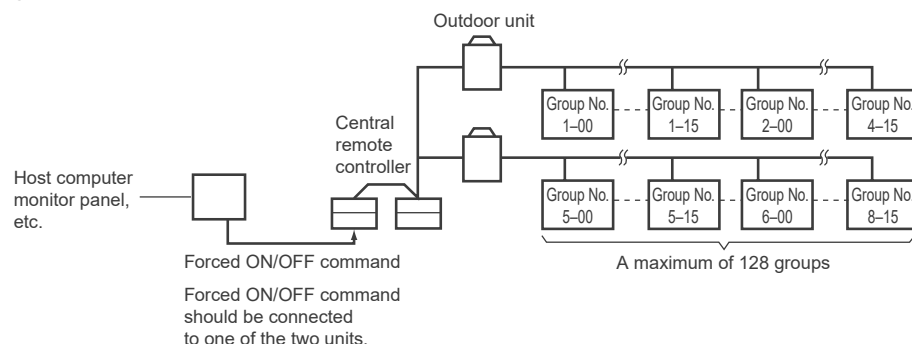


(The central remote controller and the separately sold remote control adapter circuit board or group remote control adapter cannot be used together.)


* GROUP OF INDOOR UNIT refers to the below.

1. A single indoor unit without remote controller

 
1. A single indoor unit without remote controller



 2. A single indoor unit controlled by one or two remote controllers




3. Maximum of 16 indoor units, group-controlled by one or two remote controllers

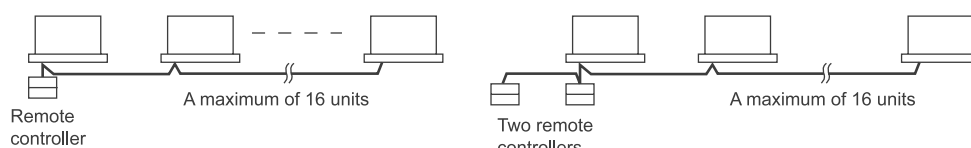

*** Zone control from the central remote controller**

Zone control is available from the central remote controller. With it, it is possible to make unified settings for multiple groups, so setting operations are greatly simplified.

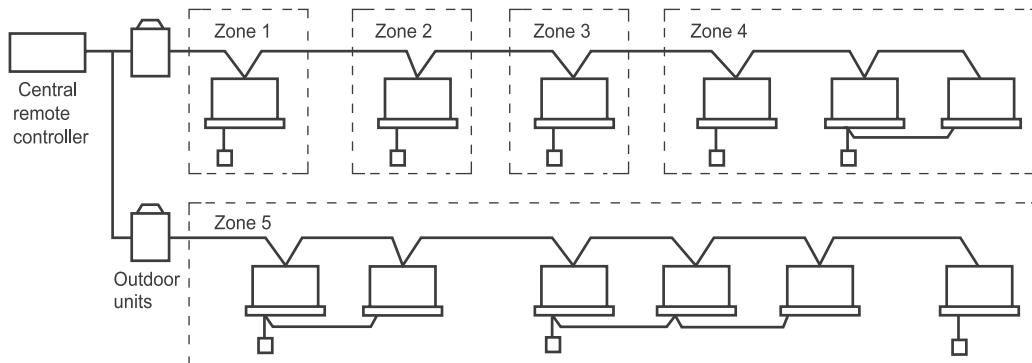

- Any setting you make within a given zone will apply to all groups in the said zone.
- A maximum of 64 zones can be set from a single central remote controller. (Each zone contains a maximum of 64 groups.)
- Zones can be set randomly from the central remote controller.

SAFETY CONSIDERATIONS

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly.

After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained.

Also, inform customers that they should store this installation manual along with the operation manual for future reference. This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of danger, warning, caution and note symbols.

! DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

! WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

! CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

! NOTE..... Indicates situation that may result in equipment or property-damage-only accidents.

Keep these warning sheets handy so that you can refer to them if needed.

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

! DANGER

- **Any abnormalities in the operation of the air conditioner such as smoke or fire could result in severe injury or death.** Turn off the power and contact your dealer immediately for instructions.
- **Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.**
- **Safely dispose of the packing materials.** Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries. Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death due to suffocation.

! WARNING

- **Ask your dealer for installation of the air conditioner.** Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.
- **Ask your dealer for improvement, repair, and maintenance.** Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.
- **Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.**
- **Ask your dealer to move and reinstall the air conditioner or the remote controller.** Incomplete installation may result in a water leakage, electric shock, and fire.
- **Never let the indoor unit or the remote controller get wet.** It may cause an electric shock or a fire.

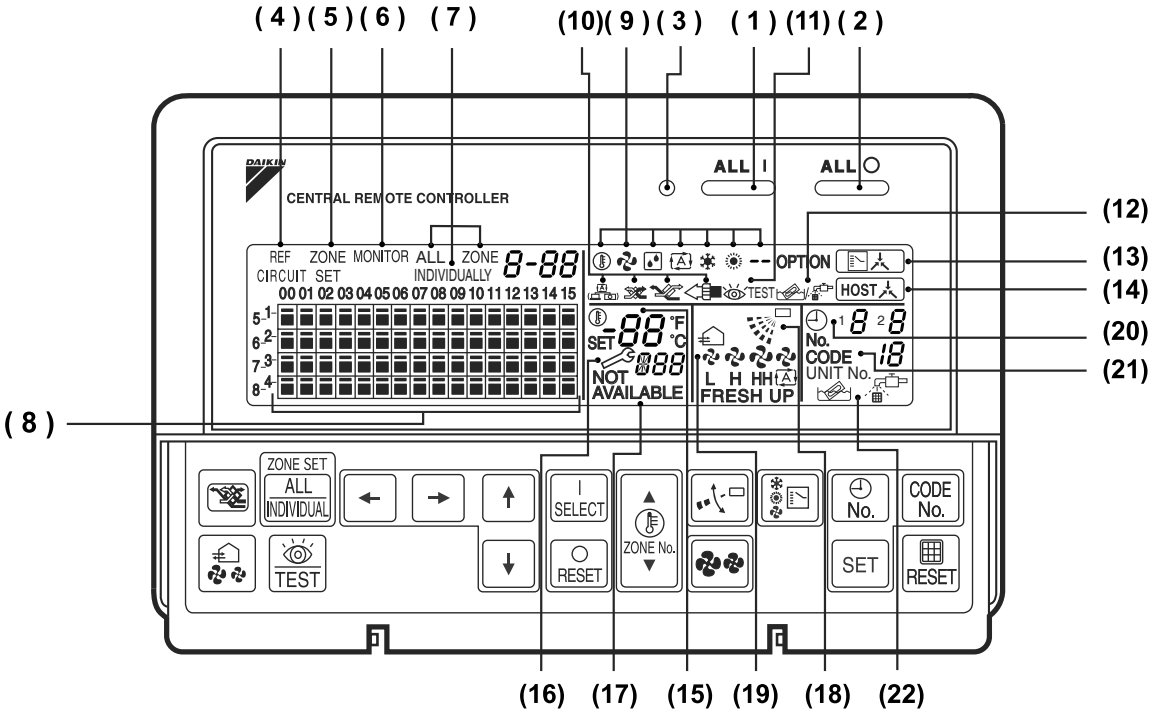


Fig. 1

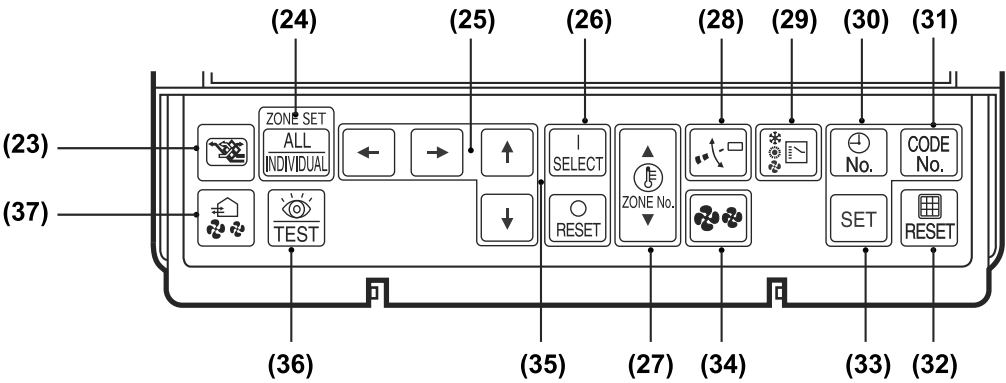


Fig. 2

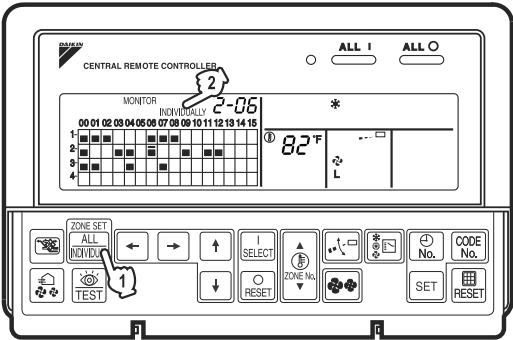


Fig. 3

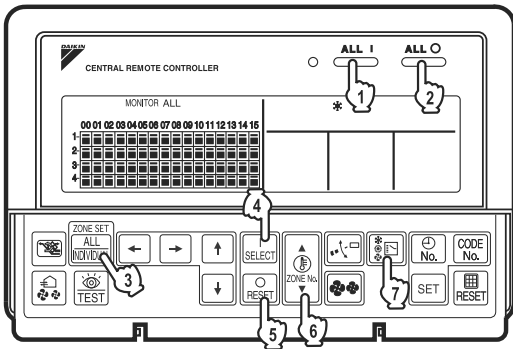


Fig. 4

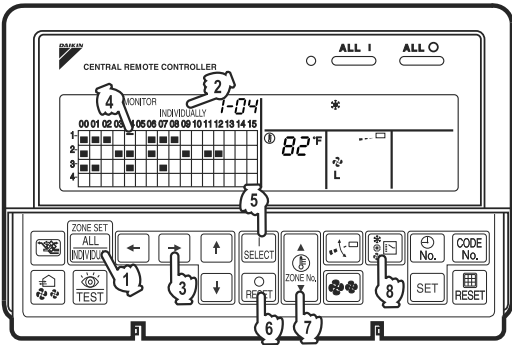


Fig. 5

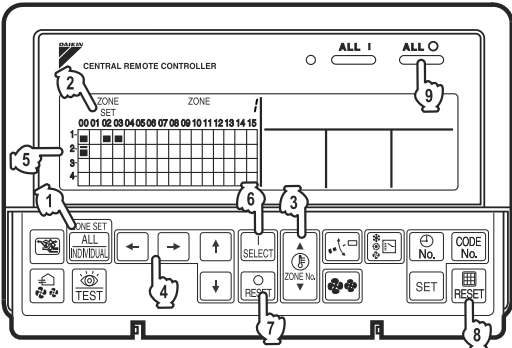


Fig. 6

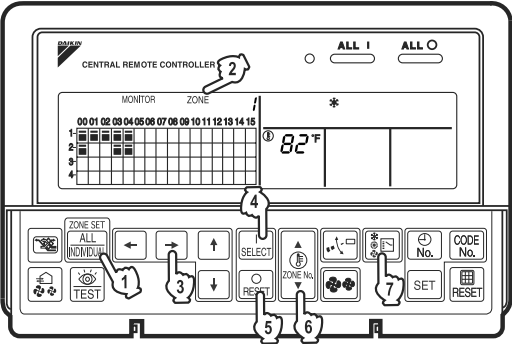


Fig. 7

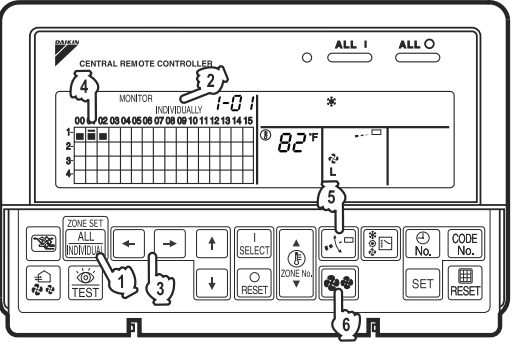


Fig. 8

- **Never use flammable spray such as hair spray, lacquer or paint near the unit.**
It may cause a fire.
- **Do not allow children to play on or around the unit as they could be injured.**
- **Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.**
Use of wire or copper wire may cause the unit to break down or cause a fire.
- **Never inspect or service the unit by yourself.**
Ask a qualified service person to perform this work.
- **Cut off all electric waves before maintenance.**
- **Do not wash the air conditioner or the remote controller with excessive water.**
Electric shock or fire may result.
- **Do not touch the switch with wet fingers.**
Touching a switch with wet fingers can cause electric shock.
- **Never touch the internal parts of the controller.**
Do not remove the front panel because some parts inside are dangerous to touch. In addition, some parts may be damaged by touching. For checking and adjusting internal parts, contact your dealer.
- **Check the unit stand for damage on a continuous basis, especially if it had been in use for a long time.**
If left in a damaged condition the unit may fall and cause injury.
- **Placing a flower vase or other containers with water or other liquids on the unit could result in a shock hazard or fire if a spill occurs.**

**CAUTION**

- **Avoid placing the controller in a spot splashed with water.**
Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.

- **Do not operate the air conditioner when using a room fumigation - type insecticide.**
Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.
- **Do not turn off the power immediately after stopping operation.**
Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.
- **The appliance is not intended for use by young children or infirm persons without supervision.**
- **The remote controller should be installed in such a way that children cannot play with it.**

**NOTE**

- **Never press the button of the remote controller with a hard, pointed object.**
The remote controller may be damaged.
- **Never pull or twist the electric wire of the remote controller.**
It may cause the unit to malfunction.
- **Do not place the controller exposed to direct sunlight.**
The LCD display may get discolored, failing to display the data.
- **Do not wipe the controller operation panel with benzene, thinner, chemical dustcloth, etc.**
The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.
- **Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

CONTENTS

BEFORE USE	1	OPERATION MODE	13
GENERAL DESCRIPTION OF SYSTEM	1	Setting operation mode	16
SAFETY CONSIDERATIONS	2	Group monitoring	16
FEATURES AND FUNCTIONS	6	Error diagnosing function	17
NAMES AND FUNCTIONS OF THE		Setting master remote controller	20
OPERATING SECTION	7	Display of time to clean	21
OPERATION	8	INSTALLATION TABLE	22
Individual screen, all screen, zone screen	8	OPTIONAL ACCESSORIES	23
Batch operation and stop method	9	DOUBLE CENTRAL REMOTE	
Group operation and stop method	9	CONTROLLERS	23
Registering zones	9	SPECIFICATIONS	24
Zone operation and stop method	10	Specifications	24
Changing the fan direction and fan strength	11	Outline drawings	24
Changing the ventilation mode and			
ventilation strength	11	Fig. 1, 2, 3, 4	3
Timer Number Setting	11	Fig. 5, 6, 7, 8	4
Setting the Operation Code	12	Fig. 9, 10, 11, 12	25
		Fig. 13, 14, 15, 16	26

FEATURES AND FUNCTIONS

■ Operation menu

This central remote controller can operate and stop machines by either group or zone.
Batch operation and batch stop functions are also available. When used in combination with the schedule timer (optional accessory), timer operation and stop functions are available.



See page
8—12.

■ Various operation modes.

You can operate the system from both this unit and the remote controller, so to enable various operation control patterns. Twenty different operation modes are available including five operation patterns:

1. Start/stop: remote controller prohibition, remote controller stop-only permission, central priority, after-press priority, remote controller permission timer
2. Operation modes: remote controller prohibition, remote controller permission
3. Set temperature: remote controller prohibition, remote controller permission



See page
13—15.

■ Zone control for simpler setting procedures

You can control a maximum of 64 groups of indoor units by using this central remote controller. You don't have to repeat the same setting operations by group because you can make each of the following settings by zone.

A functions is available for setting all groups in one batch.

- Operation mode
- Control mode
- Setting temperature
- Programming time No. (Used in conjunction with the schedule timer)



See page
8—16.

■ Monitoring all indoor unit information

The following information can be displayed by group.

- Operation information such as operation mode, set temperature, etc., for indoor units
- Maintenance information such as cleaning signs for filters or elements
- Error codes and other malfunction diagnosis information



See page
16—21.

■ Function of refrigerant system display

This display helps you understand, at a glance, the indoor units sharing the same outdoor unit and the particular indoor unit among them that is set as the master remote controller.



See page 20.

- Room air conditioners and multi-purpose air conditioners may also be connected by using separately-sold adapter boards.
This may limit functionality, so consult the manuals that come with each adapter board.

NAMES AND FUNCTIONS OF THE OPERATING SECTION (Fig. 1, 2)

1	UNIFIED OPERATION BUTTON Press to operate all indoor units.
2	UNIFIED STOP BUTTON Press to stop all indoor units.
3	OPERATION LAMP (RED) Lit white any of the indoor units under control is in operation.
4	" " DISPLAY (REFRIGERANT SYSTEM DISPLAY) This indication in the square is lit while the refrigerant system is being displayed.
5	" " DISPLAY (ZONE SETTING) The lamp is lit while setting zones.
6	" " DISPLAY (OPERATION MONITOR) The lamp is lit while operation is being monitored.
7	" ALL " " ZONE " " INDIVIDUALLY " DISPLAY The status displays indicates either batch functions or which zone or individual unit (or group) are being used.
8	OPERATION MONITOR Each square displays the state corresponding to each group.
9	" " " " " " " " " " " " " -- " DISPLAY (OPERATION MODE) Displays operating state.
10	" " " " " " " " DISPLAY (VENTILATION CLEANING DISPLAY) This is displayed when a Ventiair total enthalpy heat exchanger unit or other such unit is connected.
11	" TEST " DISPLAY (INSPECTION/TEST) Pressing the maintenance/test run button (for service) displays this. This button should not normally be used.
12	" /  " DISPLAY (TIME TO CLEAN) It lights up when any individual unit (group) has reached the time for the filter or element to be cleaned.

13	" " DISPLAY (COOLING/HEATING SELECTION PRIVILEGE NOT SHOWN) For zones or individual units (groups) for which this is displayed, cooling and heating cannot be selected.
14	" " DISPLAY (UNDER HOST COMPUTER INTEGRATED CONTROL) While this display is lit up, no settings can be made. It lights up when the upper central machines are present on the same air conditioning network.
15	" SET 88°F " DISPLAY (PRESET TEMPERATURE) Displays the preset temperature.
16	" U4 " DISPLAY (MALFUNCTION CODE) This displays (flashes) the content of errors when an error failure has occurred. In maintenance mode, it displays the latest error content.
17	"NOT AVAILABLE" DISPLAY (NO FUNCTION DISPLAY) If a function is not available in the indoor unit even if the button is pressed, "NOT AVAILABLE" is may be displayed for a few seconds.
18	" " DISPLAY (FAN DIRECTION SWING DISPLAY) This displays whether the fan direction is fixed or set to swing.
19	" " " " " " " " " " "FRESH UP" DISPLAY (VENTILATION STRENGTH/SET FAN STRENGTH DISPLAY) This displays the set fan strength.
20	" No. " DISPLAY (TIME NO.) Displays the operation timer No. when used in conjunction with the schedule timer.

	“CODE UNIT No. 18” DISPLAY (OPERATION CODE AND UNIT NUMBER DISPLAY)
21	The method of operation (remote controller prohibited, central operation priority after-press operation priority, etc.) is displayed by the corresponding code. This displays the numbers of any indoor units which have stopped due to an error.
22	“” DISPLAY (TIME TO CLEAN AIR CLEANER ELEMENT/ TIME TO CLEAN AIR FILTER) Displayed to notify the user it is time to clean the air filter or air cleaner element of the group displayed.
23	VENTILATION MODE BUTTON This is pressed to switch the ventilation mode of the total enthalpy heat exchanger.
24	ALL/INDIVIDUAL BUTTON Pressing this button scrolls through the “all screen”, “zone screen”, and “individual screen”.
25	ARROW KEY BUTTON This button is pressed when calling an individual indoor unit or a zone.
26	ON/OFF BUTTON Starts and stops ALL, ZONE, and INDIVIDUAL units.
27	TEMPERATURE ADJUSTMENT BUTTON (ZONE NUMBER BUTTON) This button is pressed when setting the temperature. Select the zone number if any zones have been registered.
28	FAN DIRECTION ADJUSTMENT BUTTON This button is pressed when setting the fan direction to “fixed” or “swing”.
29	OPERATION MODE SELECTOR BUTTON This sets the operation mode. The dry setting cannot be done.
30	TIME NO. BUTTON Selects time No. (Use in conjunction with the schedule timer only).
31	CONTROL MODE BUTTON Selects control mode.
32	FILTER SIGN RESET BUTTON This button is pressed to erase the “clean filter” display after cleaning or replacement.

33	SET BUTTON Sets control mode and time No.
34	FAN STRENGTH ADJUSTMENT BUTTON Pressing this button scrolls through “weak”, “strong”, and “fast”.
35	ZONE SETTING BUTTON Zone registration mode can be turned on and off by pressing the start and stop buttons simultaneously for at least four seconds.
36	INSPECTION/TEST RUN BUTTON (FOR SERVICE) Pressing this button scrolls through “inspection”, “test run”, and “system display”. This button is not normally used.
37	VENTILATION STRENGTH ADJUSTMENT BUTTON This button is pressed to switch the ventilation strength (“fresh up”) of the total enthalpy heat exchanger.

(Notes)

- Please note that all the displays in the figure appear for explanation purposes or when the cover is open.
- If the unit is used in conjunction with other optional central controllers, the OPERATION LAMP of the unit that is not under operation control may light up and go out a few minutes behind schedule. This shows that the signal is being exchanged, and does not indicate any failure.

OPERATION**■ Individual screen, all screen, zone screen (Fig. 3)**

This controller can perform operations in the individual screen, all screen, or zone screen.

- Individual screen The individual screen is used when performing group operations.
- All screen The all screen is used when performing operations for all units at once.
- Zone screen The zone screen is used when performing zone operations.

1. Select the screen by pressing the “ALL/INDIVIDUAL” button.

 Every time the “ALL/INDIVIDUAL” button is pressed, the selection scrolls through INDIVIDUAL → ALL → ZONE.

If nothing is done in the all or zone screens for one minute, it automatically goes to the individual screen.

- If the zone number in the zone screen is displayed as “--,” this indicates that no units are registered in a zone.
Please perform zone registration before proceeding in the zone screen. (See page 9)

■ Batch operation and stop method (Fig. 4)

This is for operating or stopping all connected units at once.

A. What to do when operating or stopping all connected units at once.

1. Press either “ALL I” or

 “ALL O”.

- Operation can be performed from the individual screen, the all screen, or the zone screen.
- The “TEMPERATURE ADJUSTMENT” and “OPERATION MODE SELECTOR” buttons cannot be used.
To set the temperature and operation mode, use B. batch operation.

B. Batch Operation

1. Press the “ALL/INDIVIDUAL button” to enter the all screen.

The “” display lights up on all registered units.

2. Press the “SELECT” button.

The “” display lights up on all connected units.

Press the “RESET” button.

The “” display goes off on all connected units.
Operation and stop in the batch screen are done the same as with the batch operation and batch stop buttons.

3. Press the “TEMPERATURE ADJUSTMENT” button.

The temperature rises 1° every time the () button is pressed.
The temperature drops 1° every time the () button is pressed.

Set to “--” when you do not wish to use batch setting for the temperature setting.
Setting to 1° above or below the temperature setting range displays “--”.

4. Call up the desired mode by pressing the “OPERATION MODE SELECTOR” button.

Set to “--” when you do not wish to use batch setting for the operation setting.

■ Group operation and stop method (Fig. 5)

This is for operating or stopping connected units in groups.

[Group operation]

1. Press the “ALL/INDIVIDUAL button”

to enter the  individual screen.

The unit will enter the individual screen automatically if nothing is done for one minute.

2. Using the arrow keys, move the

“” to select the units to operate or stop.

Keeping the button pressed down will move it rapidly.

The “” in this screen has selected unit 1-04.

3. Press the “SELECT” button.

The “” display lights up in the group.

Press the “RESET” button.

The “” display goes off in the group.

4. Press the “TEMPERATURE ADJUSTMENT” button.

The temperature rises 1° every time the () button is pressed.

The temperature drops 1° every time the () button is pressed.

Temperature adjustment cannot be done if the selected group's air conditioners are in fan mode.

5. Call up the desired mode by pressing the “OPERATION MODE SELECTOR” button.

■ Registering zones (Fig. 6)

It is possible to set multiple groups as one zone and control each zone separately.

No zones are registered when the unit is shipped from the factory.


Zone registration can be done in the individual screen, all screen, or zone screen.

[Registration]

1. Pressing the “ALL/INDIVIDUAL” button for four seconds. Displays ZONE SET.

Zone Number 1 will be displayed, and if there are any groups already registered in the displayed zone, a “” will light up on the operation monitor.

2. Select the Zone Number to be registered using the “ZONE NUMBER” button. Keeping the button pressed down will move it rapidly.
3. “” to the group you wish to register using the arrow keys. Keeping the button pressed down will move it rapidly.
4. Press the “SELECT” button to register that group to the zone.
The “” display lights up on all the selected units.
 Pressing the “RESET” button removes the group from that zone, and “” goes off.
Repeat steps 3 and 4 until all the units you wish to register to the zone have been added.

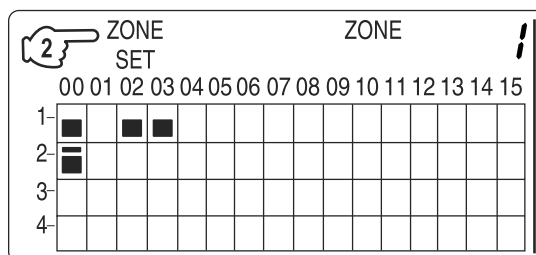

In this example, a screen is shown with units 1-00, 1-02, 1-03, and 2-00 registered to Zone Number 1.

5. Repeat steps 2 to 4 to register to the next zone.
 6. Once zone registration is complete, press the “ALL/INDIVIDUAL” button to turn off “ZONE SET” display and return to the individual screen.
The display returns to the normal screen if nothing is done for one minute when in zone registration mode.
- (NOTE)
- It is impossible to register one group to several different zones.
If this is done, the last zone registered to will be valid.

[Batch deletion of zone registration]

1. Pressing the “ALL ○” for at least four seconds while pressing the “FILTER SIGN RESET” button when “ZONE SET” is displayed will delete all zone registrations.
The zone registrations for all units will be lost.

■ Zone operation and stop method (Fig. 7)

This is for operating or stopping connected units in zones.

[Zone operation]

1. Press the “ALL/INDIVIDUAL button” to enter the zone screen.
2. Using the arrow keys, select the zone number to operate or stop.

Pressing and reduces the zone number while and raise the number.
Keeping the button pressed down will move it rapidly.

- If the zone number is displayed as “--,” this indicates that no units are registered in a zone. Please perform zone registration before using a zone. (See page 9)

3. Press the “SELECT” button.

The “” display lights up in the group.

Press the “RESET” button.

The “” display goes off in the group.

4. Press the “TEMPERATURE ADJUSTMENT” button.

The temperature rises 1° every time the (▲) button is pressed.

The temperature drops 1° every time the (▼) button is pressed.

Set to “--” when you do not wish to use zone setting for the temperature setting.

Setting to 1° above or below the temperature setting range displays “--”.

5. Call up the desired mode by pressing the “OPERATION MODE SELECTOR” button.

Set to “--” when you do not wish to use zone setting for the operation mode.

■ Changing the fan direction and fan strength (Fig. 8)

This changes the fan direction and strength settings in the air conditioner.

Changing the fan direction and strength is done in the individual screen.

[Registration]

1. Press the “ALL/INDIVIDUAL button” to enter the individual screen.

The unit will enter the individual screen automatically if nothing is done for one minute.

2. Using the arrow keys, move the “ ” to select the units to fan direction adjustment or fan strength adjustment.

Keeping the button pressed down will move it rapidly.

3. Press the “FAN DIRECTION ADJUSTMENT” button.

This sets “fixed” or “swing” for the fan direction.

- Press the “FAN STRENGTH ADJUSTMENT” button.

Pressing this button scrolls through “”, “”, and “”.

Depending on the indoor unit, only “” and “” may be available.

The functions included in the indoor units may vary. Pressing a button for a function which is not available will cause “NOT AVAILABLE” to be displayed.

■ Changing the ventilation mode and ventilation strength (Fig. 9)

This changes the ventilation mode and strength settings in the total enthalpy heat exchanger.

Changing the ventilation mode and strength is done in the individual screen.

[Registration]

1. Press the “ALL/INDIVIDUAL button” to enter the individual screen.

The unit will enter the individual screen automatically if nothing is done for one minute.

2. Using the arrow keys, move the “ ” to select the units to ventilation mode or ventilation strength adjustment.

Keeping the button pressed down will move it rapidly.

3. Press the “VENTILATION MODE” button.

It will scroll through “” → “” → “” → “”.

- Press the “VENTILATION STRENGTH ADJUSTMENT” button.

It will scroll through “” → “” → “ FRESH UP” → “ FRESH UP” → “”.

The fresh up function may not be available depending on the connected unit model.

The functions included in the indoor units may vary. Pressing a button for a function which is not available will cause “NOT AVAILABLE” to be displayed.

• Ventilation Mode and Amount

If these are changed using the remote controller depending on the unit model, they cannot be displayed on the central remote controller.

To monitor the ventilation mode and amount, check the values on the remote controller.

■ Timer Number Setting (Fig. 10)

(Only when used with the schedule timer)


Using this together with the schedule timer makes it possible to set on and off times four times a day.

[Registration]

1. Pressing the “TIMER NO.” button causes the number set for timer number 1 to blink.

If no timer setting has been made “-” will be displayed.

Select the desired timer number by pressing the “TIMER NO.” button.

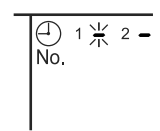


2. Once the desired timer number is displayed, press the “SET” button.

Press the “SET” button within 10 seconds after the timer number is displayed.

The display will return to how it was after 10 seconds.


The display for timer number 1 will stop blinking and then timer number 2 will start blinking.

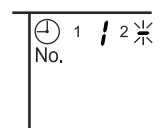

3. Select the desired timer number by pressing the "TIMER NO." button.

Once the desired timer number is displayed,  press the "SET" button.

The display for timer number 2 will stop blinking.

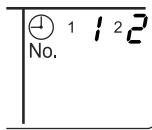

The "⌚ No." display will disappear after 3 seconds.

Select " - " in the timer number when you do not wish to set a timer number.
It is possible to set only one timer number.
(The times for turning the unit(s) on and off twice a day can be set with a single timer number.)

• Timer Number Setting

Group control: select the unit in the individual screen and set the timer number.

Batch control: set the timer numbers for all connected units.

Zone control: set the timer numbers for all zone-registered units.
Call up the zones which you wish to set in the zone screen and set the timer numbers.

- **Since the timer number will be set to after-press priority, the timer number in the last screen set will be valid for the connected units.**

Example 1

Setting timer number 1 for unit 1-00 to "1" and timer number 2 to "2" in the individual screen and then setting timer number 1 to "3" and timer number 2 to "4" in the batch screen causes the timer numbers for all units to be set, so timer number 1 for unit 1-00 will be "3" and timer number 2 will be "4".

Example 2

To prevent leaving units on, timer number 1 is set to "5" in the batch screen.

Setting timer number 1 in zone number 1 to " - " in the zone screen after that will change the timer number for zone number 1, so the setting to prevent leaving the units on will be lost for zone number 1 only.

If a timer number is set incorrectly by accident, redo the setting in the desired screen.

- **What happens when the timer number on time and off time are set to the same time**

When the on time and off time are set to the same time for the same timer number, operation does not change.

When the on time and off time are set to the same time for different timer numbers, the off time is given priority.

When using timer operation, make sure the times do not overlap when setting the program of the schedule timer.

■ Setting the Operation Code (Fig. 11)

[Registration]

1.  Pressing the "CONTROL MODE" button causes the currently set operation code to blink.

Call up the desired code number by pressing the

 "CONTROL MODE" button.

Scroll through the code numbers.

2.  Once the code number is displayed, press the "SET" button.

The display will stop blinking.

The operation code display will disappear after 3 seconds.

[The Operation Code Setting]

Group control: select the unit in the individual screen and set the operation code.

Batch control: set the operation code for all connected units.

Zone control: set the operation code for all zone-registered units.

Call up the zones which you wish to set in the zone screen and set the operation code.

Since the operation code will be set for after-press priority, setting the operation code in the zone and individual screens after setting the operation code in the batch screen, will cause the operation codes set afterwards to be valid.

OPERATION MODE


The following five operation control modes can be selected along with the temperature setting and operation mode by remote controller, for a total of twenty different modes. These twenty modes are set and displayed with control modes of 0 to 19. (For further details, see **EXAMPLE OF OPERATION SCHEDULE** on the next page.)

- ON/OFF control impossible by remote controller..... Use this mode when operating and stopping from the central remote controller only. (ON/OFF control by the remote controller is disabled.)
- Only OFF control possible by remote controller Use this mode when executing the operation only by the central remote controller, and executing only the stop by remote controller.
- Centralized Use this mode when executing the operation only by the central remote controller, and executing start/stop freely by remote controller during the preset hours.
- Individual Use this mode when executing start/stop both by central remote controller and remote controller.
- Timer operation possible by remote controller..... Use this mode when executing start/stop by remote controller during the preset hours, and not starting operation by the central remote controller at the programmed time of system start.

[HOW TO SELECT THE CONTROL MODE]


- Select whether to accept or to reject the operation from the remote controller regarding the operation, stop, temperature setting and operation mode setting, respectively, and determine the particular control mode from the rightmost column of the table below.

Example

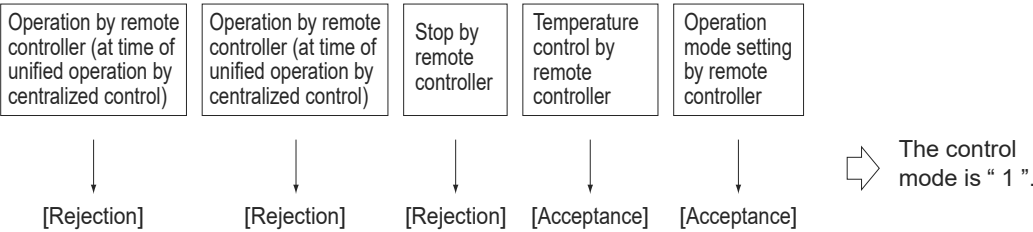

Operation mode	Control by remote controller					Control mode	
	Operation		Stop	Tempera- ture control	Operation mode setting		
	Unified operation, individ- ual operation by central remote controller, or opera- tion controlled by timer	Unified stop, individual stop by central remote controller, or timer stop					
ON/OFF control impossible by remote controller	<u>Rejection</u> (Example)		<u>Rejection</u> (Example)	Rejection	Acceptance	0	
					Rejection	10	
				<u>Acceptance</u> (Example)	<u>Acceptance</u> (Example)	<u>1</u> (Example)	
					Rejection	11	
Only OFF control possible by remote controller	<u>Rejection</u> (Example)		Acceptance	Rejection	Acceptance	2	
					Rejection	12	
					Acceptance	Acceptance	3
					Rejection	13	
Centralized	Acceptance			Rejection	Acceptance	4	
					Rejection	14	
					Acceptance	Acceptance	5
					Rejection	15	
Individual	Acceptance		Rejection	Acceptance	6		
				Rejection	16		
				Acceptance	Acceptance	7	
				Rejection	17		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Rejection (During timer at OFF position)	Rejection	Acceptance	8		
				Rejection	18		
				Acceptance	Acceptance	9	
				Rejection	19		

Note) Do not select the timer operation possible without the remote controller. In this case, timer operation is disabled.

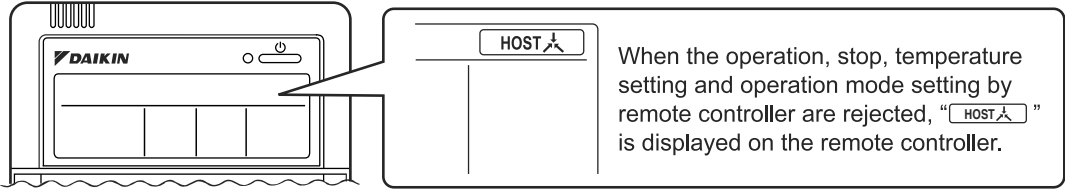


EXAMPLE OF OPERATION SCHEDULE


Operation schedule is possible only in conjunction with the schedule timer (optional accessory).

Liquid crystal display of schedule timer


ON/OFF control impossible by remote controller

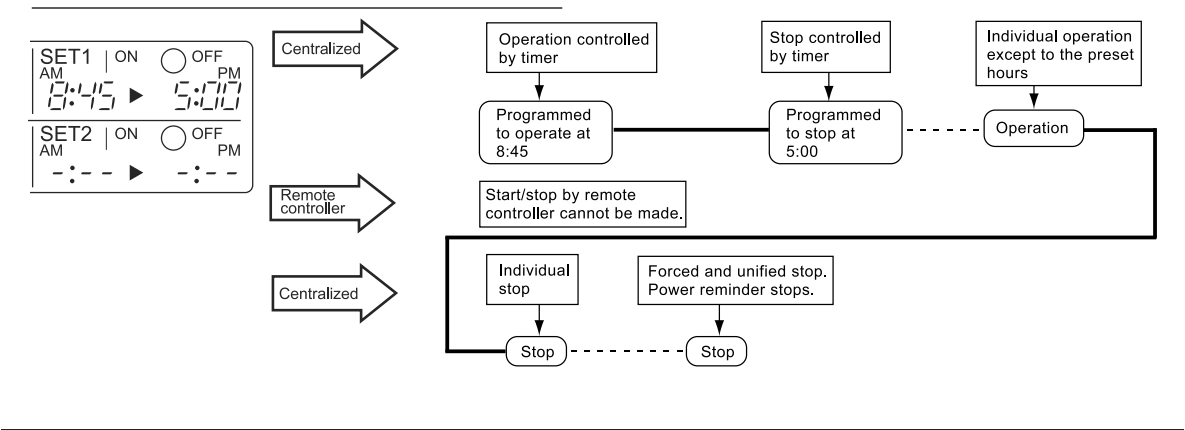


Only OFF control possible by remote controller

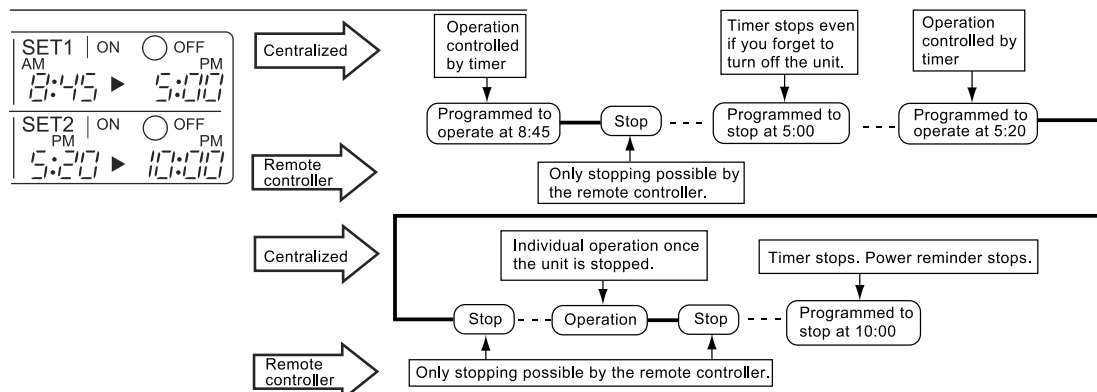


Centralized

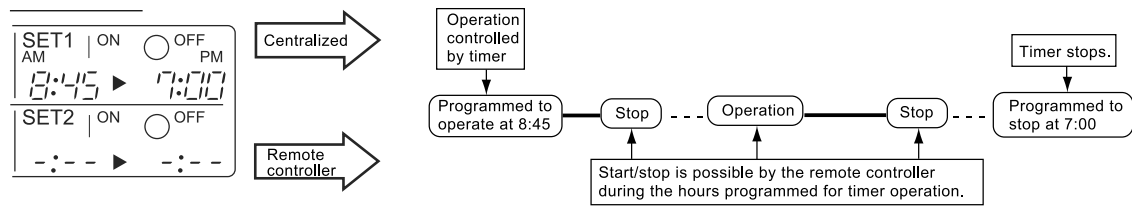

Individual

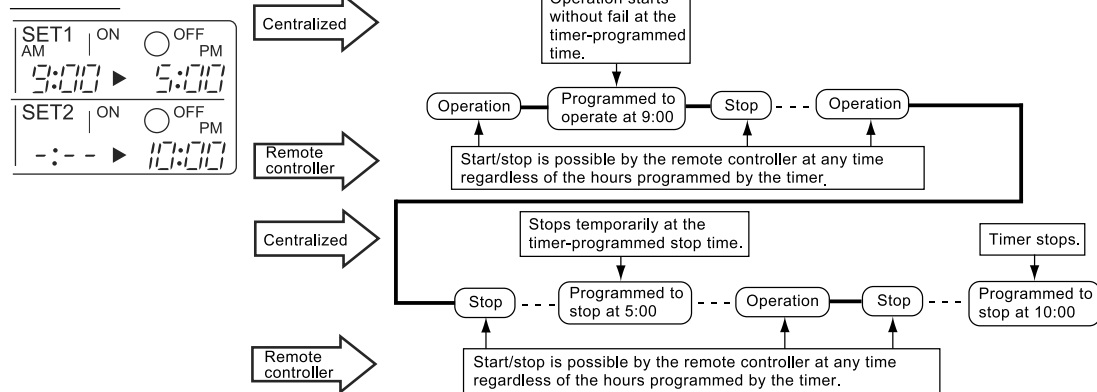

Timer operation possible by remote controller

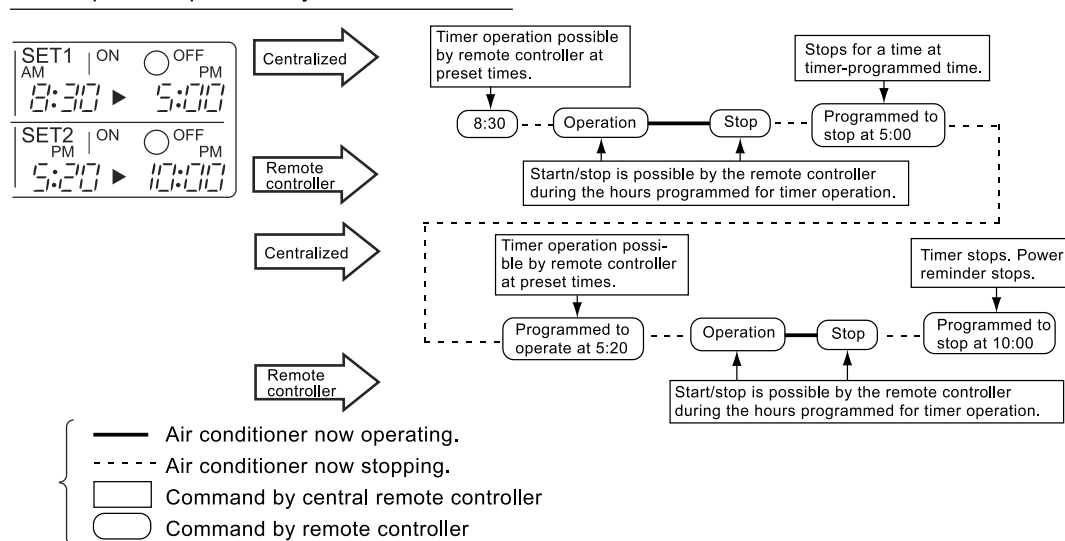

■ Setting operation mode (Fig. 12)

[Registration]

1. Press the **OPERATION MODE SELECTOR BUTTON**. Each time you press this button, the display rotates as shown on the below list.

• List of operations which can be set

In the below list, “○” refers to the acceptable setting, while “×” refers to the not acceptable setting.

Display	A: Zones and groups with no “ ” display.	
	Setting	Contents of setting
	×	
	○	Can be set in individual zones or groups
	○ * 1	Can be set in individual zones or groups
	○	Can be set in individual zones or groups
	○	Can be set in individual zones or groups
	○ * 1	Can be set in individual zones or groups * 3
	○ * 1	Can be set in individual zones or groups
	○	Select this display if you don't wish to set by zone.

Display	B: Zones and groups with a “ ” display.	
	Setting	Contents of setting
	○	To be set by zone * 2
	○	Can be set in individual zones or groups
	×	
	×	The displays are shown by group * 4
	×	The displays are shown by group * 4
	○ * 1	Can be set in individual zones or groups * 3
	○ * 1	Can be set in individual zones or groups
	○	Select this display if you don't wish to set by zone.

*1: Setting may not be acceptable depending on the type of indoor unit with which this unit is connected.

*2: In zone control, the units run in temperature adjustment mode (heating or cooling) for the outdoor system for the groups registered to those zones. Heating or cooling selection is not available.

*3: or or

Changing the ventilation mode cannot be done in the zone screen. Changing the ventilation mode should be done in the individual screen.

*4: In group control, the units run in temperature adjustment mode (heating or cooling) for the group outdoor system. Heating or cooling selection is not available.

• The Zone consists of the following two cases.

A. Zone without display “ ”

The group with master remote controller setting exists in this zone.

Setting the master remote controller enables cool/heat selection.

Operations other than cool/heat operations can also be set for some operations. For further details, see the list on the left.

B. Zone with display “ ”

No group with master remote controller setting exists in this zone.

The cool/heat selection is not available because the master remote controller has not been set.

Some operations other than cool/heat operations can be set. For further details, see the list in the left.

See page 20 if the display “ ” is flashing.

- Fan operation can be performed for each zone using the central remote controller even if there is no cooling/heating selection right during cooling or heating. Also, if a Ventiair is connected in the zone, ventilation and ventilation cleaning operation is possible. See the included operating manuals for details.
- When the indoor unit is in heat operation, change the setting to FAN operation through the central remote controller; then, you can switch the fan speed to the extremely low fan speed. Warm air may blow if any other indoor unit belonging to the same system is in heat operation.
- The indoor fan stops during defrost/hot start.
- DRY cannot be set from the central remote controller.

■ Group monitoring (Fig. 13)

Utilize the group monitor function in each of the following cases:

1. Check the malfunction code. (See the next page.)
2. Check the group that requires cleaning of the air filter and air cleaner element. (See page 21.)
3. Change the setting of the master remote controller. (See page 20.)
4. Check the group(s) sharing the same outdoor unit. Or, check the particular group(s) with the master remote controller setting. (See page 20.)
5. Check the conditions of other individual groups.

When in zone screen

The zone screen will revert to the individual screen automatically if nothing is done in it for one minute.

[Registration]

1. Press the “ALL/INDIVIDUAL” button to switch to the “INDIVIDUAL” screen.

2. Using the arrow key, move the “” to select the unit to be monitored.


Keeping the button pressed down will move it rapidly.

The “” lights up and the status of that unit is displayed in the LCD. The cursor in the screen Fig. 13 has selected unit 2-06.

■ Error diagnosing function (Fig. 14)

This central remote controller is provided with a diagnosing function, for when an indoor unit stops due to malfunction. In case of actuation of a safety device, disconnection in transmission wiring for control or failure of some parts, the operation lamp, inspection display and unit No. start to flash; then, the malfunction

code is displayed. Check the contents of the display, and contact your DAIKIN dealer because the above signs can give you the idea on the trouble area.

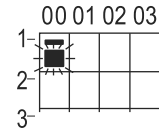


The display “” flashes under the group No. where the indoor unit that has stopped due to malfunction.

[Registration]

1. Press the ARROW KEY BUTTON to call up the group that has stopped due to malfunction.

The unit No. the malfunction code is flashing because of an error failure.

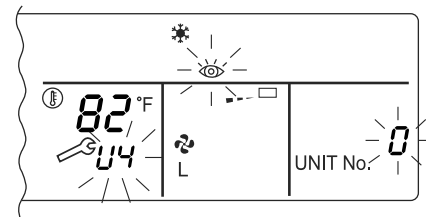

Operation lamp	Maintenance display	Unit No.	Malfunction code	Error content
	●		64	Indoor air thermistor error
	●		65	Outdoor air thermistor error
	●		68	HVU error (Ventiair dust-collecting unit)
	●		6A	Dumper system error
			6A	Dumper system error + Thermistor error
	●		6F	Simple remote controller error
	●		6H	Door switch (Ventiair dust-collecting unit), relay harness fault (Ventiair dust-collecting/humidifier unit)
			94	Ventiair internal transmission error (between total enthalpy – fan unit)
			A0	Indoor unit · external safety device error
			A1	Indoor unit · BEV unit (Sky-Air connection unit) PC board assembly fault
	●		A1	Indoor unit · PC board assembly fault
			A3	Indoor unit · Drain level error (33H)
			A6	Indoor unit · Fan motor (51F) lock, overload
	●		A7	Indoor unit · Fan direction adjustment motor (MA) error
			A9	Indoor unit · BEV unit, electric expansion valve motor (20E) error
	●		AF	Indoor unit · Malfunctioning drain
	●		AH	Indoor unit · Dust-collector error
			AJ	Indoor unit · Insufficient capacity setting, address setting fault

☼	☼	☼	C4	Indoor unit · Liquid piping thermistor (Th2) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	C5	Indoor unit · BEV unit, gas piping thermistor (Th3) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	C9	Indoor unit · Intake air thermistor (Th1) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	CA	Indoor unit · Outlet air thermistor (Th4) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	CJ	Indoor unit · remote controller sensor error
☼	☼	☼	E0	Outdoor unit · Safety device operation
☼	☼	☼	E1	Outdoor unit · PC board assembly fault
☼	●	☼	E1	Outdoor unit · PC board assembly fault
☼	☼	☼	E3	Outdoor unit · High-pressure switch fault
☼	☼	☼	E4	Outdoor unit · Low-pressure switch fault
☼	☼	☼	E9	Outdoor unit · Electric expansion valve motor (20E) error
☼	●	☼	EC	Heat source unit · Intake water temperature inter-lock operation (fan operation)
☼	☼	☼	EF	Outdoor unit · Ice thermal storage unit error
☼	☼	☼	F3	Outdoor unit · Discharge piping temperature error
☼	●	☼	H3	Outdoor unit · High-pressure switch operation
☼	☼	☼	H4	Outdoor unit · Low-pressure switch operation
☼	☼	☼	H9	Outdoor unit · Outdoor air thermistor (Th1) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	H9	Outdoor unit · Outdoor air thermistor (Th1) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	HC	Outdoor unit · Water temperature sensor system error
☼	●	☼	HF	Ice thermal storage unit error, ice thermal storage controller error, error in outdoor unit during ice thermal storage operation
☼	☼	☼	HJ	Outdoor unit · water system fault
☼	☼	☼	J1	Outdoor unit · pressure sensor error
☼	☼	☼	J3	Outdoor unit · Discharge piping thermistor (Th3) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	J3	Outdoor unit · Discharge piping thermistor (Th3) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	J5	Outdoor unit · Intake piping thermistor (Th4) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	J6	Outdoor unit · Heat exchange thermistor (Th2) error
☼	●	☼	J6	Outdoor unit · Heat exchange thermistor (Th2) error Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	J7	Outdoor unit · Header thermistor (Th6) error
☼	☼	☼	JA	Outdoor unit · Discharge piping pressure sensor error
☼	☼	☼	JC	Outdoor unit · Intake piping pressure sensor error
☼	☼	☼	JF	Outdoor unit · Oil temperature sensor (Th5) system error
☼	●	☼	JH	Outdoor unit · Oil temperature sensor (Th5) system error
☼	☼	☼	L0	Outdoor unit · Inverter system fault
☼	☼	☼	L4	Outdoor unit · Inverter cooler fault
☼	☼	☼	L5	Outdoor unit · Ground circuit for compressor motor, short circuit, or power unit short circuit

☼	☼	☼	L6	Outdoor unit · Ground circuit for compressor motor, short circuit
☼	☼	☼	L8	Outdoor unit · Compressor overload, compressor motor wire disconnection
☼	☼	☼	L9	Outdoor unit · Compressor lock
☼	☼	☼	LA	Outdoor unit · Power unit error
☼	☼	☼	LC	Outdoor unit · Transmission error between inverter and outdoor control unit
☼ or ●	☼	☼	M1	Central controller: PC board fault
☼ or ●	☼	☼	M8	Transmission error between central controllers
☼ or ●	☼	☼	MA	Central controller: Incorrect combination
☼ or ●	☼	☼	MC	Central controller: Address setting fault
☼	●	☼	P0	Insufficient gas (thermal storage)
☼	☼	☼	P1	Outdoor unit · Power voltage imbalance, phase loss
☼	☼	☼	P4	Outdoor unit · Power unit temperature sensor error
☼	●	☼	U0	Pressure drop due to insufficient refrigerant, electric expansion valve fault, etc.
☼	☼	☼	U1	Reversed or lost phase
☼	☼	☼	U2	Power voltage error, momentary electrical stoppage
☼	☼	☼	U4	Transmission error between indoor unit/BEV unit and outdoor/BS unit, Transmission error between outdoor unit and BS unit
☼	☼	☼	U5	Transmission error between remote controller and indoor control unit
●	☼	●	U5	Remote controller board fault or remote controller setting fault
☼	☼	☼	U6	Transmission error between indoor units
☼	☼	☼	U7	Transmission error between outdoor units Transmission error between outdoor unit and ice thermal storage unit
☼	●	☼	U7	Transmission error between outdoor units (cooling/heating batch, low-noise operation)
☼	☼	●	U8	Transmission error between master remote controller and slave remote controller (slave remote controller error) Incorrect combination of indoor unit and remote controller within a single system (model)
☼	☼	☼	U9	Transmission error between indoor unit/BEV unit and outdoor unit within a single system Transmission error between BS unit and indoor unit/BEV unit and outdoor unit within a single system
☼	☼	☼	UA	Incorrect combination of indoor, BS, and outdoor units within a single system (model, number of units, etc.) Incorrect combination of indoor unit and remote controller (remote controller in question) BS unit connection position fault
☼	●	☼	UC	Central control group numbers overlap
☼	☼	☼	UE	Transmission error between indoor unit and central controller
☼	☼	☼	UF	Unset system, incorrect settings between BEV unit and indoor unit
☼	☼	☼	UH	System fault

■ error codes (in outline font) do not display “maintenance” and the system will run, but please check the content of the display and contact your dealer.

■ Setting master remote controller (Fig. 15)

You must set the master remote controller of the operation mode for one of the indoor units, if two or more such indoor units with the remote controller are connected with the outdoor unit where the operation modes such as cool/heat operation and FAN operation can be set by remote controller and central remote controller.

 
1. Preparations

When you want to fix settings


- Check the particular group with the master remote controller setting for the refrigerant system you wish to reset. (See the below.)

- Call up the group without the display “” (See page 16.)


➡ Hold the OPERATION MODE SELECTOR BUTTON down for about four seconds while the above group is being called up.

The display “” flashes on the liquid crystal display of the remote controller for all the groups sharing the same outdoor unit or BS unit.

When you turn on the power switch for the first time, the display “” flashes.

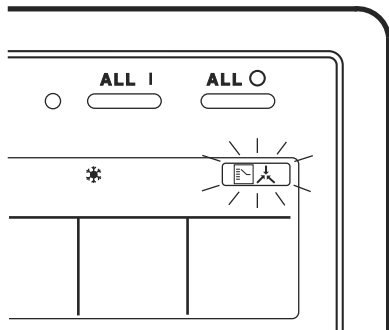

 
2. Setting selection right

Pull up the desired group to set the master remote controller, and ➡ press the OPERATION MODE SELECTOR BUTTON. The master remote controller is set for this group, and the display “” goes out. The display “” appears for the other groups. Setting is finished now.

When switching operation

- In case of operation switch

 Call up the zone including the group with the setting of master remote controller.

(Zone without the display “”)

➡ Press the OPERATION MODE SELECTOR BUTTON several times, and switch to the desired operation mode.

Each time you press it, the display is switched to “” “” “” and “--” in sequence.

NOTE

- However, the displays “” “” and “VENTILATION MODE” may appear in some zones, depending on the type on indoor unit with which they are connected.

(VENTILATION MODE)



[System Display]

1. Test run mode is necessary to display the system display.
2. In order to turn on test run mode, select the appropriate air conditioner on the individual screen with the cursor and then set its operation mode to either cooling or heating. (It makes no difference if the air conditioner is running or not running while this operator is being performed.)
3. Press the “inspection/test run” button twice to put it into test run mode.
4. Pressing the “inspection/test run” button for four or more seconds in test run mode will display ➡ the “REF CIRCUIT.”

REF

CIRCUIT

1

1-03

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15

1

2

3

4

1	■			■	■	■											
2			■	■													
3																	
4																	

Call the unit whose system you wish to look up using the arrow keys.

The “” on all groups in the same system as the displayed group will light up.

Of those, the “” display in all groups which have cooling/heating selection privilege will blink.

	00	01	02	03	04	05	06	07	0
1-									
2-									
3-									

In this example, individual units 1-00, 1-03, 1-05, 1-06, 1-07, 2-02, and 2-03 are in the same system, and 1-05 has the cooling/heating selection privilege.

To look up other systems, call up all the units you wish to look up using the arrow keys.

Pressing the inspection/test run button one more time gets rid of the system display and ends it.

The unit will enter the individual screen automatically if nothing is done for one minute in the system display screen.

This function may not be available for all connected outdoor units, in which case “REF CIRCUIT” will blink. It will also not be correctly displayed if DIII-NET extension ADP is used.

■ Display of time to clean (Fig. 16)

This central remote controller displays the time to clean the air filter or air cleaner element for each group or any given group by utilizing two types of signs. The display “” tells the time to clean the air filter or the air cleaner element of some group.

If a cleaning sign is displayed

A filter or element in some group is ready to be cleaned.

1.  Press the ARROW KEY BUTTON, and search the groups displaying “” or “” (The group may be plural.)

Clean or change the air filter or air cleaner element.

For further details, see the operation manual attached to each indoor unit. (Clean or change the air filter or air cleaner element of all the groups displaying “” or “”.)

2.  Press the FILTER SIGN RESET BUTTON, and the display “/” disappears. (Including all the groups where the air filter has been cleaned.)

NOTE

Be sure to check the display “” “/” has disappeared at this point. The appearance of the above display is a sign that the air filter or air cleaner element of some group still needs cleaning.

INSTALLATION TABLE


When installing the equipment, mark the zone No. of each group and installation location in the below table.

Setting group No.

(Setting is not possible unless power is activated to both the central remote controller and indoor unit.)


Operated by remote controller

- 1. Activate power to both the central remote controller and indoor unit.
- 2. While in the normal mode, hold down the “ ” button for a minimum of 4 seconds. The unified ON/OFF controller will enter the FIELD SET MODE.
- 3. Select the MODE No. “ ” with the “ ” button.
- 4. Use the “ ” button to select the group No. for each group. (Group No. increases in the order of 1-00, 1-01 ... 1-15, 2-00, ... 8-15.)
- 5. Press “ ” to set the selected group No.
- 6. Press “ ” to return to the NORMAL MODE.

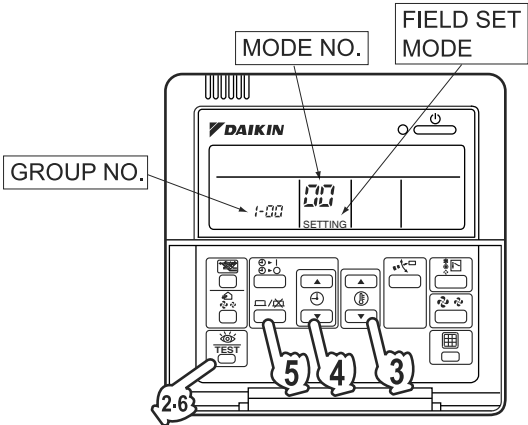

Operated by simplified remote controller


- 1. Activate power to both the central remote controller and indoor unit.
- 2. Remove the upper part of the remote controller.
- 3. Press the BS6 BUTTON (field set) on the PC board. The controller will enter the FIELD SET MODE.
- 4. Select the MODE No. “ ” with the BS2 BUTTON and BS3 BUTTON (temperature setting).
- 5. Use the BS9 BUTTON (set A) and BS10 BUTTON (set B) to select the group No. for each group. (Group No. increases in the order of 1-00, 1-01 ... 1-15, 2-00, ... 8-15.)
- 6. Press BS7 BUTTON (set/cancel) to set the selected group No.
- 7. Press BS6 BUTTON (field set) to return to the NORMAL MODE.

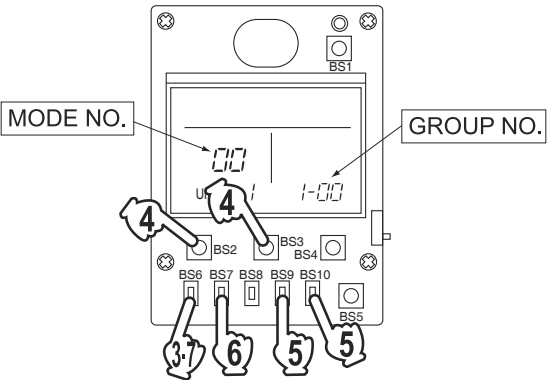

Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																
Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																

Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																
Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																


OPTIONAL ACCESSORIES

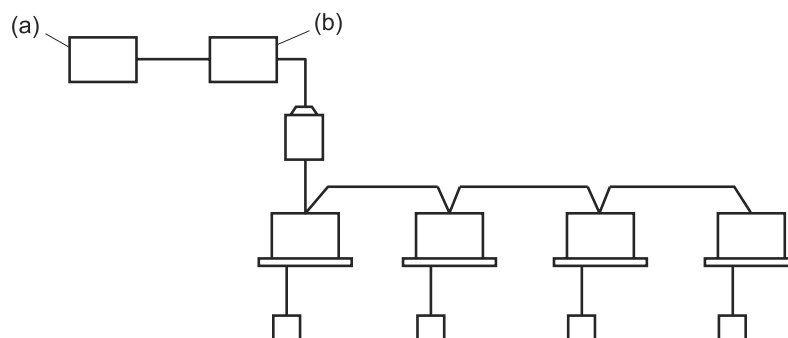

You can perform the normal operation, take off the malfunction contact point and unified start/stop by contact point, all by connecting this unit with the unification adaptor for computerized control. For further details, ask your DAIKIN dealer.

(a) Unification adaptor for computerized control (b) Central remote controller

DOUBLE CENTRAL REMOTE CONTROLLERS

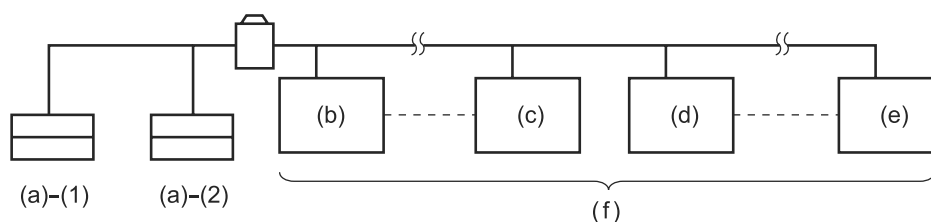

With two central remote controllers, centralized control (indoor units) is possible from different locations.

(a) Central remote controller (b) Group No. 1 - 00 (c) Group No. 1 - 15 (d) Group No. 2 - 00
(e) Group No. 4 - 15 (f) A maximum of 64 groups

Note)


- For control alignment and settings for double central remote controllers, contact your dealer.

SPECIFICATIONS

■ Specifications

Power supply	1 ~ 50/60Hz, 100V – 240V
Power consumption	Max. 8W
Forced ON/OFF input	Continuous “a” contact Contact current: approximately 10mA
Size	180 (W) × 120 (H) × 64.5 (D)
Weight	420g

■ Outline drawings

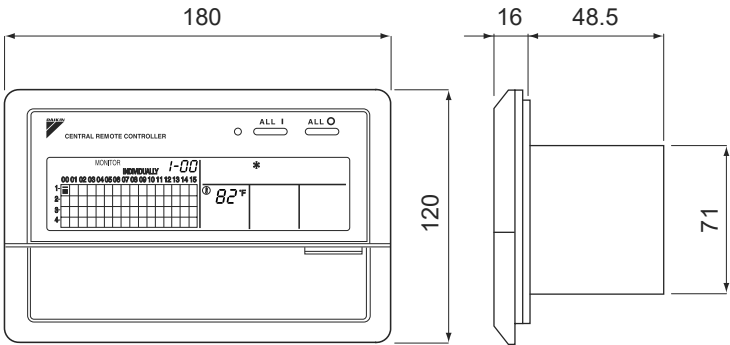

When using this unit an electric parts box of KJB311A is required.
For installation, a steel electric parts box to be embedded is mandatory.

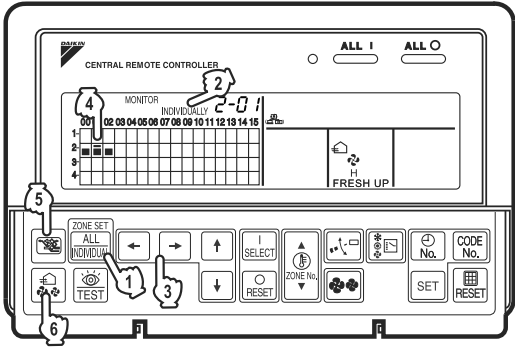


Fig. 9

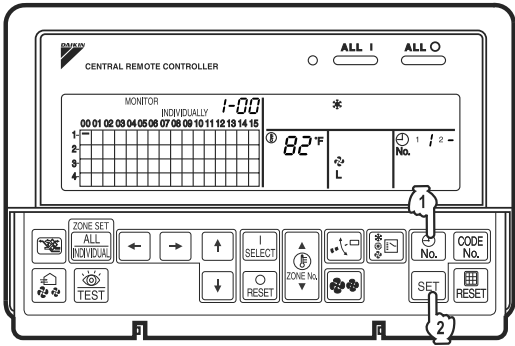


Fig. 10

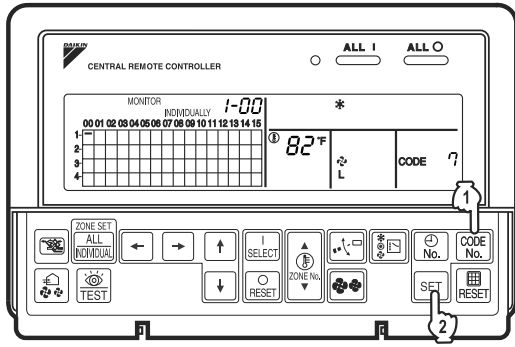


Fig. 11

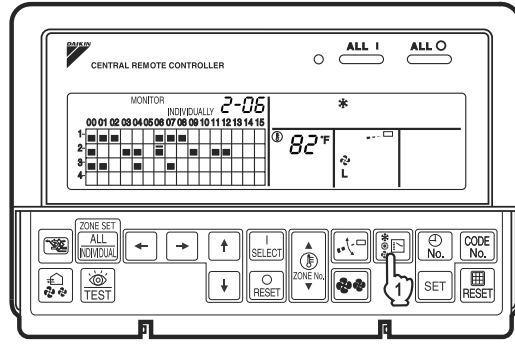


Fig. 12

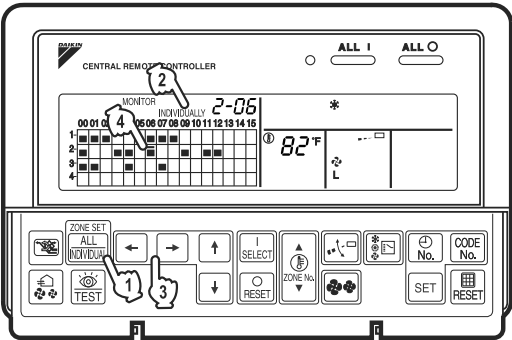


Fig. 13

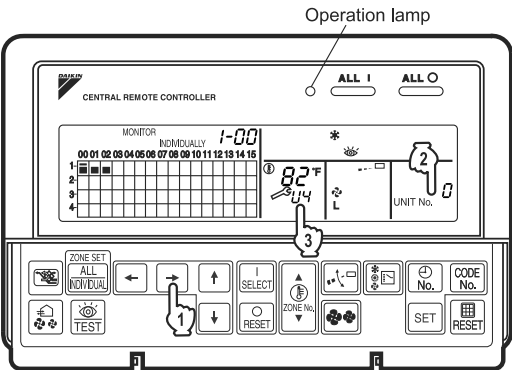


Fig. 14

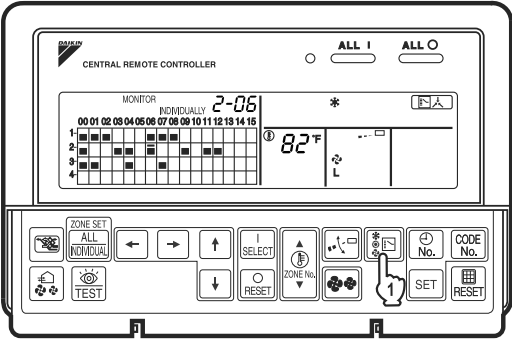


Fig. 15

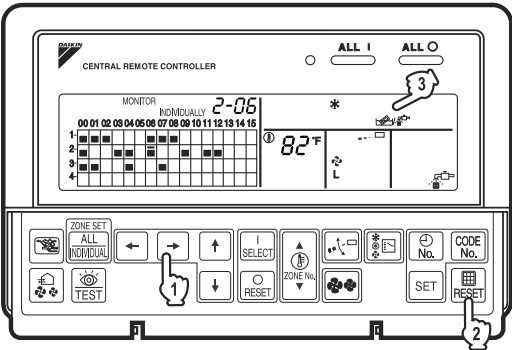


Fig. 16

14.10 <DST301BA61> Schedule Timer Controller (Installation)

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained. Also, inform customers that they should store this installation manual along with the operation manual for future reference. This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

-  **WARNING** Indication a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** Indication a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** Indication situation that may result in equipment or property-damage-only accidents.

WARNING

Ask your dealer or qualified personnel to carry out installation work. Do not try to install the machine by yourself.
Improper installation may result in water leakage, electric shocks or fire.

Perform installation work in accordance with this installation manual.
Improper installation may result in water leakage, electric shocks or fire.

Be sure to use only the specified accessories and parts for installation work.
Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.

Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.
Improper installation work may result in the equipment falling and causing accidents.

Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual.
An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.

Make sure that all wiring is secured, the specified wires and used, and no external forces act on the terminal connections or wires.
Improper connections or installation may result in fire.

When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the electric parts box lid can be securely fastened.
Improper positioning of the electric parts box lid may result in electric shocks, fire or the terminals overheating.

Before touching electrical parts, turn off the unit.

Ground the air conditioner. Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire.
Incomplete grounding may result in electric shocks.

When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air.

Do not reconstruct or change the settings of the protection devices.
If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may result.

Do not touch the switch with wet fingers.
Touching a switch with wet fingers can cause electric shock.

Install an earth leak circuit breaker, as required.
If an earth leak circuit breaker is not installed, electric shock may result.

Do not install the air conditioner or the remote controller in the following locations:

- (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen
Plastic parts may deteriorate and fall off or result in water leakage.
- (b) where corrosive gas, such as sulfurous acid gas, is produced
Corroding copper pipes or soldered parts may result in refrigerant leakage.
- (c) near machinery emitting electromagnetic waves
Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the equipment.
- (d) where flammable gases may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.
Operating the unit in such conditions may result in fire.

CISPR 22 Class A Warning.

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

 CAUTION

Be very careful about product transportation.

Safely dispose of the packing materials.

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

Do not turn off the power immediately after stopping operation.

Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

 NOTE

Install the indoor and outdoor units, power supply wiring and connecting wires at least 3.5ft. away from televisions or radios in order to prevent image interference or noise.

(Depending on the radio waves, a distance of 3.5ft. may not be sufficient enough to eliminate the noise.)

Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps. (inverter or rapid start types)

Install the indoor unit as far away from fluorescent lamps as possible.

This unit is a class A product.

In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.

1 ACCESSORIES

Check the following accessories are included in the kit before installation.

Body	1	Installation screws (M4 × 16)	2
Operation manual	1	Attached electric wire (for individual use)	1
Installation manual*	4	Crimp style terminal (for individual use)	2

For Installation, a electrical box to be embedded is necessary (part to be procured in the field/with covers).


* DST301BA61 includes only one installation manual.

2 INSTALLATION AND INITIAL SETTING

1. Remove the upper part of the remote controller.

- Insert a (–) screwdriver (2 locations) into the recess between the upper part and the lower part of the remote controller and twist the screwdriver lightly.


(The PC board is attached with the upper part of the remote controller. Do not damage electric parts with a screwdriver, etc.)

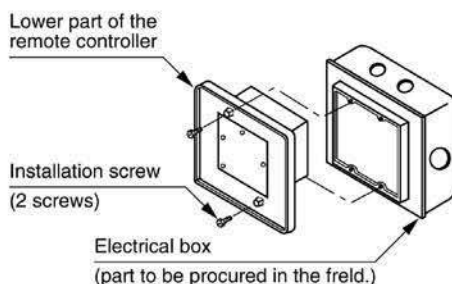

- Attach the lower part to the electrical box (part to be procured in the field) with the provided installation screws.

(Select a flat face as a installation place. Do not tighten the installation screws excessively not to damage the lower part of the remote controller.)

For part to be procured in the field electrical box, use KJB212AA (optional accessory).

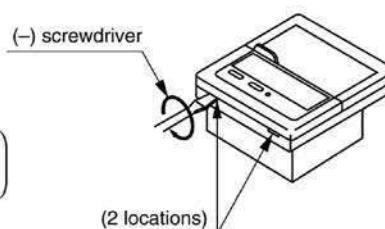

2. Initial setting


- Setting connector for individual use (X1A) (Factory set : OFF) (Set for individual use only)

- For individual use of schedule timer
Insert the connector attached with the body case on the PC board.
- For combined use with other optional controllers for centralized control
Do not change the factory setting.

- Control mode selector (SS2) (Set for individual use only)

By changing the switch, setting mode of individual and centralized operation is available.

Note) When used with other optional controllers, control mode of central remote controller and unified ON/OFF controller have the priority.

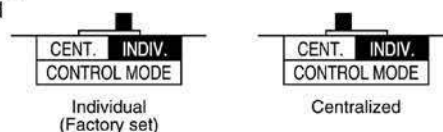


- Setting of the sequential operation function

The schedule timer is equipped with a sequential operation function that sequentially turns indoor units on in 2-second intervals during unified operation.

(Sequential operation is factory set to "ON.")

 
To switch sequential operation ON or OFF, set as follows.



Note) The sequential operation function is designed to reduce the load on the power supply equipment, but does not guarantee that compressors will not be started simultaneously. You cannot therefore count on a capacity reduction effect by power supply equipment breaker selection.


④ Forced reset switch (SS1)

When changing the setting of the connector for individual use, etc., the switch can be reset simply by setting it to the reset side once and returning to the normal side. This procedure enables to reset without turning off the power. (Set the normal side at normal operation.)

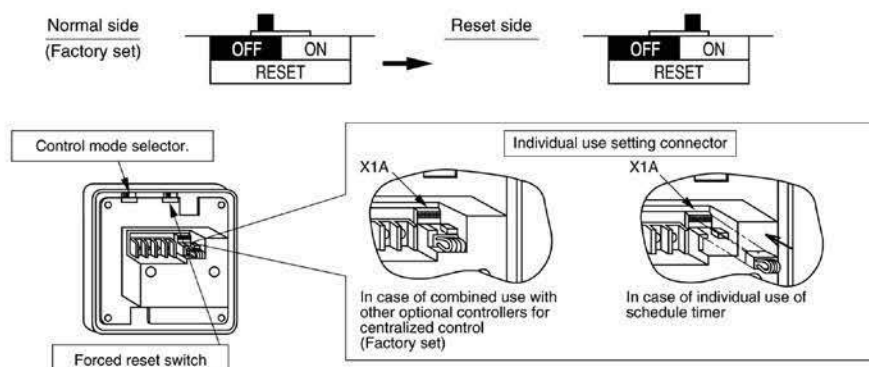


⑤ Setting for special function

When you want to have a programmed operation of a part of indoor units by using only schedule timer, cut off JP1 and supply the power again. You can have a programmed operation of the indoor units set the address for central control by local remote controller.

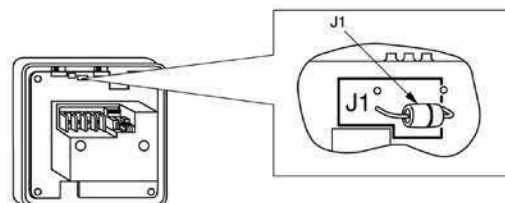

3. Transmission wiring

- In case of individual use of schedule timer**
Connect terminals of the schedule timer (F1, F2) with terminals of the indoor unit (F1, F2). Connect terminals of the schedule timer (D1, D2) and the connector on the indoor unit PC board, using the attached electric wire and crimp style terminals. Prevent the connection part of crimp style terminal from getting out of the electric parts box of indoor unit.
- In case of combined use with other optional controllers for centralized control**
Connect terminals of the schedule timer (F1, F2, D1, D2) and the terminals of the central remote controller (or unified ON/OFF controller).

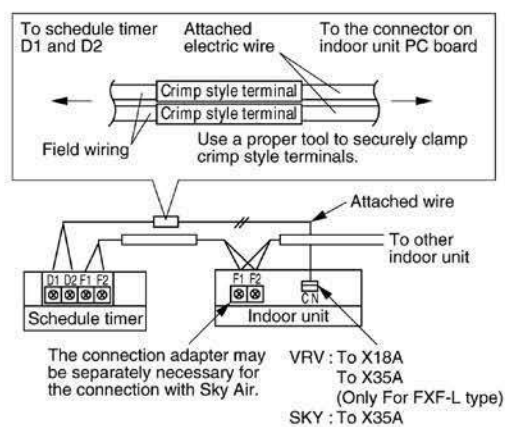


Wiring specifications

	F1, F2	D1, D2
Wiring	Sheathed wire (2-wire)	Sheathed wire (2-wire)
Gauge	0.75 ~ 1.25mm ²	0.75 ~ 1.25mm ²
Length	Max. 1000m	Max. 150m

NOTES:

- Electrical box and transmission wiring are not attached.
- Do not touch the PC board with your hand.
- Keep transmission wiring at least 50 mm away from power supply wiring to avoid malfunctions.


4. Install the upper part of the remote controller as before.

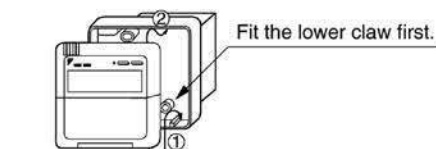

3 SETTING GROUP NO. FOR CENTRALIZED CONTROL

Set the group number of each group of the indoor unit from the remote controller. (In case of no remote controller, also connect the remote controller and set the group No. Then, remove the remote controller.)

- (1) Turn ON the power of the indoor unit and SCHEDULE TIMER.
(Unless the power is ON, no setting can be made.)
Check that the installation and electrical wiring are correct before turning the power supply ON.
(When the power supply is turned ON, all LCD appear once and the unit may not accept the operation for about one minute with the display of "88".)
- (2) While in the normal mode, hold down the " " button for a minimum of 4 seconds.
The remote controller will enter the FIELD SET MODE.
- (3) Select the MODE No. " " with the " " button.
- (4) Use the " " button to select the group No. for each group.
(Group numbers increase in the order of 1-00, 1-01, ... 1-15, 2-00, ... 8-15.)
- (5) Press " " to set the selected group No.
- (6) Press " " to return to the NORMAL MODE.

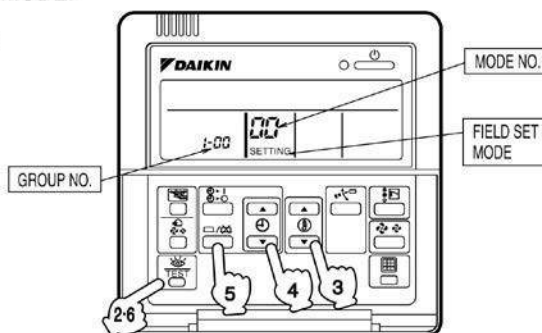

- NOTES)
- In case of individual use of schedule timer
Group number setting is not necessary. It is automatically set when turning power supply ON.
 - See the instruction manuals which came with the VentiAir and adapters (i.e., multi-purpose adapters) for details on their Group No. settings.


NOTICE Be sure to keep the operation manual for maintenance.

4 TEST OPERATION


Refer to the installation manual attached to the outdoor unit.

In case the schedule timer is used individually and the wiring is changed after the system has been operated, reset the power after energizing for more than five minutes.
It may not be possible to control the unit from the schedule timer.

14.11 <DST301BA61> Schedule Timer Controller (Operation)

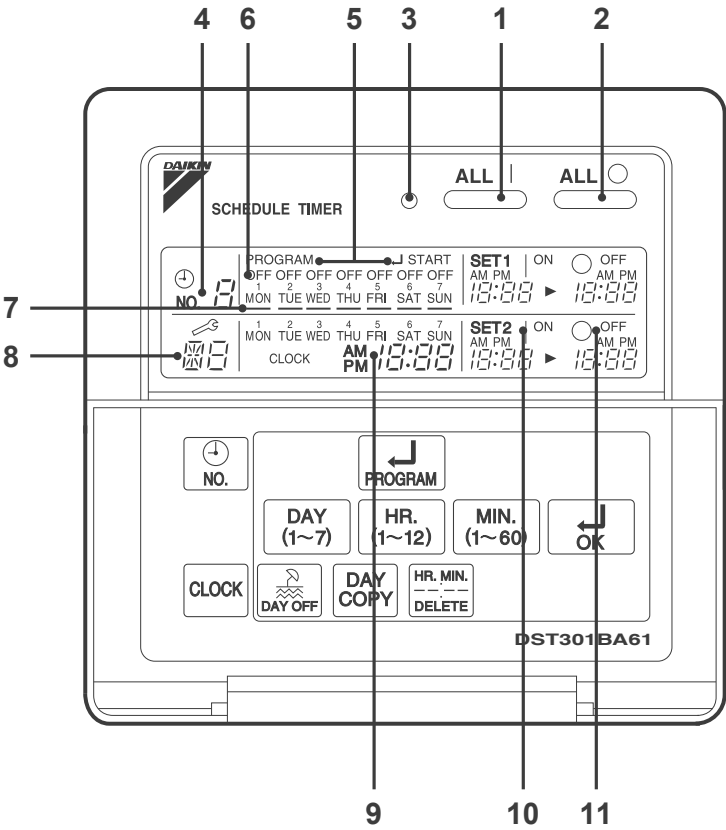


1

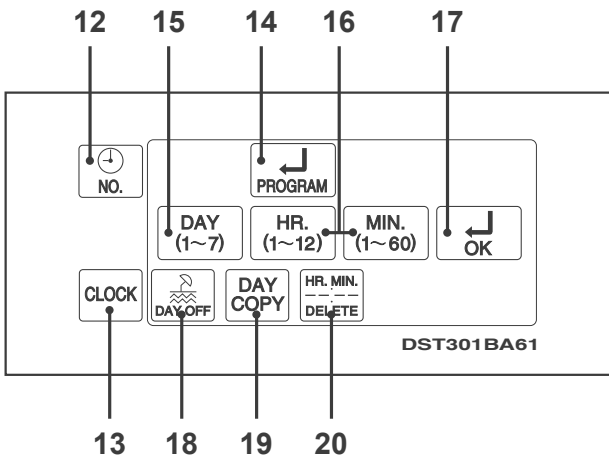


2


[1]

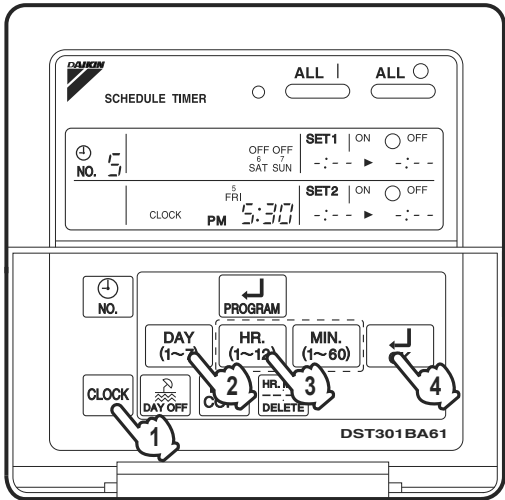


3

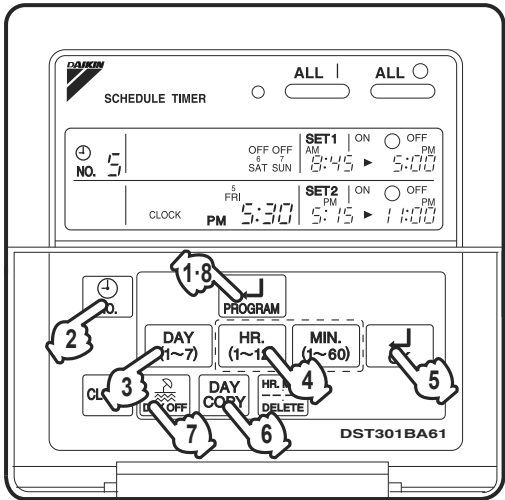


4

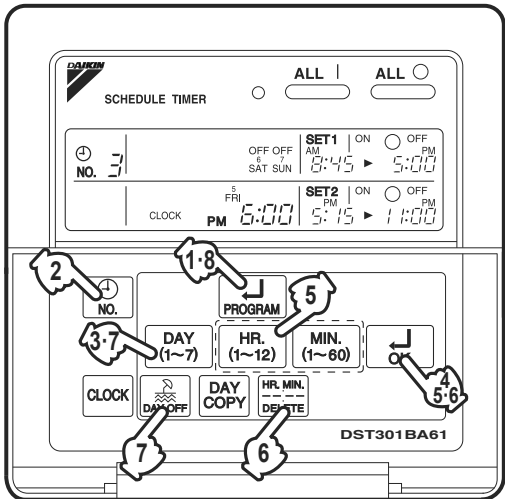

5

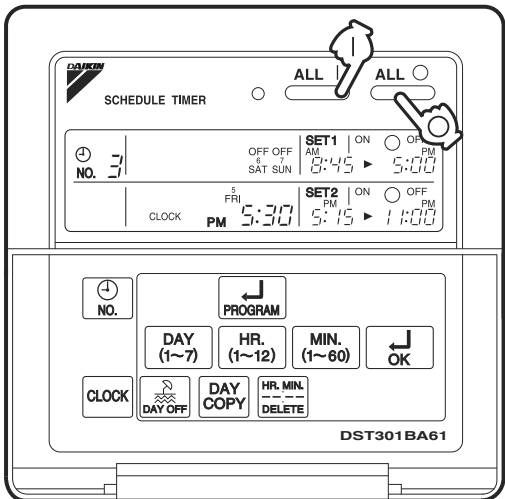

6

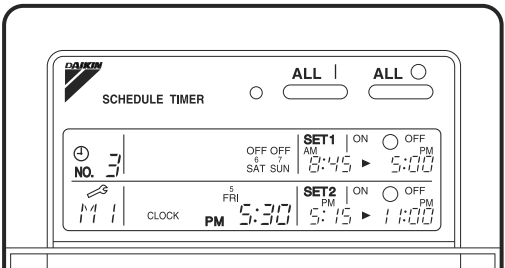

7

[2]

SAFETY CONSIDERATIONS

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation.

Please instruct the customer on how to operate the unit and keep it maintained.

Also, inform customers that they should store this installation manual along with the operation manual for future reference.

This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

 **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **NOTE** Indicates situation that may result in equipment or property-damage-only accidents.

Keep these warning sheets handy so that you can refer to them if needed.

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

WARNING

In order to avoid electric shock, fire or injury, or if you detect any abnormality such as smell of fire, turn off power and call your dealer for instructions.

Ask your dealer for installation of the air conditioner.

Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.

Ask your dealer for improvement, repair, and maintenance.

Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.

Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.

Ask your dealer to move and reinstall the air conditioner or the remote controller.

Incomplete installation may result in a water leakage, electric shock, and fire.

Never let the indoor unit or the remote controller get wet.

It may cause an electric shock or a fire.

Never use flammable spray such as hair spray, lacquer or paint near the unit.

It may cause a fire.

Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.

Use of wire or copper wire may cause the unit to break down or cause a fire.

Never inspect or service the unit by yourself.

Ask a qualified service person to perform this work.

Cut off all electric waves before maintenance.

Do not wash the air conditioner or the remote controller with excessive water.
Electric shock or fire may result.

Do not install the air conditioner or the remote controller at any place where flammable gas may leak out.

If the gas leaks out and stays around the air conditioner, a fire may break out.

Do not touch the switch with wet fingers.
Touching a switch with wet fingers can cause electric shock.

CISPR 22 Class A Warning:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

— CAUTION —

After a long use, check the unit stand and fitting for damage.

If they are left in a damaged condition, the unit may fall and result in injury.

Do not allow a child to mount on the unit or avoid placing any object on it.

Falling or tumbling may result in injury.

Do not let children play on and around the unit.

If they touch the unit carelessly, it may result in injury.

Do not place a flower vase and anything containing water.

Water may enter the unit, causing an electric shock or fire.

Never touch the internal parts of the controller.

Do not remove the front panel. Some parts inside are dangerous to touch, and a machine trouble may happen.

For checking and adjusting the internal parts, contact your dealer.

Avoid placing the controller in a spot splashed with water.

Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.

Do not operate the air conditioner when using a room fumigation - type insecticide.

Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.

Safely dispose of the packing materials.

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

Do not turn off the power immediately after stopping operation.

Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

The appliance is not intended for use by young children or infirm persons without supervision.

The remote controller should be installed in such away that children cannot play with it.

— NOTE —

Never press the button of the remote controller with a hard, pointed object.

The remote controller may be damaged.

Never pull or twist the electric wire of the remote controller.

It may cause the unit to malfunction.

Do not place the controller exposed to direct sunlight.

The LCD display may get discolored, failing to display the data.

Do not wipe the controller operation panel with benzine, thinner, chemical dustcloth, etc.

The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.

Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.

CONTENTS

SAFETY CONSIDERATIONS.....	1	Change and cancellation of no. of programmed time.....	7
FEATURES AND FUNCTIONS.....	3	Manual operation.....	9
NAMES AND FUNCTIONS OF OPERATING SECTION.....	4	Operation control code.....	9
OPERATION.....	5	Error diagnosing function.....	9
Setting present time.....	5	QUESTION AND ANSWER.....	10
Setting no. of programmed time.....	6	SPECIFICATIONS.....	12
		Specifications.....	12
		Outline drawings.....	12

FEATURES AND FUNCTIONS

■ **Operation controlled by programmed time**
Operating time and stopping time can be set to the minute by each day of the week. The operating and stopping patterns can also be set in schedule according to the time slot given twice a day in tune with the uses.



See page
5—9.

■ **Unified Operation/Stop**
By using this schedule timer, the unified operation/stop of the indoor unit can be executed manually regardless of the No. of programmed time in operation.



See page
9.

• **When used in conjunction with central remote controller (Optional Accessory)**
The operation controlled by programmed time can be set for up to eight different patterns (timer No. 1 – 8). Each schedule pattern can be also selected.

NAMES AND FUNCTIONS OF OPERATING SECTION (Fig. 1, 2)

1	UNIFIED OPERATION BUT- TON “ ALL ”
	Press this button to perform the unified operation regardless of the No. of programmed time.
2	UNIFIED STOP BUTTON “ ALL ○ ”
	Press this button to perform the unified stop regardless of the No. of programmed time.
3	OPERATION LAMP (RED) The light turns on during the operation of the indoor unit.
4	DISPLAY “ ⌚ NO. ” (TIME NO.) Displays the time No. only when used in conjunction with the central remote controller.
5	DISPLAY “PROGRAM ↵ START.” (PROGRAMMING START) The light turns on when the timer is programmed.
6	DISPLAY “ OFF ” (HOLIDAY SETTING) Lights above the day of the week set as holiday. The operation controlled by timer is not available on that day.
7	DISPLAY “ — ” (SETTING OF DAYS OF A WEEK) Flashes below the day of the week programmed.
8	DISPLAY “ ⚠ ” (MALFUNCTION CODE) Displays the contents of malfunction during the stop due to malfunction.
9	DISPLAY “ M O N T U E S D A Y F R I S A T S U N ” (PRESENT TIME) Displays the present day of the week and time.
10	DISPLAY “ AM PM ON ” (PROGRAMMED TIME OF SYSTEM START) Displays the time programmed to start.
11	DISPLAY “ OFF AM PM ” (PROGRAMMED TIME OF SYSTEM OFF) Displays the time programmed to stop.
12	TIME NO. BUTTON “ ⌚ NO. ” See page 5–9.
13	CLOCK ADJUSTING BUTTON “ CLOCK ” Press this button to set the present time.
14	PROGRAMMING START BUTTON “ ↵ PROGRAM ” Press this button to set or check the No. of programmed time. Press it again after you are through with the program.
15	BUTTON FOR SELECTING DAYS OF A WEEK “ DAY (1~7) ” Press this button to select the day of the week.
16	HR./MINUTE BUTTON “ HR. (1~12) MIN. (1~60) ” Press this button to adjust the present time and the programmed time.

17	TIMER ON BUTTON “  ”
	Press this button to set the present time and the programmed time.
18	HOLIDAY SETTING BUTTON “  ”
	Press this button to set holidays.
19	BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY “  ”
	Use this button to set the No. of programmed time same as that of the previous day.
20	PROGRAM CANCELING BUTTON “  ”
	Use this button to set the programmed time to cancel. The display shows “-;--”.
(Note) 1. Please note that all the displays in the figure appear for explanation purpose or when the cover is open.	

OPERATION

■ Setting present time (Fig. 3)

(Example) In case of setting Friday, 5:30 p.m.

1.  Press the **CLOCK ADJUSTING BUTTON**. The present time display flashes.

(NOTE)

 
- The present time needs adjusting in case of turning power supply on for the first time or the occurrence of power failure over the period of 48 hours or more.



2.  Press the **BUTTON FOR SELECTING DAYS OF A WEEK**. Each time the button is pressed, the day display shifts to the right.

(NOTE)

- The display “MON” follows the display “SUN.”




Set the day to Friday.

3.  Set the time with the **HOURLY/MINUTE BUTTON**. Each time the **HOURLY/MINUTE BUTTON** is pressed, the display is put forward minute by minute and hour by hour. When the button is kept pressed, the display is put forward continuously.


(NOTES)

 - After becoming “AM 11:00”, when the button is pressed, the display becomes “PM 0:00”.
- After becoming “59” (minute), when the button is pressed, the display becomes “00” (minute).



Set the time to 5:30 p.m.

 4.  Press the **TIMER ON BUTTON** the moment the time signal of TV, radio, telephone, etc. is heard. The mark “:” flashes, and the clock starts.



Press the **TIMER ON BUTTON** in tune with the time signal at 5:30 p.m.

(NOTES)

- The clock used is of 12-hour type.
- When you turn power supply on, the system may display “88” for about one minute and not start to operate after all the liquid crystal displays appear at a time.
- If the **CLOCK ADJUSTING BUTTON** is pressed by mistake, press it again to return to the original state. As the clock does not stop, the time indicated by the clock is kept correct. In case of power failure within 48 hours, the clock keeps operating by utilizing the built-in battery.

■ Setting no. of programmed time (Fig. 4)

(Example) Time No. 5 (to be programmed only when used in conjunction with the central remote controller)

Monday to Friday:

Operating from 8:45 a.m. till 5:00 p.m.

Operating from 5:15 p.m. till 11:00 p.m.

Saturday and Sunday:

Setting the whole day stop operation (application for holidays) controlled by programmed time.

1. Press the PROGRAMMING START BUTTON. Programming is available. The display "PROGRAM" and "START" appears, and the display of days of a week flashes.




2. Press the TIME No. BUTTON, and select the desired number.

(NOTE)

- Unless used in conjunction with the central remote controller, The TIME No. is not displayed and can not be selected.

Select the TIME No. 5.

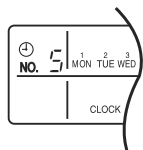

3. Press the BUTTON FOR SELECTING DAYS OF A WEEK, and set the proper day of the week. Each time you press it, the flashing display of days of a week shifts to the right.



Set to Monday.

(1) Setting programmed time

4. Set the programmed time of system start 1 by using the HOUR/MINUTE BUTTON. Each time the HOUR/MINUTE BUTTON is pressed, the display is put forward minute by minute and hour by hour. When the button is kept pressed, the display is put forward continuously.

 
 


Set the "PROGRAMMED TIME OF SYSTEM START 1" at 8:45 a.m.

5. Press the TIMER ON BUTTON, and set the programmed time of system start 1. Each time you press it, the next area to be set flashes.

(NOTE)

- Set the other programmed time in the same procedure.



(2) Set the next day of the week.

Set the day of the week to Tuesday, and copy the program of the previous day (Monday). In the same procedure, set the day of the week to Wednesday through Friday in sequence.

6.  **Press the BUTTON FOR SELECTING DAYS OF A WEEK and set the following day. Press the BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY. The same program as that of the immediately preceding day of the week is set.**

(NOTE)

- Repeat each procedure 3 – 5 in the above when not copying the contents of the previous day.

(3) Holiday setting

7.  **Press the BUTTON FOR SELECTING DAYS OF A WEEK and set one or more days of the week as holiday. Press the HOLIDAY SETTING BUTTON, and the display “OFF” is displayed at the top of the day of the week. If you press it again, the display returns to the original state.**



 
Set Saturday and Sunday as holidays.

8.  **Press the PROGRAMMING START BUTTON, and finish the program setting.**

(NOTES)

- Unless the button is pressed within 20 minutes, the display will automatically revert back to the original state. In this case, setting contents up to the point where the TIMER ON BUTTON (or HOLIDAY SETTING BUTTON or BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY) is pressed will only take effect.
- The display “PROGRAM ↵ START” and the display of days of a week “—” disappears.


- The flashing display goes off, and the No. of programmed time of the present day is displayed. Then the operation controlled by timer starts.
- The operation controlled by timer is executed even while the program is being set.



This is the end of the setting example.

■ Change and cancellation of no. of programmed time (Fig. 5)

(Example) **Time No. 3 (to be set only when used in conjunction with the central remote controller)**

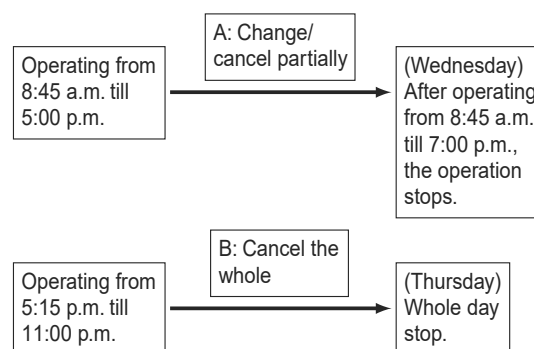

-  **Press the PROGRAMMING START BUTTON. The program setting is ready. The display “PROGRAM ↵ START” appears, and the display of days of a week flashes.**
-  **Press the TIME No. BUTTON, and select the desired No.**



Select the time No. 3.

 
3.  Press the **BUTTON FOR SELECTING DAYS OF A WEEK**, and set the day of the week to be changed. The set No. of programmed time of the day of the week is displayed.



Set the day to Wednesday.


A. Change/cancel partially

4.  Press the **TIMER ON BUTTON** and change, and the display of programmed time flashes. Each time you press it, the next area to be set flashes.




Shift to the display "PROGRAMMED TIME OF SYSTEM OFF 1".

 5.  Press the **HOUR/MINUTE BUTTON** and change the programmed time. Press the **TIMER ON BUTTON**, and finalize the setting of change.



Change the "PROGRAMMED TIME OF SYSTEM OFF 1" to 7:00 p.m.

 6.  Press the **PROGRAM CANCELING BUTTON**, and cancel the programmed time. If you press it again, display returns to the original state. Press the **TIMER ON BUTTON** to finalize the cancellation.



Shift to the "PROGRAMMED TIME OF SYSTEM START 2".



Set the "PROGRAMMED TIME OF SYSTEM START 2" to program cancellation.

In the same procedure, cancel the programmed time of system off 2.

B. Cancel the whole

7.  Press the **BUTTON FOR SELECTING DAYS OF A WEEK**, and shift to the day of the week to be canceled. Then, press the **HOLIDAY SETTING BUTTON**, the display "OFF" appears at the top of the particular day of the week. The programmed time is canceled. If you press the button again, the display returns to the original state.



Shift the day of the week to Thursday to set as a holiday.

8. **Press the PROGRAMMING START BUTTON. The program setting is now finished.**

(NOTES)

- Unless the button is pressed within 20 minutes, the display will automatically revert back to the original state. In this case, setting contents to the point where the TIMER ON BUTTON (or HOLIDAY SETTING BUTTON or BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY) is pressed will only take effect.
- To continue the change/cancellation, do not press the PROGRAMMING START BUTTON until all change/cancellation are completed.
- The operation controlled by timer is executed even while the program is being set.

■ Manual operation (Fig. 6)

This schedule timer enables the operation/stop by pressing the UNIFIED OPERATION/STOP BUTTON in addition to the operation controlled by timer (operation/stop according to the programmed time) at any time.

1.  **Press the UNIFIED OPERATION BUTTON, and the OPERATION LAMP turns on.**
2.  **Press the UNIFIED STOP BUTTON, and the OPERATION LAMP is turned off.**

(NOTES)

- The operation automatically stops according to the programmed time of system off even during the manual operation. In the meantime, the operation starts automatically according to the programmed time of system start even during the stop of operation.
- If the unit is used in conjunction with other optional controllers for centralized control, the OPERATION LAMP of the unit that is not under operation control may be turned on or off a few minutes behind schedule. This shows that the signal is being exchanged, and does not indicate any failure.

Operation lamp

- Turn on: The light turns on when any of the indoor units is in operation whether the operation is controlled by timer or by hand.
- Turn off: The light turns off when all the indoor units stop.

■ Operation control code

Two different types of operation control codes can be selected when this kit is used independently (when not used in conjunction with the central remote controller, unified ON/OFF controller, etc.).

Individual

In case where the operation/stop is controlled by both schedule timer and remote controller.

Centralized

The operation is controlled by the schedule timer alone, and the operation/stop is controlled freely with the remote controller during the programmed time.

(NOTES)

- For current settings, contact your DAIKIN dealer.
- To change settings, contact your DAIKIN dealer.
Do not change settings yourself.

■ Error diagnosing function (Fig. 7)


This schedule timer is provided with the malfunction diagnosing function. The malfunction code flashes if there occurs any malfunction in communication, etc. between and among the optional controllers for centralized control. In addition, the operation lamp also flashes if there occurs any malfunction in communication with the indoor unit. Check the contents of the display and contact your DAIKIN dealer because the signals give you the idea of the trouble area.

Operation lamp	Malfunction code	Contents of malfunction
Turn off	M1	Failure of PC board of schedule timer. Fixes The following causes are possible. Check each one. 1. PC board problems
Turn on or off	M8	Malfunction of transmission between each optional controllers for centralized control. Fixes Check all central devices which are connected (e.g., power supply, transmission wiring, etc.).
Turn on or off	MA	Improper combination of optional controllers for centralized control. Fixes The following causes are possible. Check each one. 1. Are all central devices combined correctly? 2. Is the master central connector attached to two or more central devices? 3. Are there 128 or more indoor units connected?

Turn on or off	MC	Address failure of schedule timer. Fixes The following causes are possible. Check each one. 1. Do the control range addresses in the central remote controller overlap? 2. Do the control range addresses in the on/off controller overlap? 3. Are there 2 or more schedule timers connected?
Flash	UE	Malfunction of transmission between indoor unit and optional controllers for centralized control. Fixes Inspect all indoor units which are displaying an error (e.g., power supply, transmission wiring, etc.).
Flash	—	Malfunction in indoor unit (Refer to the malfunction codes of the indoor remote controller, while also read the "CAUTION FOR SERVICING" attached to the indoor unit.)

QUESTION AND ANSWER

Question	Answer
It is possible to make settings twice a day, but is it possible to make only the "off" setting? (To avoid forgetting to turn the unit off.)	Yes. Press the PROGRAM CANCELING BUTTON in the " ^{AM PM} 12:00 ^{ON} " section in order to set it to "OFF".

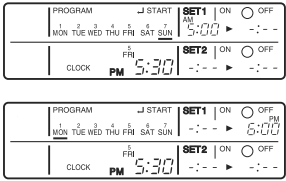Is it possible to set times which straddle days?	Yes, it is possible. Example: Start operation at 5:00 a.m. on Sunday Stop operation at 6:00 p.m. on Monday 	The TIME NO. is not displayed.	The following causes are possible. 1. The TIME NO. is not displayed when using the schedule timer alone. (It can be set if using the central remote controller at the same time.)
The unit does not turn on even though the set "on" time has come. (When using the schedule timer alone)	The following causes are possible. 1. Are the "on" time and the "off" time set to the same time?	The display remains  even though I push the HOUR/MINUTE BUTTON in the timer program settings.	The following causes are possible. 1. Is the day set to a holiday?
The unit does not turn on even though the set "on" time has come. (When using the unit with a central remote controller)	The following causes are possible. Check each one. 1. Was the timer number set with the central remote controller? Was an incorrect timer number set? 2. Is another timer no. set with the central remote controller set for "off" at the same time? 3. Is the operation code set to "remote control permission timer" using the central remote controller or the on/off controller?	I cannot set "central management priority" or "after-push priority" with the schedule timer.	The following causes are possible. 1. Is a central remote controller or on/off controller also installed? * The priority order of the operation codes depends on the central devices which are installed. The below operation codes are set. - Schedule timer Central remote controller is used as well Operation code of the central remote controller - Schedule timer On/off controller is used as well Operation code of the on/off controller - Schedule timer Central remote controller On/off controller is used as well Operation code of the central remote controller
The unit operates even though that day is set as a holiday. (When using the unit with a central remote controller)	The following causes are possible. 1. Is another timer number set with the central remote controller set for "on" at the same time? (If two timer numbers are set, make sure that the settings for holidays and working days do not overlap between the different timer numbers.)		

14.12 <KRP1C76> Wire Renovated Adaptor (Installation)

Wiring Adaptor PCB

Installation Manual

KRP1C76・77

Accessories

Check if the following accessories are included in the kit.


Name	Adaptor PCB	Harness	PCB support	Clamp	Installation manual
Shape					
Quantity	1	1	4	3	1

Note

- Kits vary according to applicable models.
- A special adaptor plate or installation box for adaptor PCB is required for the following models.

FXFQ~AA, FCQ~AA	••• KRP1H98A
FXFQ~AA, FCQ~AA (Self-cleaning filter panel)	••• KRP1J98A
FXZQ~TB, FFA~A	••• KRP1BB101
FXSQ~TB, FXMQ~TB, FBQ~TB, CDMA~A, FDMA~A	••• KRP4A98
- **<Caution>**
 - All wiring must be performed by an authorized electrician. Improper installation may result in water leakage, electric shock or fire.
 - For electric wiring work, refer to "Wiring diagram" attached to the control box cover of indoor unit and this manual. Improper installation may result in water leakage, electric shock or fire.
 - All wiring must be worked after shutting down power supply. Touching the live part may result in electric shock.
 - All field supplied parts and materials and electric works must conform to local codes.
 - A circuit breaker capable of shutting down power supply to the entire system must be installed.
 - When wiring, use the specified wires to make secure connections, and securely fasten the wires to the terminal connections so that no external force is applied to the wires. Incomplete connection or fixing may result in electric shock, heat generation or fire.
 - When wiring, position the wires so that the control box cover can be securely fastened. Improper positioning of the control box cover may result in electric shock or fire.

1 Names of parts

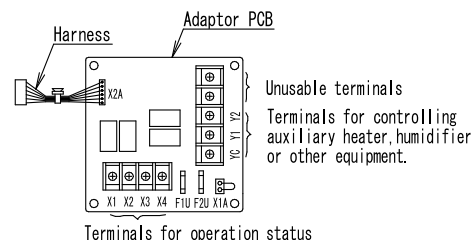


2 Installation

- Installation differs according to models as shown below.
- Install according to the installation manual included in Installation box for adaptor PCB or Adaptor plate.
- Do not bundle low and high voltage wires together.
- Bundle any excess wires with the attached clamps so as to keep loose wires off the indoor unit PCB.

<Ceiling mounted cassette type>

FXFQ~AA FCQ~AA

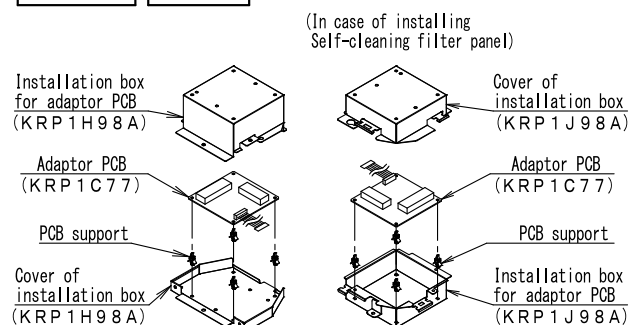


2 Electric wiring

- Refer to the wiring diagram attached to the indoor unit and the installation manual included in Installation box for adaptor PCB or Adaptor plate for detailed information such as wiring routing and treatment before attempting to wire.

(Make sure wires to units do not pass over this adaptor PCB when wiring.)

- Wire the adaptor PCB to the indoor unit as shown below.

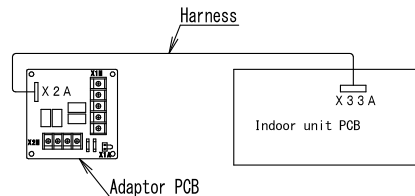


① Thermo-ON and Fan ON status


- Thermo-ON status
Contact terminals X1 and X2 close while the indoor unit is Thermo-ON (call for cooling or heating).

- Fan ON status
Contact terminals X3 and X4 close when indoor unit fan is ON.

Example : Obtaining status

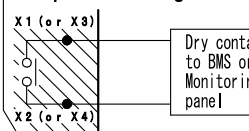


Example : Interlock

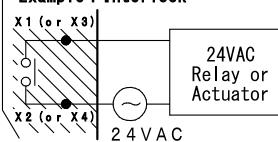


② Interlocking Humidifier and Heater

- Humidifier output (Y2-YC)
• Energized while heating Thermo-ON (call for heating).
- Heater output (Y1-YC)
• Auxiliary heater output with heat pump heating
• Primary heater output when heat pump lockout enabled.

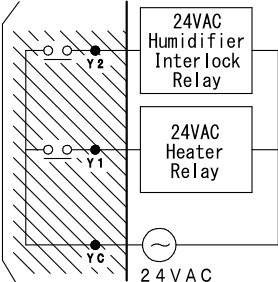


<Ceiling mounted duct type>

FXMQ~TA

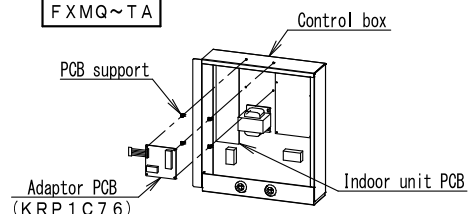

<Ceiling mounted cassette type (2x2)>

FXZQ~TB FFA~A

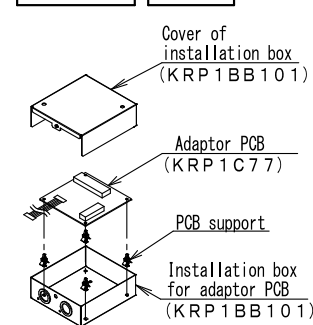


<Ceiling mounted duct type>

FXSQ~TB FXMQ~TB

FBQ~TB CDMA~A

FDMA~A

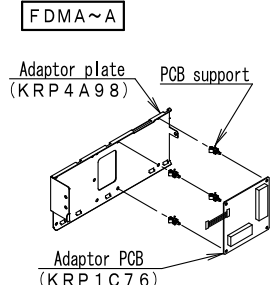

14.13 <KRP928BB2S> Interface Adaptor for DIII-NET

Safety Precautions

- Read these Safety Precautions carefully to ensure correct installation. This manual classifies precautions into WARNING and CAUTION.

WARNING : Failure to follow WARNING is very likely to result in such grave consequences as death or serious injury.

CAUTION : Failure to follow CAUTION may result in serious injury or property damage, and in certain circumstances, may result in a grave consequence.

Be sure to follow all the precautions below ; they are all important for ensuring safety.

WARNING

- Installation should be left to the dealer or another qualified professional.**
Improper installation by yourself may cause malfunction, electrical shock, or fire.
- Install the set according to the instructions given in this manual.**
Incomplete or improper installation may cause malfunction, electrical shock, or fire.
- Be sure to use the standard attachments or the genuine parts.**
Use of other parts may cause malfunction, electrical shock, or fire.
- Disconnect power to the connected equipment before starting installation.**
Failure to do so may cause malfunction, electrical shock, or fire.
- A ground fault circuit interrupter / an earth leakage circuit breaker should be installed.**
If the breaker is not installed, electrical shock may occur.

CAUTION

- Do not install the set in a location where there is danger of exposure to inflammable gas.**
Gas accumulated around the unit at the worst may cause fire.
- To prevent damage due to electrostatic discharge, touch your hand to a nearby metal object (doorknob, aluminum sash, etc.) to discharge static electricity from your body before touching this kit.**
Static electricity can damage this kit.
- Lay this cable separately from other power cables to avoid external electrical noises.**
- After installation is complete, test the operation of the PCB set to check for problems, and explain how to use the set to the end-user.

1. Overview, Features and Compatible Models

This kit is the interface required when connecting the central controller and a Room Air Conditioner. Use of the central controller makes it possible to perform the following monitoring and operations. It is compatible with room air conditioners which have an HA connector S21.

- Run / stop for the central controller and wired remote controller, operating mode selection, and temperature can be set.
- The operating status, any errors, and the content of those errors can be monitored from the central controller and wired remote controller.
- Run / stop for the central controller and wireless remote controller, operating mode selection, and the temperature setting can be limited by the central controller.
- Zone control can be performed from the central controller.
- The unit can remember the operating status of the air conditioner before a power outage and then start operating in the same status when the power comes back on.
- Card keys, operating control panels, and other constant / instantaneous connection-compatible equipment can be connected.
- The Operating / error signals can be read.
- The indoor temperature can be monitored from the iTM / iTC.

Precaution

- When reading the Operating / error signals, a separate external power source (12 V DC) is needed.
- A separate timer power source (16 V DC) is needed when using the schedule timer independently, and not in conjunction with other central controllers.
- The range of temperatures that can be set from the central controller is 18°C to 32°C in cooling and 14°C to 28°C in heating.
- Fan operation cannot be selected from the central controller or wired remote controller.
- Group control (i.e., control of multiple indoor units with a single remote controller) is not available.
- Monitoring is not available of the thermo status, compressor operating status, indoor fan operating status, electric heater, or humidifier operating status.
- Forced thermo off, filter sign display and reset, fan direction and speed settings, air conditioning fee management, energy savings instructions, low-noise instructions, and demand instructions cannot be made.
- Since a stop due to a momentary power failure cannot be detected, automatic operating start may not be possible.


2. Component Parts

This kit includes the following components. Check to ensure that none of these are missing.

Parts	Q'ty	Parts	Q'ty
Kit assy	1	Connection harness (about 1.8m)	1
PCB is in the housing.		Mounting screws	3
		Binding band	6
		Installation manual	2
		Seal	2

3. Names of Parts and Electric Wiring

<Wiring procedure>

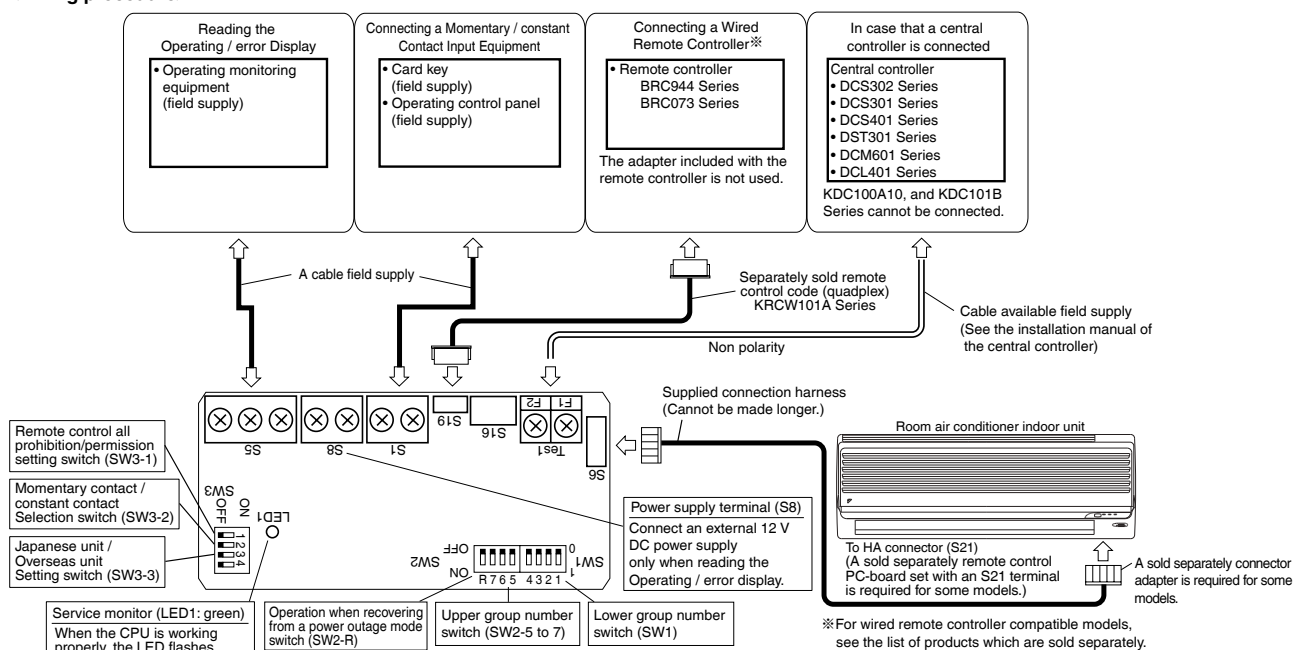

4.Switch Settings

NOTE

Turn the power on after all the switches have been set.
Settings made while the power is on are invalid.

Open the Kit's case and set the switches on the circuit board.

(1) For Overseas / Japanese unit setting (SW3-3)

Room air conditioners, different methods are used for setting the temperature in automatic mode, so this switch needs to be set.

Destination	SW3-3 setting	What Happens
Japan	OFF (Factory setting)	• "Automatic" operation is not available from the central controller. When using "automatic" operation using the wireless remote controller, the central controller displays automatic cooling (heating) and 25°C. Even if the temperature is changed, it will return to 25°C after a while.
Overseas	ON	• "Automatic" operation is available from the central controller.

(2) Group number settings (SW1 and SW2-5 to SW2-7)

Set these when using the central controller. (Set to the ■ side.) Do not set more than one unit to the same number.

Use SW2-R for (3) Settings when recovering from a power outage.

However, these settings do not need to be made when using the schedule timer independently.

(The settings are needed when used in conjunction with another DCS Series central controller.)

In this case, the schedule timer performs an auto address after the power is turned on, so new group numbers are automatically set. Settings made using the switches will be overwritten.

Group NO. Settings table (Enlarged section SW1 and SW2 in "3. Names of Parts and Electrical Wiring")

Group NO. Upper settings SW2				Group NO. Lower settings SW1			
1—		5—		00		04	
2—		6—		01		05	
3—		7—		02		06	
4—		8—		03		07	

NOTE also that a separate timer power source is needed when using the schedule timer independently.
Power source specs: 16 V DC, +10%, -15%, 200mA.

(3) Settings when recovering from a power outage (SW2-R)

This selects whether to restart operation when the power comes back on after a power outage occurred during operation. This setting is given priority in cases where the indoor unit has an auto start ON / OFF jumper. Note also that regardless of whether switch SW2-R is on or off, the operating mode (NOTE), set temperature, fan direction and speed settings, and remote control prohibition n status are stored.

SW2-R setting	What Happens
OFF (Factory setting)	Stops after recovering from a power outage
ON	Stops if the unit was stopped before the power outage and runs if it was running.

(NOTE) The following settings apply to the models below.

Room air conditioner	Mode before the power outage	COOLING	HEATING
	Models with humid heating and dehumidifying functions.	DRY COOLING	HUMID HEATING
	Models with dehumidifying function.		HEATING

(4) Contact input function settings (SW3-1 to SW3-2)

When using contact input (S1), choose one of the following functions.


S1 operating mode	SW3-1 setting	SW3-2 setting	What Happens	Control mode
Instantaneous contact input (factory setting)	OFF	OFF	The operating status of the air conditioner is reversed by an instantaneous input of 100 msec or more.	Last command priority
Constant contact input	ON	ON	Contact - Open to close: air condition runs. Close to open: air conditioner is stopped (NOTE 1).	ON / OFF control is rejected (operate / stop / timer prohibition) (NOTE 2).
Remote control all prohibition/permission input	ON	Invalid	Contact - Open to close: air condition stops. Close to open: no change in operating status.	All remote controller actions are prohibited when the contact is closed. (NOTE 3)

NOTE1: Since central controller uses last command priority, the contact status and operating status of the air conditioner might not match sometimes.

Example: If the unit is run from the central controller while the air conditioner is stopped with an open contact, the contact will be open and the unit will be running.

NOTE2: Operating mode and fan direction and speed settings can be changed.

 NOTE3: If the contact is closed while the ON timer is set, as the power ON timer function is still operating, the operation starts at the time specified by the timer. To prevent operation of the power ON timer, use of the (KRP413BB1S) remote control PC-board set is recommended. However, note that it cannot be used in tandem with the central controller. If this product is connected to an air conditioner manufactured in or after 2011, when the contact is closed, the power ON timer may be cancelled depending on the combination with the model.



5.Control Codes

When using a central remote controller, the operating codes can be used to limit operation from wireless remote controllers. Three beeps for signal reception will be heard continuously when the wireless remote controller is operated while in central control.
○ : permitted; × : prohibited

S1 operating mode	Control mode	Control code	Operations from the remote controller							
			"Run" control from the central controller				"Stop" control from the central controller			
			Run / timer	Stop	Operating mode temperature	Fan direction and fan speed	Run / timer	Stop	Operating mode temperature	Fan direction and fan speed
Instantaneous contact mode	ON / OFF control is rejected	0,1,3	×	×	○		×	×	○	
	Only OFF control is accepted	2	×	○	×		×	○	×	
	Central priority	4	○	○	○		×	○	×	
	Last command priority	6,7	○	○	○		○	○	○	
	Timer operation is accepted by remote controller	8	○*	○*	○*		×	○	×	○
Constant contact mode		9	○*	○*	○*		×	×	○	
		2,10-19		×					×	
		0,1,3,5-7		○					○	
		4	×	×			×	×	×	
		8		○*					×	
All remote controller actions are prohibited		9		○*					○	
			×	×	×	×	×	×	×	×

*Only during timer operation

The remote controller permission / prohibition settings using the ITM / ITC are as follows.
○ : permitted; × : prohibited

S1 pin operating mode	ITM / ITC settings			Operations from the remote controller			Operations from central controller and contact input
	Start / stop	Change operating mode	Change set temperature	Run / timer	Stop	Operating mode temperature and fan speed	
Instantaneous contact mode	ON / OFF control is rejected	permitted	permitted/prohibited	×	×	○	○
Constant contact mode	Only OFF control is accepted	permitted	permitted/prohibited	×	×	×	
		permitted	permitted/prohibited	×	×	○	
Instantaneous contact mode	Last command priority	permitted	permitted/prohibited	○	○	○	
		permitted	permitted/prohibited	×	×	×	
Constant contact mode		permitted	permitted/prohibited	×	×	×	○
		permitted	permitted/prohibited	×	×	×	
All remote controller actions are prohibited				×	×	×	×

6.Read Operating / Error Display Signal

The Operating / error signals can be read from the contact output (S5).

Output specs


M1: Turn MR 1 ON when the air conditioner is running.

M2: Turn MR 2 when a communication error has occurred between the KRP928BB2S

and the air conditioner, or MR 1 is ON and the unit has stopped after an error.

MR 2 is not turned ON during a warning.

KRP928BB2S

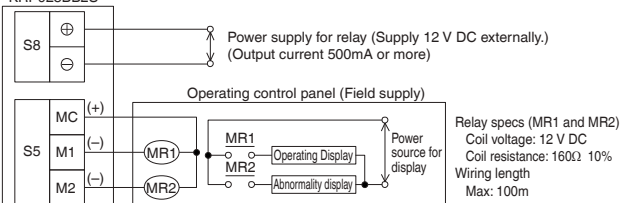

7.Combining Equipment

The central controller can be combined with the following devices.


	Central Remote Controller	ON / OFF controller	Schedule timer	D-BIPS	Contact input	Wired Remote Controller	Wireless Remote Controller
Central Remote Controller	○	○	○	○	○	○	○
ON / OFF controller	○	○	○	○	○	○	○
Schedule timer	○	○	×	×	○	○	○
D-BIPS	○	○	×	×	○	○	○
Contact input	○	○	○	○	×	○	○
Wired Remote Controller	○	○	○	○	○	×	×
Wireless Remote Controller	○	○	○	○	○	×	○

**WARNING**


- Do not install the unit in a location where it may be exposed to water.
- Install the unit indoors.

1. Removal of upper HA casing

- ① Insert a flat-blade screwdriver into the groove between the upper and lower casings.
- ② Lift the handle of the screwdriver upward.

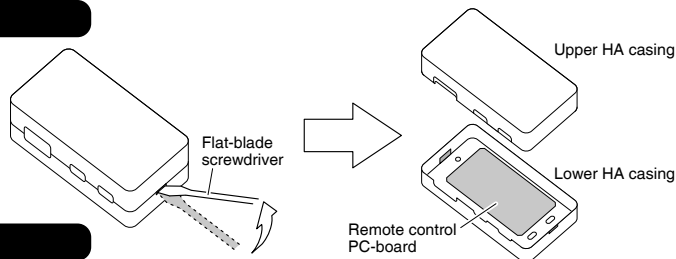**2. Securing of lower HA casing**


Mount and secure the lower HA casing directly on the wall with the provided screws inserted into the screw holes (a round hole and two ellipse holes) of the casing.

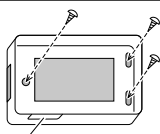**NOTE**



Mount so that the wiring through-hole faces downward.
If water droplets, dirt, dust, etc., get inside, smoke, fire, or malfunctioning may result.

3. Connection of wiring

Connect the wiring to the connector terminals.

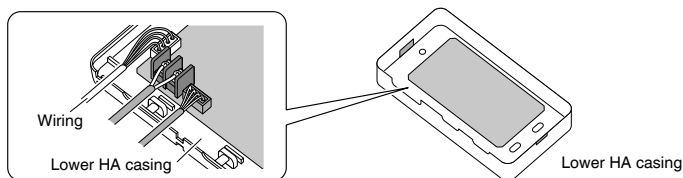
**4. Fixation of wiring**

- ① Insert the provided binding band under the pillar of the HA casing and secure the covers of the wiring with the binding band.
- ② Insert the second binding band into the groove on the side of the HA casing and fix the wiring securely so that the wiring will not be disconnected.

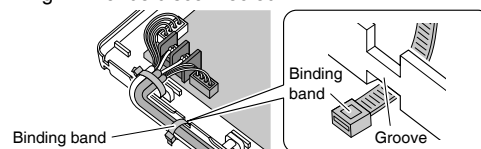
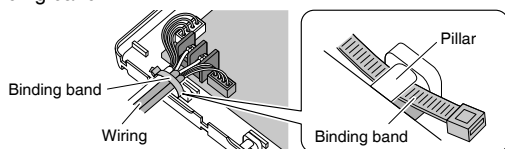
**A large number of wires**

Make a slit with an appropriate tool, such as a cutter knife, on the thin part of the upper HA casing along the frame. Then cut the part with an appropriate tool, such as a pair of nippers.

(NOTE) Cut off only the thin part required for wiring.

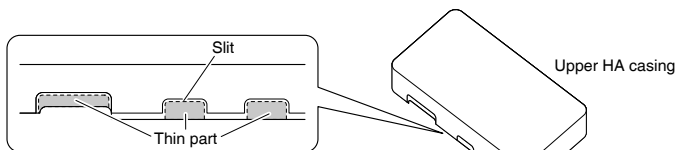**5. Finishing**

Mount the upper HA casing to the original position.

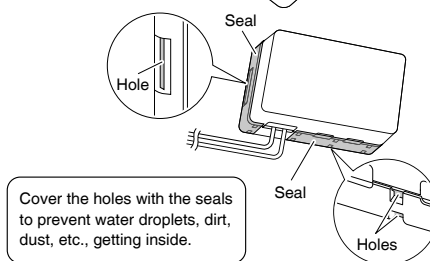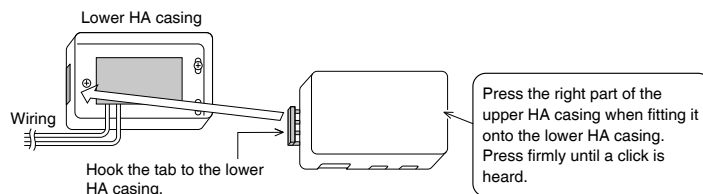**Information****When the contact input device (such as card keys) and central controller are used in tandem:**

Even when the operating mode of the S1 pin is set to prohibit all remote controller actions, run/stop operation from the central controller is possible. The operation also starts when the power ON timer of the indoor unit is up while all remote controller actions are prohibited. (*) In this case, stop the operation from the central controller. For the compatible models of the (KRC944 series) remote controller, the operation can be prohibited by using the remote controller in tandem with the central controller. *If this product is connected to an air conditioner manufactured in or after 2011, when the contact is closed, the power ON timer may be cancelled depending on the combination with the model.

14.14 <KPW937F4> Air Direction Adjustment Grille

Component parts Be sure to check that the following parts are included before installation.

Name	①Air direction adjustment grille	②M 4 × 3 0 Screw	③Installation manual	④Seal	⑤Spacer
Shape					
Qty.	1 pc.	4 pcs.	3 sheets.	L=385:1pc, L=355:2pcs.	4 pcs.

Selection of installation site

- Use the air direction adjustment grille for installation at a location that fits the following conditions.
 1. When installing the outdoor unit near the neighbouring house.
 2. When changing the airflow direction to prevent exhaust blowing directly onto passersby or garden plants.

Cautions for usage

- Be sure to perform the following as installation precautions to ensure correct and safe use of the air direction adjustment grille.
 1. Be sure to stop the operation before installation.
 2. Avoid short-circuits during installation.
 3. When using the unit in areas with snow, install the grille to create a left-right or downward airflow. Do not install the grille to create an upward airflow to prevent snow accumulating in the air outlet of the outdoor unit as this may damage the unit.
 4. Be careful of foreign substances such as dead leaves, which may accumulate on the air outlet after installing the grille to create an upward airflow.
 5. Do not use screws other than those provided. Tighten the screws securely without any looseness.


Installation of air direction adjustment grille

- Pitch of the installation screws for the air direction adjustment grille(①) is 434mm in the vertical and horizontal directions.
- Installation can be performed in 4 directions: top, bottom, left and right.
- Temporarily secure the air direction adjustment grille(①) using 4 screws(②), check the installation angle, and then tighten the screws.

Steel wire outlet grille


- Seals(④) and spacers(⑤) are not necessary.

- 1 Remove the 4 outlet grille fixing screws.

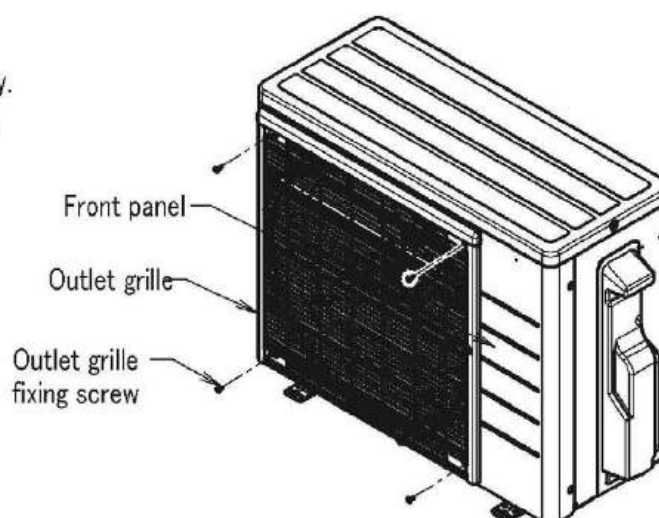


- 2 Install the air direction adjustment grille(①) attached on the front panel using 4 screws(②).

※ Attach the air direction adjustment grille on top of the outlet grille using the same screws.

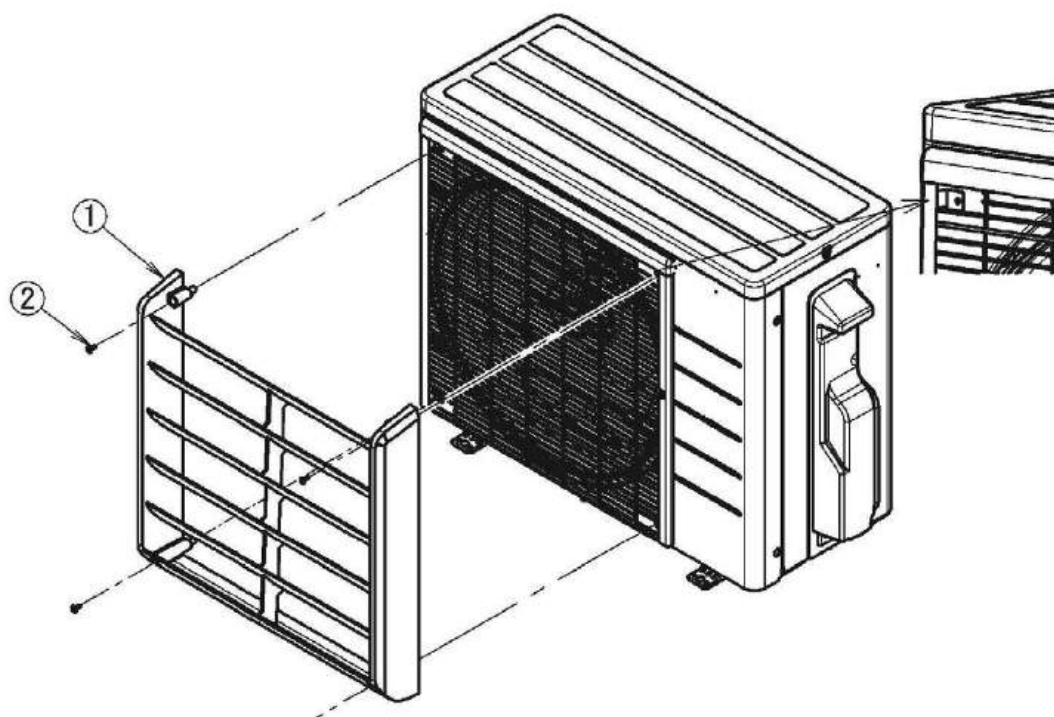



- 3 Appearance of the air direction adjustment panel following installation.
(When installed with the louvers facing up.)

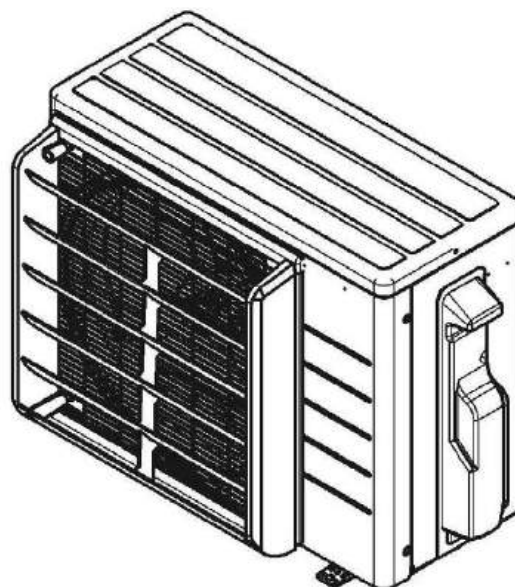

14.15 <KPW063B4> Air Direction Adjustment Grille

Component parts Be sure to check that the following parts are included before installation.

 Component parts

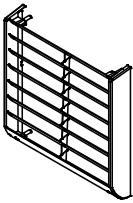Name	① Air direction adjustment grille	② Screw	③ Spacer	④ Installation Manual
Illustration				
Quantity	1 pcs.	4 pcs.	4 pcs.	1 sheet (this sheet)

Selection of installation site


Install only on an outdoor unit in a location that satisfies the following conditions:

- When installing the outdoor unit near the neighbouring house.
- Where you wish to change the exhaust airflow direction because the outdoor unit has been installed facing a road, so that passing people are not exposed to its exhaust air
- When changing the airflow direction to prevent exhaust blowing directly onto passersby or garden plants.

Cautions for usage

- Be sure to perform the following as installation precautions to ensure correct and safe use of the air direction adjustment grille.
 1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance purposes.
 2. When installing the product in a location in which it may be exposed to strong winds, install a rollover prevention bracket (sold separately) at the same time.
 3. Tighten screws securely. Failure to do so may result in vibration.


① Verifying the amount of space required for installation

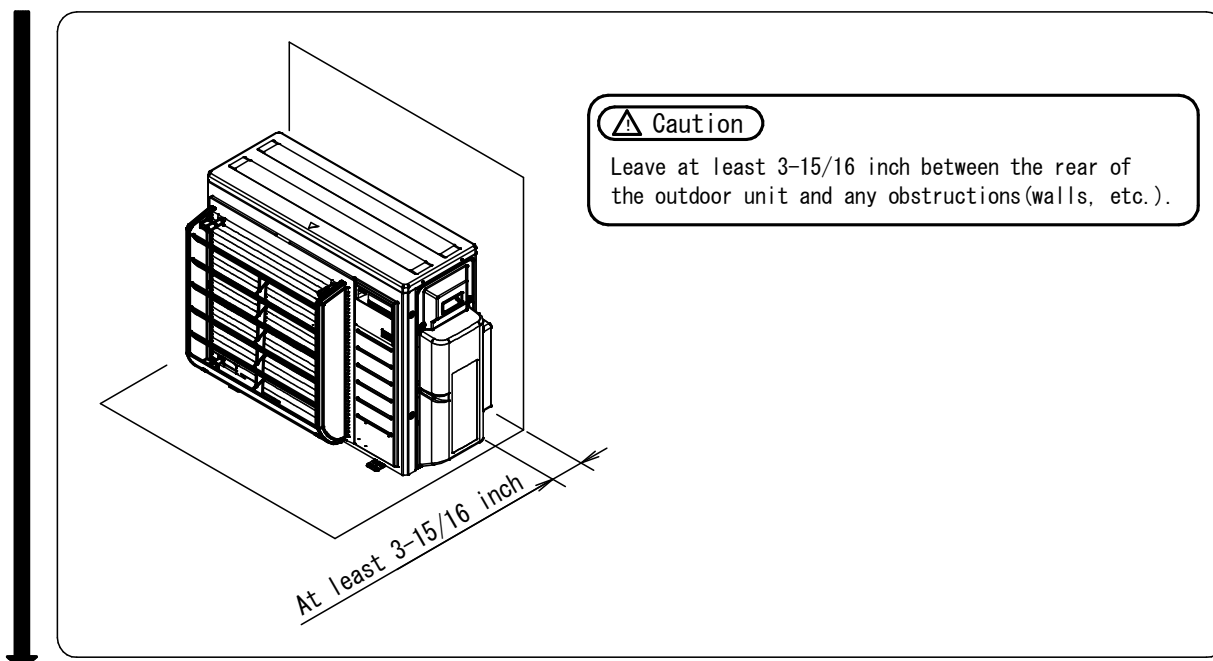

2 Installation of air direction adjustment grille


⚠ Caution

Install the air direction adjustment grille on top of the outlet grille.
Be sure to install the outlet grille as installing only the air direction adjustment grille would allow a person to reach his or her hand into the outdoor unit far enough to come into contact with the rotating fan.

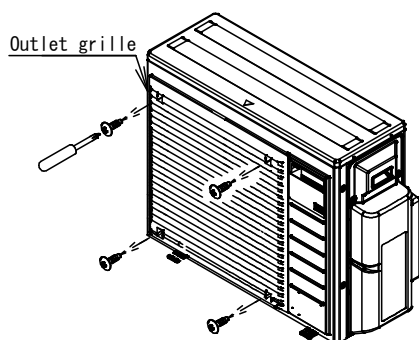


- (1) Remove the 4 outlet grille fixing screws.
- (2) Referring to the following illustration, attach the outlet grille and air direction adjustment grille, taking care to align them with the air outlet direction.
- Attach the air direction adjustment grille on top of the outlet grille using the same screws.


Upward facing

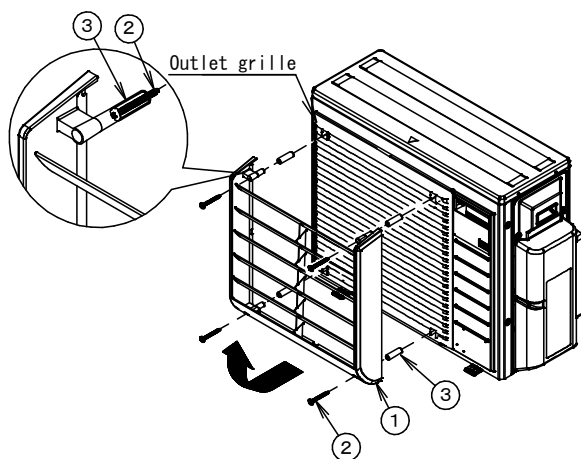

Downward facing

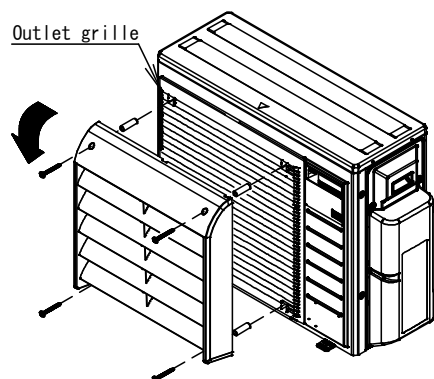

Appearance of the air direction adjustment grille after installation
(when installed with the louvers facing up)

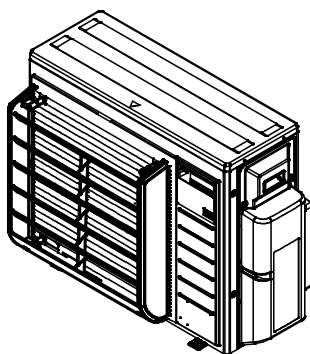

14.16 <KKG067A41> Back Protection Wire Net


Component parts

Name	① Protection net	② Installation manual
Shape		
Q'ty	1pc	1sheet(this sheet)

Caution

Be sure to wear protection gloves when performing installation work as the fins on the heat exchanger may cause injury.


Part names

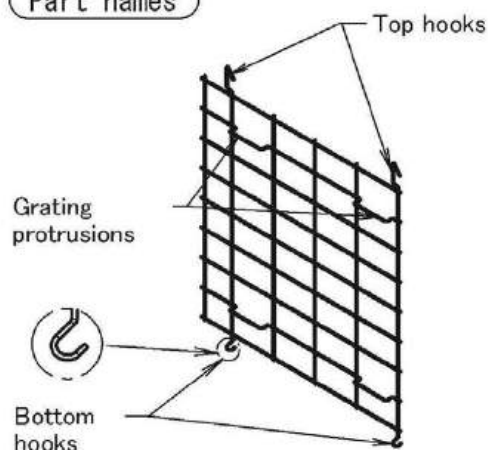

1 Verify the location at which the protection net(①) is to be installed.


Attach the protection net(①) so that the vertical grating is aligned with the outside edge of the installation leg on the right side of the outdoor unit.

Positioning line when installing the protection net(①)

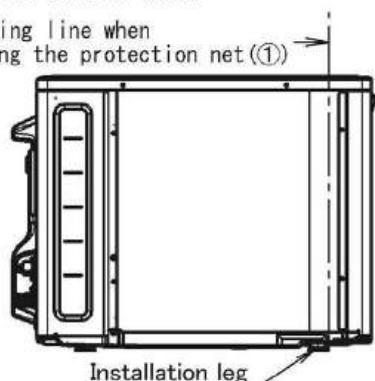


2 Attach the protection net(①)

Orient the protection net(①) so that the horizontal grating protrusions are facing the heat exchanger and insert the two bottom hooks between the heat exchanger and the bottom frame. Insert the two top hooks between the heat exchanger and the top panel while flexing the protection net(①).
 ※ Be careful not to install the protection net upside down.
 Be careful not to damage the heat exchanger's cooling tubes.


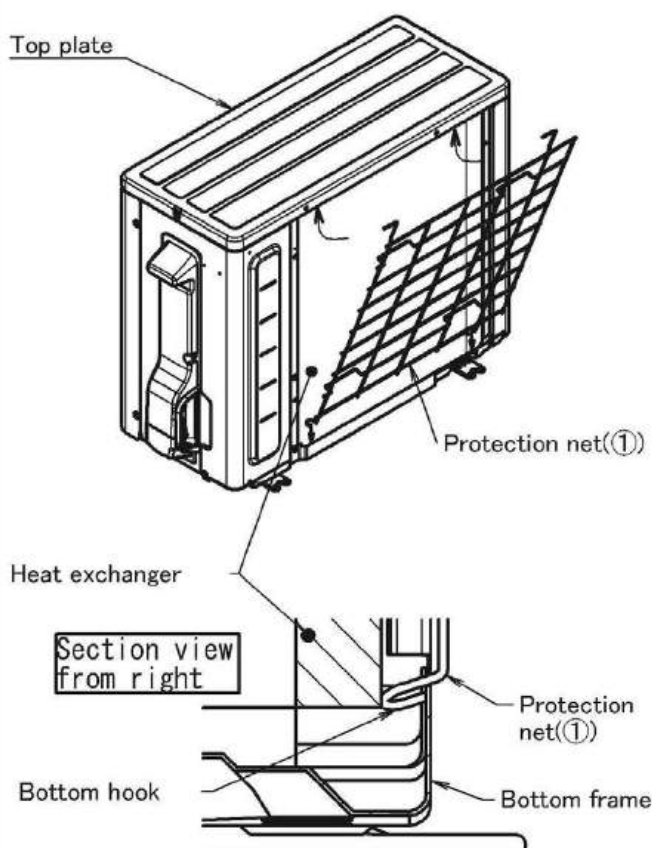


3 Appearance of the protection net(①) following installation

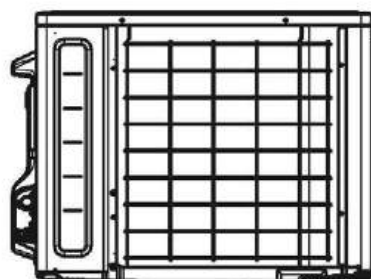

14.17 <KKG063A44> Back Protection Wire Net

  
Component parts

Name	① Protection net	② Installation manual
Shape		
Q'ty	1pc.	1sheet (this sheet)

Caution

Be sure to wear protection gloves when performing installation work as the fins on the heat exchanger may cause injury.

Part names

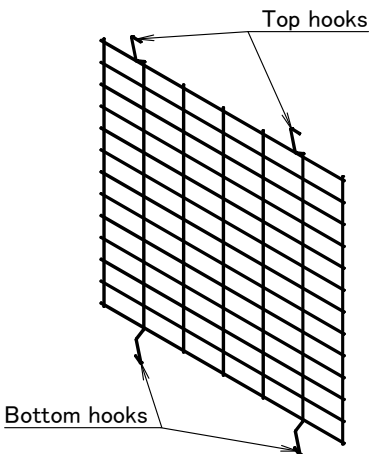


2 Attach the protection net ①

Orient the protection net ① so that top and bottom hooks are facing the heat exchanger and insert the two bottom hooks between the heat exchanger and the bottom frame.


Insert the two top hooks between the heat exchanger and the top panel while flexing the protection net ①.

※ Be careful not to damage the heat exchanger's cooling tubes.

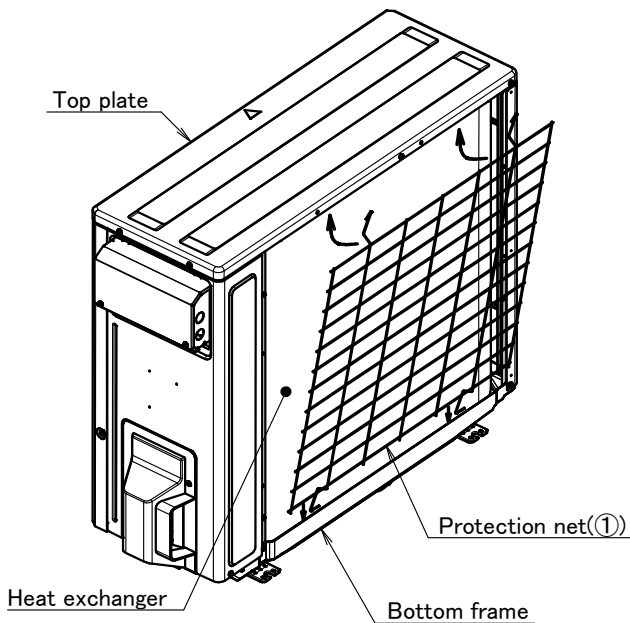


1 Verify the location at which the protection net ① is to be installed.

Attach the protection net ① so that the vertical grating is aligned with the edge of the installation leg on the right side of the outdoor unit.

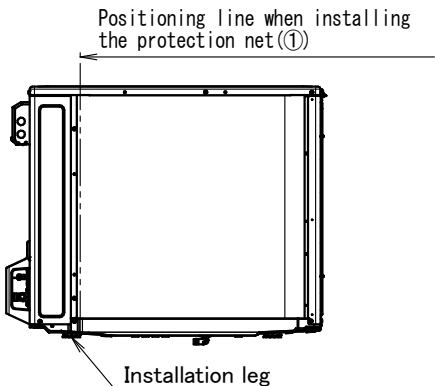

3 Appearance of the protection net ① following installation

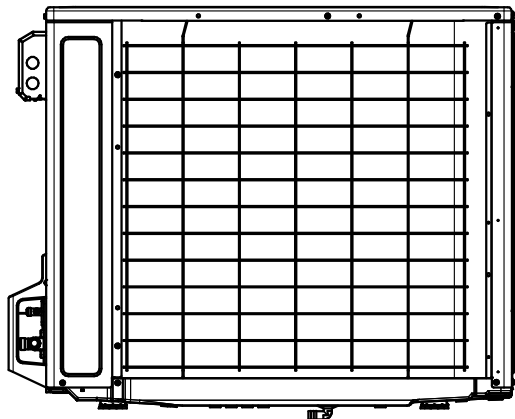

14.18 <KEH068A41> Drain Pan Heater

Safety Considerations

Give this installation manual to the user when installation is completed.

- Read these **Safety Considerations** carefully to ensure correct installation.
- After completing the installation, make sure that the unit operates properly during the startup operation.
- All phases of the field-installation, including, but not limited to, electrical, piping, and safety, must be done in accordance with manufacturer's instructions and must comply with national, state, provincial, and local codes.
- This product is a heater designed to melt snow that is blown into the product from the outside to prevent the drain pan of the outdoor unit from freezing.
- Install the product with a snow-break hood on a high stand if this product is used in heavy snow areas.
- Meaning of **DANGER**, **WARNING** and **CAUTION** symbols:

DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


CAUTION : Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

- DANGER**
- Do not touch the heater unit without wearing gloves. The temperature of the heater unit will become high when the heater is turned on. Touching the heater unit with bare hands will result in burns or injury.

- WARNING**
- Only qualified personnel must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in electric shock, fire, or equipment damage.
 - Use only specified accessories and parts for installation work. Failure to use specified parts may result in electric shock, fire, the product falling, or equipment damage.
 - Before touching electrical parts, turn off the unit.
 - Use specified wires. Connect and fix the wires so that the wires will not put improper force on the terminal junctions. Wires connected or fixed improperly could result in terminal overheating, an electric shock, or fire.

- CAUTION**
- Wear protective gloves at the time of installation. Touching the suction mouth or aluminum fin of the outdoor unit may result in injury.
 - Do not install the product in places where there is danger of exposure to inflammable gas leakage. If the gas leaks and builds up around the unit, it may catch fire.
 - Do not grab the top plate of the outdoor unit carelessly when removing the top plate. The sharp edge of the top plate may cause injury.

Accessories

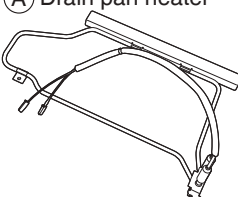	1		3		1		1
			1		1		

Tools Required for Installation

- Phillips screwdriver
- Nippers
- Electric drill
- $\phi 1/8$ inch ($\phi 3.2$ mm) drill


Installation Procedure (1)

WARNING

- Be sure to check that the power supply of the product is turned off.

1. Remove each component of the outdoor unit.


- 1) Remove the top plate.
- 2) Remove the front plate.
- 3) Affix the (E) information label near the manufacturer's label.

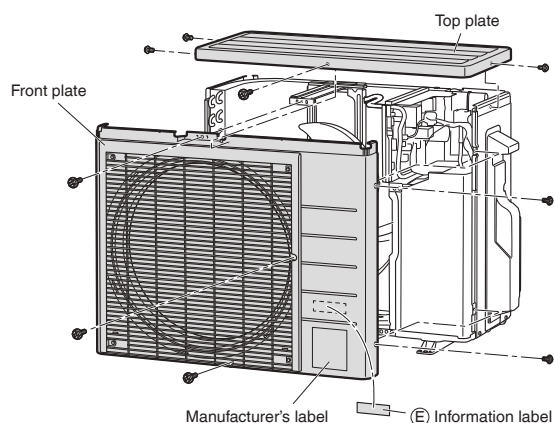

Appearance of the outdoor unit may differ from some models.

2. Remove the fan motor base.

- 1) Remove the fixing screws at the lower section of the fan motor base. (2 screws)
- 2) Remove the fan motor base together with the propeller fan and ensure that stress is not placed on the propeller fan when placing them aside.
 - Do not remove the fan motor harness.
 - Ensure that the fan motor harness does not come into contact with the edges of the heat exchanger or other components.

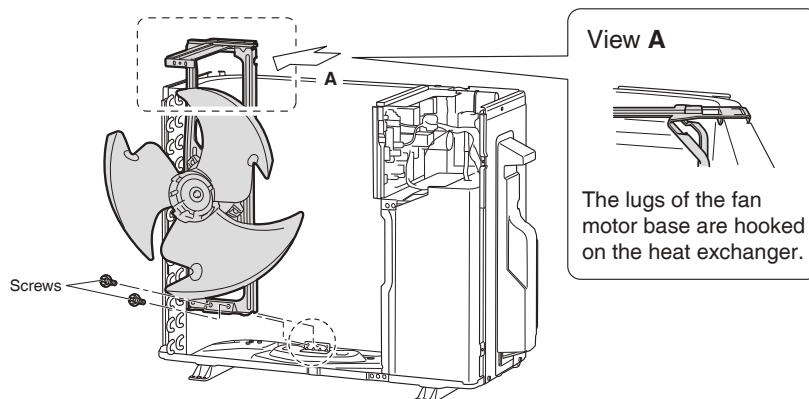


Installation Procedure (2)


3. Install the (A) drain pan heater.

- 1) Remove 2 screws from the bottom frame and the left-side plate so that the plates of the (A) drain pan heater can be inserted under the heat exchanger with ease.
- 2) Lift up the heat exchanger, and insert the plates of the (A) drain pan heater under the heat exchanger.
 - The ground plate of the (A) drain pan heater should be installed so that it firmly adheres to the bottom frame.
 - Install the (A) drain pan heater in a position where it does not come into contact with the fan motor base.
- 3) Fix the (A) drain pan heater with the (B) screws.
- 4) Replace the screws that were removed from the bottom frame and the left-side plate.


Plates (Insert the plates under the heat exchanger.) Heat exchanger

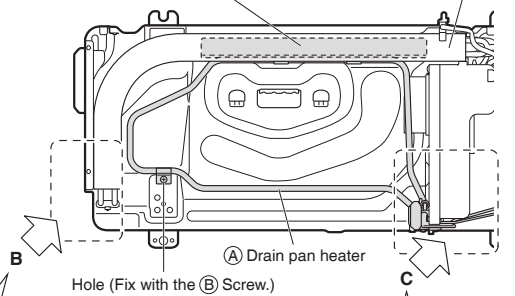

View B

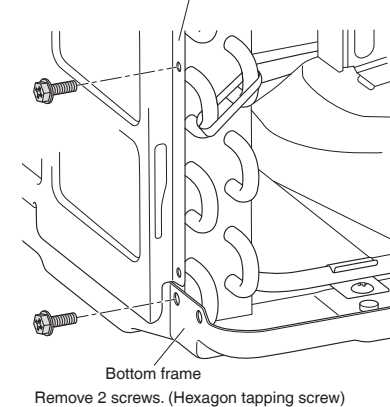

View C

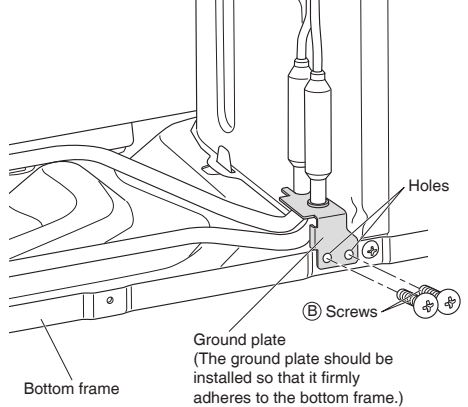


4. Route the harnesses.

⚠ CAUTION

- When drilling a hole, be careful not to damage the soundproofing material and other components on the back side.


- 1) Trim the electrical wiring box with nippers at the locations shown in the figures.
 - Treat the notch to ensure that no sharp edges remain.
- 2) Insert the drain pan heater harness into the space that was trimmed.
- 3) Secure the drain pan heater harness cable tie in the hole in the electric wiring box.
- 4) If there is no hole, drill a $\phi 1/8$ inch ($\phi 3.2$ mm) hole in the partition plate to secure the (A) drain pan heater.
 - Set the actual components in place before drilling the hole to ensure positioning is correct.
 - The hole can be made with the included (F) M4 piercing screw as well.
- 5) Fix in place the cable tie attached to the (A) drain pan heater harness by screwing the (F) M4 piercing screw into the hole. (1 location)
- 6) Install the fan motor base.

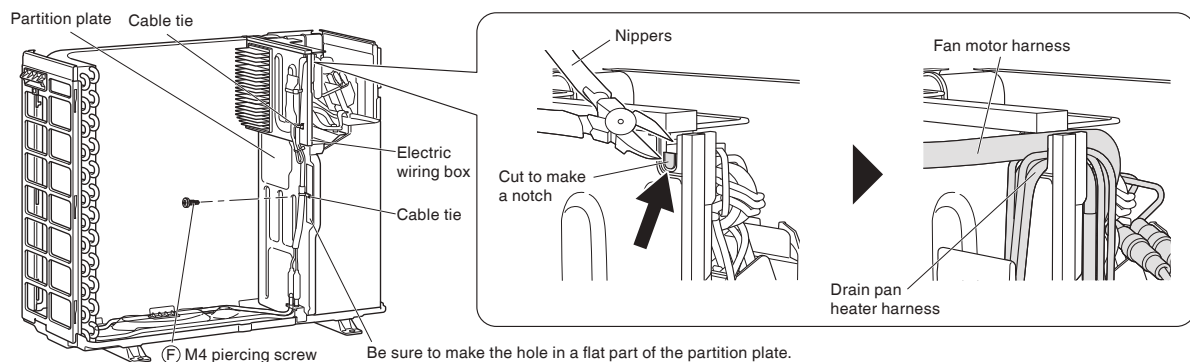

Installation Procedure (3)


5. Connect the faston terminals of the drain pan heater to the terminal block of the outdoor unit.

- 1) Connect the thermostat-side terminal (black harness) to the leftmost terminal and the heater-side terminal (white harness) to the second leftmost terminal.
- 2) Secure the ① drain pan heater harness and power cords between the ferrite core and terminal using the ③ cable tie.
 - Make sure not to position the harness so that the fuse is at its lowest point. (To prevent water droplets on the harness flowing to the fuse which would cause it to malfunction.)
 - Cut the tip of the ③ cable tie.

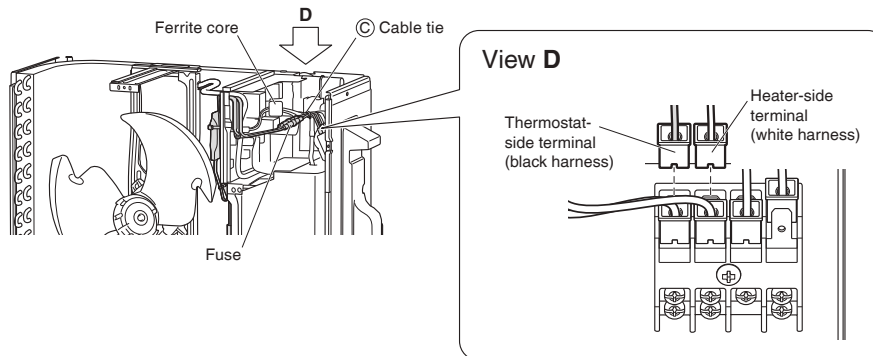


6. Cut the jumper.

- Using a tool such as nippers, cut the jumper (J9) of the PCB inside.

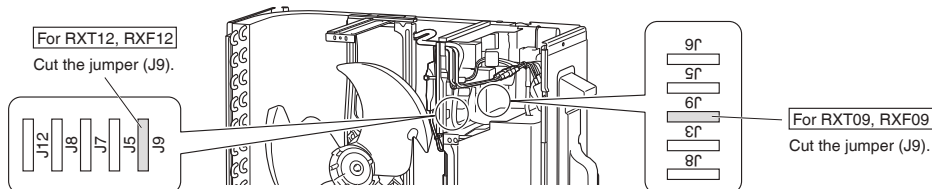

7. Install each component to the original position.

- When attaching the front plate, be careful not to pinch the drain pan heater harness.

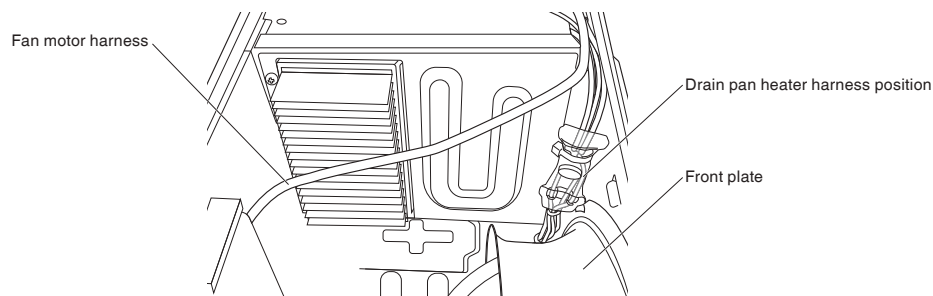

14.19 <KEH064A41> Drain Pan Heater

Safety Considerations

Give this installation manual to the user when installation is completed.

- Read these **Safety Considerations** carefully to ensure correct installation.
- After completing the installation, make sure that the unit operates properly during the startup operation.
- All phases of the field-installation, including, but not limited to, electrical, piping, and safety, must be done in accordance with manufacturer's instructions and must comply with national, state, provincial, and local codes.
- This product is a heater designed to melt snow that is blown into the product from the outside to prevent the drain pan of the outdoor unit from freezing.
- Install the product with a snow-break hood on a high stand if this product is used in heavy snow areas.
- Meaning of **DANGER**, **WARNING** and **CAUTION** symbols:

DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


CAUTION : Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

- DANGER**
- Do not touch the heater unit without wearing gloves. The temperature of the heater unit will become high when the heater is turned on. Touching the heater unit with bare hands will result in burns or injury.

- WARNING**
- Only qualified personnel must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in electric shock, fire, or equipment damage.
 - Use only specified accessories and parts for installation work. Failure to use specified parts may result in electric shock, fire, the product falling, or equipment damage.
 - Before touching electrical parts, turn off the unit.
 - Use specified wires. Connect and fix the wires so that the wires will not put improper force on the terminal junctions. Wires connected or fixed improperly could result in terminal overheating, an electric shock, or fire.

- CAUTION**
- Wear protective gloves at the time of installation. Touching the suction mouth or aluminum fin of the outdoor unit may result in injury.
 - Do not install the product in places where there is danger of exposure to inflammable gas leakage. If the gas leaks and builds up around the unit, it may catch fire.
 - Do not grab the top plate of the outdoor unit carelessly when removing the top plate. The sharp edge of the top plate may cause injury.

Accessories

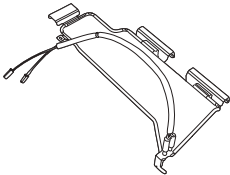A Drain pan heater 	1	B Screw M4 × 5/16" (M4 × 8mm) 	3
		C Installation Manual 	1
		D Information label 	1

Tools Required for Installation

- Phillips screwdriver
- Nippers

Installation Procedure (1)

WARNING

- Be sure to check that the power supply of the product is turned off.

Some stages in the installation procedure differ by model of outdoor unit. Refer to the instructions for the relevant model.

Type A models : RX

Type B models : 2/3/4MX


1. Remove each component of the outdoor unit.

- 1) Remove the top plate.
- 2) Remove the screws from the protective wire mesh if one is fitted. (2 screws)
- 3) Remove the front plate.
- 4) Remove the anti-drip cover.
- 5) Affix the ⓘ information label near the manufacturer's label.


- Screw types for each component are indicated as below.

No icon: Hexagon tapping screw
 : Truss head tapping screw

For type A models

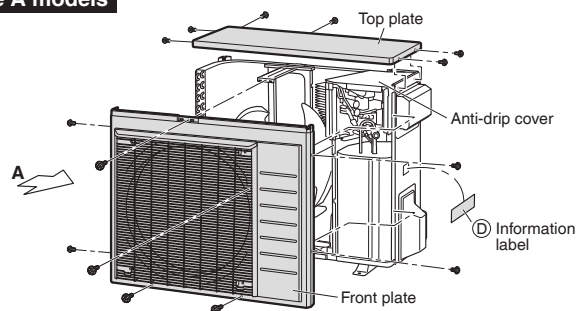


For type B models

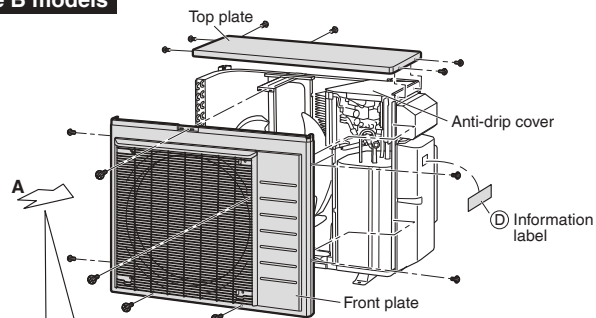


View A

Protective wire mesh

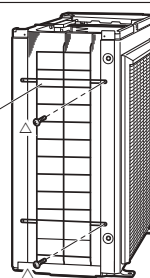


2. Remove the fan motor base.

- 1) Remove the fixing screws at the lower section of the fan motor base. (2 screws)
- 2) Remove the fan motor base together with the propeller fan and ensure that stress is not placed on the propeller fan when placing them aside.
 - Do not remove the fan motor harness.
 - Ensure that the fan motor harness does not come into contact with the edges of the heat exchanger or other components.

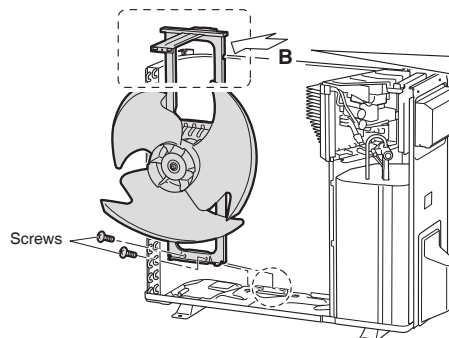

View B

 


The lugs of the fan motor base are hooked on the heat exchanger.

Appearance of the outdoor unit may differ from some models.

Installation Procedure (2)


3. Install the (A) drain pan heater.

- 1) Remove 1 screw from the bottom frame so that the plates of the (A) drain pan heater can be inserted under the heat exchanger with ease.
- 2) Lift up the heat exchanger, and insert the plates of the (A) drain pan heater under the heat exchanger.
 - The ground plate of the (A) drain pan heater should be installed so that it firmly adheres to the bottom frame.
 - Install the (A) drain pan heater in a position where it does not come into contact with the fan motor base.
- 3) Fix the (A) drain pan heater with the (B) screws.
- 4) Reattach the screw that was removed from the bottom frame.

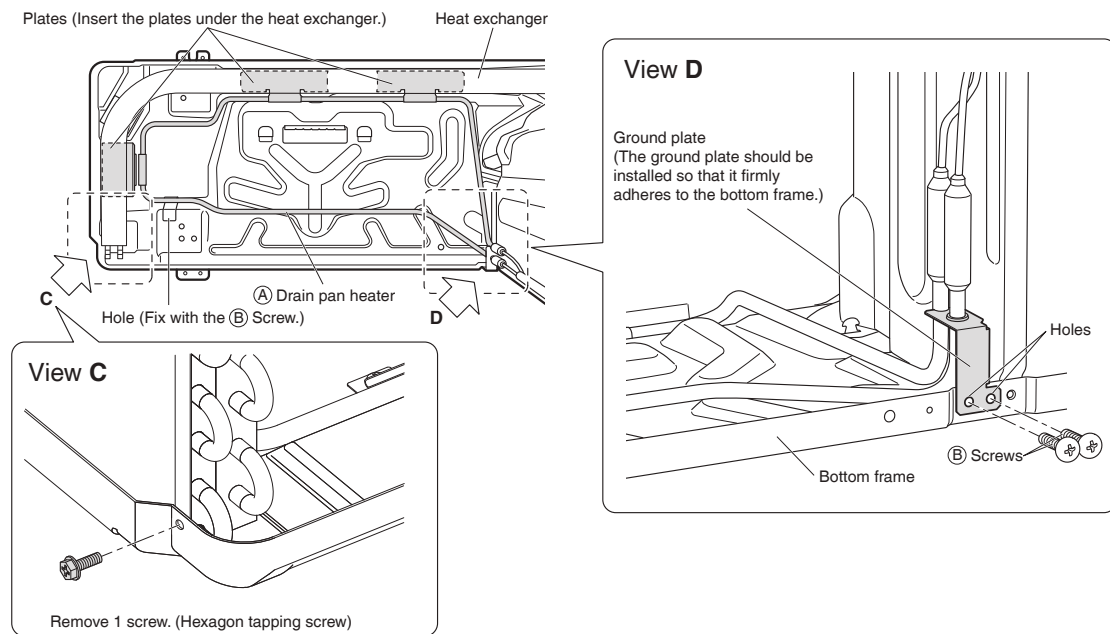

4. Route the harnesses.

- 1) Trim the electrical wiring box with nippers at the locations shown in the figures.
- 2) Insert the drain pan heater harness into the space that was trimmed.
- 3) Secure the drain pan heater harness snap band in the hole in the partition plate.
- 4) Install the fan motor base.
 - Be careful not to confuse screw types. Refer to “Installation Procedure (1)”.

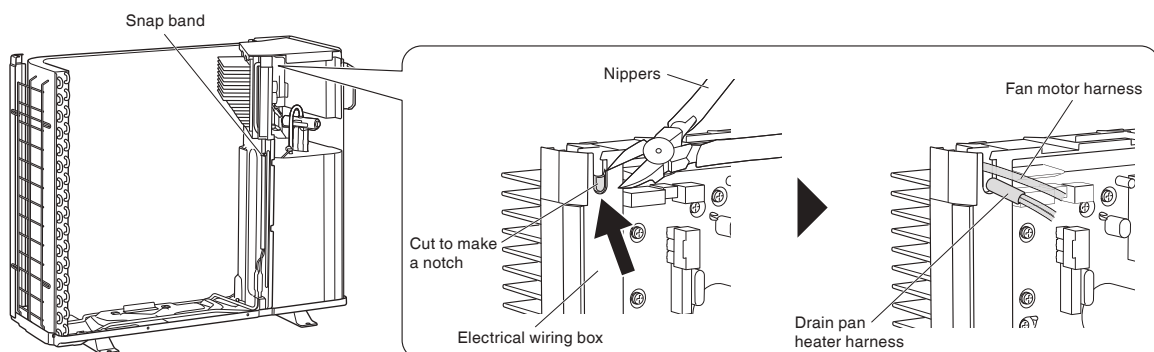


Installation Procedure (3)

For type A models

5) Connect the fasten terminals to DP1 and DP2 on the PC-board.


- Either drain pan heater fasten terminal can be connected to either DP1 or DP2 with no problem.

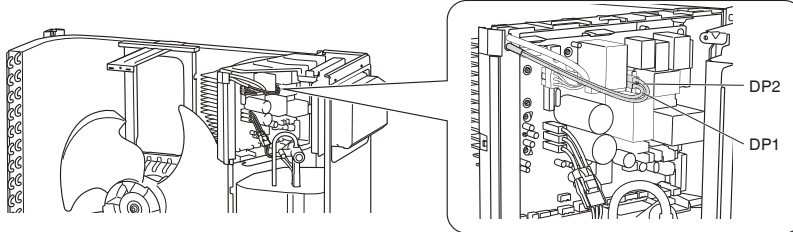

For type B models

5) Connect the fasten terminals to DP3 and DP4 on the PC-board.


- Either drain pan heater fasten terminal can be connected to either DP3 or DP4 with no problem.

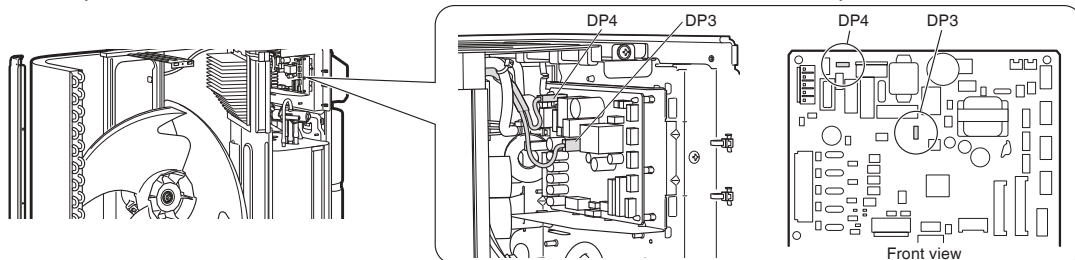

5. Cut the jumper.


For type A models

- Using a tool such as nippers, cut the jumper (J9) of the PCB inside.

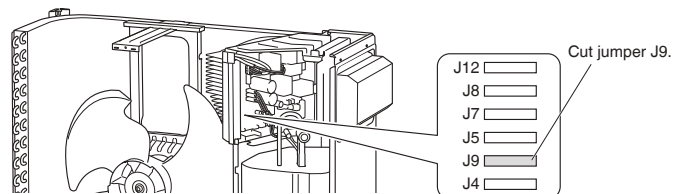

For type B models

- Using a tool such as nippers, cut the jumper (J_DP) on the service PC-board.
- Using the removed truss head tapping screw, reattach the switch cover.


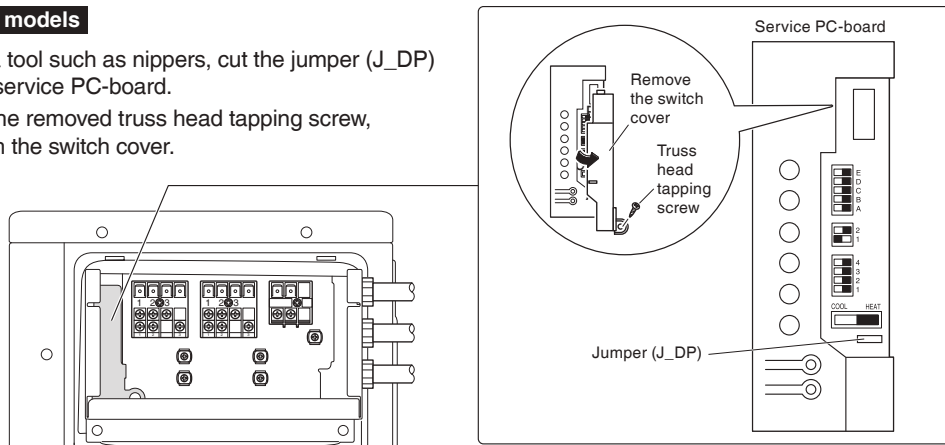


6. Install each component to the original position.

- Be careful not to confuse screw types. Refer to “**Installation Procedure (1)**”.

14.20 <KPS067A41> Snow Hood (Side)

  Parts Before assembling the product, verify that all of the following parts have been included:

Name	Side plate (left)	Side plate (right)	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration	① 	② 	③ 	④ 	⑤ 	⑥ 	⑦ 
Quantity	1	1	1	1	8	1	1 (this document)

Caution Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:


1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

1 Installing the snow hood (intake side plate)

1 Attach the side plate (left) ①

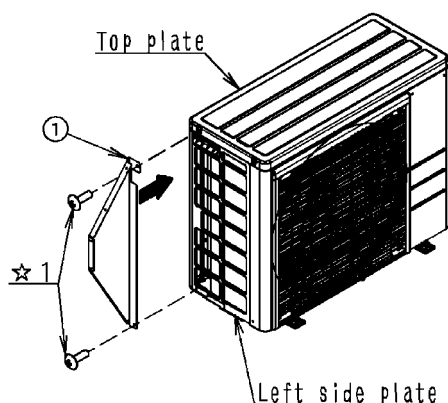


1. Remove the two screws (marked "☆1" in the figure) that hold the outdoor unit's top plate, bottom frame, and front plate in place and use them to attach the side plate (left) ①.

When using with


KPS067A42 (snow hood [intake rear plate])

Intake rear plate (left)

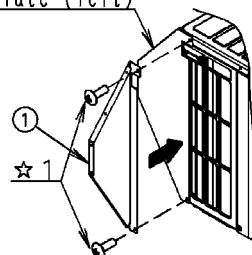


Attach the side plate (left) ① along with the intake rear plate (left) using the same screws, with the side plate (left) ① positioned above the intake rear plate (left). Refer to the figure to the left.

2 Attach the side plate (right) ②

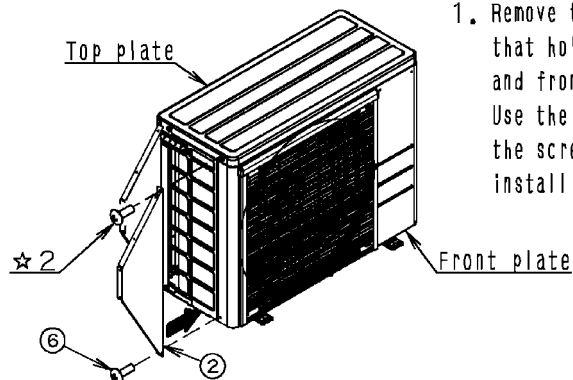


1. Remove the screw (marked "☆2" in the figure) that hold the outdoor unit's top plate, and front plate in place and Use the ⑥ piercing screws supplied with the screws and kit that were removed, install a side plate (right) ②.

③ Attach the top plate ③ and front plate ④.

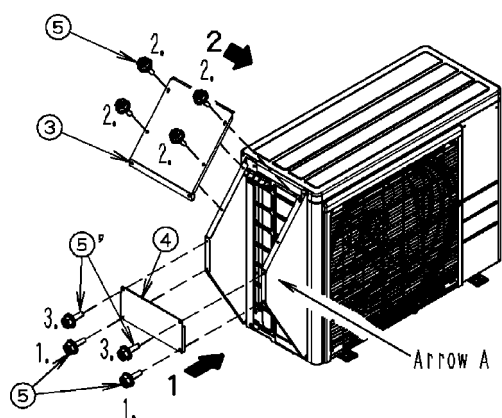


1. Aligning the creases on the left and right sides of the front plate ④ with the outer surfaces of the side plate (left) ① and the side plate (right) ②, temporarily secure the front plate ④ in place with the 2 screws ⑤.
2. Temporarily secure the top plate ③ from above the front plate ④ with the 4 screws ⑤.
3. Temporarily secure the top plate ③ and the front plate ④ with the 2 screws ⑤'. (See arrow A.)

*The side plate (left) (1), side plate (right) ②, top plate ③, and front plate ④ should be positioned as shown in the following figure:

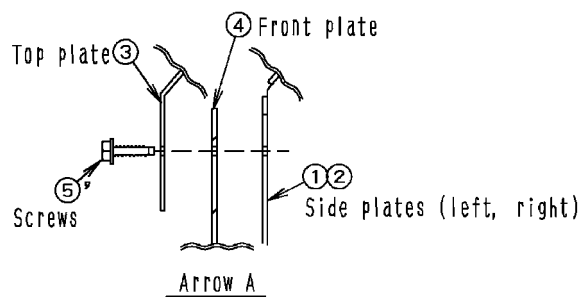


4. Securely tighten the 8 screws ⑤ with which the plates were temporarily secured in steps 1), 2), and 3).

② Appearance of the snow hood (intake side plate) following installation

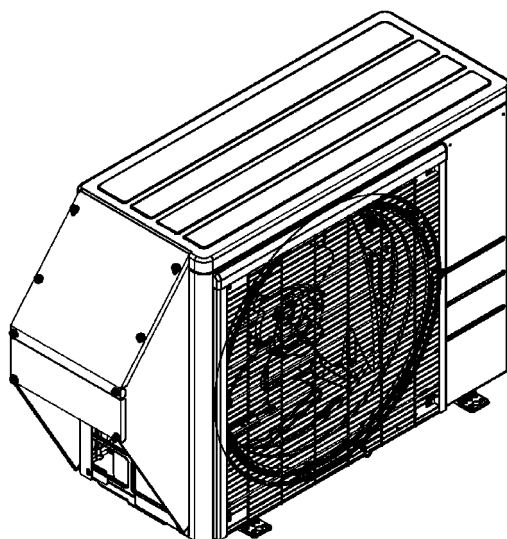

14.21 <KPS063A41> Snow Hood (Side)

 Parts Before assembling the product, verify that all of the following parts have been included:

Name	Side plate (right)	Side plate (left)	Top plate	Front plate	Screws	Installation Manual
Illustration	① 	② 	③ 	④ 	⑤  (quantity to use 14)	⑥ 
Quantity	1	1	1	1	16	1 (this document)

Caution Read these safety considerations for installation carefully before installing the product.


- Be sure to observe the following installation precautions to ensure that the product can be used safely:
1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
 2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
 3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
 4. Tighten screws securely. Failure to do so may result in vibration.

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.


1 Installing the snow hood (intake side plate)

1 Remove the protective wire mesh

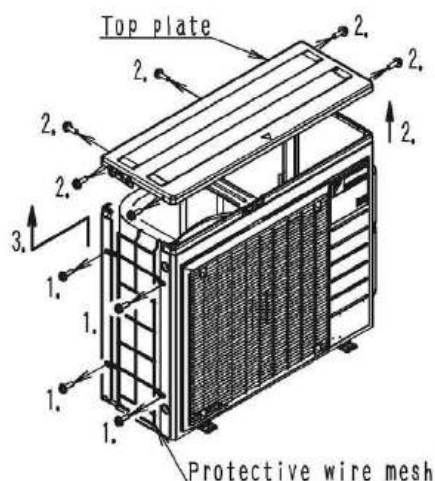

1. Remove the 2 screws that hold the protective wire mesh.
2. Remove the 6 screws that hold the top plate and remove the top plate.
3. Remove the protective wire mesh, being careful of the part that is attached to the heat exchanger.
4. Attach the top plate removed in step 2 using the 6 screws removed in step 2.


2 Attach the side plate (right) ①

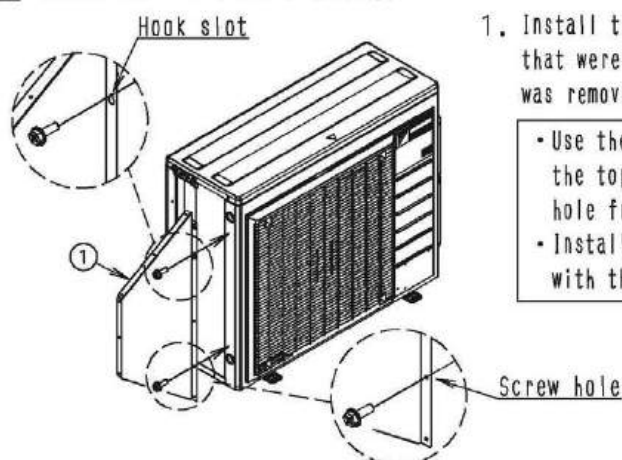

1. Install the side plate (right) ① with the 2 screws that were used in the protective wire mesh that was removed in step 1.

- Use the second hook slot from the top and the 2 screw hole from the bottom.
- Installation is easiest if you start with the hook slot.


③ Attach the side plate (left) ②.

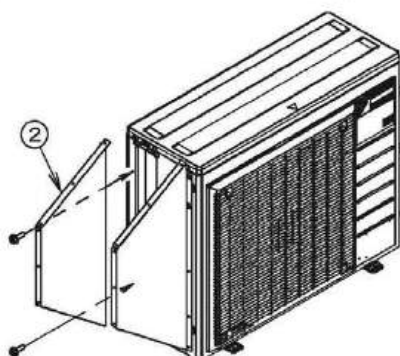

1. Install the side plate (left) ② with the 2 screws that were used in the protective wire mesh that was removed in step ①.


- Use the second hook slot from the top and the 2 screw hole from the bottom.
- Installation is easiest if you start with the hook slot.

④ Attach the front plate ④.

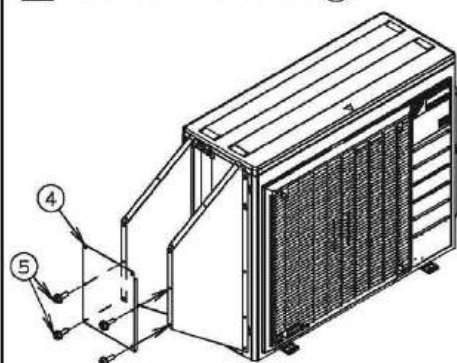


1. Temporarily secure the front plate ④ in place with the 4 screws ⑤.

⑤ Attach the top plate ③.

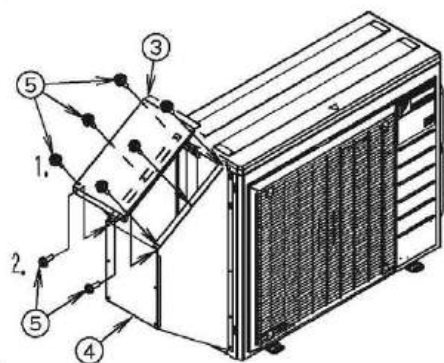

1. Attach the top plate ③ with the 6 screws ⑤.
2. Temporarily secure the top plate ③ and the front plate ④ to the side plate (right) ① and the side plate (left) ② with the 2 screws ⑤.
3. Tighten the 12 screws ⑤ that you used to temporarily secure parts in steps ④ and ⑤.

② Appearance of the snow hood (intake side plate) after installation

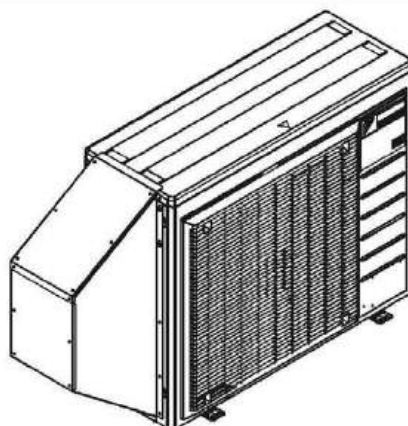

14.22 <KPS067A42> Snow Hood (Rear)

Parts Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration	① (Left)	② (Right)	③	④	⑤	⑥	⑦
Quantity	1	1	1	1	8	2	1 (this document)

Caution Read these safety considerations for installation carefully before installing the product.


- Be sure to observe the following installation precautions to ensure that the product can be used safely:
1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
 2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
 3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
 4. Tighten screws securely. Failure to do so may result in vibration.

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.


1 Installing the snow hood (intake rear plate)

1 Attach the side panel (left) ①.

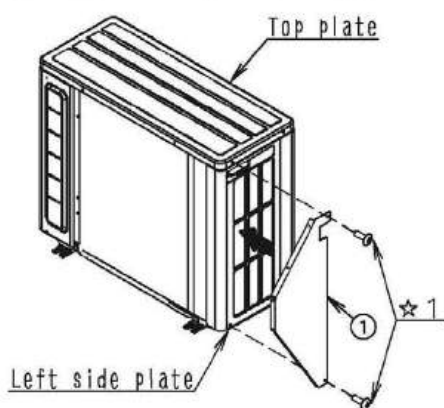


1. Remove the 2 screws (marked "☆1" in the figure) that hold the outdoor unit's top plate, left side plate, and bottom frame and use them to attach the side plate (left) ①.

◆When using with KPS067A41 (snow hood [intake side plate])

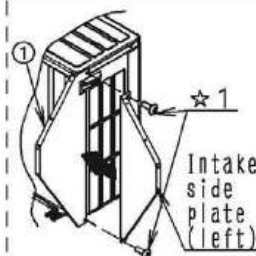


Attach the side plate (left) ① along with the intake side plate (left) using the same screws, with the side plate (left) ① positioned below the intake side plate (left). Refer to the figure to the left.

2 Attach the side plate (right) ②.

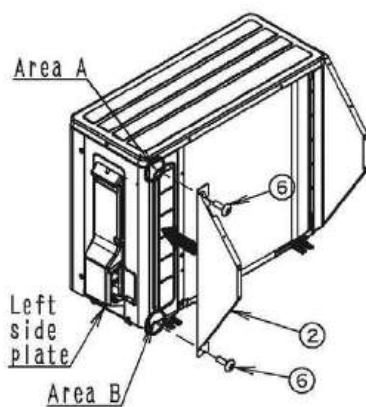


1. Attach by tightening the 1 piercing screw ⑥ into the dowel hole in the right side plate (area A) and the 1 piercing screw ⑥ into the screw hole in the bottom frame (area B).

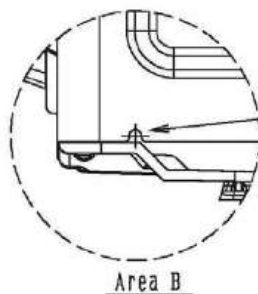


◆If using an electric screwdriver, be careful not to overtighten the screws.
The fixed location

③ Attach the top plate ③ and the front plate ④.

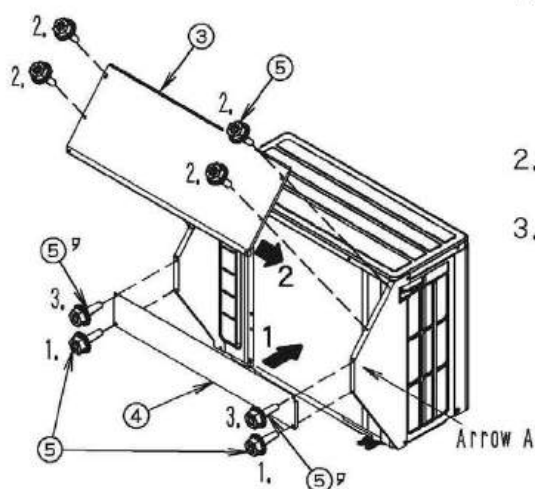


1. Aligning the creases on the left and right sides of the front plate ④ with the outer surfaces of the side plate (left) ① and side plate (right) ②, temporarily secure the front plate ④ in place with the 2 screws ⑤.
2. Temporarily secure the top plate ③ from above the front plate ④ with the 4 screws ⑤.
3. Temporarily secure the top plate ③ and the front plate ④ with the 2 screws ⑤'. (See arrow A.)


*The side plate (left) (1), side plate (right) ②, top plate ③, and front plate ④ should be positioned as shown in the following figure:

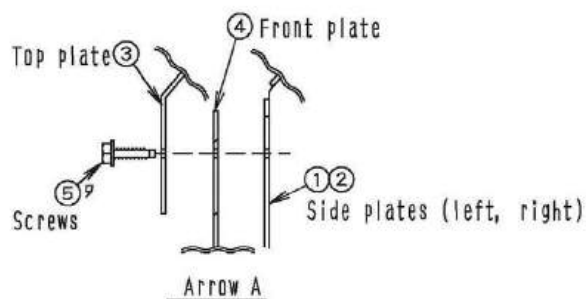

4. Securely tighten the 8 screws ⑤ with which the plates were temporarily secured in steps 1), 2), and 3).

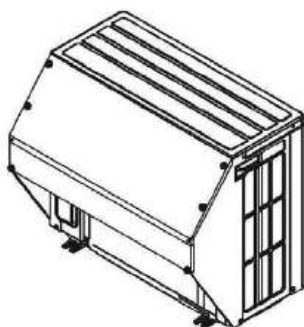

② Appearance of the snow hood (intake rear plate) following installation

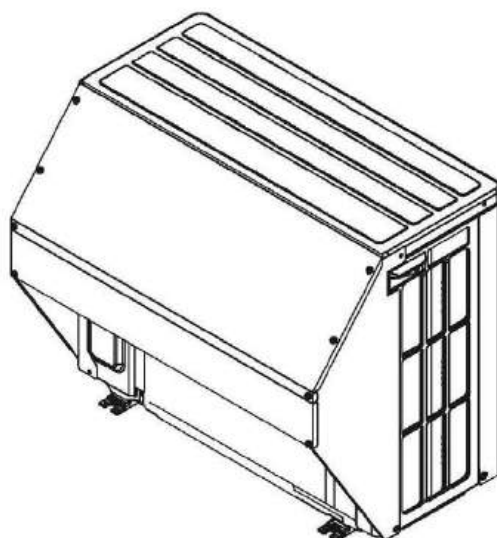

14.23 <KPS063A44> Snow Hood (Rear)

Parts Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration	① (Right)	② (Left)	③	④	⑤	⑥	⑦
Quantity	1	1	1	1	14	3	1 (this document)


Caution Read these safety considerations for installation carefully before installing the product.

- Be sure to observe the following installation precautions to ensure that the product can be used safely:
1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
 2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
 3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
 4. Tighten screws securely. Failure to do so may result in vibration.

Caution
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practises.

1 Installing the snow hood (intake rear plate)


1 Attach the side plate (right) ①.

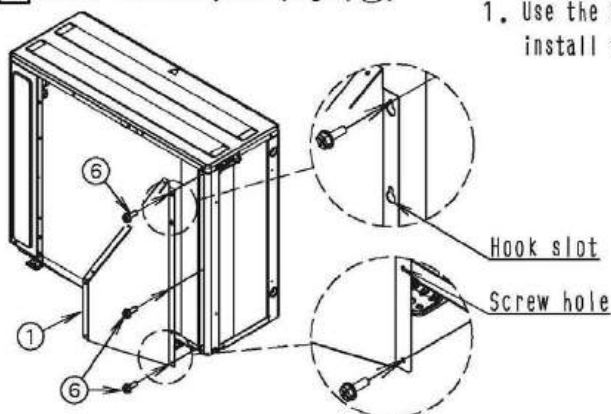


1. Use the 3 piercing screws ⑥ included in the kit to install the side plate (right) ①.

- For the hook slot, use the first hook slot from the top.
- For the screw hole, use the first screw hole from the bottom.
- Installation is easiest if you start with the hook slot.
- Align the screw installation position with the dowel hole.


2 Attach the side plate (left) ②

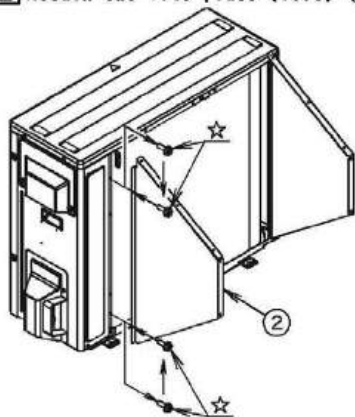


1. Remove the 2 screws (☆) that hold the heat exchanger.
2. Install the side plate (left) ② using the 2 screws removed in step 1.

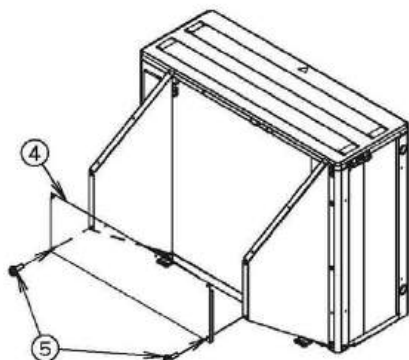③ Attach the front plate ④


1. Temporarily secure the front plate ④ in place with the 2 screws ⑤ included in the kit.

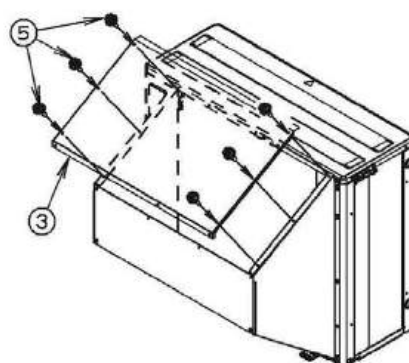④ Attach the top plate ③

1. Temporarily secure the top plate ③ in place with the 6 screws ⑤ included in the kit.

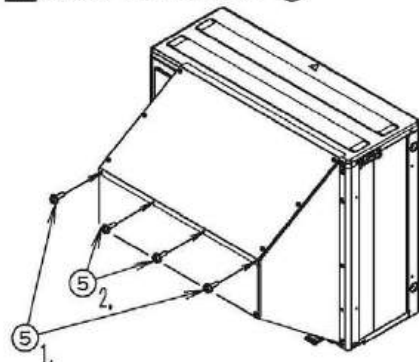⑤ Attach the top plate ③


1. Temporarily secure the top plate ③ and front plate ④ to the side plate (right) ① and side plate (left) ② with the 2 screws ⑤ included in the kit.
2. Temporarily secure the top plate ③ to the front plate ④ with the 2 screws ⑤ included in the kit.
3. Tighten the 12 screws that you used to temporarily secure parts in steps 3), 4), and 5).

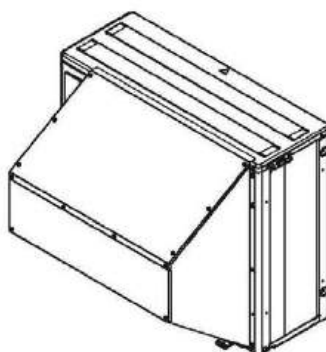② Appearance of the snow hood (intake rear plate) after installation

14.24 <KPS067A44> Snow Hood (Discharge)

Parts

Before assembling the product, verify that all of the following parts have been included:

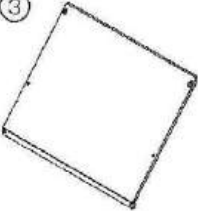Name	Side plate	Side plate	Top plate	Screws	Installation Manual
Illustration	① (Right) 	② (Left) 	③ 	④ 	⑤ 
Quantity	1	1	1	6	1 (this document)

⚠ Caution

Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:

1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.

2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.

3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.


4. Tighten screws securely. Failure to do so may result in vibration.

⚠ Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

1 Installing the snow hood (outlet)


1 Remove the discharge grille,

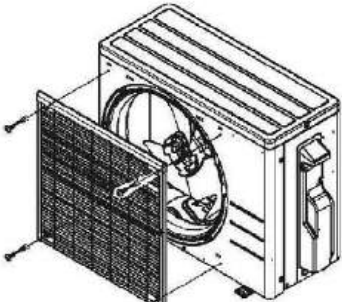

Discharge grille


1. Remove the 4 screws that hold the discharge grille, then remove the discharge grille,

② Attach the side plate (left) ② and side plate (right) ①.

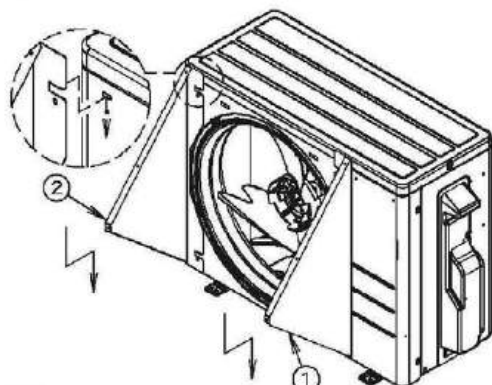


1. Insert the hooks in the side plate (right) ① and side plate (left) ② respectively into the holes provided in the front plate.

③ Attach the discharge grille.

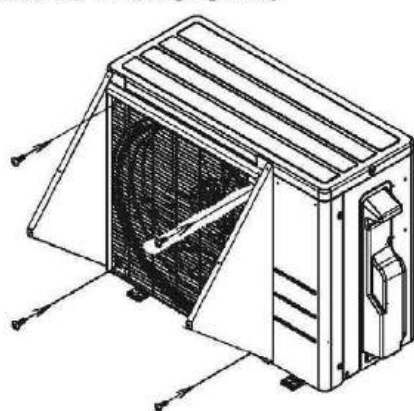

1. When installing the discharge grille removed in [1], jointly tighten the side plate (right) ① and side plate (left) ② with the 2 screws that hold the discharge grille for each plate.


④ Attach the top plate ③

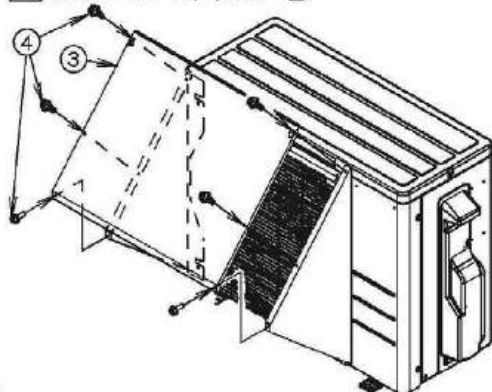

1. Install the top plate ③ using the 6 screws ④ included in the kit.

• Installation is easiest if you start with the hook slot.

② Appearance of the snow hood (outlet) after installation

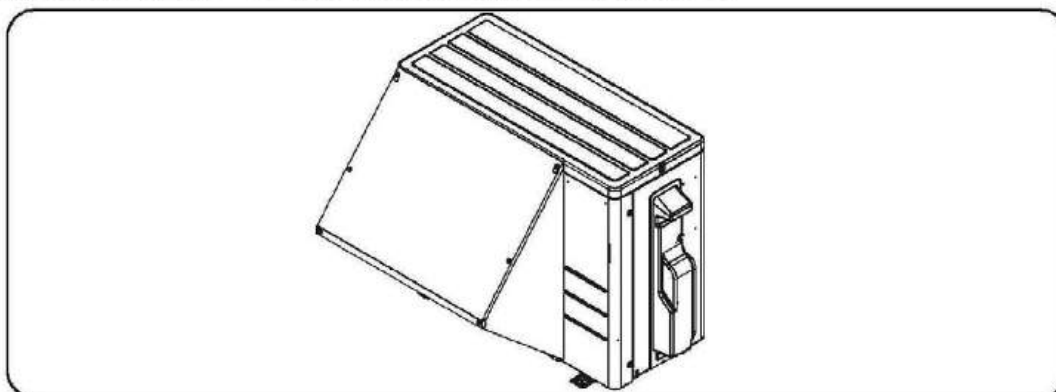

14.25 <KPS063A47> Snow Hood (Discharge)

Parts Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Installation plate	Screws	Piercing screw	Installation Manual
Illustration	① (Right)	② (Left)	③	④	⑤	⑥	⑦
Quantity	1	1	1	1	8	3	1 (this document)

Caution Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:


1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.


1 Installing the snow hood (outlet)

1 Remove the discharge grille.

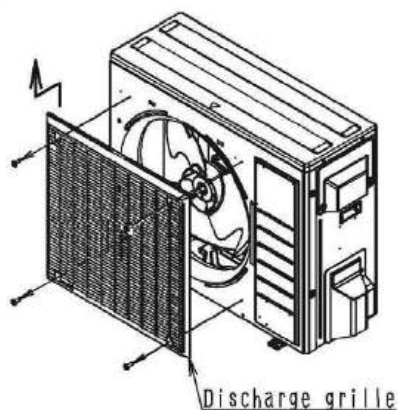

1. Remove the 4 screws that hold the discharge grille.
(The discharge grille is held with the 4 screws and 2 hooks.)

2 Attach the side plate (left) ② and installation plate ④.

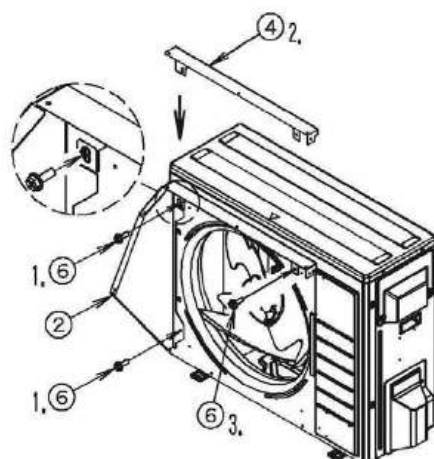


1. Temporarily secure the side plate (left) ② in place with the 2 piercing screw ⑥ included in the kit.

- Installation is easiest if you start with the hook slot.
- Align the screw installation position with the dowel hole.


2. Jointly tighten the installation plate ④ with the 1 piercing screw ⑥ temporarily secured in step 1.
3. Install the right side of the installation plate ④ with the 1 piercing screw ⑥.

③ Attach the installation plate ④.

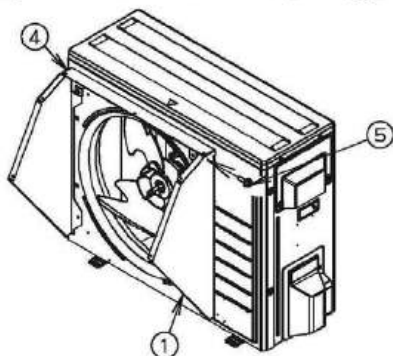


1. Install the side plate (right) ① and installation plate ④ with the 1 screws ⑤ included in the kit.

④ Attach the discharge grille.

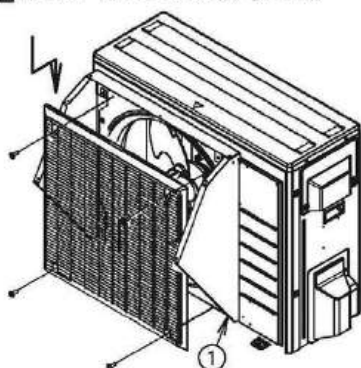


1. When installing the discharge grille removed in [1], jointly tighten the side plate (right) ① with the 2 screws securing the discharge grille. (Secure the discharge grille with the 4 screws and 2 hooks.)

⑤ Attach the top plate ③.

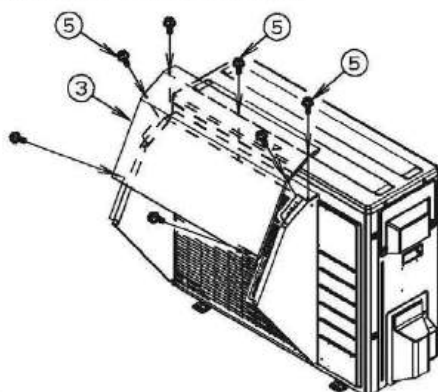

1. Install the top plate ③ with the 7 screws ⑤ included in the kit.

② Appearance of the snow hood (outlet) after installation

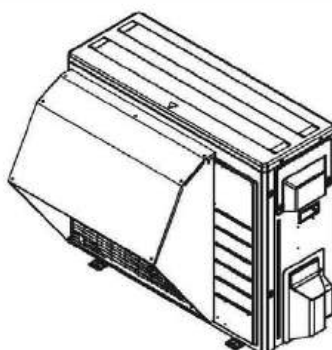

Warning

- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorized parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the user's manual carefully before using this product. The user's manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any inquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.