

SPLIT-TYPE, HEAT PUMP AIR CONDITIONERS

2024

R454B

SERVICE MANUAL

Series PEAD **Ceiling Concealed**

Model name
<Indoor unit>

PEAD-AA09NL

PEAD-AA12NL

PEAD-AA15NL

 
PEAD-AA18NL

PEAD-AA24NL

PEAD-AA30NL

PEAD-AA36NL

PEAD-AA42NL

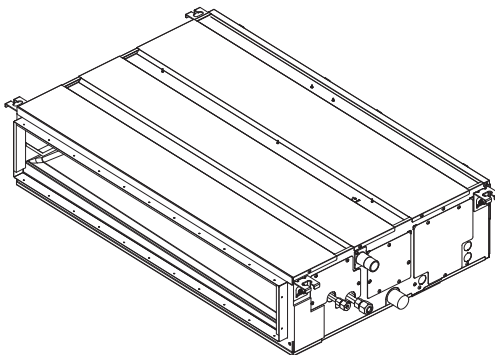





INDOOR UNIT

CONTENTS

1. SAFETY PRECAUTION	3
2. PART NAMES AND FUNCTIONS	8
3. SPECIFICATION	9
4. FAN PERFORMANCE AND CORRECTED AIR FLOW	13
5. SOUND PRESSURE LEVELS	21
6. OUTLINES & DIMENSIONS	28
7. WIRING DIAGRAM	30
8. REFRIGERANT SYSTEM DIAGRAM	31
9. HEATER CONTROL	32
10. HUMIDIFIER CONTROL	37
11. ERV (ENERGY RECOVERY VENTILATION) CONTROL	38
12. TROUBLESHOOTING	39
13. DISASSEMBLY PROCEDURE	52
14. INSPECTION AND MAINTENANCE	57

1. SAFETY PRECAUTION

MEANINGS OF SYMBOLS DISPLAYED ON THE UNIT

 <p>Refrigerant Safety Group A2L</p>	<p>WARNING (Risk of fire)</p>	<p>This unit uses flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.</p>
	<p>Read the OPERATION MANUAL carefully before operation.</p>	
	<p>Service personnel are required to carefully read the OPERATION MANUAL and INSTALLATION MANUAL before operation.</p>	
	<p>Further information is available in the OPERATION MANUAL, INSTALLATION MANUAL, and the like.</p>	

1-1. ALWAYS OBSERVE FOR SAFETY

Before obtaining access to terminal, all supply circuits must be disconnected.

1-2. CAUTIONS RELATED TO NEW REFRIGERANT

Cautions for units utilizing refrigerant R454B

Do not use the existing refrigerant piping.

The old refrigerant and lubricant in the existing piping contains a large amount of chlorine which may cause the lubricant deterioration of the new unit.

Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc., which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.

Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

Store the piping indoors, and keep both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

Charge refrigerant from liquid phase of gas cylinder.

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.

Use a vacuum pump with a reverse flow check valve.

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

Use the following tools specifically designed for use with R454B refrigerant.

The following tools are necessary to use R454B refrigerant.

Tools for R454B	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

Handle tools with care.

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Do not use a charging cylinder.

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

Use the specified refrigerant only.

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified on name plate of outdoor unit.

If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc. We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

<1> Warning for service

- (1) Do not alter the unit.
- (2) For installation and relocation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with refrigerant specified in the outdoor unit installation manual.
- (3) Ask a dealer or an authorized technician to install, relocate and repair the unit.
- (4) This unit should be installed in rooms which exceed the floor space specified in outdoor unit installation manual. Refer to outdoor unit installation manual.
- (5) Install the indoor unit at least 2.5 m above floor or grade level.
- (6) All field joints shall be accessible for inspection prior to being covered or enclosed.
- (7) If the air conditioner is installed in a small room or closed room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. Should the refrigerant leak and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.
- (8) Keep gas-burning appliances, electric heaters, and other fire sources (ignition sources) away from the location where installation, repair, and other air conditioner work will be performed.
If refrigerant comes into contact with a flame, poisonous gases will be released.
- (9) When installing or relocating, or servicing the air conditioner, use only the specified refrigerant written on outdoor unit to charge the refrigerant lines.
Do not mix it with any other refrigerant and do not allow air to remain in the lines.
If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards.
- (10) After installation has been completed, check for refrigerant leaks. If refrigerant leaks into the room and comes into contact with the flame of a heater or portable cooking range, poisonous gases will be released.
- (11) When a FLAMMABLE REFRIGERANT is used, alloys used indoors to join refrigerant containing connections shall have a melting point (liquidus temperature) greater than 427°C [801°F].
- (12) When performing brazing work, be sure to ventilate the room sufficiently. Make sure that there are no hazardous or flammable materials nearby.
When performing the work in a closed room, small room, or similar location, make sure that there are no refrigerant leaks before performing the work.
If refrigerant leaks and accumulates, it may ignite or poisonous gases may be released.
- (13) Do not install the unit in places where refrigerant may build-up or places with poor ventilation such as a semibasement or a sunken place in outdoor: Refrigerant is heavier than air, and inclined to fall away from the leak source.
- (14) Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- (15) The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- (16) Do not pierce or burn.
- (17) Be aware that refrigerants may not contain an odour.
- (18) Pipe-work shall be protected from physical damage.
- (19) The installation of pipe-work shall be kept to a minimum.
- (20) Compliance with national gas regulations shall be observed.
- (21) Keep any required ventilation openings clear of obstruction.
- (22) Servicing shall be performed only as recommended by the manufacturer.
- (23) The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- (24) Maintenance, service and repair operations shall be performed by authorized technician with required qualification.

<2> Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the cycle with specified amount of refrigerant.
- (4) When performing service, install a filter drier simultaneously.
Be sure to use a filter drier for new refrigerant.

<3> Additional refrigerant charge**When charging directly from cylinder**

- Check that cylinder for R454B on the market is syphon type.
- Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)

<4> Cautions for unit using R454B refrigerant

Basic work procedures are the same as those for conventional units using refrigerant R410A. However, pay careful attention to the following points.

(1) Information on servicing**(1-1) Checks to the area**

Prior to beginning work on systems containing FLAMMABLE REFRIGERANTS, safety checks are necessary to ensure that the risk of ignition is minimized.

For repair to the REFRIGERATING SYSTEM, (1-2) to (1-6) shall be completed prior to conducting work on the system.

(1-2) Work Procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

(1-3) General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

(1-4) Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres.

Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

(1-5) Presence of fire extinguisher

If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand.

Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

(1-6) No ignition sources

No person carrying out work in relation to a REFRIGERATING SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.

All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space.

Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

(1-7) Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out.

The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

(1-8) Checks to the refrigerating equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:

- the actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed.
- the ventilation machinery and outlets are operating adequately and are not obstructed.
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
- refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

(1-9) Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.

If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.
- that no live electrical components and wiring are exposed while charging, recovering or purging the system.
- that there is continuity of earth bonding.

(2) Repairs to sealed components

Sealed electrical components shall be replaced.

(3) Repair to intrinsically safe components

Intrinsically safe components must be replaced.

(4) Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.

The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

(5) Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.

Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to (6).

(6) Removal and evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose -conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration.

The following procedure shall be adhered to:

- safely remove refrigerant following local and national regulations;
 - evacuate
 - purge the circuit with inert gas
 - evacuate
 - continuously flush or purge with inert gas when using flame to open circuit
 - open the circuit

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes.

For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times.

Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.

This process shall be repeated until no refrigerant is within the system. When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

(7) Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of REFRIGERANT contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATING SYSTEM is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

(8) Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely.

Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders.
 - all personal protective equipment is available and being used correctly.
 - the recovery process is supervised at all times by a competent person.
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not overfill cylinders. (no more than 80 % volume liquid charge)
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.

(9) Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.

The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.

(10) Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available.

All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order.

Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant.

 
If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.

The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process.

When oil is drained from a system, it shall be carried out safely.

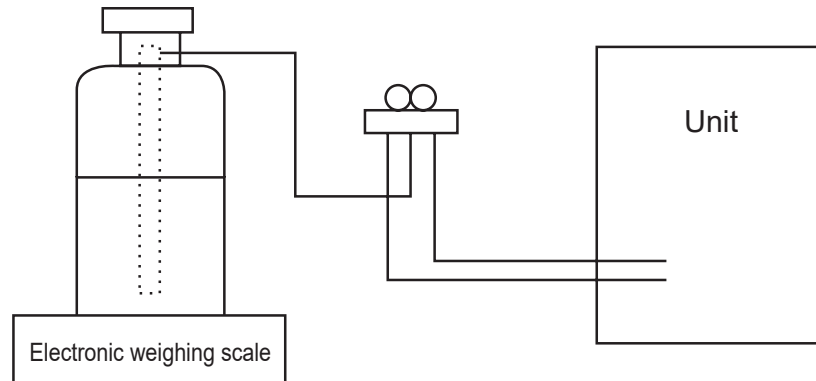

<5> Service tools

Use the below service tools as exclusive tools for R410A refrigerant.

No.	Tool name	Specifications
①	Gauge manifold	<ul style="list-style-type: none"> · Only for R454B · Use the existing fitting specifications. (UNF1/2) · Use high-tension side pressure of 768.7 PSIG [5.3 MPa.G] or over.
②	Charge hose	<ul style="list-style-type: none"> · Only for R454B · Use pressure performance of 738.2 PSIG [5.09 MPa.G] or over.
③	Electronic weighing scale	—
④	Gas leak detector	· Use the detector for R454B.
⑤	Adaptor for reverse flow check	· Attach on vacuum pump.
⑥	Refrigerant charge base	—
⑦	Refrigerant cylinder	<ul style="list-style-type: none"> · Only for R454B · Cylinder with syphon
⑧	Refrigerant recovery equipment	—

 
1-3. CAUTIONS RELATED TO HEATER

- Exercise caution when using any auxiliary heat source and follow all third party manufacturer instructions and safety guidelines for installation and usage.
- Any auxiliary heat source connected to this unit via the CN24 connection must have an independent temperature control mechanism. Failure to install and maintain such temperature control mechanism may void the warranty for this unit.
- Mitsubishi Electric shall not bear any warranty obligation or other liability for any damage or loss in connection with such third party auxiliary heaters.


2. PART NAMES AND FUNCTIONS

• Indoor Unit

Air intake (sucks the air inside the room into the unit)

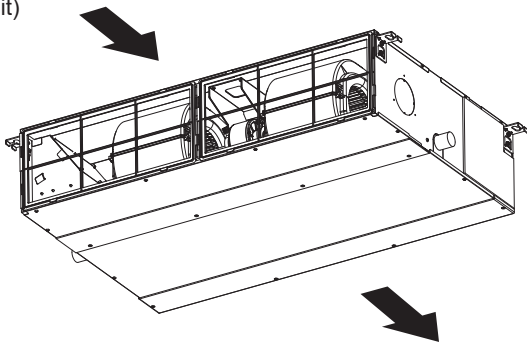

In case of rear inlet

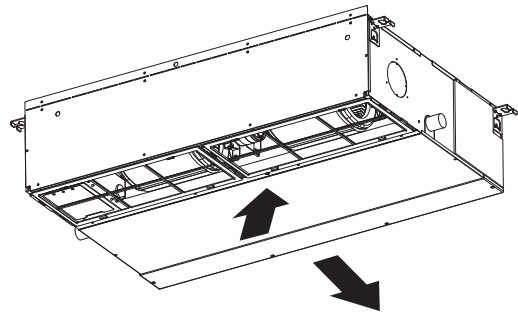 

In case of bottom inlet

3. SPECIFICATION

INDOOR UNIT	Service Ref.		PEAD-AA09NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	2.13	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 2
		Fan motor output	kW	0.121
		Fan motor	F.L.A	1.70
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	7.5-8.0-9.0-10.0 (265-283-318-353)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	23-24-26-28
		50Pa (0.20 in.WG)		25-26-28-31
		70Pa (0.28 in.WG)		26-27-30-33
		100Pa (0.40 in.WG)		28-29-32-35
		150Pa (0.60 in.WG)		32-33-36-39
	Field drain pipe O.D		mm (in.)	32 (1-1/4)
	Dimensions	W	mm (in.)	900 (35-7/16)
		D	mm (in.)	732 (28-7/8)
H		mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	26 (58)	

INDOOR UNIT	Service Ref.		PEAD-AA12NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	2.50	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 2
		Fan motor output	kW	0.121
		Fan motor	F.L.A	2.00
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	10.0-11.0-12.0-14.0 (353-388-424-494)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	25-27-29-33
		50Pa (0.20 in.WG)		27-29-31-34
		70Pa (0.28 in.WG)		28-30-32-36
		100Pa (0.40 in.WG)		31-33-35-39
		150Pa (0.60 in.WG)		33-36-38-42
	Field drain pipe O.D		mm (in.)	32 (1-1/4)
	Dimensions	W	mm (in.)	900 (35-7/16)
		D	mm (in.)	732 (28-7/8)
H		mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	26 (58)	

INDOOR UNIT	Service Ref.		PEAD-AA15NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	2.25	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 2
		Fan motor output	kW	0.121
		Fan motor	F.L.A	1.80
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	11.4-12.0-14.5-17.0 (403-424-512-600)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	27-28-33-36
		50Pa (0.20 in.WG)		28-29-34-37
		70Pa (0.28 in.WG)		30-32-35-39
		100Pa (0.40 in.WG)		32-33-37-41
		150Pa (0.60 in.WG)		34-35-40-44
	Field drain pipe O.D		mm (in.)	32 (1-1/4)
Dimensions	W	mm (in.)	900 (35-7/16)	
	D	mm (in.)	732 (28-7/8)	
	H	mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	27 (60)	

INDOOR UNIT	Service Ref.		PEAD-AA18NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	2.25	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 2
		Fan motor output	kW	0.121
		Fan motor	F.L.A	1.80
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	11.4-12.0-14.5-17.0 (403-424-512-600)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	27-28-33-36
		50Pa (0.20 in.WG)		28-29-34-37
		70Pa (0.28 in.WG)		30-32-35-39
		100Pa (0.40 in.WG)		32-33-37-41
		150Pa (0.60 in.WG)		34-35-40-44
	Field drain pipe O.D		mm (in.)	32 (1-1/4)
Dimensions	W	mm (in.)	900 (35-7/16)	
	D	mm (in.)	732 (28-7/8)	
	H	mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	27 (60)	

INDOOR UNIT	Service Ref.		PEAD-AA24NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	2.25	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 2
		Fan motor output	kW	0.121
		Fan motor	F.L.A	1.80
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	14.5-16.0-18.0-21.0 (512-565-636-742)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	26-28-30-34
		50Pa (0.20 in.WG)		27-29-31-35
		70Pa (0.28 in.WG)		28-30-33-37
		100Pa (0.40 in.WG)		30-32-35-39
		150Pa (0.60 in.WG)		33-35-38-42
Field drain pipe O.D		mm (in.)	32 (1-1/4)	
Dimensions	W	mm (in.)	1100 (43-5/16)	
	D	mm (in.)	732 (28-7/8)	
	H	mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	30 (67)	

INDOOR UNIT	Service Ref.		PEAD-AA30NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	2.25	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 2
		Fan motor output	kW	0.121
		Fan motor	F.L.A	1.80
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	17.5-19.0-21.0-25.0 (618-671-742-883)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	29-31-33-37
		50Pa (0.20 in.WG)		30-32-34-38
		70Pa (0.28 in.WG)		31-33-35-39
		100Pa (0.40 in.WG)		33-35-37-41
		150Pa (0.60 in.WG)		35-37-39-43
Field drain pipe O.D		mm (in.)	32 (1-1/4)	
Dimensions	W	mm (in.)	1100 (43-5/16)	
	D	mm (in.)	732 (28-7/8)	
	H	mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	30 (67)	


INDOOR UNIT	Service Ref.		PEAD-AA36NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	3.50	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 3
		Fan motor output	kW	0.300
		Fan motor	F.L.A	2.80
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	24.0-26.5-29.0-34.0 (848-936-1024-1201)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	33-35-37-41
		50Pa (0.20 in.WG)		34-36-38-42
		70Pa (0.28 in.WG)		35-37-39-43
		100Pa (0.40 in.WG)		37-39-41-44
		150Pa (0.60 in.WG)		39-41-43-47
Field drain pipe O.D		mm (in.)	32 (1-1/4)	
Dimensions	W	mm (in.)	1400 (55-1/8)	
	D	mm (in.)	732 (28-7/8)	
	H	mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	37 (82)	

INDOOR UNIT	Service Ref.		PEAD-AA42NL-U1	
	Power supply (phase, cycle, voltage)		1 phase, 60Hz, 208/230V	
	Max. Fuse Size	A	15	
	Min. Circuit Ampacity	A	4.25	
	External finish		Galvanized sheets	
	Heat exchanger		Plate fin coil	
	Fan	Fan (drive) × No.		Sirocco fan × 3
		Fan motor output	kW	0.300
		Fan motor	F.L.A	3.40
		Airflow (Low Mid2 Mid1 High)	m ³ /min (CFM)	29.5-32.5-35.5-42.0 (1042-1148-1254-1483)
		External static pressure	Pa (in.WG)	35-50-70-100-150 (0.14-0.20-0.28-0.40-0.60)
	Operation control & Thermostat		Remote controller & built-in	
	Sound pressure level (Low Mid2 Mid1 High)	35Pa (0.14 in.WG)	dB (A)	37-39-41-45
		50Pa (0.20 in.WG)		37-39-41-45
		70Pa (0.28 in.WG)		38-41-42-47
		100Pa (0.40 in.WG)		40-42-44-48
		150Pa (0.60 in.WG)		42-44-46-50
Field drain pipe O.D		mm (in.)	32 (1-1/4)	
Dimensions	W	mm (in.)	1400 (55-1/8)	
	D	mm (in.)	732 (28-7/8)	
	H	mm (in.)	250 (9-7/8)	
Weight		kg (lbs)	39 (86)	

4. FAN PERFORMANCE AND CORRECTED AIR FLOW


PEAD-AA09NL

 (External static pressure 35Pa) 208-230V 60Hz

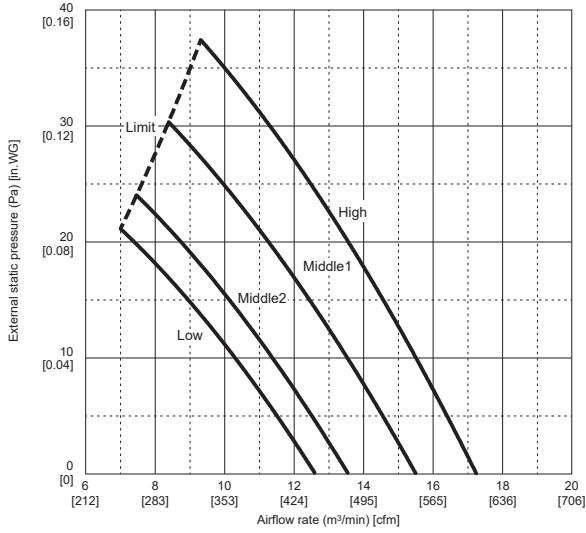


PEAD-AA09NL

 (External static pressure 100Pa) 208-230V 60Hz

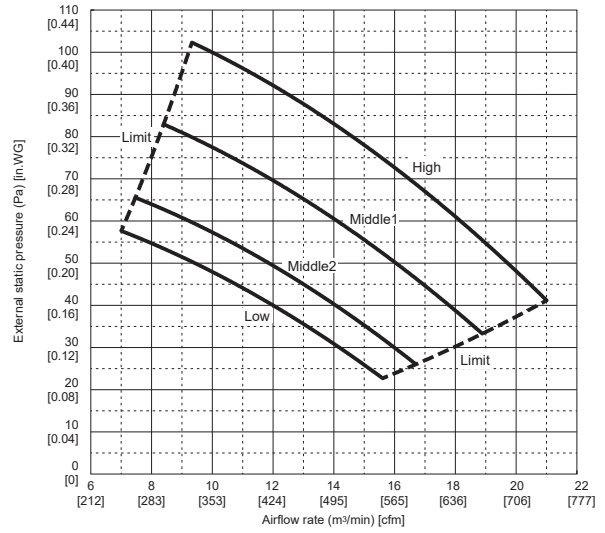


PEAD-AA09NL

 (External static pressure 50Pa) 208-230V 60Hz

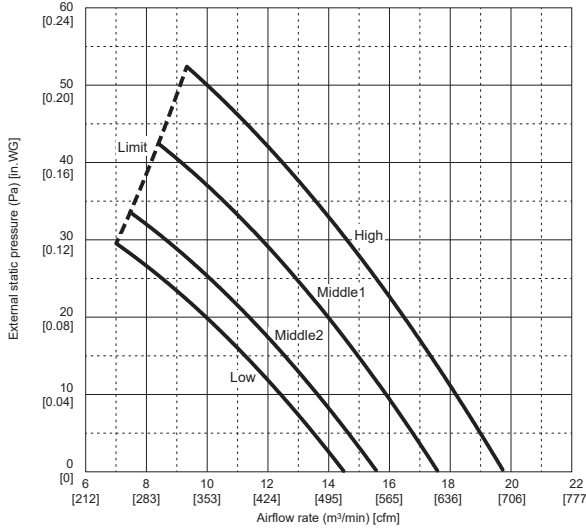


PEAD-AA09NL

 (External static pressure 150Pa) 208-230V 60Hz

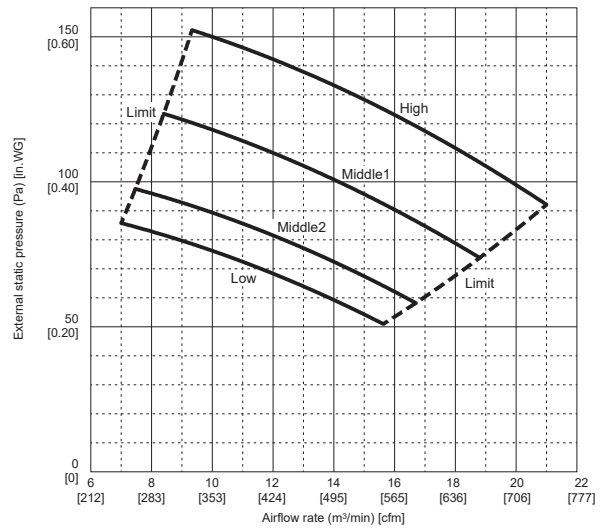


PEAD-AA09NL

 (External static pressure 70Pa) 208-230V 60Hz

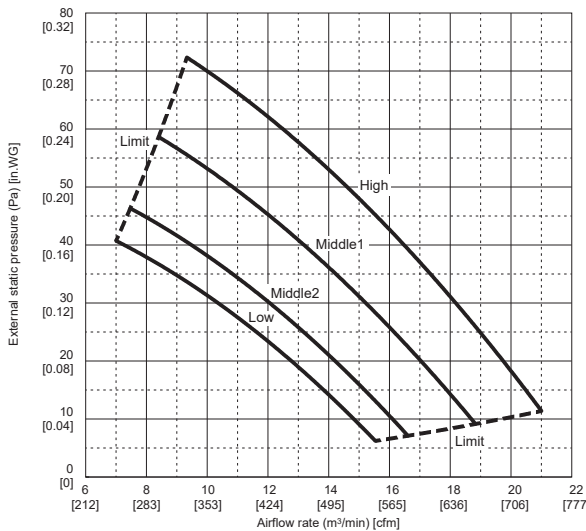


PEAD-AA12NL

 (External static pressure 35Pa) 208-230V 60Hz

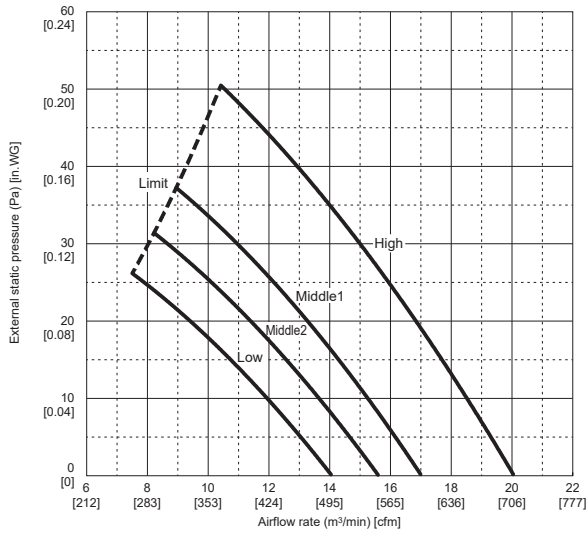


PEAD-AA12NL

 (External static pressure 100Pa) 208-230V 60Hz

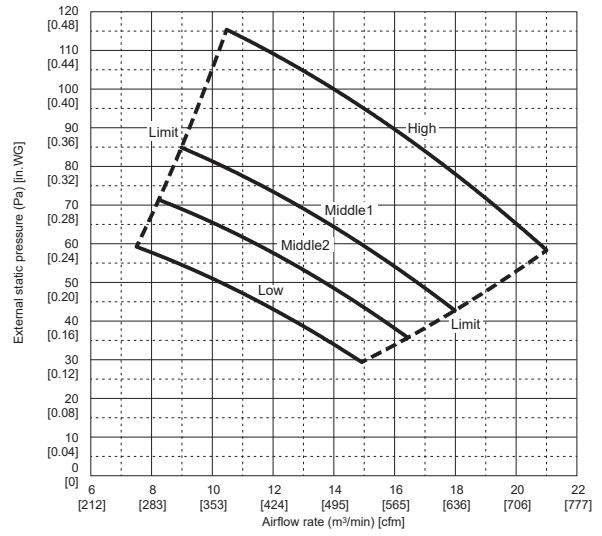


PEAD-AA12NL

 (External static pressure 50Pa) 208-230V 60Hz

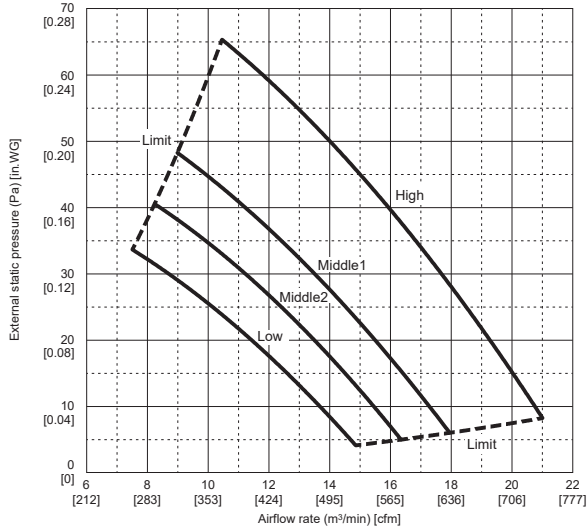


PEAD-AA12NL

 (External static pressure 150Pa) 208-230V 60Hz

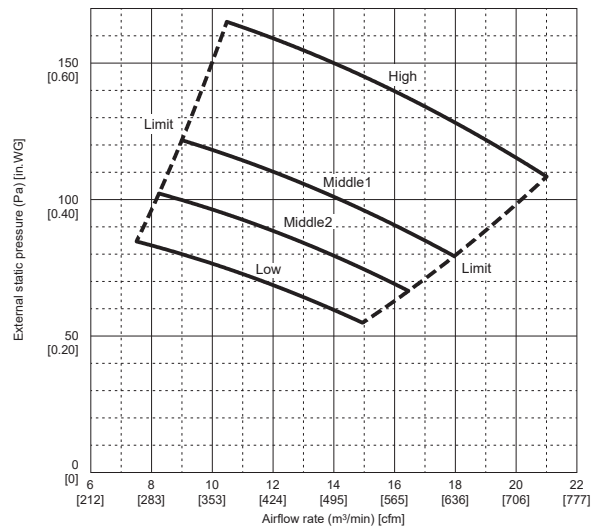


PEAD-AA12NL

 
(External static pressure 70Pa) 208-230V 60Hz

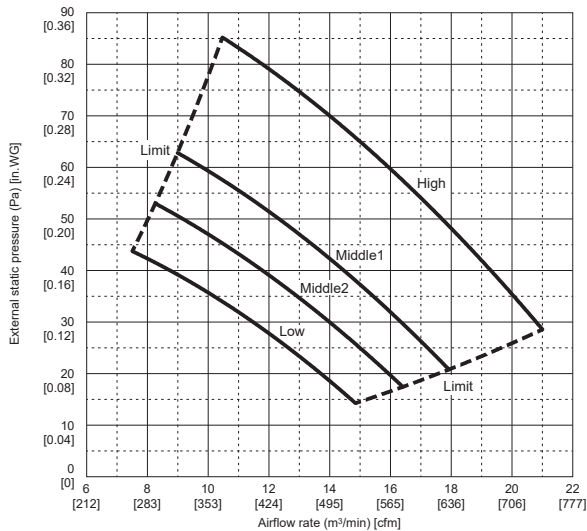

 
PEAD-AA15, 18NL
(External static pressure 35Pa) 208-230V 60Hz

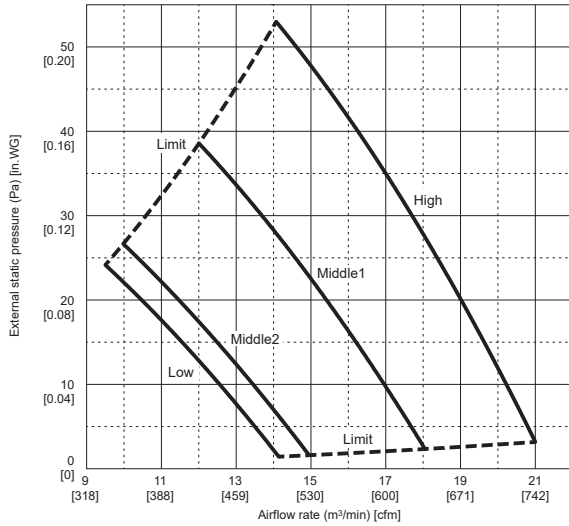

 
PEAD-AA15, 18NL
(External static pressure 100Pa) 208-230V 60Hz

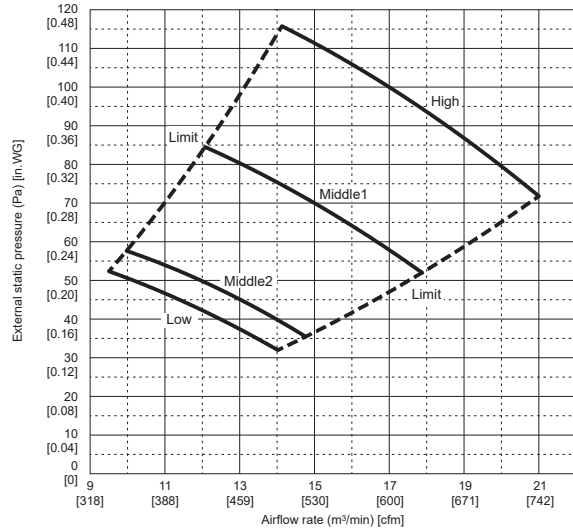

 
PEAD-AA15, 18NL
(External static pressure 50Pa) 208-230V 60Hz

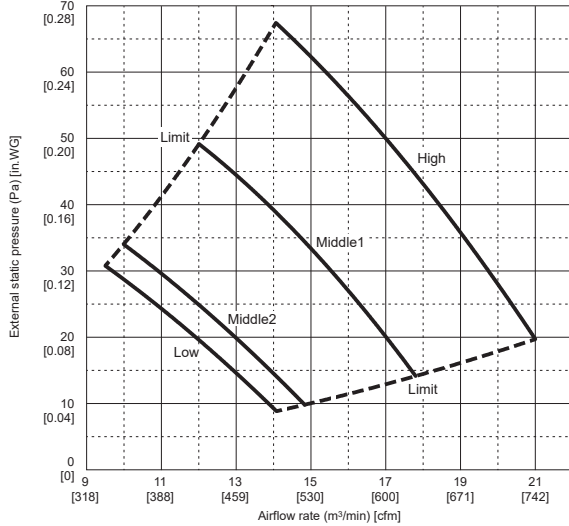

 PEAD-AA15, 18NL
(External static pressure 150Pa) 208-230V 60Hz

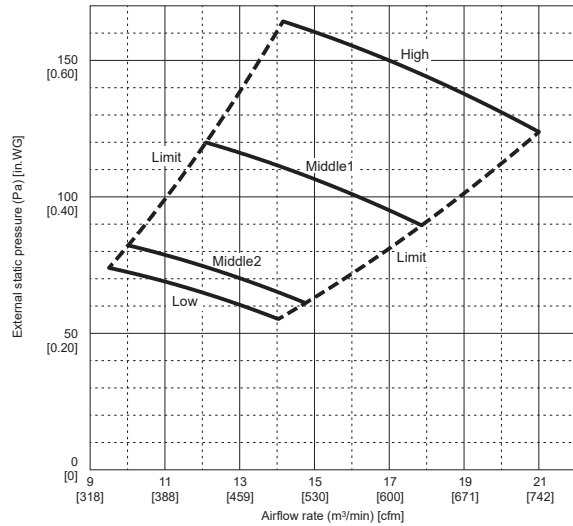


 PEAD-AA15, 18NL
(External static pressure 70Pa) 208-230V 60Hz

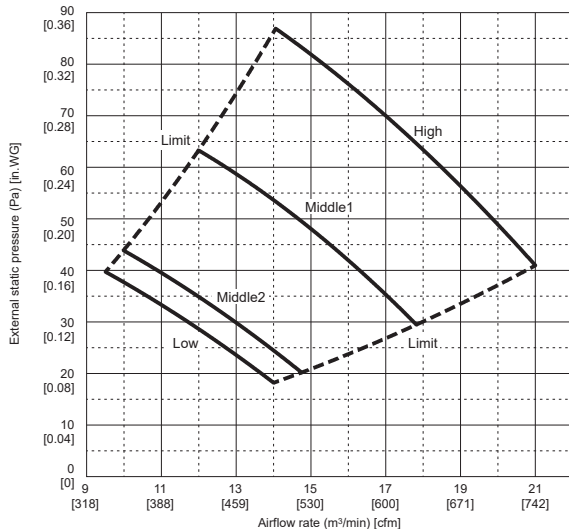


PEAD-AA24NL

 (External static pressure 35Pa) 208-230V 60Hz

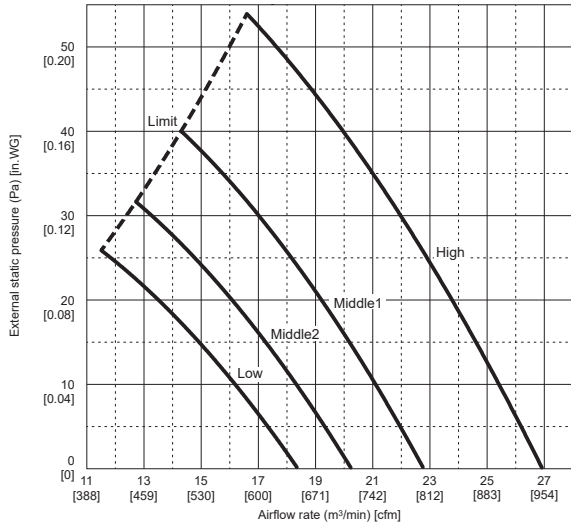


PEAD-AA24NL

 (External static pressure 100Pa) 208-230V 60Hz

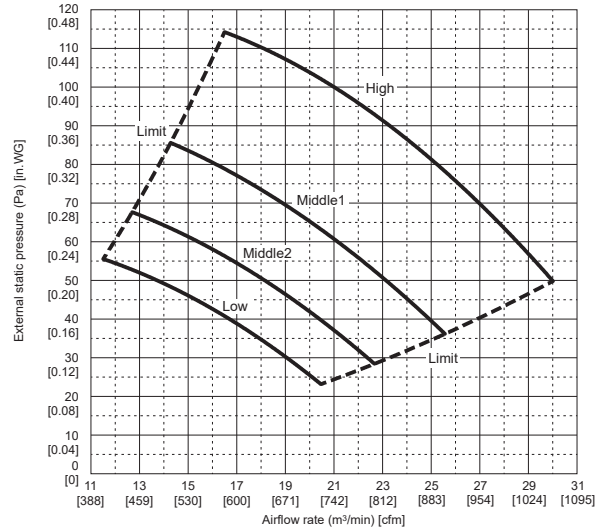


PEAD-AA24NL

 (External static pressure 50Pa) 208-230V 60Hz

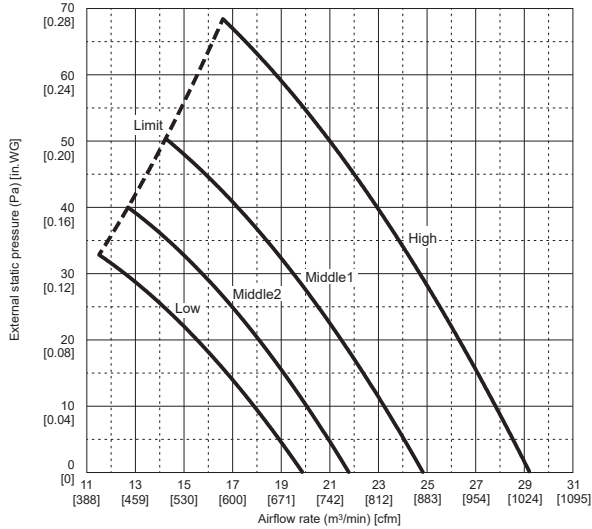


PEAD-AA24NL

 (External static pressure 150Pa) 208V 60Hz

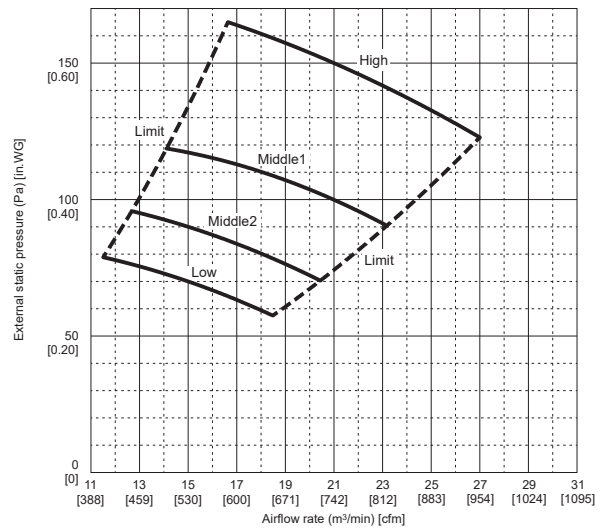


PEAD-AA24NL

 (External static pressure 70Pa) 208-230V 60Hz

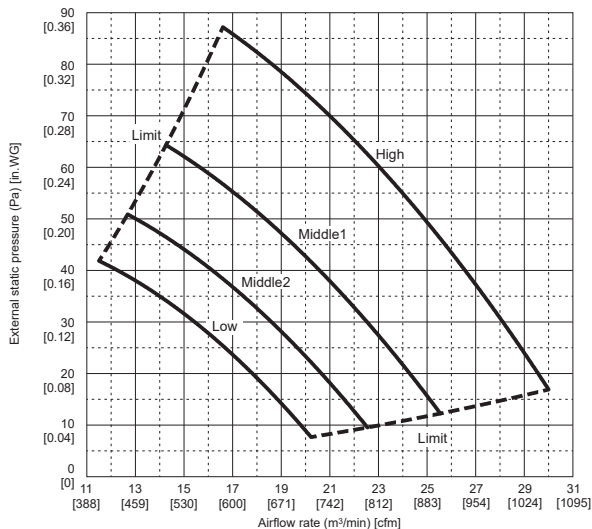


PEAD-AA24NL

 (External static pressure 150Pa) 230V 60Hz

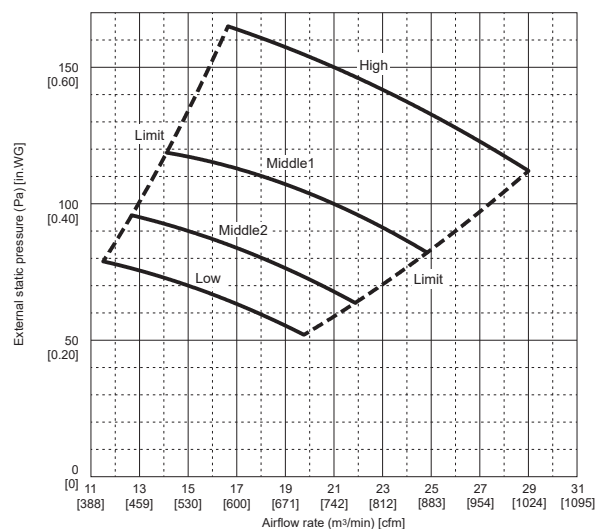


PEAD-AA30NL

 (External static pressure 35Pa) 208-230V 60Hz

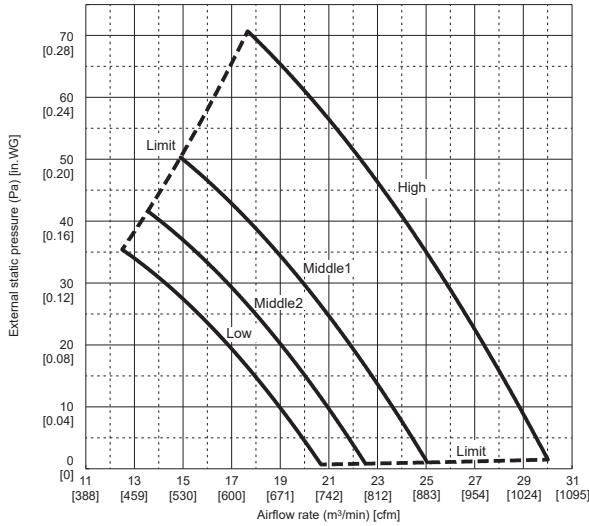


PEAD-AA30NL

 (External static pressure 100Pa) 208-230V 60Hz

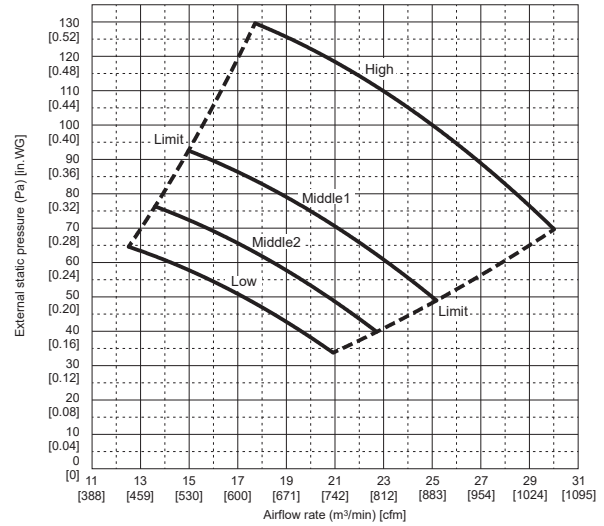


PEAD-AA30NL

 (External static pressure 50Pa) 208-230V 60Hz

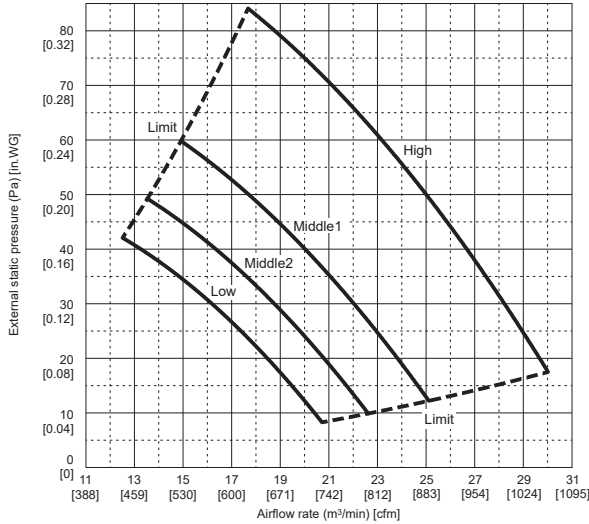


PEAD-AA30NL

 (External static pressure 150Pa) 208V 60Hz

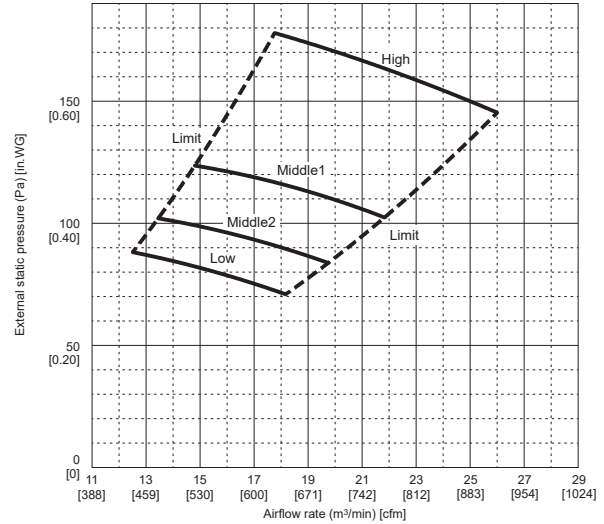


PEAD-AA30NL

 (External static pressure 70Pa) 208-230V 60Hz

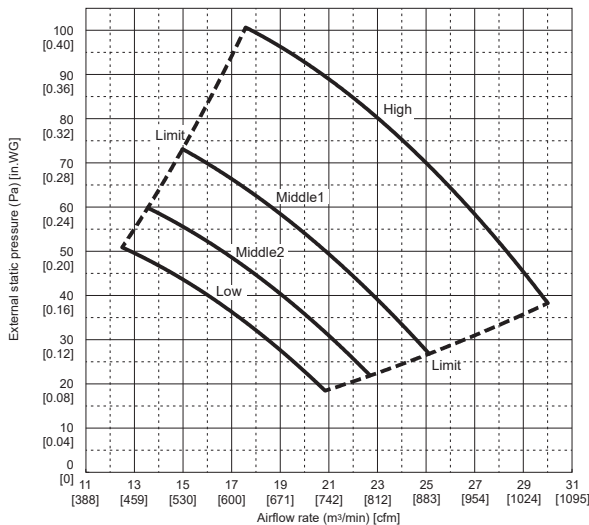


PEAD-AA30NL

 (External static pressure 150Pa) 230V 60Hz

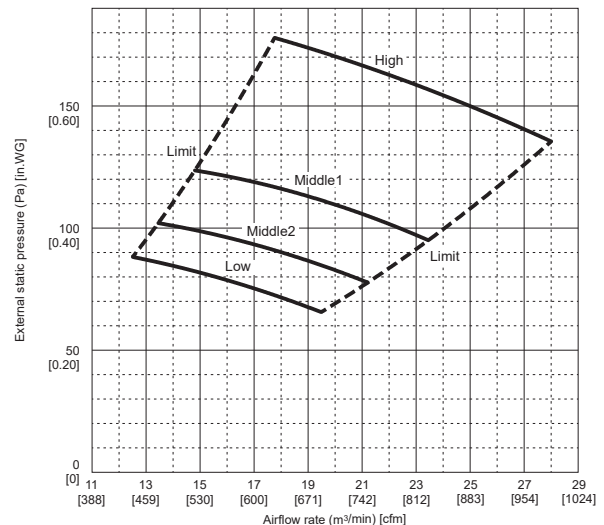


PEAD-AA36NL

 (External static pressure 35Pa) 208-230V 60Hz

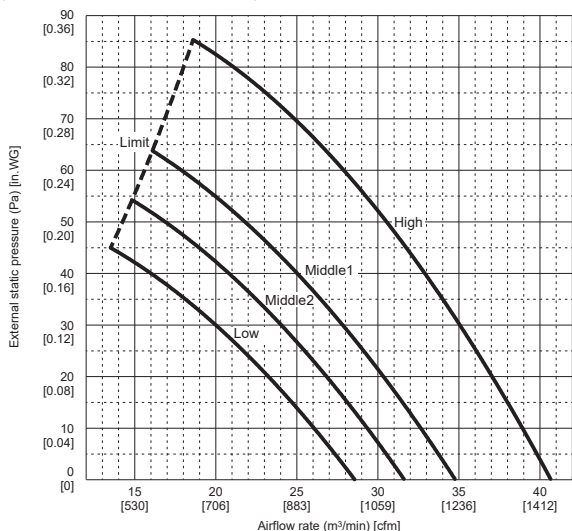


PEAD-AA36NL

 (External static pressure 100Pa) 208-230V 60Hz

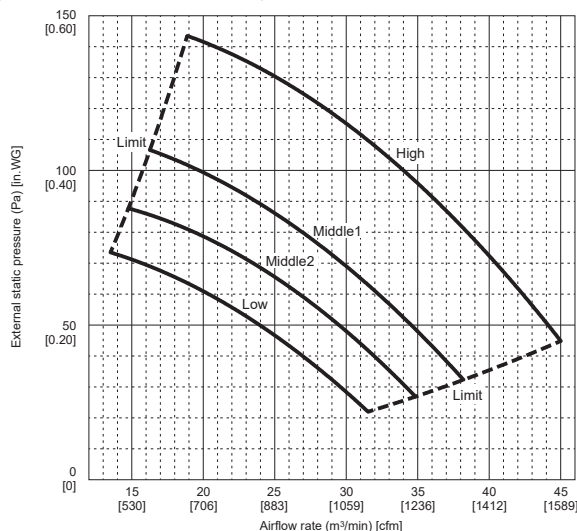


PEAD-AA36NL

 (External static pressure 50Pa) 208-230V 60Hz

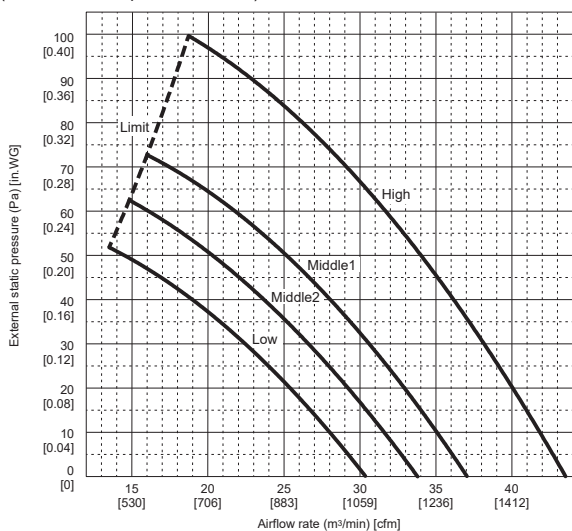


PEAD-AA36NL

 (External static pressure 150Pa) 208V 60Hz

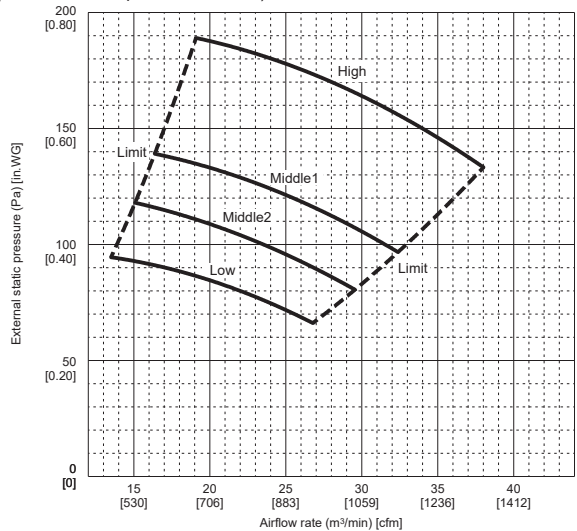


PEAD-AA36NL

 (External static pressure 70Pa) 208-230V 60Hz

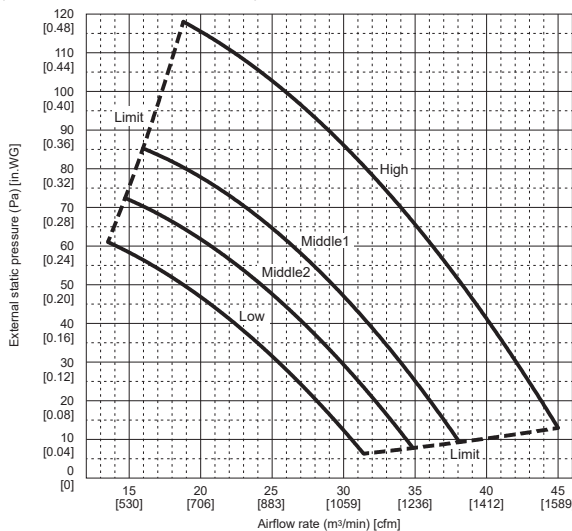


PEAD-AA36NL

 (External static pressure 150Pa) 230V 60Hz

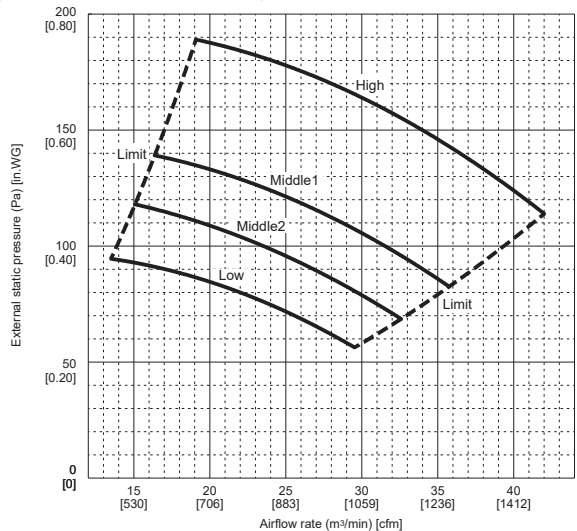


PEAD-AA42NL

 (External static pressure 35Pa) 208-230V 60Hz

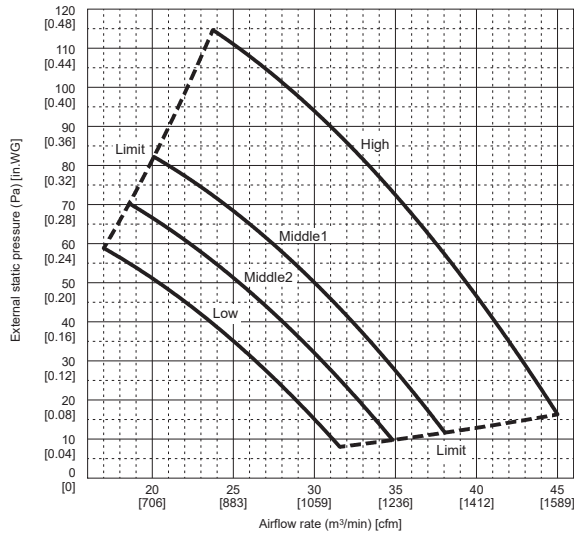


PEAD-AA42NL

 (External static pressure 100Pa) 208-230V 60Hz

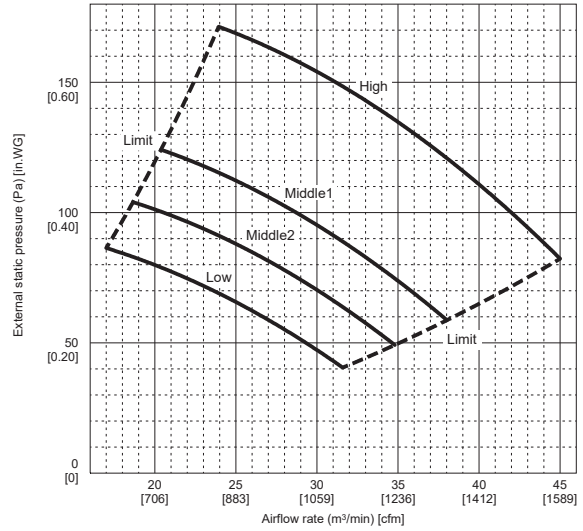


PEAD-AA42NL

 (External static pressure 50Pa) 208-230V 60Hz

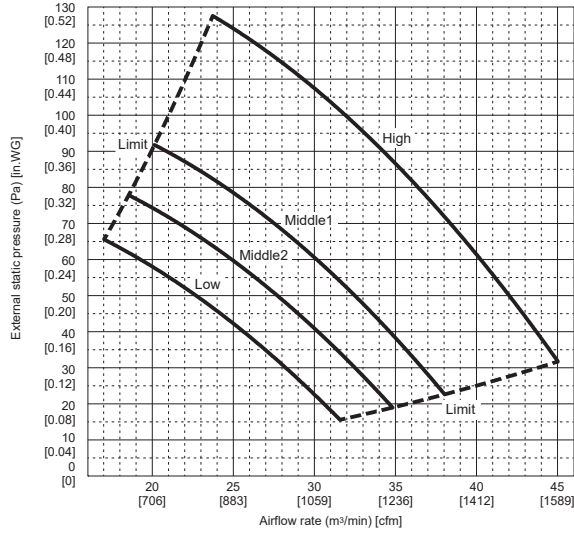


PEAD-AA42NL

 (External static pressure 150Pa) 208V 60Hz

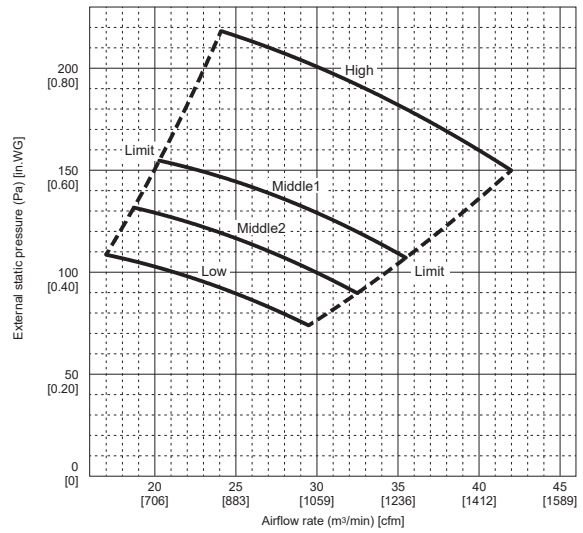


PEAD-AA42NL

 (External static pressure 70Pa) 208-230V 60Hz

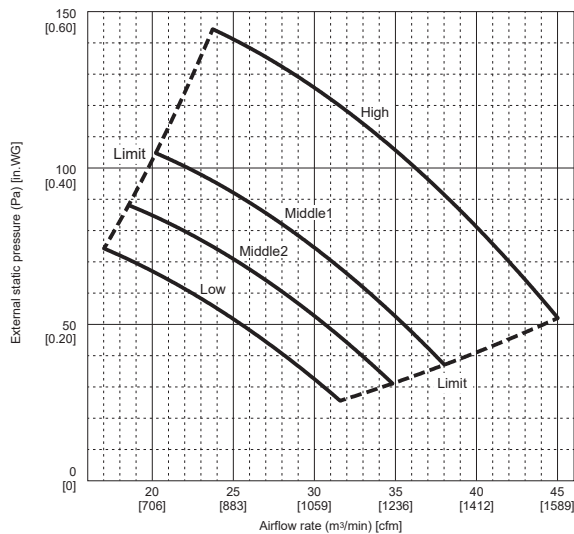


PEAD-AA42NL

 (External static pressure 150Pa) 230V 60Hz

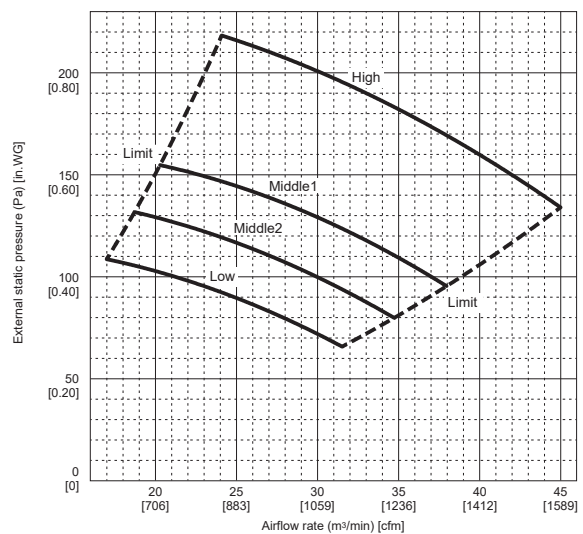


PEAD-AA09, 12, 15, 18, 24, 30, 36, 42NL

 Air filter 208-230V 60Hz





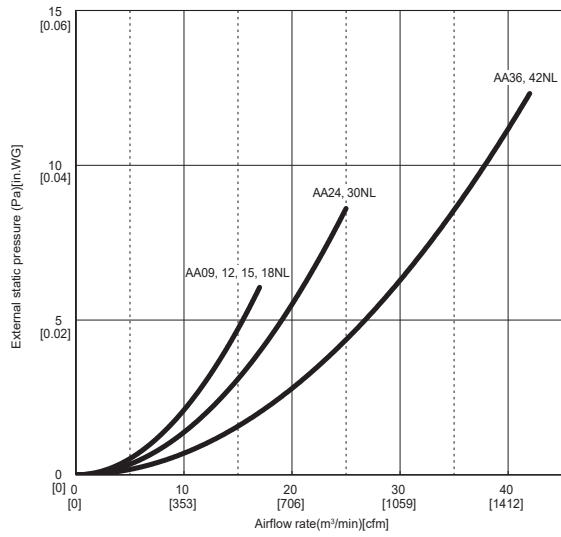


5. SOUND PRESSURE LEVELS





 
5-1. Sound pressure level Ceiling concealed

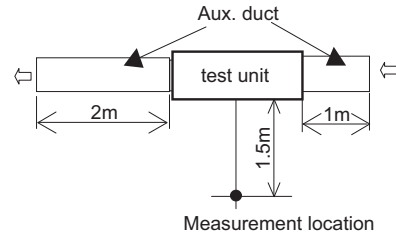






5-2. NC curves PEAD-AA09NL

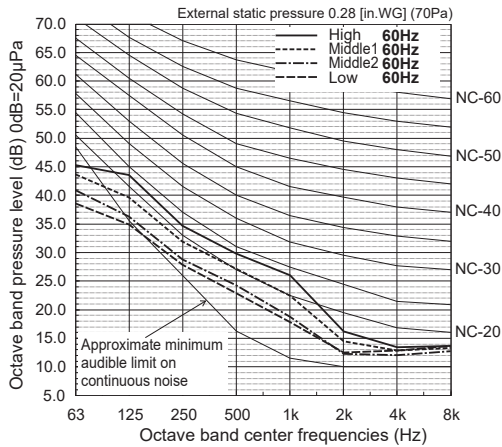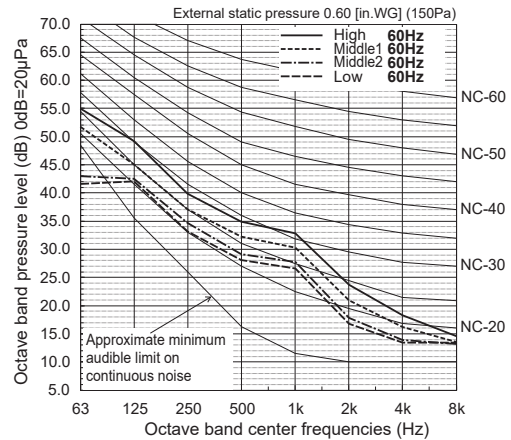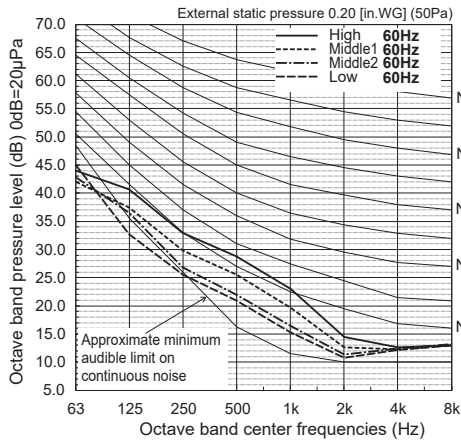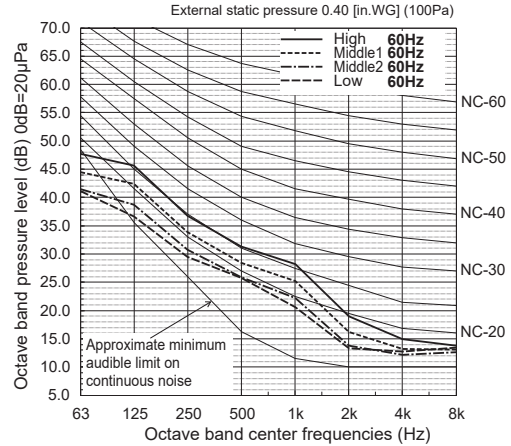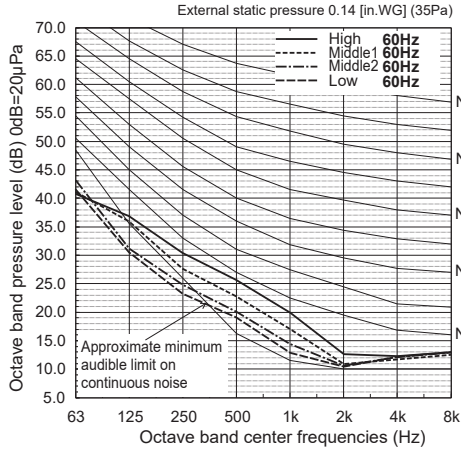     






PEAD-AA12NL

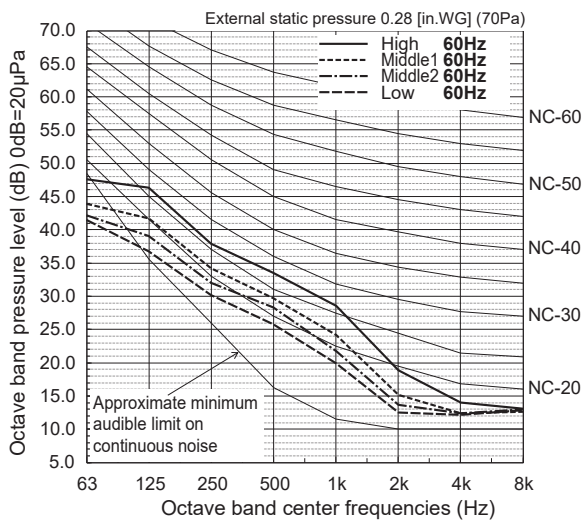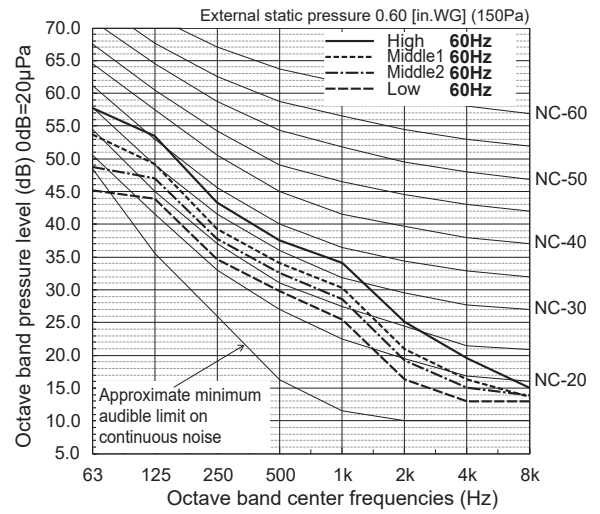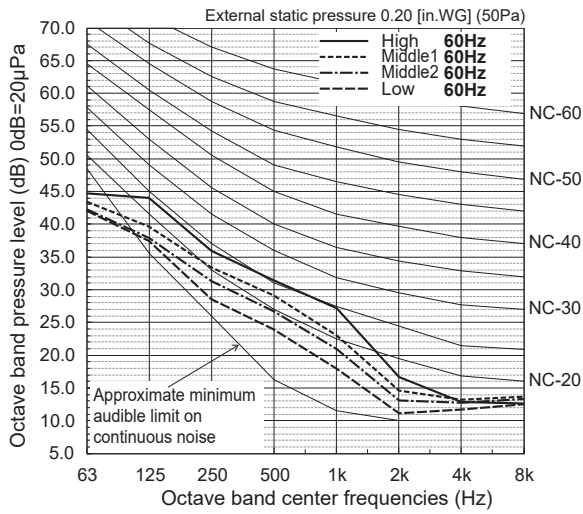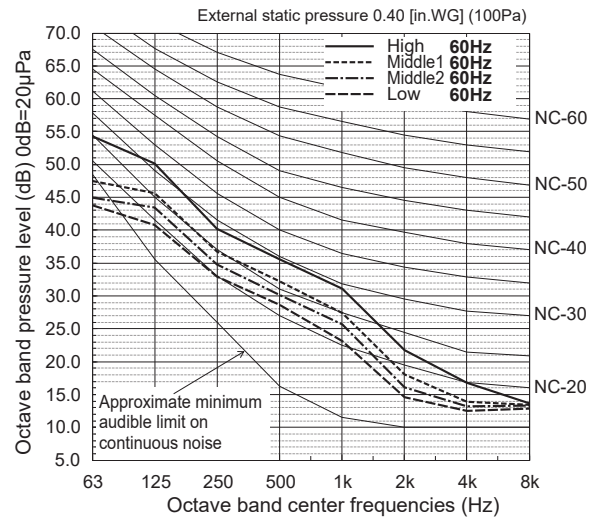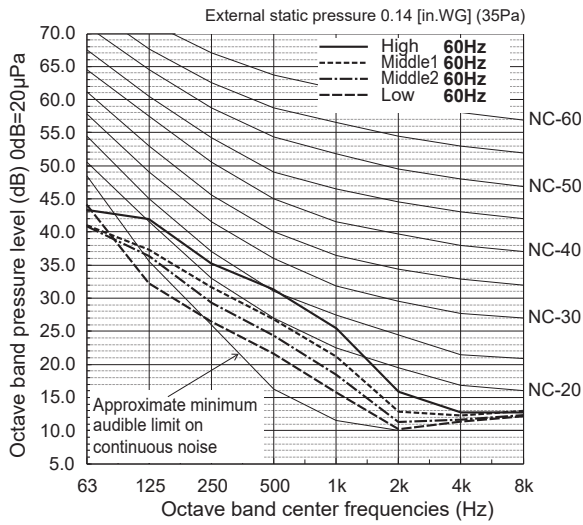     






PEAD-AA15, 18NL

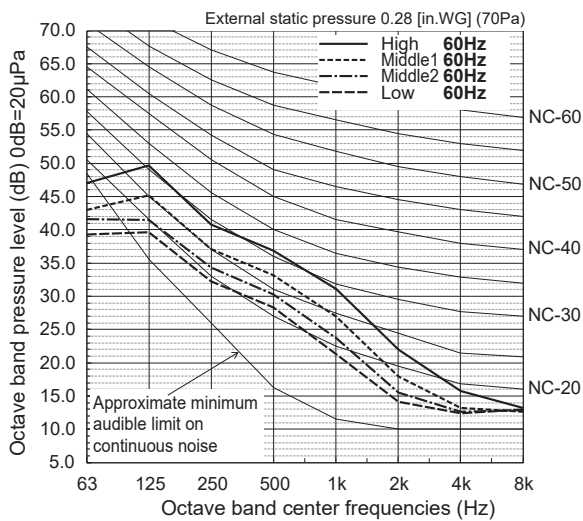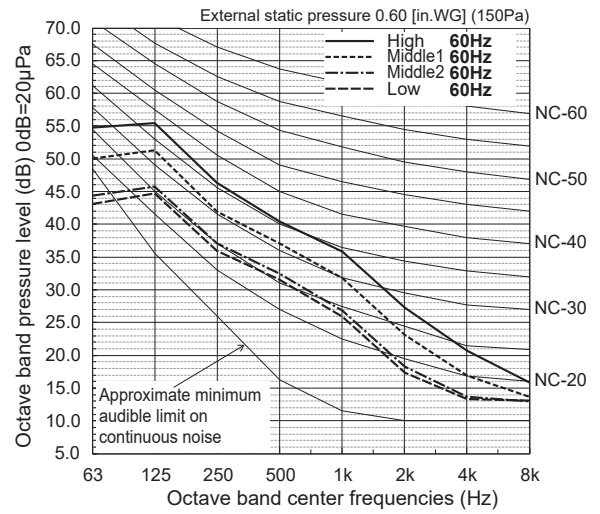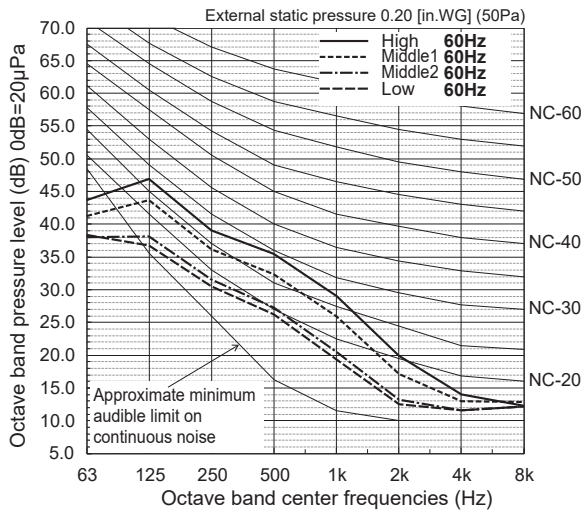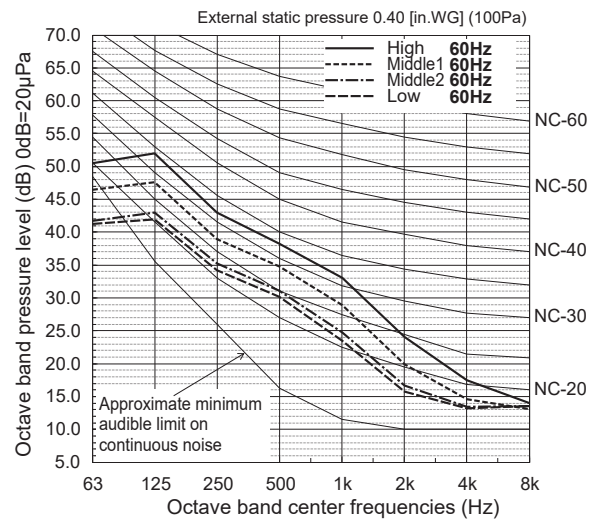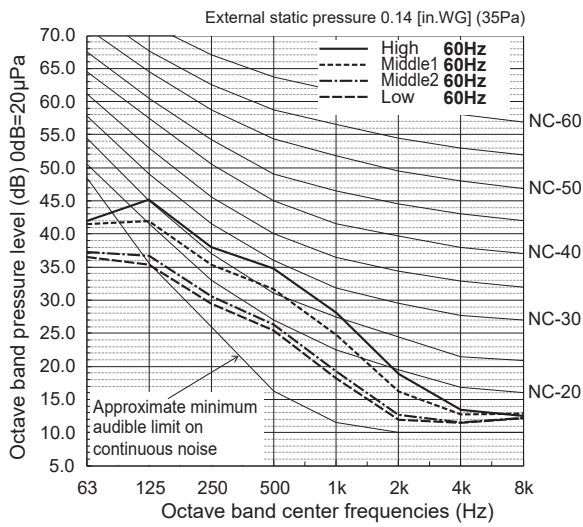     






PEAD-AA24NL

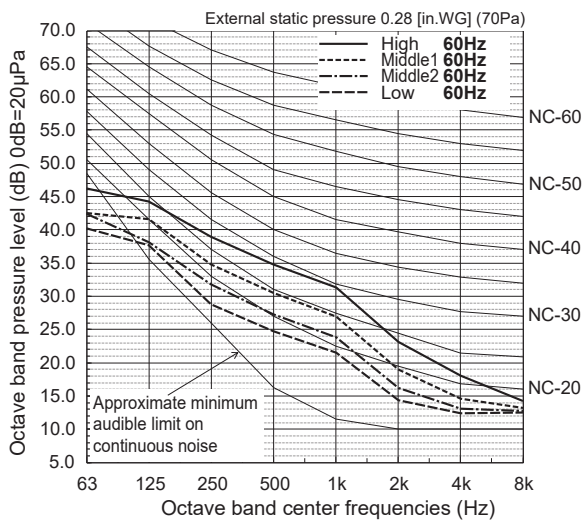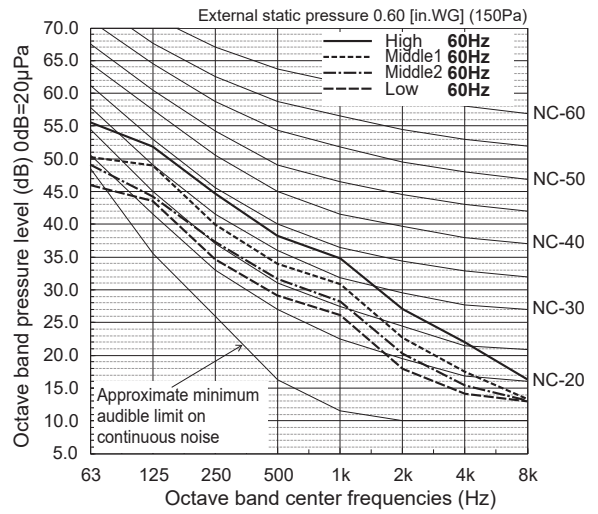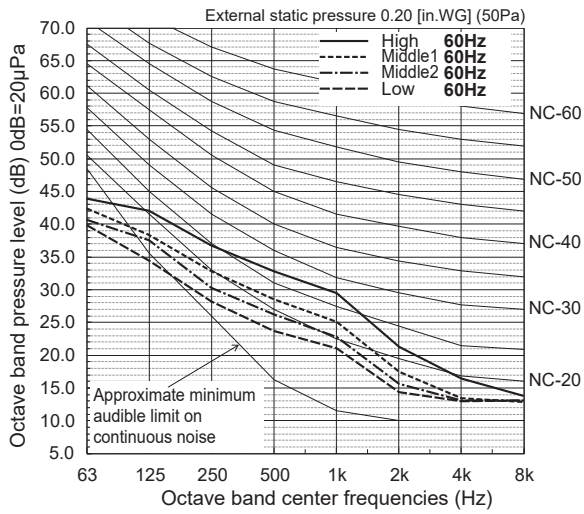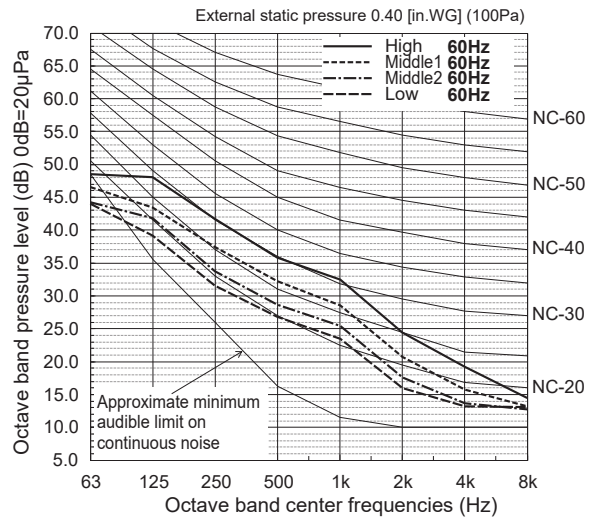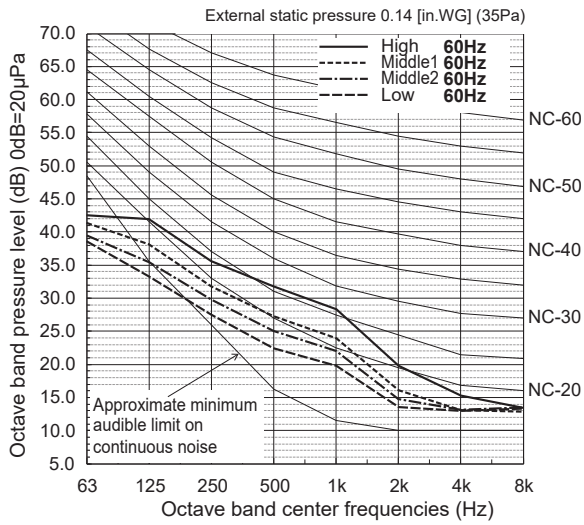     






PEAD-AA30NL

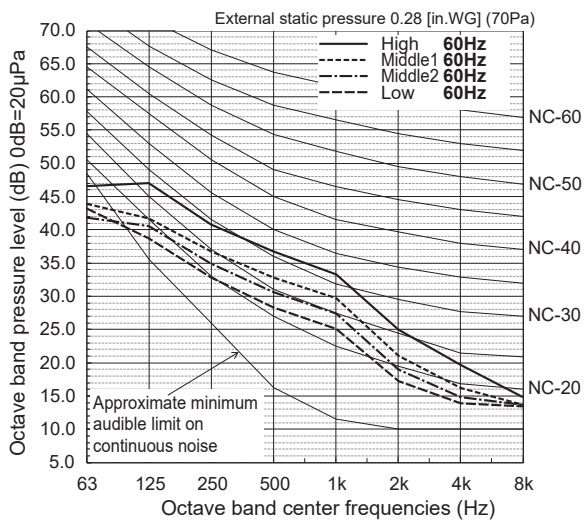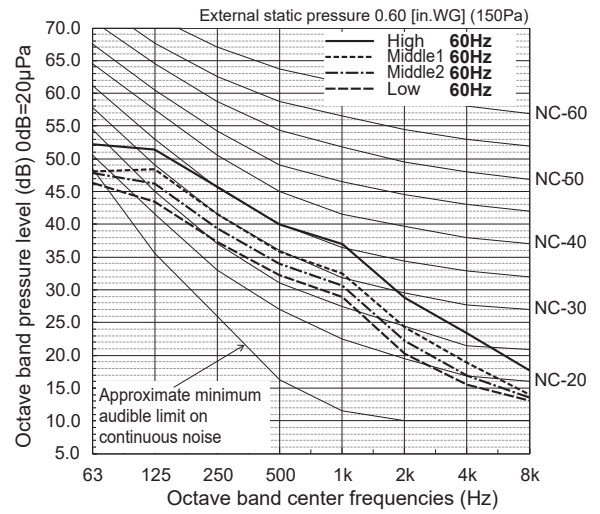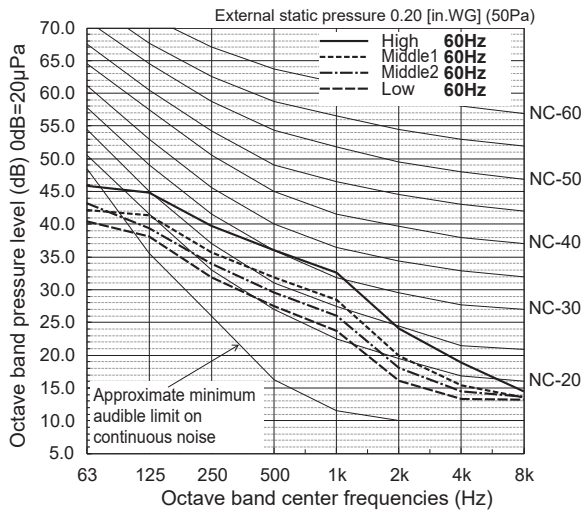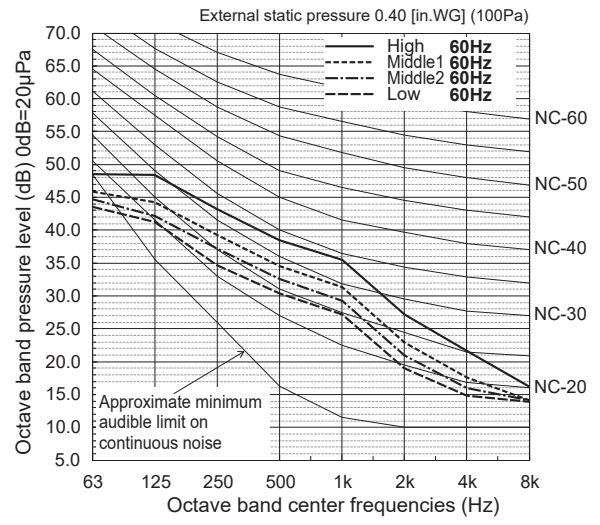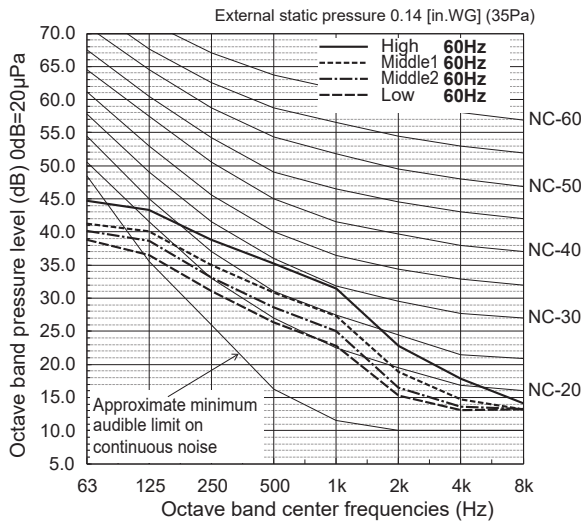     

PEAD-AA36NL

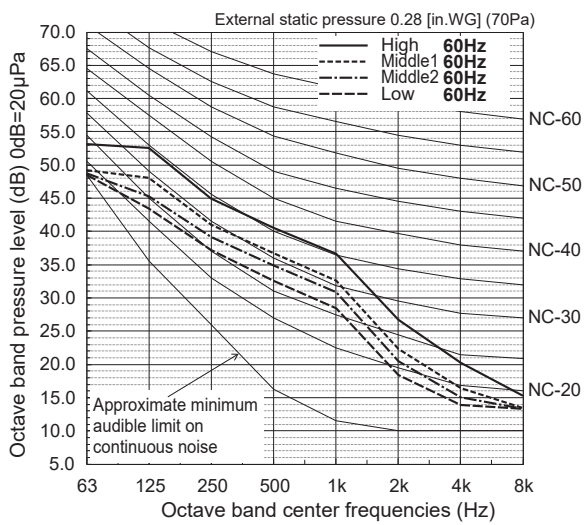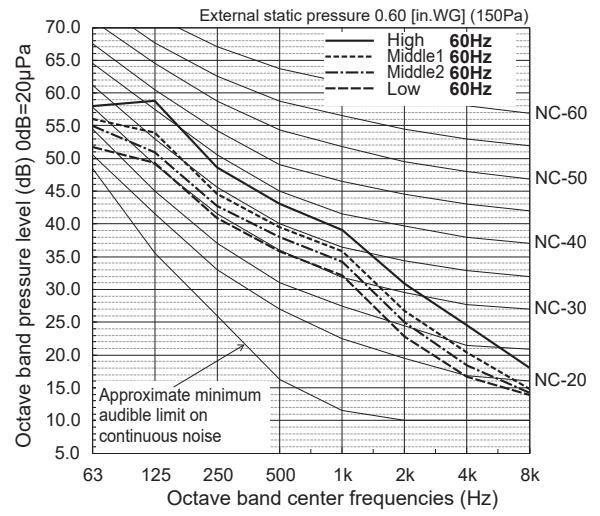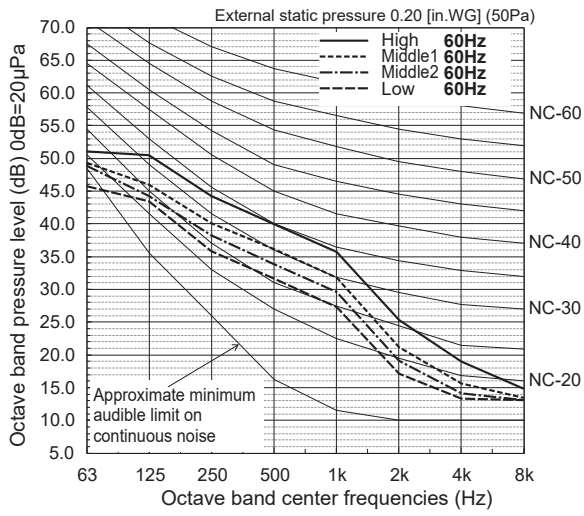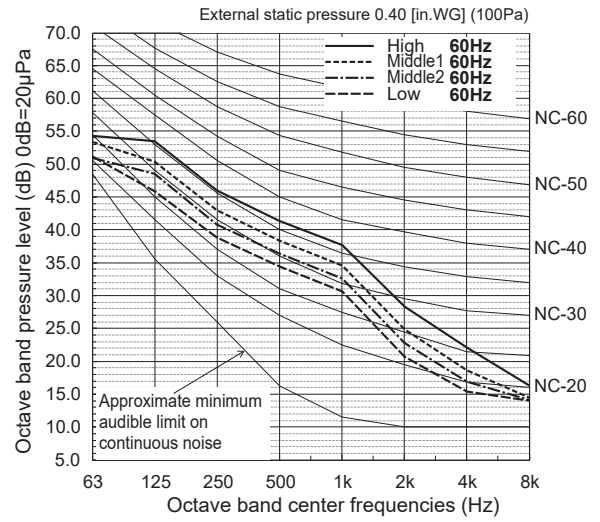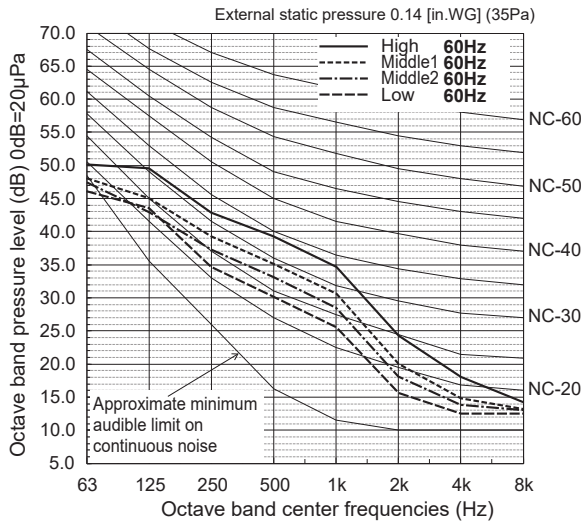     

PEAD-AA42NL

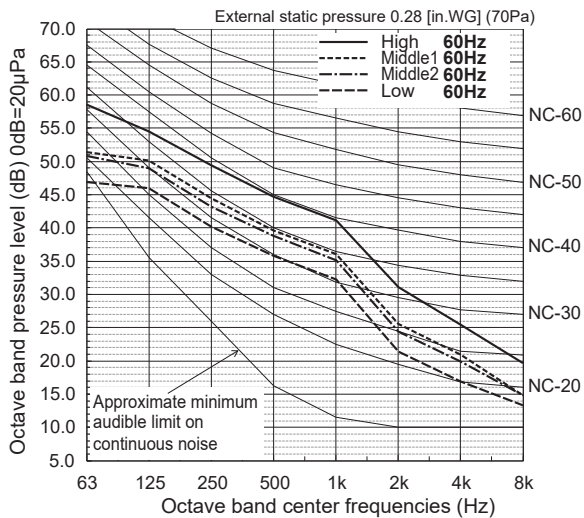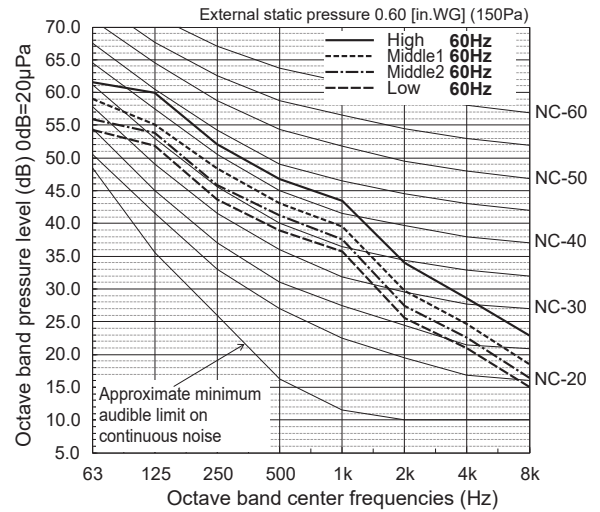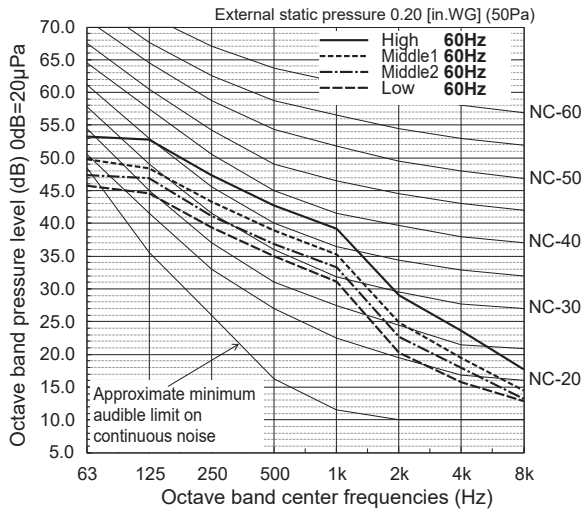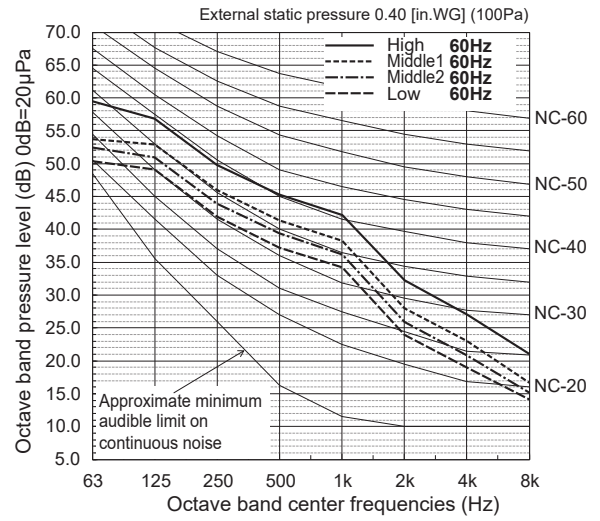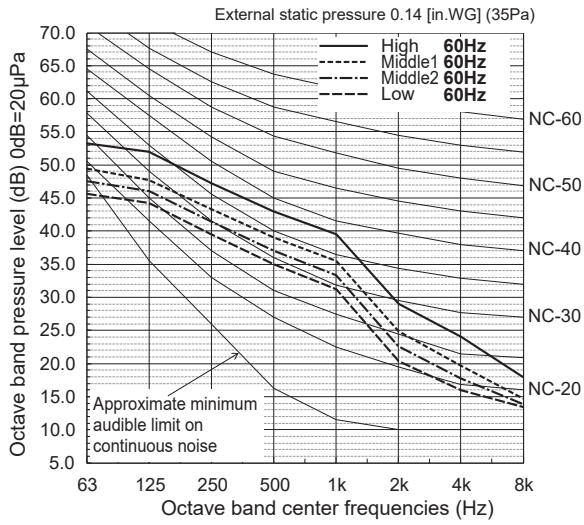     


6. OUTLINES & DIMENSIONS

INDOOR UNIT

PEAD-AA09, 12, 15, 18, 24, 30, 36, 42NL

 - Notes
1. Use an M10 screw for the suspension bolt (field supply).
 2. Keep the service space for maintenance at the bottom.
 3. This drawing is for PEAD-AA09-12-15-18-24-30NL models, which have 2 fans. PEAD-AA-36-42NL models have 3 fans.
 4. If the inlet duct is used, remove the air filter (supplied with the unit), then install the filter (field supply) at the suction side.
 5. Heat air to 0°C(32°F) or higher when taking fresh air with a fresh air intake.

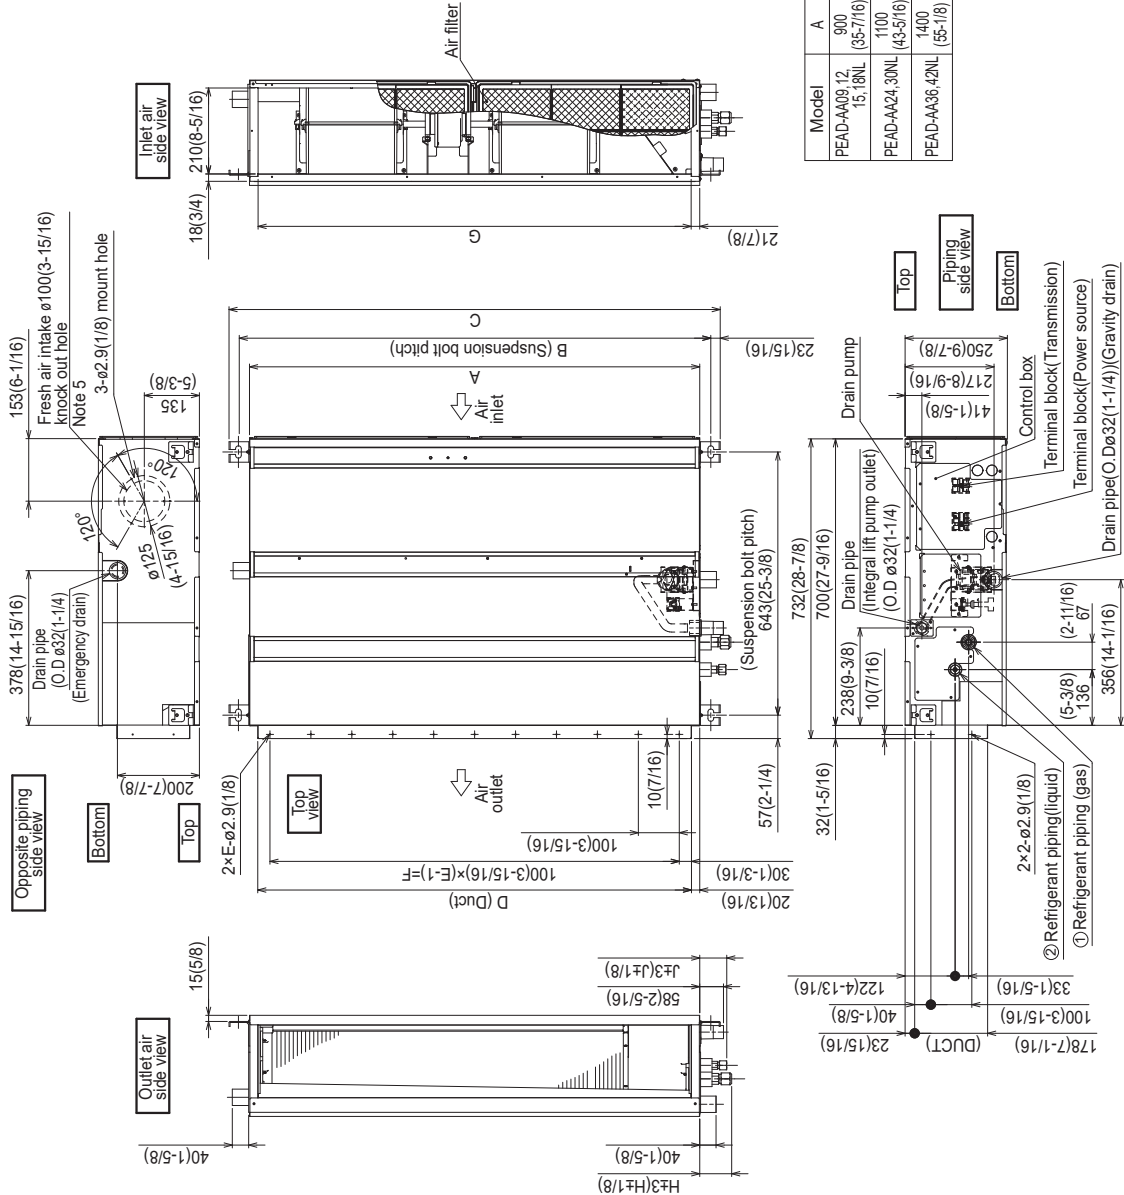

Model	J	Unit:mm(in.)	
		① Gas pipe	② Liquid pipe
PEAD-AA09NL	62 (2-1/2)	ø9.52 (3/8)	ø6.35 (1/4)
PEAD-AA12,15,18NL	66	ø12.7 (1/2)	ø9.52 (3/8)
PEAD-AA24,30,36,42NL	66	ø15.88 (5/8)	ø9.52 (3/8)

Model	Unit:mm(in.)							
	A	B	C	D	E	F	G	H
PEAD-AA09,12,15,18NL	900 (35-7/16)	954 (37-9/16)	1000 (39-3/8)	860 (33-7/8)	9	800 (31-1/2)	888 (33-13/16)	72
PEAD-AA24,30NL	1100 (43-5/16)	1154 (45-7/16)	1200 (47-1/4)	1060 (41-3/4)	11	1000 (39-3/8)	1058 (41-11/16)	78
PEAD-AA36,42NL	1400 (55-1/8)	1454 (57-1/4)	1500 (59-1/16)	1360 (53-9/16)	14	1300 (51-3/16)	1368 (53-1/2)	78 (3-1/8)

[Maintenance access space]

Secure enough access space to allow for the maintenance, inspection, and replacement of the motor, fan, drain pump, heat exchanger, and control box in one of the following ways.
Select an installation site for the indoor unit so that it's maintenance access space will not be obstructed by beams or other objects.

- (1) When a space of 300mm or more is available below the unit between the unit and the ceiling. (Fig.1)
 - Create access door 1 and 2 (450x450mm each) as shown in Fig.2.
 - (Access door 2 is not required if enough space is available below the unit for a maintenance worker to work in.)
- (2) When a space of less than 300mm is available below the unit between the unit and the ceiling. (At least 20mm of space should be left below the unit as shown in Fig.3)
 - Create access door 1 diagonally below the control box and access door 3 below the unit as shown in Fig.4.
 - or
 - Create access door 4 below the control box and the unit as shown in Fig.5.

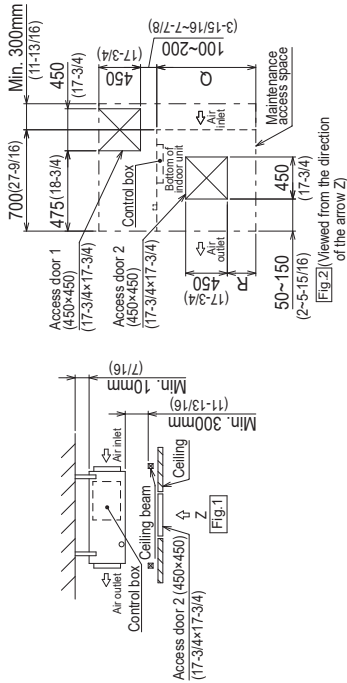 
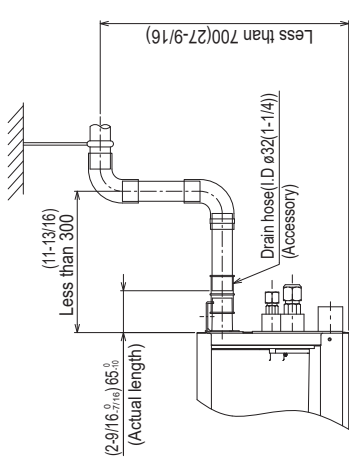 


Fig.2 (Viewed from the direction of the arrow Z)

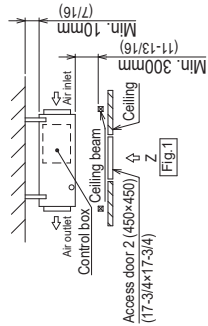 


Fig.1

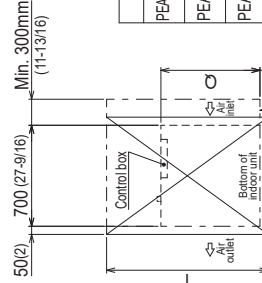 
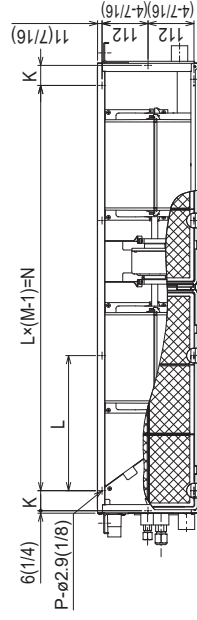 


Fig.5 (Viewed from the direction of the arrow Y)

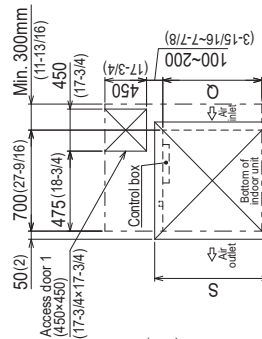 


Fig.4 (Viewed from the direction of the arrow Y)


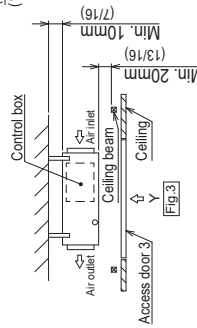 


Fig.3

Model	K	L	M	N	P	Q	R	S	T	Unit:mm(in.)
PEAD-AA09,12,15,18NL	54 (2-3/16)	260 (10-3/4)	4 (3/32)	780 (30-3/4)	10 (3/8)	900 (35-7/16)	150-250 (5-15/16)-(9-7/8)	1000 (39-3/8)	1500 (59-11/16)	
PEAD-AA24,30NL	49 (1-15/16)	330 (13)	4 (3/16)	890 (35)	10 (3/8)	1100 (43-5/16)	250-350 (9-7/8)-(13-13/16)	1200 (47-1/4)	1700 (66-15/16)	
PEAD-AA36,42NL	54 (2-3/16)	320 (12-5/8)	5 (5/16)	1280 (50-7/16)	12 (3/4)	1400 (55-1/8)	400-500 (15-3/4)-(19-11/16)	1500 (59-1/16)	2000 (78-3/4)	

7. WIRING DIAGRAM

 PEAD-AA09, 12, 15, 18, 24, 30, 36, 42NL

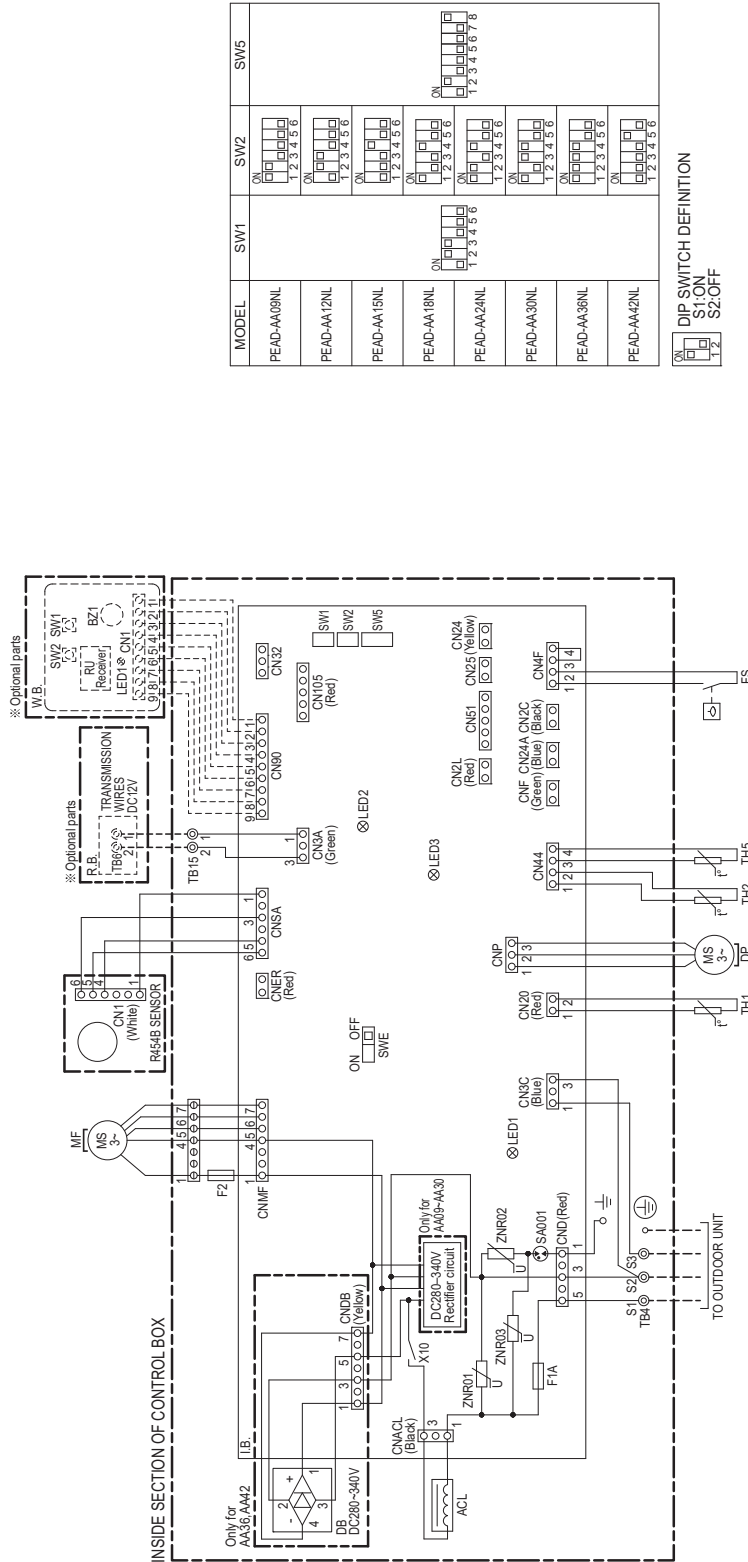


Note 1: Since the outdoor side electric wiring may change be sure to check the outdoor unit electric wiring for servicing.
 2. Indoor and outdoor connecting wires are made with polarities, make wiring matching terminal numbers (S1, S2, S3).
 3. Symbols used in wiring diagram above are as follows.

SYMBOL EXPLANATION

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
I.B.	INDOOR CONTROLLER BOARD	IB	INDOOR CONTROLLER BOARD	DP	DRAIN PUMP
CN24	CONNECTOR (HEATER CONTROL 1ST)	SW1	SWITCH (FOR MODEL SELECTION)	F2	FUSE DC400V 3A SHV11
CN24A	CONNECTOR (HEATER CONTROL 2ND)	SW2	SWITCH (FOR CAPACITY CODE)	TB4	TERMINAL BLOCK (INDOOR/OUTDOOR CONNECTING LINE)
CN25	CONNECTOR (HUMIDITY OUTPUT)	SW5	SWITCH (FOR MODE SELECTION)	TB5	TERMINAL BLOCK (REMOTE CONTROLLER TRANSMISSION LINE)
CN25	CONNECTOR (ERV OUTPUT)	SWE	CONNECTOR (EMERGENCY OPERATION)	OPTIONAL PARTS	
CN2L	CONNECTOR (LOSSNAV)	F1A	FUSE AC230V 6.3A	W/B	IR WIRELESS REMOTE CONTROLLER BOARD
CN32	CONNECTOR (REMOTE SWITCH)	ZNR01, 02, 03	VARIABLE RESISTOR	RU	RECEIVING UNIT
CN51	CONNECTOR (CENTRALLY CONTROL)	SA001	AUX. RELAY	BZ1	BUZZER
CN80	CONNECTOR (WIRELESS)	X10	INTAKE AIR TEMP. THERMISTOR	LED1	LED (RUN INDICATOR)
CN105	CONNECTOR (IT TERMINAL)	TH1	INTAKE AIR TEMP. THERMISTOR LIQUID	SW1	SWITCH (HEATING ON/OFF)
LED1	LED (POWER SUPPLY)	TH5	PIPE TEMP. THERMISTOR	SW2	SWITCH (COOLING ON/OFF)
LED2	LED (REMOTE CONTROLLER SUPPLY)	ACL	COND./EVA. TEMP. THERMISTOR	W/B	WIRED REMOTE CONTROLLER BOARD
LED3	LED (TRANSMISSION INDOOR/OUTDOOR)	FS	AC REACTOR (POWER FACTOR IMPROVEMENT)	TB6	TERMINAL BLOCK (REMOTE CONTROLLER TRANSMISSION LINE)
CNE1	CONNECTOR (ERV INPUT)	DB	DIODE BRIDGE		
CNF	CONNECTOR (HUMIDITY INPUT)	MF	FAN MOTOR		

8. REFRIGERANT SYSTEM DIAGRAM

 PEAD-AA09, 12, 15, 18, 24, 30, 36, 42NL

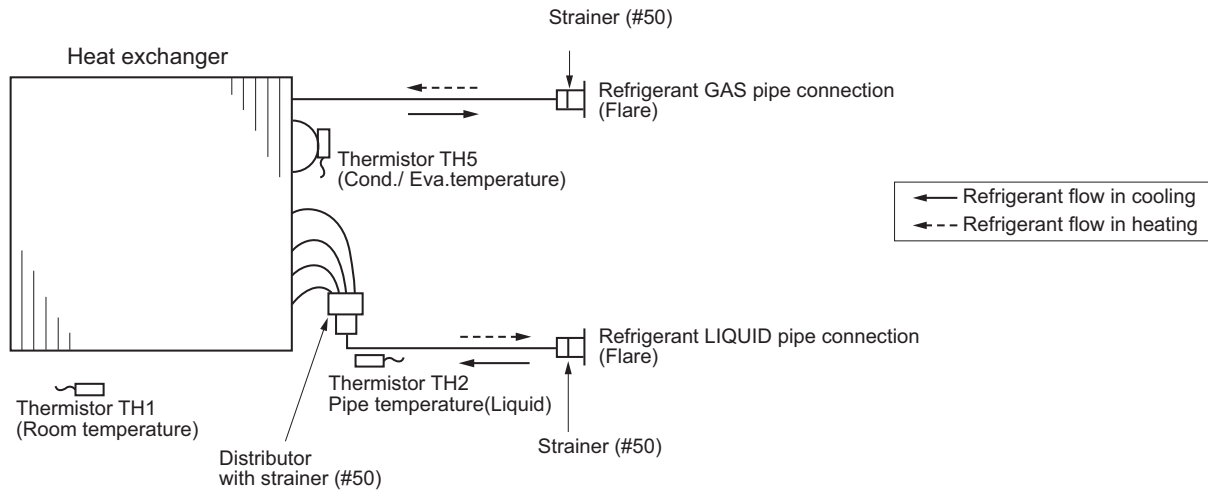

9. HEATER CONTROL

9-1. CAUTIONS RELATED TO HEATER

- Exercise caution when using any auxiliary heat source and follow all third party manufacturer instructions and safety guidelines for installation and usage.
- Any auxiliary heat source connected to this unit via the CN24 connection must have an independent temperature control mechanism. Failure to install and maintain such temperature control mechanism may void the warranty for this unit.
- Mitsubishi Electric shall not bear any warranty obligation or other liability for any damage or loss in connection with such third party auxiliary heaters.

9-2. CONTROL SPECIFICATIONS AND FUNCTION SETTING

- Table 1 shows the mode setting for the field-installed heater.

Table. 1 [Function Table]

Select unit numbers 01 to 03 or all units (AL [wired remote controller] / 07 [IR wireless remote controller])

Mode (function) No.		Factory Setting	Mode	Heater Operation In Error	Heater Operation During Defrost	Heater Operation During Refrigerant Leakage	Fan Control When Heater ON
Wired remote controller (RF thermostat)							
11 (111)	23 (123)						
1	1	●	No Heater Present				
2	1	-	Heater Available	OFF	OFF	OFF	High
			Disable heater during Defrost and Error				
2	2	-	Heater Available	ON *1	ON	OFF *2	High
			Enable heater and fan during Defrost and Error *1				

Default setting: No.11: 1, No.23: 1

*1 Heater On signal can not be output in the following cases for safety reasons.

E4, E5: Communication error

A0 to A8: M-NET error

P1: Inlet thermistor error

E6, E7: Indoor/Outdoor unit communication error (In case of SW5-5: OFF)

*2 Heater will not operate during the following error.

Error code: FL (1521), FH (5558)

- Table 2 shows how the field-installed heater is controlled.

Table. 2 [Heater Control Table]

Mode Change	Condition				
EH1 ON	$(T_o - T_{RA}) > 2.7\text{ }^\circ\text{F [1.5 }^\circ\text{C]}$	AND	T_{RA} has not increased by $0.9\text{ }^\circ\text{F [0.5}^\circ\text{C]}$ in X min		
EH2 ON	$(T_o - T_{RA}) > 2.7\text{ }^\circ\text{F [1.5 }^\circ\text{C]}$	AND	T_{RA} has not increased by $0.9\text{ }^\circ\text{F [0.5}^\circ\text{C]}$ in 8 min	AND	EH1 ON for > 8 min
EH1 OFF	$(T_o - T_{RA}) \leq 0.9\text{ }^\circ\text{F [0.5 }^\circ\text{C]}$				
EH2 OFF					
KEY <ul style="list-style-type: none"> • EH1: Electric Heater 1 • EH2: Electric Heater 2 • To: Set point temperature • T_{RA}: Return Air temperature • X: Time delay (Selectable. Default is 20 min. Selectable to 1, 5, 10, 15, or 25 min) 					

- Table 3 shows how the time delay is selected

Table. 3 [Time Delay Selection Table]

Request Code ^{*1}	Action ^{*3}
390	Monitor Time Delay Setting
391	Set Time Delay to 10 minutes
392	Set Time Delay to 15 minutes
393	Set Time Delay to 20 minutes ^{*2}
394	Set Time Delay to 25 minutes
395	Set Time Delay to 5 minutes
396	Set Time Delay to 1 minute

Notes:

1. Both main and sub unit should be set in the same setting.
2. Every time replacing indoor controller board for serving, the function should be set again.
3. Stop the air-conditioner operation before changing the heater ON delay time.

*1 Time delay can only be selected with MA controller. If use of a non-MA controller is desired, the time delay must first be selected with the MA controller. Then the non-MA controller can be attached and used.

*2 The default time delay setting is 20 minutes.

*3 All delay times are approximate. It takes a few minutes to turn heater ON after the heater ON delay time has passed.

- Chart 1 and Table 4 show an example of heater operation.

Chart 1 [Heater Operation Example]

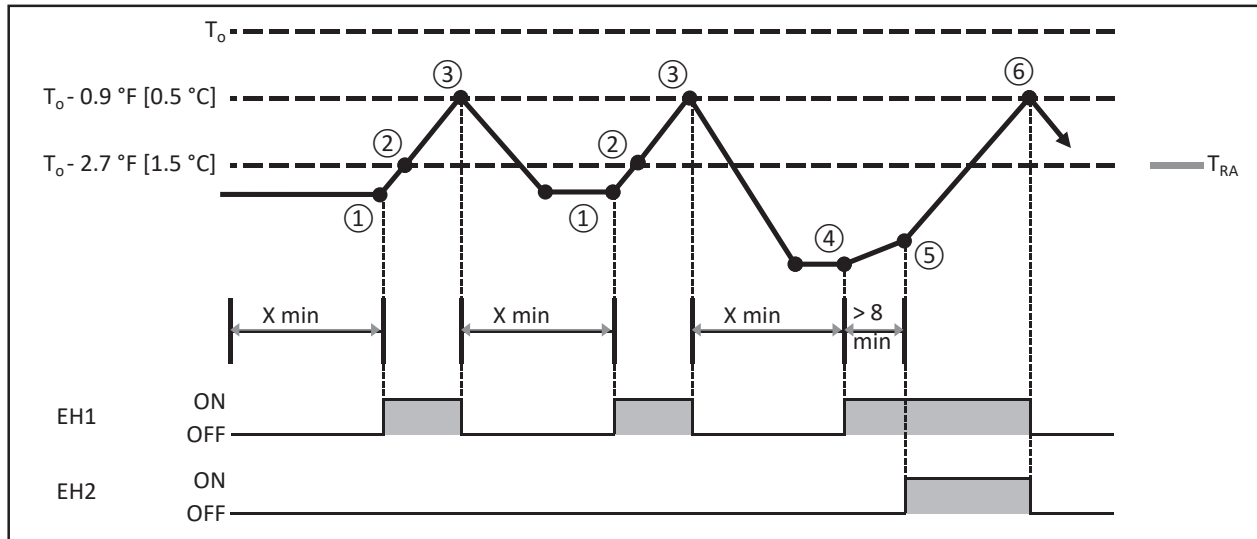 


Table. 4 [Heater Operation Example]

Step	Condition			Result
①	$(T_o - T_{RA}) > 2.7 \text{ }^\circ\text{F}$ [1.5 °C]	AND	T_{RA} has not increased by 0.9 °F [0.5°C] in X min	EH1 ON
②	$(T_o - T_{RA}) < 2.7 \text{ }^\circ\text{F}$ [1.5 °C]	AND	T_{RA} increasing faster than 0.9 °F [0.5°C] in 8 min	EH2 not ON
③	$(T_o - T_{RA}) < 0.9 \text{ }^\circ\text{F}$ [0.5°C]			EH1 OFF
④	$(T_o - T_{RA}) > 2.7 \text{ }^\circ\text{F}$ [1.5 °C]	AND	T_{RA} has not increased by 0.9 °F [0.5°C] in X min	EH1 ON
⑤	$(T_o - T_{RA}) > 2.7 \text{ }^\circ\text{F}$ [1.5 °C]	AND	T_{RA} not increasing faster than 0.9 °F [0.5°C] in 8 min	EH2 ON
⑥	$(T_o - T_{RA}) < 0.9 \text{ }^\circ\text{F}$ [0.5°C]			EH1 OFF EH2 OFF

9-3. FAN CONTROL

By setting the Mode No. 11 in the Function Table in section 9-2 and using panel heater connector on the optional parts PAC-YU25HT, the following patterns of fan control will become possible when [DEFROST] or [ERROR] is displayed.

Fan control patterns when [DEFROST] or [ERROR] is displayed

	Heater is installed in the duct.	No heater is installed in the duct.
Use of panel heater connector (PAC-YU25HT)	Unused*	Used
Heater is off.	Fan OFF	Fan OFF
Heater is on.	Fan ON (High)	Fan OFF

While the heater is on, the fan will operate at high speed regardless of the fan setting on the remote controller.



*** If a heater is installed in the duct, do not use panel heater connector. By doing so, the fan will turn off when the heater is on, which may result in fire.**

9-4. PAC-YU25HT (OPTIONAL PARTS) INSTALLATION

The following section describes installation of the External Heater Adapter that connects to PEAD-AA·NL series indoor unit. This products is the special wiring parts to drive an electric heater with the air conditioner.

(1) Parts list

◆Check that the following parts are included in the package.

 
- 1) External output cable (with a yellow connector).....2 in total
Two types of cables with different connectors are included.
- 2) Panel heater connector..... 3 in total
White: 1
Green: 2 (2 types)

(2) Connection to the indoor unit

◆Use the cables that fit the connectors on the indoor unit control board.


- 1) External output cable (with a yellow connector)
This cable is used to connect a relay circuit for an interlocked operation with either an electric or a panel heater. Select the heater output pattern (1st = CN24 or 2nd = CN24A) to use, and connect the cable to the connector on the indoor unit control board that corresponds to the selection.
- 2) Panel heater connector (with a green connector)
This connector is used to perform an interlocked operation with a panel heater. Depending on the indoor unit control board specification, connect the cable to CN2Y as appropriate.

<Image>

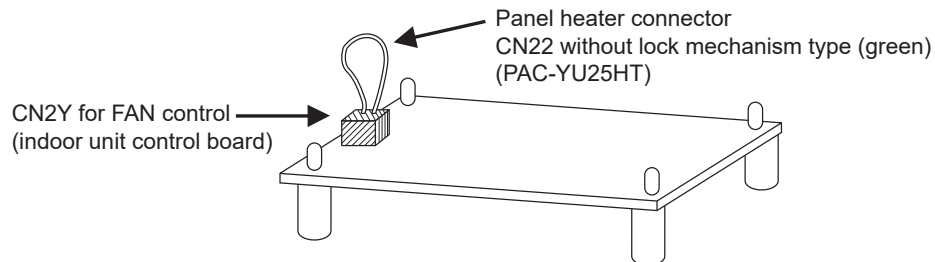

(3) Locally procured wiring

 ◆A basic connection method is shown below.

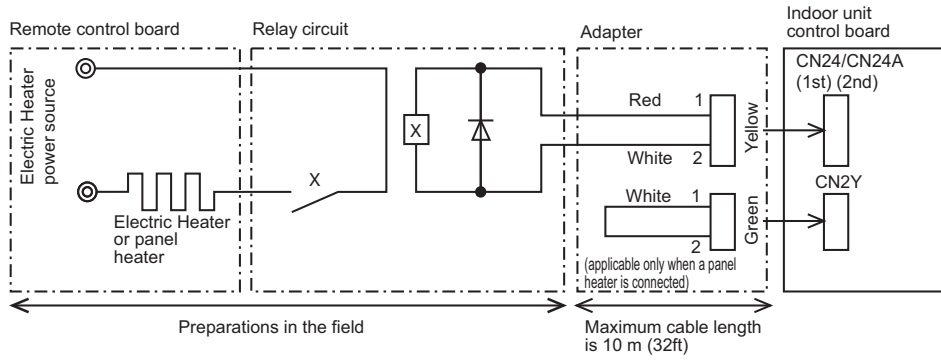

◆For relay X, use the specifications given below.

Operation coil

Rated voltage: 12VDC

Power consumption: 0.9W or less

* Use the diode that is recommended by the relay manufacturer at both ends of the relay coil.

◆The length of the electrical wiring for the PAC-YU25HT is 2 meters (6-1/2 ft.)

 
◆To extend this length, use sheathed 2-core cable.

Control cable type: CVV, CVS, CPEV or equivalent.

Cable size: 0.5 mm² ~ 1.25 mm² (16 to 22 AWG)

Don't extend the cable more than 10 meters (32ft)

Recommended circuit

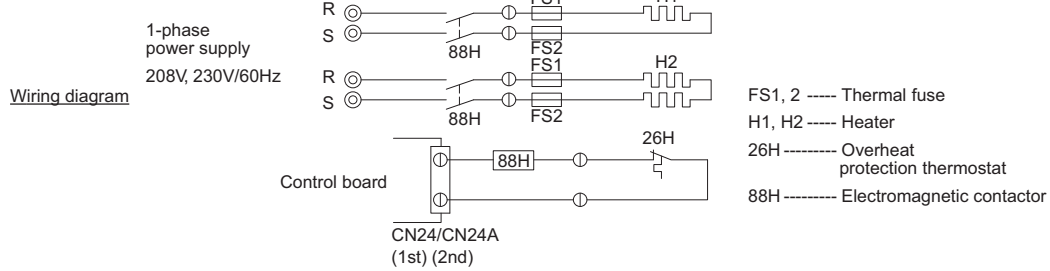

(4) Wiring restrictions

◆Keep the length of the cable connecting to the circuit board of the indoor unit shorter than 10 meters (32ft).

◆Longer than 10 meters (32ft) could cause improper operation.

◆Use a transit relay when extending wiring such as remote wiring.

10. HUMIDIFIER CONTROL

10-1. Control Specifications

The below table shows how the field installed humidifier and fan speed is controlled.


Mode (function) No.		Humidistat output	Condition (no defrost/no error)	CN25 output	Fan speed
Wired remote controller (RF thermostat)					
13 (113)	16 (116)	CNF input			
2	1	OFF	Heat operation & Thermo OFF	OFF	RC setting
			Heat operation & Thermo ON		
	ON	Heat operation & Thermo OFF	OFF	RC setting	
		Heat operation & Thermo ON	ON	High	
	2	OFF	Heat operation & Thermo OFF	OFF	RC setting
			Heat operation & Thermo ON		
ON	Heat operation & Thermo OFF	ON	High		
	Heat operation & Thermo ON				
1	-	-	Heat operation & Thermo OFF	OFF	RC setting
			Heat operation & Thermo ON	OFF	RC setting
-	-	-	Except for heat operation	OFF	RC setting

RC:Remote controller

The fan continues to run for 30 seconds after the humidifier stops.

10-2. Installation

 A basic connection method is shown below.

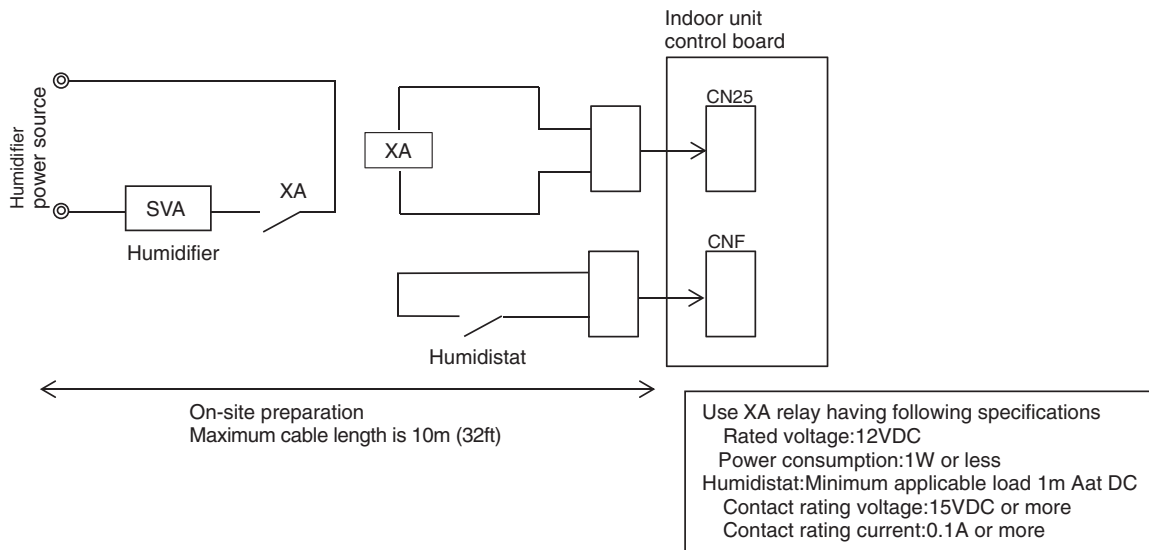

11. ERV (ENERGY RECOVERY VENTILATION) CONTROL

11-1. Control Specifications

The below table show how the field installed ERV is controlled.

ERV output CNER input	Function Mode26	Condition	Fan speed	CN2C output (=Fan output)
OFF	-	Cool/Heat/Fan operation	RC setting	ON
		Defrost	STOP	OFF
		STOP	STOP	OFF
ON	"1" ^{*1}	Cool/Heat/Fan operation	RC setting	ON
		Defrost	STOP	OFF
		STOP	STOP	OFF
	"2"	Cool/Heat/Fan operation	RC setting	ON
		STOP	RC setting ^{*2, *3}	ON

*1 Factory setting.

 
*2 When fan speed setting by RC is "Auto", Fan speed is fixed to "HIGH".

*3 If ERV control is effective when STOP, IDU doesn't report fan status or PB error (Fan motor error).

RC: Remote controller

11-2. Installation

A basic connection method is shown below.

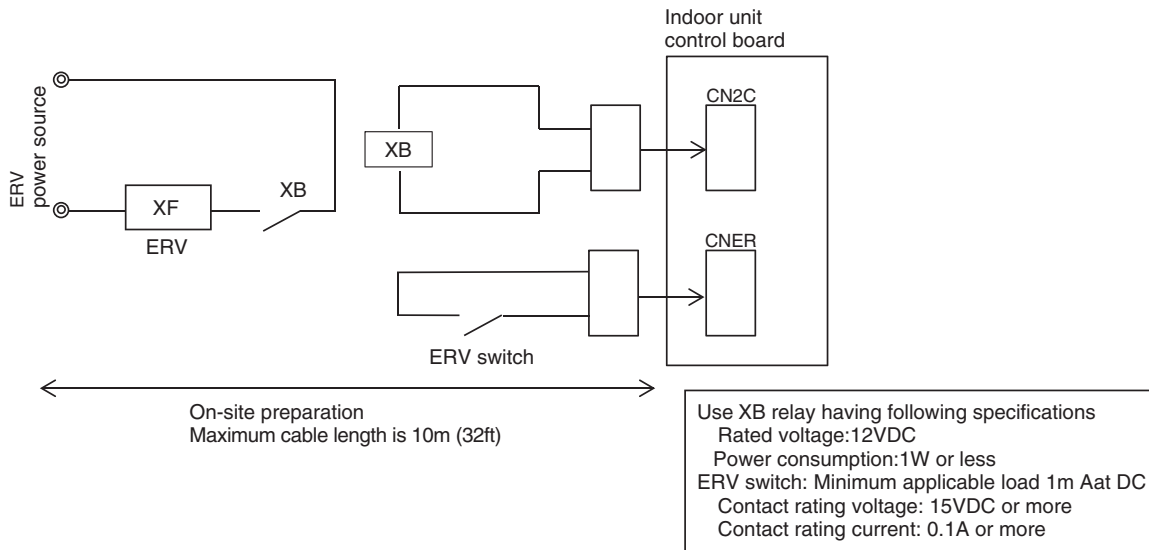

12. TROUBLESHOOTING

 
 
12-1. CAUTIONS ON TROUBLESHOOTING

(1) Before troubleshooting, check the followings:

- 1 Check the power supply voltage.
- 2 Check the indoor/outdoor connecting wire for mis-wiring.

(2) Take care the followings during servicing.

- 1 Before servicing the air conditioner, be sure to turn off the remote controller first to stop the main unit, and then turn off the breaker.
- 2 When removing the indoor controller board, hold the edge of the board with care NOT to apply stress on the components.
- 3 When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

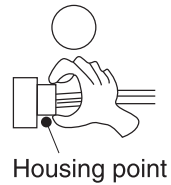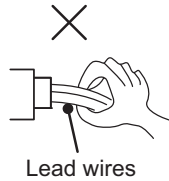

12-2. SELF-CHECK FUNCTION

- Refer to the installation manual that comes with each remote controller for details.
- RF thermostat is not established.

[Output pattern A] Errors detected by indoor unit

IR wireless remote controller	Wired remote controller RF thermostat	Symptom	Remark
Beeper sounds/OPERATION INDICATOR lamp flashes (Number of times)	Check code		
1	P1	Intake sensor error	
2	P2, P9	Pipe (Liquid or 2-phase pipe) sensor error	
3	E6, E7	Indoor/outdoor unit communication error	
4	P4	Float switch connector open	
5	P5	Drain pump error	
6	P6	Freezing/Overheating safeguard operation	
7	EE	Communication error between indoor and outdoor units	
8	P8	Pipe temperature error	
9	E4, E5	Communication error between wired remote controller and indoor unit	
10	–	–	
11	–	–	
12	Fb	Indoor unit control system error (memory error, etc.)	
	FL	Refrigerant leakage	
	FH	Refrigerant sensor error	
14	PL	Refrigerant circuit abnormal	
No sound	E0, E3	Remote controller transmission error	
No sound	E1, E2	Remote controller control board error	
No sound	--	No corresponding	

[Output pattern B] Errors detected by unit other than indoor unit (outdoor unit, etc.)

IR wireless remote controller	Wired remote controller RF thermostat	Symptom	Remark
Beeper sounds/OPERATION INDICATOR lamp flashes (Number of times)	Check code		
1	E9	Indoor/outdoor unit communication error (Transmitting error) (Outdoor unit)	For details, check the LED display of the outdoor controller board.
2	UP	Compressor overcurrent interruption	
3	U3, U4	Open/short of outdoor unit thermistors	
4	UF	Compressor overcurrent interruption (When compressor locked)	
5	U2	Abnormal high discharging temperature/49C worked/ insufficient refrigerant	
6	U1, Ud	Abnormal high pressure (63H worked)/ Overheating safeguard operation	
7	U5	Abnormal temperature of heat sink	
8	U8	Outdoor unit fan protection stop	
9	U6	Compressor overcurrent interruption/Abnormal of power module	
10	U7	Abnormality of super heat due to low discharge temperature	
11	U9, UH	Abnormality such as overvoltage or voltage shortage and abnormal synchronous signal to main circuit/Current sensor error	
12	–	–	
13	–	–	
14	Others	Other errors (Refer to the technical manual for the outdoor unit.)	
	FL	Refrigerant leakage or Refrigerant sensor error caused by other rooms	

*1 If the beeper does not sound again after the initial two beeps to confirm the self-check start signal was received and the OPERATION INDICATOR lamp does not come on, there are no error records.

*2 If the beeper sounds three times continuously “beep, beep, beep (0.4 + 0.4 + 0.4 sec.)” after the initial two beeps to confirm the self-check start signal was received, the specified refrigerant address is incorrect.

- On IR wireless remote controller
The continuous buzzer sounds from receiving section of indoor unit.
Blink of operation lamp
- On wired remote controller
Check code displayed on the LCD.

- If the unit cannot be operated properly after the test run has been performed, refer to the following table to remove the cause.

Symptom		LED 1, 2 (PCB in outdoor unit)	Cause
Wired remote controller			
PLEASE WAIT	For about 2 minutes following power-on	After LED 1, 2 are lighted, LED 2 is turned off, then only LED 1 is lighted. (Correct operation)	<ul style="list-style-type: none"> • For about 2 minutes after power-on, operation of the remote controller is not possible due to system start-up. (Correct operation)
PLEASE WAIT → Error code	After about 2 minutes has expired	Only LED 1 is lighted. → LED 1, 2 blink.	<ul style="list-style-type: none"> • Connector for the outdoor unit's protection device is not connected. • Reverse or open phase wiring for the outdoor unit's power terminal block (L1, L2, L3)
Display messages do not appear even when operation switch is turned ON (operation lamp does not light up).	following power-on	Only LED 1 is lighted. → LED 1, 2 blinks twice, LED 2 blinks once.	<ul style="list-style-type: none"> • Incorrect wiring between indoor and outdoor units (incorrect polarity of S1, S2, S3) • Remote controller wire short

On the IR wireless remote controller with conditions above, following phenomena takes place.

- No signals from the remote controller are accepted.
- OPE lamp is blinking.
- The buzzer makes a short ping sound.

Note:

Operation is not possible for about 30 seconds after cancellation of function selection. (Correct operation)

For description of each LED (LED1, 2, 3) provided on the indoor controller, refer to the following table.

LED1 (power for microcomputer)	Indicates whether control power is supplied. Make sure that this LED is always lit.
LED2 (power for remote controller)	Indicates whether power is supplied to the remote controller. This LED lights only in the case of the indoor unit which is connected to the outdoor unit refrigerant address "0".
LED3 (communication between indoor and outdoor units)	Indicates state of communication between the indoor and outdoor units. Make sure that this LED is always blinking.

AUTO RESTART FUNCTION

Indoor controller board

This model is equipped with the AUTO RESTART FUNCTION.

When the indoor unit is controlled with the remote controller, the operation mode, set temperature, and the fan speed are memorized by the indoor controller board.

The auto restart function sets to work the moment the power has restored after power failure, then, the unit will restart automatically.

Set the AUTO RESTART FUNCTION using the wireless remote controller. (Mode no.1).

12-3. SELF-DIAGNOSIS ACTION TABLE

Note: Refer to the manual of outdoor unit for the details of display such as F, U, and other E.

Error Code	Abnormal point and detection method	Cause	Countermeasure
P1	<p>Room temperature thermistor (TH1)</p> <ol style="list-style-type: none"> The unit is in three-minute resume prevention mode if short/open of thermistor is detected. Abnormal if the unit does not reset normally after three minutes. (The unit returns to normal operation, if it has normally reset.) Constantly detected during cooling, drying and heating operation Short: 90°C[194°F] or more Open: -40°C[-40°F] or less 	<ol style="list-style-type: none"> Defective thermistor characteristics Contact failure of connector (CN20) on the indoor controller board (Insert failure) Breaking of wire or contact failure of thermistor wiring Defective indoor controller board 	<ol style="list-style-type: none"> Check resistance value of thermistor. 0°C[32°F].....15.0kΩ 10°C[50°F].....9.6kΩ 20°C[68°F].....6.3kΩ 30°C[86°F].....4.3kΩ 40°C[104°F]...3.0kΩ If you put force on (draw or bend) the lead wire with measuring resistance value of thermistor breaking of wire or contact failure can be detected. Check contact failure of connector (CN20) on the indoor controller board. Refer to 12-5. Turn the power on again and check restart after inserting connector again. Check room temperature display on remote controller. Replace indoor controller board if there is abnormal difference with actual room temperature. <p>Turn the power off, and on again to operate after check.</p>
P2	<p>Pipe temperature thermistor/Liquid (TH2)</p> <ol style="list-style-type: none"> The unit is in three-minute resume prevention mode if short/open of thermistor is detected. Abnormal if the unit does not reset normally after three minutes. (The unit returns to normal operation, if it has normally reset.) Constantly detected during cooling, drying, and heating (except defrosting) operation. Short: 90°C[194°F] or more Open: -40°C[-40°F] or less 	<ol style="list-style-type: none"> Defective thermistor characteristics Contact failure of connector (CN44) on the indoor controller board (Insert failure) Breaking of wire or contact failure of thermistor wiring Defective refrigerant circuit is causing thermistor temperature of 90°C[194°F] or more or -40°C[-40°F] or less. Defective indoor controller board 	<ol style="list-style-type: none"> Check resistance value of thermistor. For characteristics, refer to (P1) above. Check contact failure of connector (CN44) on the indoor controller board. Refer to 12-5. Turn the power on again and check restart after inserting connector again. Check pipe <liquid> temperature with remote controller in test run mode. If pipe <liquid> temperature is extremely low (in cooling mode) or high (in heating mode), refrigerant circuit may have defective. Check pipe <liquid> temperature with remote controller in test run mode. If there is extreme difference with actual pipe <liquid> temperature, replace indoor controller board. <p>Turn the power off, and on again to operate after check.</p>
P4 (5701)	<p>Contact failure of drain float switch (CN4F)</p> <ol style="list-style-type: none"> Extract when the connector of drain float switch is disconnected. (3 and 4 of connector CN4F is not short-circuited.) Constantly detected during operation. 	<ol style="list-style-type: none"> Contact failure of connector (Insert failure) Defective indoor controller board 	<ol style="list-style-type: none"> Check contact failure of float switch connector. Turn the power on again and check after inserting connector again. Operate with connector (CN4F) short-circuited. Replace indoor controller board if abnormality reappears.
P5	<p>Drain overflow protection operation</p> <ol style="list-style-type: none"> Suspensive abnormality, if drain float switch is detected to be underwater for 1 minute and 30 seconds continuously with drain pump on. Turn off compressor and indoor fan. Drain pump is abnormal if the condition above is detected during suspensive abnormality. Constantly detected during drain pump operation. 	<ol style="list-style-type: none"> Malfunction of drain pump Defective drain Clogged drain pump Clogged drain pipe Defective drain float switch Catch of drain float switch or malfunction of moving parts cause drain float switch to be detected under water (Switch On) Defective indoor-controller board 	<ol style="list-style-type: none"> Check if drain-up machine works. Check drain function. Remove drain float switch connector CN4F and check if it is short (Switch On) with the moving part of float switch UP, or OPEN with the moving part of float switch down. Replace float switch if it is short with the moving part of float switch down. Replace indoor controller board if it is short-circuited between 3-4 of the drain float switch connector CN4F and abnormality reappears. <p>It is not abnormal if there is no problem about the above-mentioned 1~4. Turn the power off, and on again to operate after check.</p>

Error Code	Abnormal point and detection method	Cause	Countermeasure
P6	<p>Freezing/overheating protection is working</p> <p>1. Freezing protection (Cooling mode) The unit is in six-minute resume prevention mode if pipe <liquid or condenser/evaporator> temperature stays under $-15^{\circ}\text{C}[5^{\circ}\text{F}]$ for three minutes after the compressor started. Abnormal if it stays under $-15^{\circ}\text{C}[5^{\circ}\text{F}]$ for three minutes again within 16 minutes after six-minute resume prevention mode.</p> <p>2. Overheating protection (Heating mode) The units is in six-minute resume prevention mode if pipe <Liquid or condenser / evaporator> temperature is detected as over $70^{\circ}\text{C}[158^{\circ}\text{F}]$ after the compressor started. Abnormal if the temperature of over $70^{\circ}\text{C}[158^{\circ}\text{F}]$ is detected again within 30 minutes after six-minute resume prevention mode.</p>	<p>(Cooling or drying mode)</p> <ol style="list-style-type: none"> 1. Clogged filter (reduced airflow) 2. Short cycle of air path 3. Low-load (low temperature) operation beyond the tolerance range 4. Defective indoor fan motor <ul style="list-style-type: none"> • Fan motor is defective. • Indoor controller board is defective. 5. Defective outdoor fan control 6. Overcharge of refrigerant 7. Defective refrigerant circuit (clogs) <p>(Heating mode)</p> <ol style="list-style-type: none"> 1. Clogged filter (reduced airflow) 2. Short cycle of air path 3. Over-load (high temperature) operation beyond the tolerance range 4. Defective indoor fan motor <ul style="list-style-type: none"> • Fan motor is defective. • Indoor controller board is defective. 5. Defective outdoor fan control 6. Overcharge of refrigerant 7. Defective refrigerant circuit (clogs) 8. Bypass circuit of outdoor unit is defective. 	<p>(Cooling or drying mode)</p> <ol style="list-style-type: none"> 1. Check clogging of the filter. 2. Remove shields. 4. Refer to 12-8. DC FAN MOTOR (FAN MOTOR/INDOOR CONTROLLER BOARD) 5. Check outdoor fan motor. 6. 7. Check operating condition of refrigerant circuit. <p>(Heating mode)</p> <ol style="list-style-type: none"> 1. Check clogs of the filter. 2. Remove shields. 4. Refer to 12-8. DC FAN MOTOR (FAN MOTOR/INDOOR CONTROLLER BOARD) 5. Check outdoor fan motor. 6~8. Check operating condition of refrigerant circuit.
P8	<p>Pipe temperature <Cooling mode> Detected as abnormal when the pipe temperature is not in the cooling range 3 minutes after compressor start and 6 minutes after the liquid or condenser/ evaporator pipe is out of cooling range. Note 1) It takes at least 9 minutes to detect. Note 2) Abnormality P8 is not detected in drying mode. Cooling range : $-3 \text{ deg}^{\circ}\text{C}(-5.4\text{deg}^{\circ}\text{F}) \geq (\text{TH}-\text{TH1})$ TH: Lower temperature between: liquid pipe temperature (TH2) and condenser/evaporator temperature (TH5) TH1: Intake temperature</p> <p><Heating mode> When 10 seconds have passed after the compressor starts operation and the hot adjustment mode has finished, the unit is detected as abnormal when condenser/ evaporator pipe temperature is not in heating range within 20 minutes. Note 3) It takes at least 27 minutes to detect abnormality. Note 4) It excludes the period of defrosting (Detection restarts when defrosting mode is over) Heating range : $3 \text{ deg}^{\circ}\text{C}(5.4\text{deg}^{\circ}\text{F}) \leq (\text{TH5}-\text{TH1})$</p>	<ol style="list-style-type: none"> 1. Slight temperature difference between indoor room temperature and pipe <liquid or condenser / evaporator> temperature thermistor <ul style="list-style-type: none"> • Shortage of refrigerant • Disconnected holder of pipe <liquid or condenser / evaporator> thermistor • Defective refrigerant circuit 2. Converse connection of extension pipe (on plural units connection) 3. Converse wiring of indoor/ outdoor unit connecting wire (on plural units connection) 4. Defective detection of indoor room temperature and pipe <condenser / evaporator> temperature thermistor 5. Stop valve is not opened completely. 	<ol style="list-style-type: none"> 1~4. Check pipe <liquid or condenser / evaporator> temperature with room temperature display on remote controller and outdoor controller circuit board. Pipe <liquid or condenser / evaporator> temperature display is indicated by setting SW2 of outdoor controller circuit board. <p>(Conduct temperature check with outdoor controller circuit board after connecting 'A-Control Service Tool (PAC-SK52ST)')</p> <ol style="list-style-type: none"> 2. 3. Check converse connection of extension pipe or converse wiring of indoor/outdoor unit connecting wire.

Error Code	Abnormal point and detection method	Cause	Countermeasure
pg	<p>Abnormality of pipe temperature thermistor / Condenser-Evaporator (TH5)</p> <ol style="list-style-type: none"> The unit is in three-minute resume protection mode if short/open of thermistor is detected. Abnormal if the unit does not get back to normal within three minutes. (The unit returns to normal operation, if it has normally reset.) Constantly detected during cooling, drying, and heating operation (except defrosting) Short: 90°C[194°F] or more Open: -40°C[-40°F] or less 	<ol style="list-style-type: none"> Defective thermistor characteristics Contact failure of connector (CN44) on the indoor controller board (Insert failure) Breaking of wire or contact failure of thermistor wiring Temperature of thermistor is 90°C[194°F] or more or -40°C[-40°F] or less caused by defective refrigerant circuit. Defective indoor controller board 	<ol style="list-style-type: none"> Check resistance value of thermistor. For characteristics, refer to (P1) above. Check contact failure of connector (CN44) on the indoor controller board. Refer to 12-5. Turn the power on and check restart after inserting connector again. Operate in test run mode and check pipe <condenser / evaporator> temperature. If pipe <condenser / evaporator> temperature is extremely low (in cooling mode) or high (in heating mode), refrigerant circuit may have defect. When no problems are found in 1-4 above, replace the indoor unit control board.
E0 or E4	<p>Remote controller transmission error(E0)/signal receiving error(E4)</p> <ol style="list-style-type: none"> Abnormal if main or sub remote controller can not receive normally any transmission from indoor unit of refrigerant address "0" for three minutes. (Error code : E0) Abnormal if sub remote controller could not receive for any signal for two minutes. (Error code: E0) <ol style="list-style-type: none"> Abnormal if indoor controller board can not receive normally any data from remote controller board or from other indoor controller board for three minutes. (Error code: E4) Indoor controller board cannot receive any signal from remote controller for two minutes. (Error code: E4) 	<ol style="list-style-type: none"> Contact failure at transmission wire of remote controller All remote controllers are set as "sub" remote controller. In this case, E0 is displayed on remote controller, and E4 is displayed at LED (LED1, LED2) on the outdoor controller circuit board. Mis-wiring of remote controller Defective transmitting receiving circuit of remote controller Defective transmitting receiving circuit of indoor controller board of refrigerant address "0" Noise has entered into the transmission wire of remote controller. 	<ol style="list-style-type: none"> Check disconnection or looseness of indoor unit or transmission wire of remote controller. Set one of the remote controllers "main". If there is no problem with the action above. Check wiring of remote controller. <ul style="list-style-type: none"> Total wiring length: max.500m (Do not use cable × 3 or more) The number of connecting indoor units: max.16units The number of connecting remote controller: max.2units <p>When it is not the above-mentioned problem of 1~3</p> <ol style="list-style-type: none"> Diagnose remote controllers. <ol style="list-style-type: none"> When "RC OK" is displayed, Remote controllers have no problem. Turn the power off, and on again to check. If abnormality generates again, replace indoor controller board. When "RC NG" is displayed, Replace remote controller. When "RC E3" is displayed, When "ERC 00-06" is displayed, <p>[c),d)→Noise may be causing abnormality.] * If the unit is not normal after replacing indoor controller board in group control, indoor controller board of address "0" may be abnormal.</p>
E3 or E5	<p>Remote controller transmission error(E3)/signal receiving error(E5)</p> <ol style="list-style-type: none"> Abnormal if remote controller could not find blank of transmission path for six seconds and could not transmit. (Error code: E3) Remote controller receives transmitted data at the same time, compares the data, and when detecting it, judges different data to be abnormal 30 continuous times. (Error code: E3) <ol style="list-style-type: none"> Abnormal if indoor controller board could not find blank of transmission path. (Error code: E5) Indoor controller board receives transmitted data at the same time, compares the data, and when detecting it, judges different data to be abnormal 30 continuous times. (Error code: E5) 	<ol style="list-style-type: none"> Two remote controllers are set as "main." (In case of 2 remote controllers) Remote controller is connected with two indoor units or more. Repetition of refrigerant address Defective transmitting receiving circuit of remote controller Defective transmitting receiving circuit of indoor controller board Noise has entered into transmission wire of remote controller. 	<ol style="list-style-type: none"> Set a remote controller to main, and the other to sub. Remote controller is connected with only one indoor unit. The address changes to a separate setting. <ol style="list-style-type: none"> Diagnose remote controller. <ol style="list-style-type: none"> When "RC OK" is displayed, remote controllers have no problem. Turn the power off, and on again to check. When becoming abnormal again, replace indoor controller board. When "RC NG" is displayed, replace remote controller. When "RC E3" or "ERC 00-66" is displayed, noise may be causing abnormality.

Error Code	Abnormal point and detection method	Cause	Countermeasure
E6	<p>Indoor/outdoor unit communication error (Signal receiving error)</p> <p>1. Abnormal if indoor controller board cannot receive any signal normally for six minutes after turning the power on.</p> <p>2. Abnormal if indoor controller board cannot receive any signal normally for three minutes.</p> <p>3. Consider the unit as abnormal under the following condition: When two or more indoor units are connected to an outdoor unit, indoor controller board cannot receive a signal for three minutes from outdoor controller circuit board, a signal which allows outdoor controller circuit board to transmit signals.</p>	<p>1. Contact failure, short circuit or, mis-wiring (converse wiring) of indoor/outdoor unit connecting wire</p> <p>2. Defective transmitting receiving circuit of indoor controller board</p> <p>3. Defective transmitting receiving circuit of indoor controller board</p> <p>4. Noise has entered into indoor/outdoor unit connecting wire.</p>	<p>* Check LED display on the outdoor control circuit board. (Connect A-control service tool, PAC-SK52ST.) Refer to EA-EC item of the service manual of outdoor unit if LED displays EA-EC.</p> <p>1. Check disconnection or looseness of indoor/outdoor unit connecting wire of indoor unit or outdoor unit. Check all the units in case of twin triple indoor unit system.</p> <p>2-4. Turn the power off, and on again to check. If abnormality generates again, replace indoor controller board or outdoor controller circuit board.</p> <p>* Other indoor controller board may have defect in case of twin triple indoor unit system.</p>
E7	<p>Indoor/outdoor unit communication error (Transmitting error)</p> <p>Abnormal if "1" receiving is detected 30 times continuously though indoor controller board has transmitted "0".</p>	<p>1. Defective transmitting receiving circuit of indoor controller board</p> <p>2. Noise has entered into power supply.</p> <p>3. Noise has entered into outdoor control wire.</p>	<p>1-3. Turn the power off, and on again to check. If abnormality generates again, replace indoor controller board.</p>
Fb	<p>Indoor controller board</p> <p>Abnormal if data cannot be read normally from the nonvolatile memory of the indoor controller board.</p>	<p>1. Defective indoor controller board</p>	<p>1. Replace indoor controller board.</p>
FH	<p>Refrigerant sensor error</p> <p>Abnormal if refrigerant sensor cannot detect errors normally.</p>	<p>1. The refrigerant sensor mounted on the indoor unit does not work.</p> <p>2. The refrigerant sensor is not connected properly or the wire is broken.</p>	<ul style="list-style-type: none"> • While the error is being displayed, the indoor unit fan continues operating. • Ventilate the room well, make sure that there is no ignition source, and then turn off the power. • Check the connection of some parts such as connectors and turn the power on again. When the error has not been cleared, replace the refrigerant sensor.
FL	<p>Refrigerant leakage</p> <p>Abnormal if refrigerant leakage detected by a refrigerant sensor.</p>	<p>1. Refrigerant leaks from the piping or the heat exchanger in the indoor unit.</p> <p>2. The following items are used around the indoor unit.</p> <ul style="list-style-type: none"> • Spray (LP gas including Freon, and whose main ingredient is propane and butane) • Aerosol insecticide (including ethanol) • Air spray painting (including dichloromethane) • Charcoal (charcoal fire) • Chemicals (such as ethanol) <p>3. Refrigerant leaks from piping or heat exchangers, or sensor errors in indoor units in other rooms.</p>	<ul style="list-style-type: none"> • While the error is being displayed, the indoor unit fan continues operating. • Ventilate the room well, make sure that there is no ignition source, and then turn off the power. • Check the indoor unit to detect the part where refrigerant leaks. • Repair the part where refrigerant leaks. • Turn on the power again. • Replace the refrigerant sensor if the problem is not fixed.
E1 or E2	<p>Remote controller control board</p> <p>1. Abnormal if data cannot be read normally from the nonvolatile memory of the remote controller control board. (Error code: E1)</p> <p>2. Abnormal if the clock function of remote controller cannot be operated normally. (Error code: E2)</p>	<p>1. Defective remote controller</p>	<p>1. Replace remote controller.</p>

Error Code	Abnormal point and detection method	Cause	Countermeasure
PA (2500)	<p>Water leakage This detection is performed during the operation (stop, heating, fan, or error stop mode etc.) other than cooling and dry.</p> <p>1. When a) and b) are found, water leakage occurs.</p> <p>a) Pipe <liquid> temperature - inlet temperature < -10°C for 30 minutes</p> <p>b) When drain float switch is detected to be soaked in the water for 15 minutes or more.</p> <p>* When drain float switch is detected to be NOT soaked in the water, each counting of a) and b) is cleared.</p> <p><u>*When this error is detected, the error will not be reset until the main power is reset.</u></p>	<p>1. Mis-piping of extension pipes (When connected with multiple units)</p> <p>2. Mis-wiring of indoor/outdoor unit connecting wire (When connected with multiple units)</p> <p>3. Detection failure of the indoor unit inlet/pipe <liquid> thermistor</p> <p>4. Drain pump failure</p> <p>5. Drainage failure</p> <ul style="list-style-type: none"> • Clogged drain pump • Clogged drain pipe <p>6. Drain float switch failure</p> <ul style="list-style-type: none"> • Drain float switch is detected to be soaked in the water (ON status) due to the operation failure of the moving parts. • Contact failure of drain float switch connector (Loose connector) 	<p>1. Check the extension pipes for mis-piping.</p> <p>2. Check the Indoor/outdoor unit connecting wire for mis-wiring.</p> <p>3. Check room temperature display on remote controller and indoor pipe <liquid> temperature. (Refer to the countermeasure on P2.)</p> <p>4. Check if drain-up machine works.</p> <p>5. Check drain function.</p> <p>6. Check drain float switch. (Refer to the countermeasure on P4 and P5.)</p>


12-4. TROUBLESHOOTING BY INFERIOR PHENOMENA

Note: Refer to the manual of outdoor unit for the detail of remote controller.

Phenomena	Cause	Countermeasure
<p>(1)LED2 on indoor controller board is off.</p>	<ul style="list-style-type: none"> • When LED1 on indoor controller board is also off. <ol style="list-style-type: none"> 1. Power supply of rated voltage is not supplied to outdoor unit. 2. Defective outdoor controller circuit board 3. Power supply of 208~230V is not supplied to indoor unit. 4. Defective indoor controller board 	<ol style="list-style-type: none"> 1. Check the voltage of outdoor power supply terminal block (L,N) or (L₃,N). <ul style="list-style-type: none"> • When AC 208~230V is not detected. Check the power wiring to outdoor unit and the breaker. • When AC 208~230V is detected. —Check 2 (below). 2. Check the voltage between outdoor terminal block S1 and S2. <ul style="list-style-type: none"> • When AC 208~230V is not detected. Check the fuse on outdoor controller circuit board. Check the wiring connection. • When AC 208~230V is detected. —Check 3 (below). 3. Check the voltage between indoor terminal block S1 and S2. <ul style="list-style-type: none"> • When AC 208~230V is not detected. Check indoor/outdoor unit connecting wire for mis-wiring. • When AC 208~230V is detected. —Check 4 (below). 4. Check the fuse on indoor controller board. Check the wiring connection. If no problem are found, indoor controller board is defective.
<p>(2)LED2 on indoor controller board is blinking.</p>	<ul style="list-style-type: none"> • When LED1 on indoor controller board is also blinking. • Connection failure of indoor/outdoor unit connecting wire • When LED1 is lit. <ol style="list-style-type: none"> 1. Mis-wiring of remote controller wires Under twin triple indoor unit system, 2 or more indoor units are wired together. 2. Refrigerant address for outdoor unit is wrong or not set. Under grouping control system, there are some units whose refrigerant address is 0. 3. Short-cut of remote controller wires 4. Defective remote controller 	<p>Check indoor/outdoor unit connecting wire for connection failure.</p> <ol style="list-style-type: none"> 1. Check the connection of remote controller wires in case of twin triple indoor unit system. When 2 or more indoor units are wired in one refrigerant system, connect remote controller wires to one of those units. 2. Check the setting of refrigerant address in case of grouping control system. If there are some units whose refrigerant addresses are 0 in one group, set one of the units to 0 using SW1 (3-6) on outdoor controller circuit board. 3. 4. Remove remote controller wires and check LED2 on indoor controller board. <ul style="list-style-type: none"> • When LED2 is blinking, check the short-cut of remote controller wires. • When LED2 is lit, connect remote controller wires again and: if LED2 is blinking, remote controller is defective; if LED2 is lit, connection failure of remote controller terminal block etc. has returned to normal.

12-5. TEST POINT DIAGRAM

 12-5-1. Indoor controller board

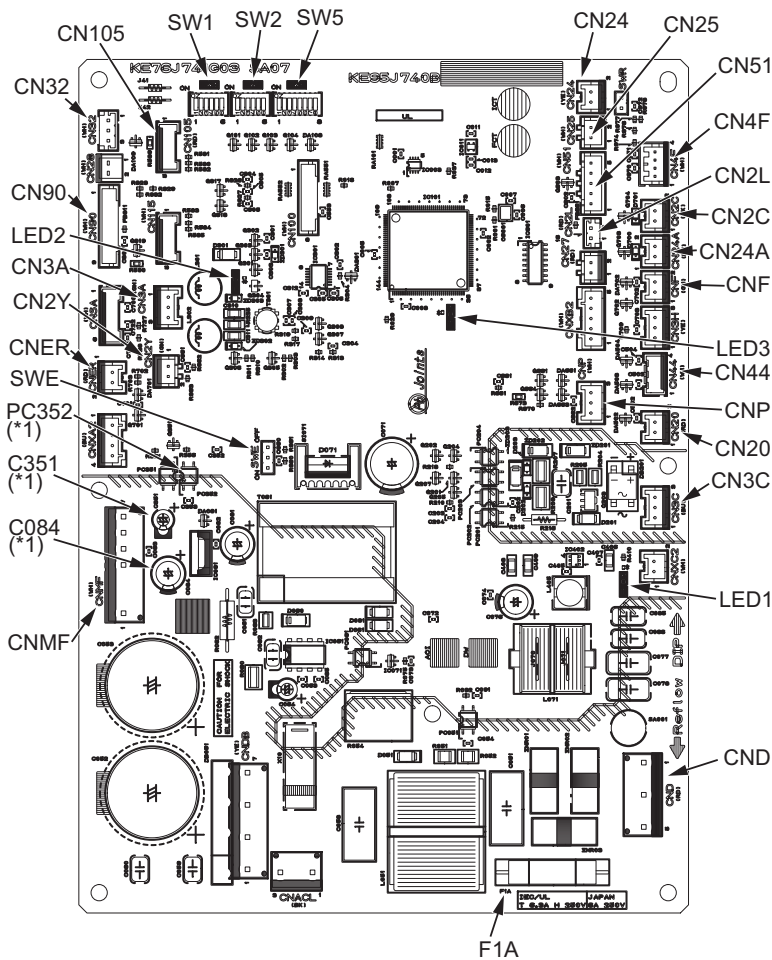

(*1)





VFG Voltage on the (-) side of PC352 and C084
(Same with the voltage between 7 (+) and 4 (-) of CNMF)

VCC Voltage between the C084 pins 15 VDC
(Same with the voltage between 5 (+) and 4 (-) of CNMF)


Vsp Voltage between the C351 pins 0VDC (with the fan stopped)
1 - 6.5VDC (with the fan in operation)
(Same with the voltage between 6 (+) and 4 (-) of CNMF)

CND	Power supply voltage (208V – 230VAC)
CNMF	Fan motor output 1-4 : 294-325VDC 5-4 : 15VDC 6-4 : 0-6.5VDC 7-4 : STOP 0 or 15VDC Run 7.5VDC (0-15 pulse)
CNP	Drain-up mechanism output (13VDC (Between 1 and 3.))
SWE	Emergency operation
SW1	Model selection
SW2	Capacity setting
SW5	Mode selection
LED1	Power supply
LED2	Remote controller supply
LED3	Transmission indoor-outdoor
F1A	Fuse (250V / 6.3A)
CN105	Radio frequency interface
CN32	Remote start/stop adapter
CN3A	For MA remote controller cable connection (10 - 13 VDC (Between 1 and 3.))
CN51	Centralized control
CN44	Thermistor (liquid/condenser/ evaporator temperature)
CN4F	Float switch
CN20	Thermistor (Inlet temperature)
CN24	Heater control 1st (12VDC)
CN24A	Heater control 2nd (12VDC)
CN2Y	For fan control
CN2L	LOSSNAY
CN3C	Indoor-outdoor transmission (0 - 24 VDC)
CN90	Wireless remote controller
CNF	Humidity input
CN25	Humidity output
CNER	ERV input
CN2C	ERV output

    12-6. TROUBLE CRITERION OF MAIN PARTS

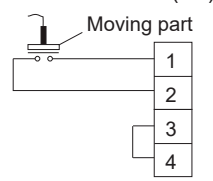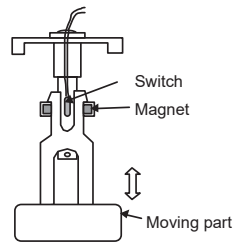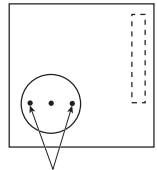Part name	Check method and criterion									
Room temperature thermistor (TH1)	Measure the resistance with a tester. (Part temperature 10°C (50°F) ~ 30°C (86°F)) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>4.3 kΩ~9.6 kΩ</td> <td>Opened or short-circuited</td> </tr> </tbody> </table>	Normal	Abnormal	4.3 kΩ~9.6 kΩ	Opened or short-circuited					
Normal		Abnormal								
4.3 kΩ~9.6 kΩ		Opened or short-circuited								
Pipe temperature thermistor/liquid (TH2)										
Condenser/evaporator temperature thermistor (TH5)										
Drain pump (DP) 	<ol style="list-style-type: none"> ① Check if the drain float switch works properly. ② Check if the drain pump works and drains water properly in cooling operation. ③ If no water drains, confirm that the check code P5 will not be displayed 10 minutes after the operation starts. <p>Note: The drain pump for this model is driven by the internal DC motor of controller board, so it is not possible to measure the resistance between the terminals.</p> <p>Normal</p> <p>Red-Black: Input 13 VDC → The motor starts to rotate.</p> <p>Purple-Black: Abnormal (check code P5) if it outputs 0-13 V square wave (5 pulses/rotation), and the number of rotation is not normal.</p>									
Drain float switch (FS) 	Measure the resistance between the terminals with a tester. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>State of moving part</th> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>UP</td> <td>Short</td> <td>Other than short</td> </tr> <tr> <td>DOWN</td> <td>Open</td> <td>Other than open</td> </tr> </tbody> </table> 	State of moving part	Normal	Abnormal	UP	Short	Other than short	DOWN	Open	Other than open
State of moving part	Normal	Abnormal								
UP	Short	Other than short								
DOWN	Open	Other than open								
Refrigerant sensor	Measure the resistance between the terminals with a multimeter. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>Below 10 Ω</td> <td>Open (10 Ω or more)</td> </tr> </tbody> </table> <p>After turning off the indoor unit breaker and leaving it for 5 minutes, measure the resistance value between the sensor terminals.</p> <p>< Back side of the sensor ></p>  <p>Measure the both sides of the sensor pin.</p>	Normal	Abnormal	Below 10 Ω	Open (10 Ω or more)					
Normal	Abnormal									
Below 10 Ω	Open (10 Ω or more)									

 12-7. Thermistor

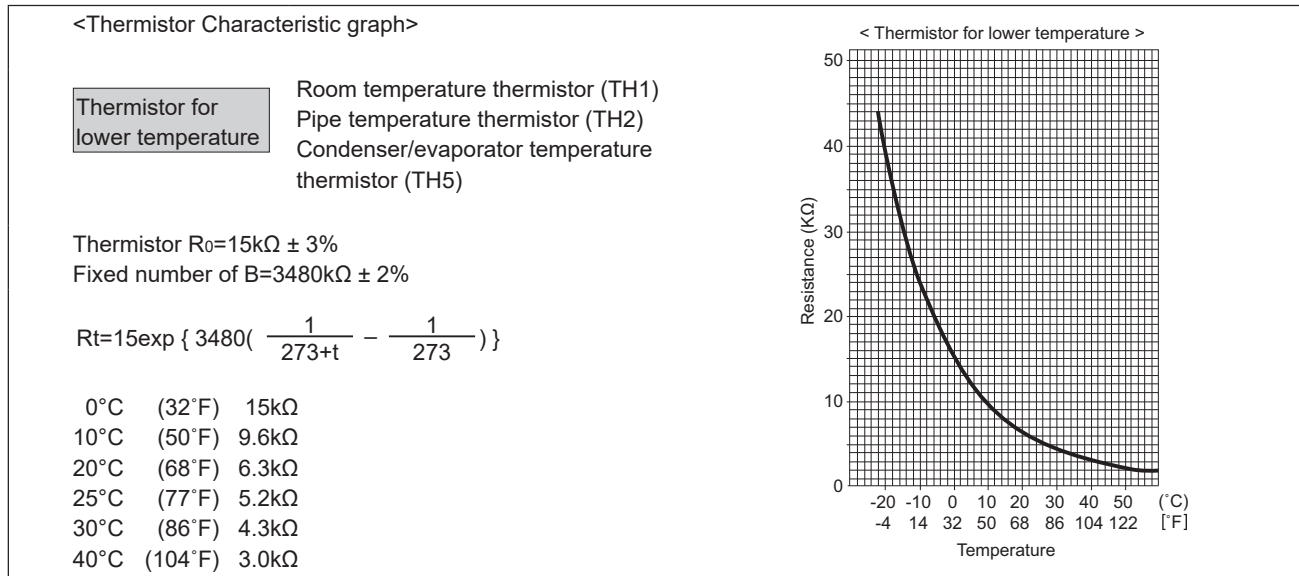


12-8. DC FAN MOTOR (FAN MOTOR/INDOOR CONTROLLER BOARD)

1. CAUTION

- A high voltage is applied to the connector for connection to the fan motor (CNMF).
- Do not unplug the connector CNMF with the unit energized to avoid damage to the indoor control board and fan motor.

2. Troubleshooting

 - Symptom: Indoor unit fan does not run.

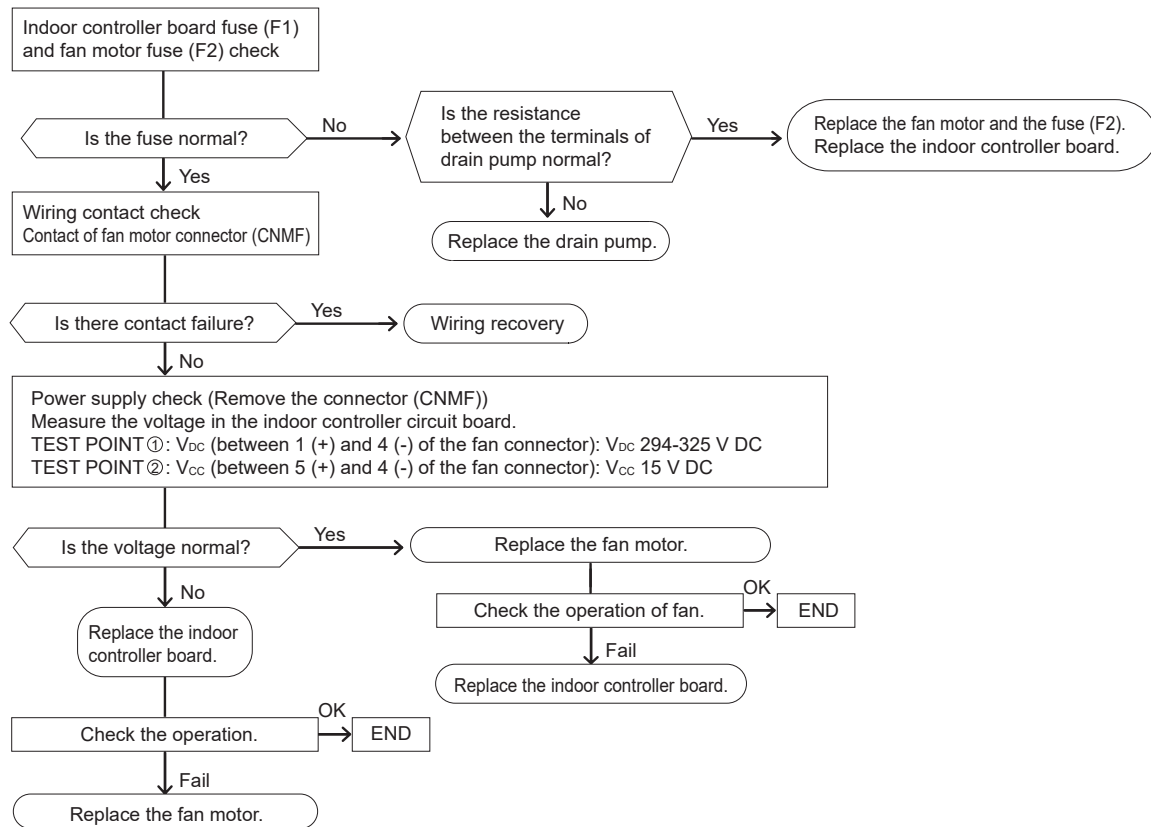


 
 
 

 
 
 
 
 
 
 

 
 
 
 
 
 
 

 
 
 
 
12-9. FUNCTIONS OF DIP SWITCH AND JUMPER WIRE


Each function is controlled by the dip switch and the jumper wire on control p.c. board.

SW1 and SW2 are equipped only for service parts.

Model setting and capacity setting are memorized in the nonvolatile memory of the control p.c. board of the unit.

(Marks in the table below) Jumper wire (○: Short ×: Open)

Jumper wire	Functions	Setting by the dip switch and jumper wire	Remarks																		
SW1	Model settings	For service board 																			
SW2	Capacity settings	<table border="1"> <thead> <tr> <th>MODELS</th> <th>Service board</th> </tr> </thead> <tbody> <tr> <td>PEAD-AA09NL</td> <td></td> </tr> <tr> <td>PEAD-AA12NL</td> <td></td> </tr> <tr> <td>PEAD-AA15NL</td> <td></td> </tr> <tr> <td>PEAD-AA18NL</td> <td></td> </tr> <tr> <td>PEAD-AA24NL</td> <td></td> </tr> <tr> <td>PEAD-AA30NL</td> <td></td> </tr> <tr> <td>PEAD-AA36NL</td> <td></td> </tr> <tr> <td>PEAD-AA42NL</td> <td></td> </tr> </tbody> </table>	MODELS	Service board	PEAD-AA09NL		PEAD-AA12NL		PEAD-AA15NL		PEAD-AA18NL		PEAD-AA24NL		PEAD-AA30NL		PEAD-AA36NL		PEAD-AA42NL		
MODELS	Service board																				
PEAD-AA09NL																					
PEAD-AA12NL																					
PEAD-AA15NL																					
PEAD-AA18NL																					
PEAD-AA24NL																					
PEAD-AA30NL																					
PEAD-AA36NL																					
PEAD-AA42NL																					
J41 J42	Pair number setting with wireless remote controller	<table border="1"> <thead> <tr> <th rowspan="2">Wireless remote controller setting</th> <th colspan="2">Control PCB setting</th> </tr> <tr> <th>J41</th> <th>J42</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>○</td> <td>○</td> </tr> <tr> <td>1</td> <td>×</td> <td>○</td> </tr> <tr> <td>2</td> <td>○</td> <td>×</td> </tr> <tr> <td>3 ~ 9</td> <td>×</td> <td>×</td> </tr> </tbody> </table>	Wireless remote controller setting	Control PCB setting		J41	J42	0	○	○	1	×	○	2	○	×	3 ~ 9	×	×	<p><Settings at time of factory shipment> Wireless remote controller: 0 Control PCB: ○ (for both J41 and J42) Four pair number settings are supported. The pair number settings of the wireless remote controller and indoor control PCB (J41/J42) are given in the table on the left. ('×' in the table indicates the jumper line is disconnected.)</p>	
Wireless remote controller setting	Control PCB setting																				
	J41	J42																			
0	○	○																			
1	×	○																			
2	○	×																			
3 ~ 9	×	×																			

 

The figure at left shows that the switches 1 through 5 are set to ON and 6 through 10 are set to OFF.

13. DISASSEMBLY PROCEDURE

Exercise caution when removing heavy parts.

1. Control box

1. Removing the control box cover

- (1) Remove the three fixing screws on the cover (A) to remove it.
 - Tighten screws to a torque of 2.0 ± 0.2 N·m.

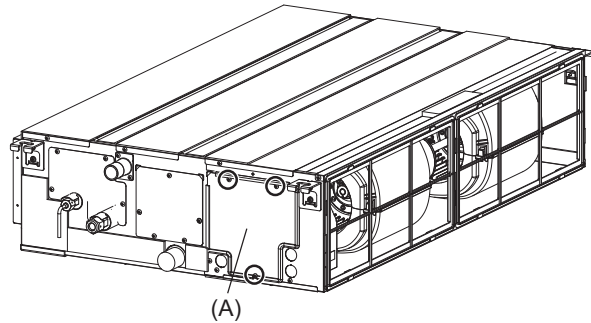 


Fig. 1

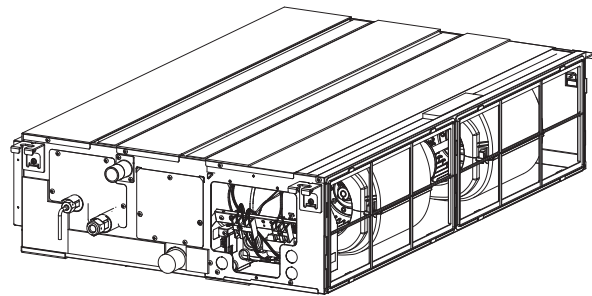 


Fig. 2

2. Thermistor (Intake air)

1. Remove the control box according to the procedure in section 1.

- (1) Pull out the thermistor holder (B) and thermistor (C) on the control box.

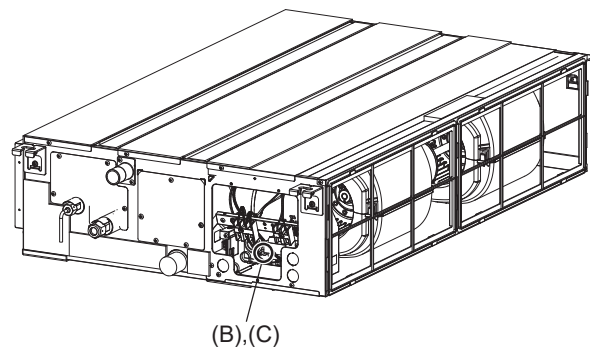 


Fig. 3

Exercise caution when removing heavy parts.

3. Drain pump

1. Remove the control box cover according to the procedure in section 1.
2. Remove the drain pump.
 - (1) Remove the drain pump from connector (E) in control box.
 - (2) Remove the cover (D) and the drain pump.

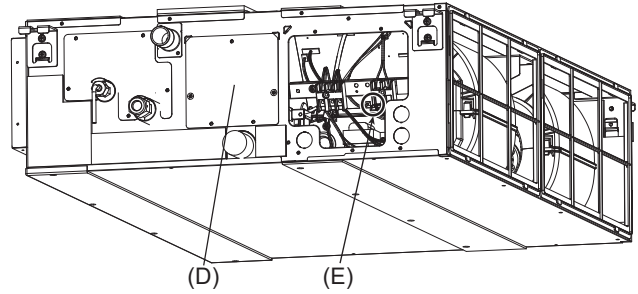 


Fig. 4

4. R454B sensor

1. Remove the control box cover according to the procedure in section 1.
2. Remove the R454B sensor.
 - (1) Remove the R454B sensor connector (CNSA) in control box.
 - (2) Remove the fixing screw (F) to remove R454B sensor.

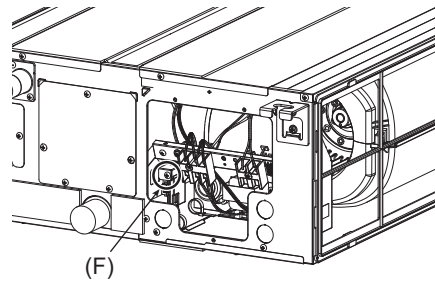 


Fig. 5

5. Drain pan

1. Removing the filter and the bottom plate
 - (1) Push up the tab on the filter, and pull out the filter in the direction of the arrow 1.
 - (2) Remove the fixing screws on the bottom plate (G), (H) to remove it.
 - Tighten screws to a torque of 1.4 ± 0.2 N·m.

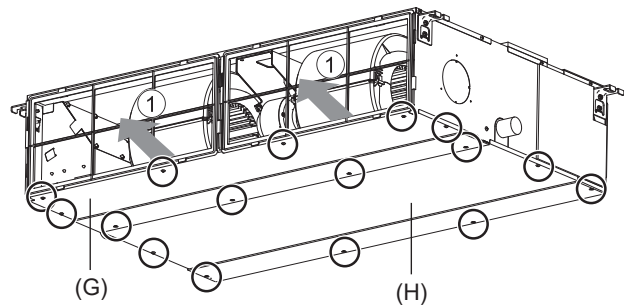 


Fig. 6

2. Removing the drain pan
 - (1) Pull out the drain pan in the direction of the arrow 2.

Note

- Drain the water out of the drain pan before removing it.

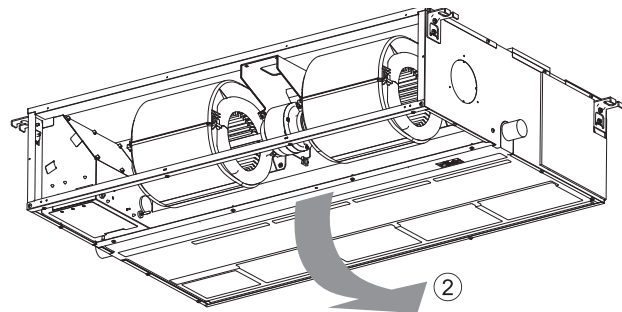 


Fig. 7

6. Thermistor (Condenser/evaporator) (Liquid pipe)

1. Remove the drain pan according to the procedure in section 5.
2. Removing the Heat exchanger cover
 - (1) Remove the three fixing screws on the heat exchanger cover (J) to remove it.
 - Tighten screws to a torque of 1.4 ± 0.2 N·m.

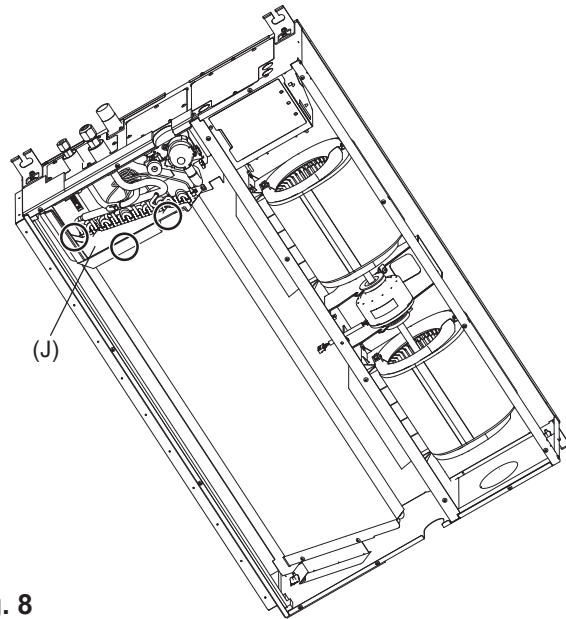 


Fig. 8

3. Removing the thermistors
 - (1) Remove the thermistors (K) from the thermistor holders (L) on the copper tube.

Thermistor size
Liquid pipe: $\varnothing 8$ mm
Condenser/evaporator: $\varnothing 6$ mm

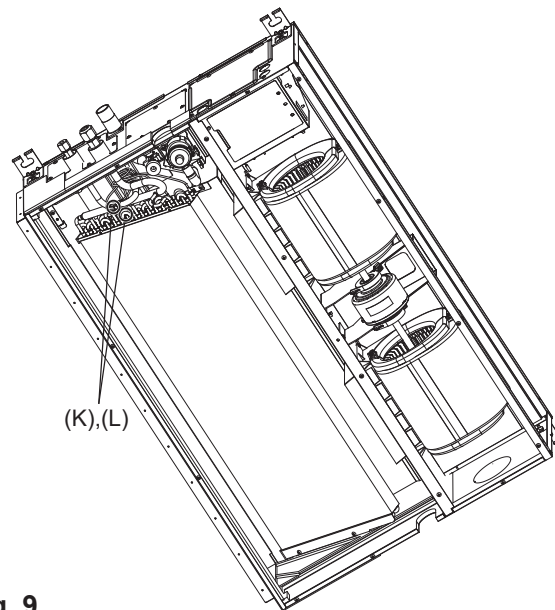 


Fig. 9

7. Fan and fan motor

1. Removing the filter and the bottom plate

- (1) Push down the tab on the filter, and pull out the filter in the direction of the arrow 1.
- (2) Remove the fixing screws on the bottom plate (M) to remove it.
 - Tighten screws to a torque of 1.4 ± 0.2 N·m.

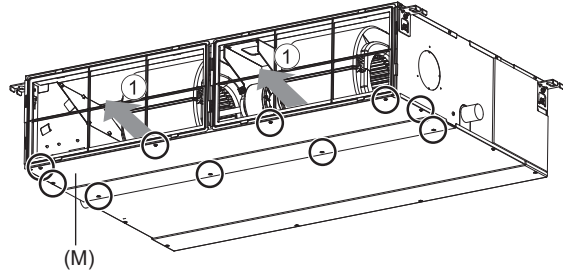 


Fig. 10

2. Removing the fan casing (bottom half)

- (1) Squeeze the tabs (a) on the fan casing to remove it in the direction of arrow 2.

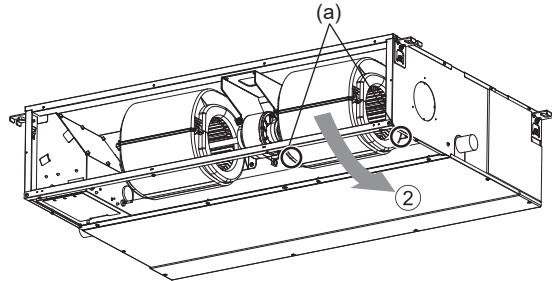 


Fig. 11

3. Removing the motor cable

- (1) Remove the motor cable through the rubber bush.

4. Removing the fan motor and the Sirocco fan

- (1) Loosen either of the two rubber joint (N) fixing screws.
- (2) To remove the Sirocco fans (b) and (c) of PEAD-AA36, 42NL, loosen only the screw (d) on the bearing support (P), and remove the other screws on it.
- (3) Remove the two motor fixing screws to remove the motor and the Sirocco fan in the direction of arrow 3.
 - Tighten screws to a torque of 3.5 ± 0.2 N·m.

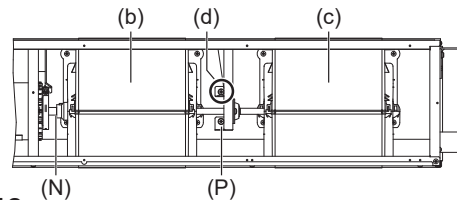 


Fig. 12

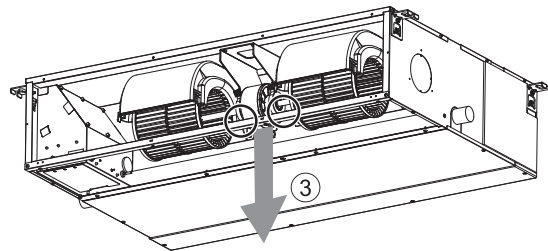 


Fig. 13

- (4) Remove the four fan case fixing screws to take the top half of the fan casing off.
 - Tighten screws to a torque of 1.4 ± 0.2 N·m.

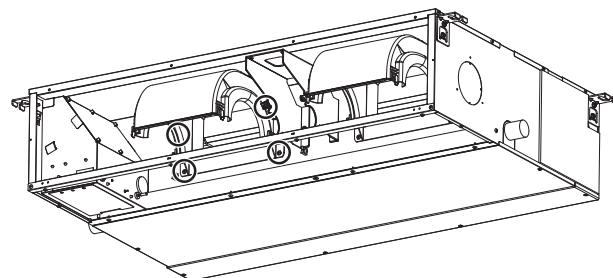 
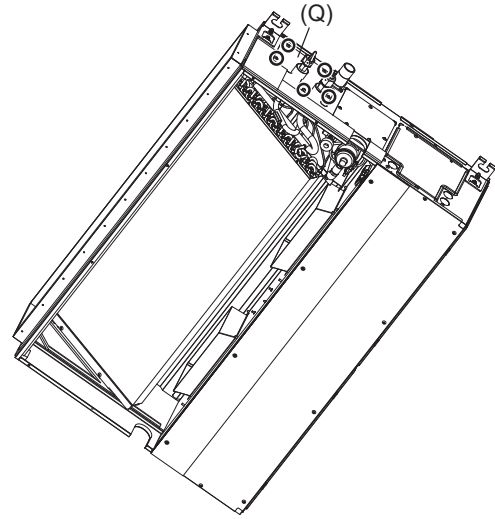 


Fig. 14


Exercise caution when removing heavy parts.

8. Heat exchanger

1. Remove the drain pan according to the procedure in section 5.
2. Remove the heat exchanger cover according to the procedure in section 6.2.
3. Removing the cover
 - (1) Remove the five fixing screws on the cover (Q) to remove it.
 - Tighten screws to a torque of 2.0 ± 0.2 N·m.

**Fig. 15**

4. Removing the Heat exchanger
 - (1) Remove the fixing screws on the heat exchanger (R) to remove it.
 - Tighten screws to a torque of 1.4 ± 0.2 N·m.

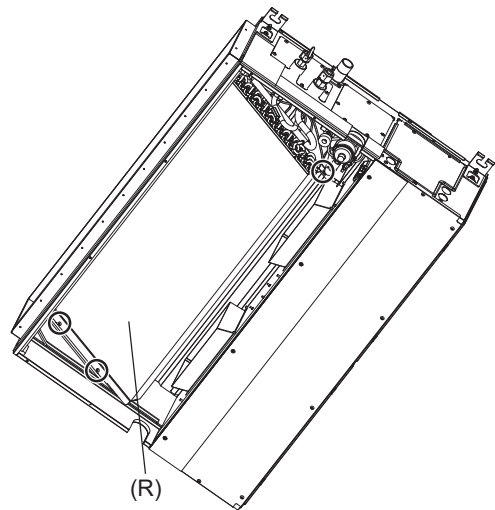 **Fig. 16**

14. INSPECTION AND MAINTENANCE

14-1. GUIDELINE FOR PREVENTIVE MAINTENANCE

The following maintenance intervals indicate the estimated intervals of parts replacement and repair to be required as a result of periodic inspections. They do not necessarily mean that replacement is required at the maintenance intervals. The maintenance intervals do not indicate the warranty period.

Parts	Inspection interval	Maintenance interval*
Motor (Fan, drain pump)	1 year	20,000 hours
Bearing		15,000 hours
Electrical box		25,000 hours
Heat exchanger		5 years
Electronic expansion valve		20,000 hours
Sensor (Thermistor, refrigerant sensor, etc)		5 years
Drain pan		8 years

- The table above shows the main parts. Check the maintenance contract for details.
- This maintenance interval is an estimated period until the day when the maintenance should be conducted to use the product safely for a long time.
Make use of the table above for maintenance planning (such as planning budget for maintenance inspection cost). Depending on the contents of the maintenance contract, the actual inspection and maintenance intervals may shorter than those in the table above.
- The maintenance and inspection items may differ depending on maintenance providers.
Please check with your maintenance provider when concluding a maintenance contract.

*The following usage conditions are assumed.

- Normal use without frequent START/STOPS (The number of START/STOPS is assumed to be less than 6 times per hour in normal use)
- Operating hours are assumed to be 10 hours per day/2500 hours per year.

When the equipment is used under the following conditions, the maintenance interval may be shortened.

- When equipment is used in an environment where temperature and humidity are high or change dramatically
- When equipment is used in an environment where power supply fluctuations (the distortion of voltage, frequency, and waveform) are large (only within the allowable range)
- When equipment is used in an environment where the equipment may receive vibration or mechanical shock
- When equipment is used in an environment where dust, salt, toxic gases such as sulfur dioxide and hydrogen sulfide, and oil mist are present
- When equipment starts/stops frequently and operates for long periods (24-hour air-conditioning operation)

14-2. RECOMMENDED PARTS INSPECTION INTERVAL

Parts	Inspection interval	Maintenance interval	Inspection items	Criteria	Measures
Long-life filter	1 year	5 years	<ul style="list-style-type: none"> • Visual check for dirt or torn. 	<ul style="list-style-type: none"> • Filter element is seen through. • No torn or deformation. 	<ul style="list-style-type: none"> • Clean the filter if it is dirty. • Replace the filter if it is torn.
High-performance filter		1 year	<ul style="list-style-type: none"> • Check for clogging. • Check the appearance. 	<ul style="list-style-type: none"> • No notable clogging in a short period of time. • No deformation or damage. 	<ul style="list-style-type: none"> • Replace the filter if it is clogged. • Replace the filter if it is deformed or damaged. • Replace the filter periodically.
Smoothing capacitor		10 years	<ul style="list-style-type: none"> • Check the appearance of electrolytic capacitors. 	<ul style="list-style-type: none"> • No liquid leakage, deformation, or sleeve (outer film) shrinkage. 	Replace the electrolytic capacitor if there is leakage, deformation, or shrinkage of the sleeve (outer film).
Fuse		10 years	<ul style="list-style-type: none"> • Check the appearance. 	No deformation or discoloration.	<ul style="list-style-type: none"> • Replace the fuse if the circuit is cut off.
Motor (Fan, drain pump)		20,000 hours	<ul style="list-style-type: none"> • Auditory check for operating sounds. • Measure the insulation resistance. 	<ul style="list-style-type: none"> • No abnormal sounds. • Insulation resistance must be 1 MΩ or above. 	<ul style="list-style-type: none"> • Replace the fan motor if an insulation problem is found.
Bearing		15,000 hours	<ul style="list-style-type: none"> • Fill oil periodically. 	<ul style="list-style-type: none"> • No abnormal sound. 	<ul style="list-style-type: none"> • Periodically replace the parts.
Electrical box		25,000 hours	<ul style="list-style-type: none"> • Check the insulation resistance of the circuit (500 V) • Check for loose terminals and connectors. 	<ul style="list-style-type: none"> • Insulation resistance must be 1 MΩ or above. • No loose connections. • No accumulated foreign objects. • No error display. 	<ul style="list-style-type: none"> • Clean with a brush if dust accumulation is found. • Replace the electrical part if the insulation resistance is 1 MΩ or below. • Tighten the loose terminals and reconnect the connectors.
Heat exchanger		5 years	<ul style="list-style-type: none"> • Check for clogging, contamination, and damage. 	No clogging, contamination, or damage.	Perform cleaning.
Electronic expansion valve		20,000 hours	<ul style="list-style-type: none"> • Operation check using operation data. 	Temperature must change in proportion to the valve position. (Check the temperature variation with the centralized controller.)	Replace the valve if the operation data show an operation failure due to valve problems.
Sensor (Thermistor, refrigerant sensor, etc)		5 years	<ul style="list-style-type: none"> • Check for breakage and deterioration of the cables, and for disconnection of the connectors. • Measure the insulation resistance. 	<ul style="list-style-type: none"> • No breakage or deterioration of the cables or disconnected connectors. • Insulation resistance must be 1 MΩ or above. 	Replace the sensor if the cable is broken, short-circuited, or severely deteriorated, or an insulation problem is found.
Drain pan	8 years	<ul style="list-style-type: none"> • Check for clogging and drain water flow. • Check for coating's peeling or separation. 	<ul style="list-style-type: none"> • No drain clogging. • No abnormal rust or hole. 	<ul style="list-style-type: none"> • Clean the drain pan and check that the drain pan is tilted properly. • Replace the drain pan depending on the repairing coating or conditions. 	

- The table above shows the main parts. Check the maintenance contract for details.
- This maintenance interval is an estimated period until the day when the maintenance should be conducted to use the product safely for a long time.
Make use of the table above for maintenance planning (such as planning budget for parts replacement cost).
- The inspection intervals depend on the usage and environment.
The inspection intervals do not indicate the warranty period.
- The maintenance and inspection items may differ depending on maintenance providers. Please check with your maintenance provider when concluding a maintenance contract.
- Repairs outside the warranty period will be charged, even if periodic inspections have been performed at the recommended intervals.

mitsubishi electric corporation

www.MitsubishiElectric.com
