


MRCOOL

NO-VAC® QUICK CONNECT® FACTORY CHARGED LINE SET

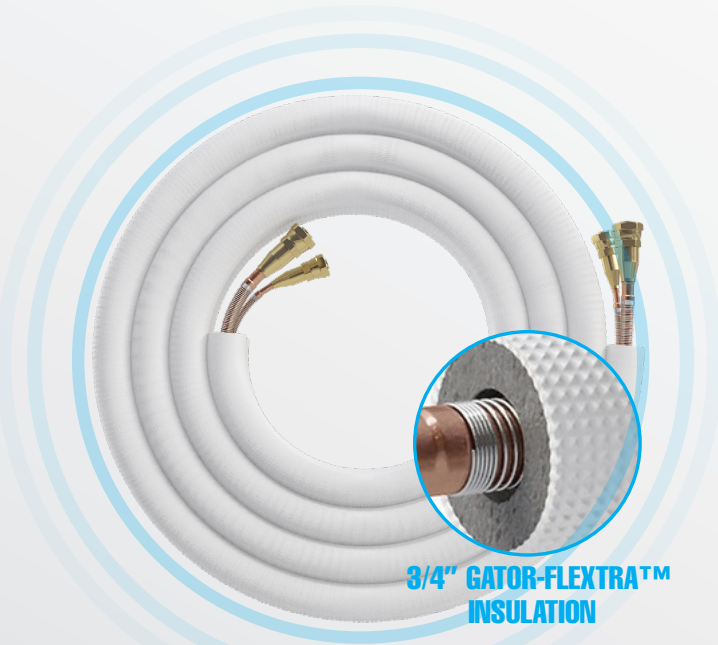

**3/4" GATOR-FLEXTRA™
INSULATION**

Pat: <https://www.mrcool.com/mrcool-patents/>

- Kink Resistant for Easier Bending During Installation
- 100% Accurately Precharged R410A Refrigerant


15 FT	25 FT	35 FT	50 FT
2.43 OZ	4.02 OZ	5.64 OZ	7.94 OZ

- Simple to Use Screw-on Quick Connect Valves
- Line sizes 3/4" and 3/8"

- Leak Proof
- No Vacuum Needed

- Quicker Installation than Conventional Linesets By Saving 7 Installation Steps

- Strong 3/4" Gator-Flextra™ UV Protective Insulation Sleeve provides extra protection against sun damage, weather erosion, or destruction from animals/rodents

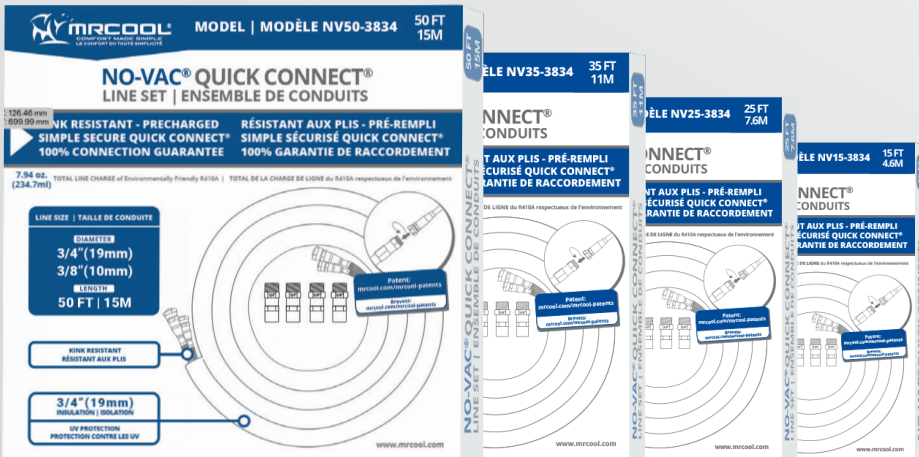

Lengths Available:
15FT, 25FT, 35FT, 50FT



Version Date: 02-16-23

The **MRCOOL® No-Vac® Quick Connect® Line Set** is intended for use with the **MRCOOL® Universal Condensers** and **MRCOOL® Universal Air Handlers**.



When one standard size **No-Vac® Quick Connect® Line Set** is not long enough, two standard **No-Vac® Quick Connect® Line Sets** can be combined using a coupler to increase the desired length of the line sets.

- 1** Choose the **MRCOOL® No-Vac® Coupler** size that matches the size of your Standard Line Sets.
- 2** Use a wrench to assemble the line sets on each side of the coupler making sure the thread is screwed tightly at the bottom until it stops.
- 3** After all pieces are securely connected, cover the connections with the provided grey insulation sleeve to prevent condensation.
- 4** Slide all insulation sleeves together ensuring no copper wiring is exposed and secure in place with tape.

COUPLINGS FIT TWO NO-VAC® QUICK CONNECT® LINESETS TOGETHER